



AD-P 03

Setting tramline to the gauge of the husbandry tractor

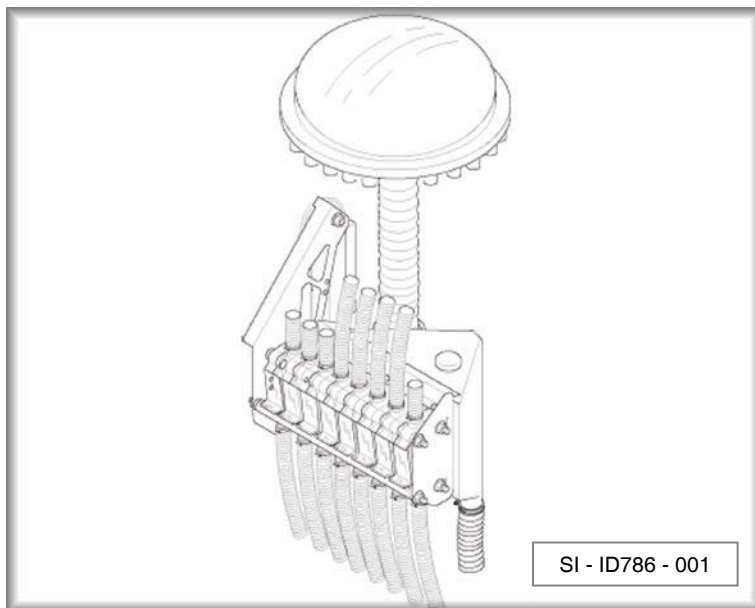


Tramline flap switching

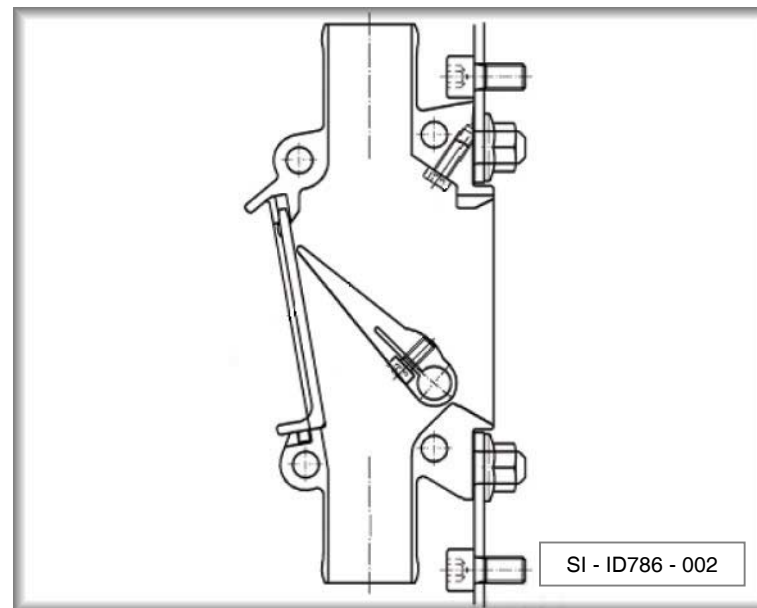


Activate flap
(for tramline coulter)

AD-P 03

Setting tramline to the gauge of the husbandry tractor

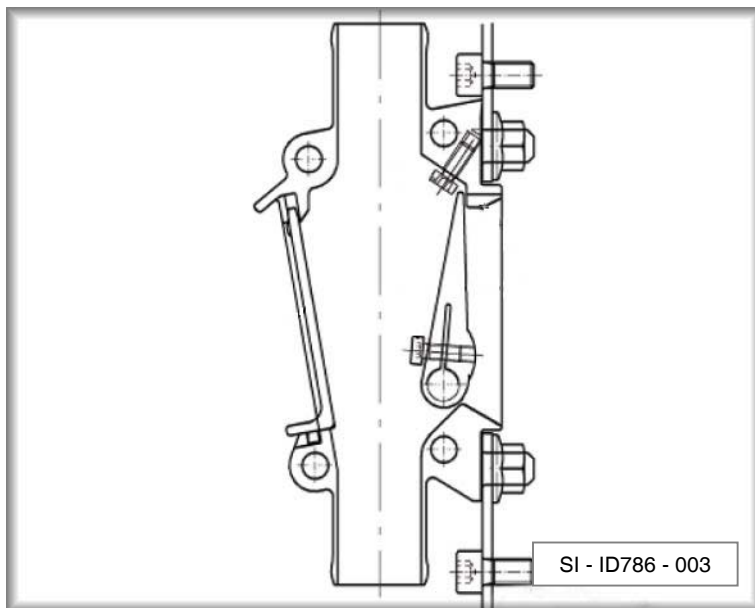

Deactivate flap
(standard sewing coulter)

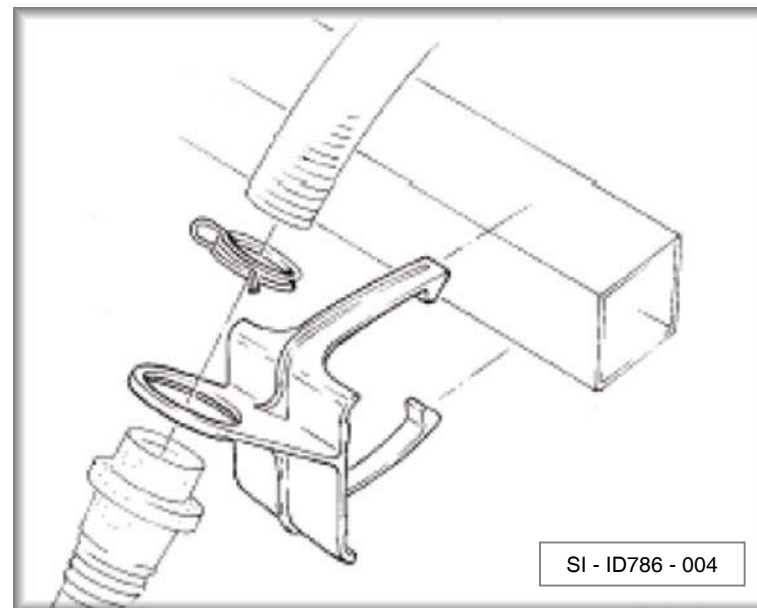

The gauge can be adjusted by
changing over the seed conduits on
the coulter frame.