

Boom guidance

With maximum comfort and even more precision



✓ Automatic boom pre-lowering in GPS-Switch

The GPS-Switch function in the operator terminal can be used to start lowering the boom before it reaches the untreated area. This means that the boom is already at the correct working height when the nozzles come on.

Requirements for this function are just a field boundary saved within the GPS-Switch in the AMAZONE ISOBUS terminal.