

Operating manual

AMAZONE

Soil tillage implements

Rotary cultivator

KG Special / Super

Rotary cultivator

KX

Rotary harrow

KE Special / Super



35c069-1

MG5808
BAH0089-9 05.2022

Please read this operating manual before
initial operation.
Keep it in a safe place for future use!

en



Reading the instruction

manual and adhering to it should not appear to be inconvenient and superfluous as it is not enough to hear from others and to realise that a machine is good, subsequently purchase it, and to believe that now everything would work by itself. The person concerned would not only harm themselves but also make the mistake of blaming the implement for the reason of a possible failure instead of themselves. In order to ensure a good success, one must consider the design of the object; in other words, one must familiarise themselves with every aspect of the machine and gain practice in handling the machine. Only by doing so would one be satisfied both with the machine and also with oneself. To achieve this is the purpose of this instruction manual.

Leipzig-Plagwitz 1872. Rud. Sark.

Identification data

Please enter the identification data of the implement. The identification data can be found on the rating plate.

Implement ID No.:
(10-digit)

Type:

KE/KX/KG (RIGID)

Permissible system pressure (bar): Maximum 210 bar

Year of manufacture:

Basic weight (kg):

Permissible total weight (kg):

Maximum load (kg):

Manufacturer's address

AMAZONEN-WERKE

H. DREYER SE & Co. KG

Postfach 51

D-49202 Hasbergen, Germany

Tel.: + 49 (0) 5405 50 1-0

Fax: + 49 (0) 5405 501-234

Email: amazone@amazone.de

Spare part orders

Spare parts lists are freely accessible in the spare parts portal at www.amazone.de.

Please send orders to your AMAZONE dealer.

Formalities of the operating manual

Document number: MG5808

Compilation date: 05.2022

© Copyright AMAZONEN-WERKE H. DREYER SE & Co. KG, 2022

All rights reserved.

Reprinting, even of sections, only possible with the approval of
AMAZONEN-WERKE H. DREYER SE & Co. KG.

Dear Customer,

You have chosen a quality product from the extensive product range of AMAZONEN-WERKE, H. DREYER GmbH & Co. KG. We thank you for your trust in our products.

On receiving the implement, check to see if it has been damaged during transport or if parts are missing. Using the delivery note, check that the implement has been delivered in full, including any special equipment ordered. Damage can only be rectified if problems are claimed immediately.

Before initial operation, read and comply with the information in this operating manual, and particularly the safety instructions. Only after careful reading will you be able to benefit from the full scope of your newly purchased implement.

Please ensure that all the implement operators have read this operating manual before they put the implement into operation.

Should you have any questions or problems, please consult this operating manual or contact your local service partner.

Regular maintenance and timely replacement of worn or damaged parts increases the lifespan of your implement.



1	User information	10
1.1	Purpose of the document.....	10
1.2	Locations in the operating manual	10
1.3	Presentations used	10
2	General Safety Information	11
2.1	Obligations and liability	11
2.2	Presentation of safety symbols	13
2.3	Organisational measures	14
2.4	Safety and protection equipment	14
2.5	Informal safety measures.....	14
2.6	User training.....	15
2.7	Safety measures in normal operation	16
2.8	Danger from residual energy	16
2.9	Maintenance and repair work, fault elimination	16
2.10	Design changes	17
2.10.1	Spare and wear parts and aids	17
2.11	Cleaning and disposal.....	17
2.12	Workstation of the operator.....	17
2.13	Warning symbols and other markings on the machine.....	18
2.13.1	Positions of warning symbols and other labels	23
2.14	Dangers in case of non-observance of the safety instructions	24
2.15	Safety-conscious working	24
2.16	Safety information for users	24
2.16.1	General safety instructions and accident prevention instructions.....	25
2.16.2	Mounted implements.....	28
2.16.3	Hydraulic system.....	29
2.16.4	Electrical system	30
2.16.5	PTO shaft operation.....	30
2.16.6	Cleaning, maintenance and repair	32
3	Loading and unloading	33
4	Product description	34
4.1	Overview of assembly groups.....	34
4.2	Safety and protection equipment	35
4.3	Overview – Supply lines between the tractor and the implement.....	36
4.4	Transportation equipment.....	37
4.5	Intended use	38
4.6	Danger areas and danger points	39
4.7	Rating plate and CE mark.....	40
4.8	Noise production data	40
4.9	Technical data.....	41
4.9.1	KE Special / Super rotary harrow.....	41
4.9.2	Rotary cultivator KX	43
4.9.3	Rotary cultivator KG Special / Super	44
4.9.4	Rollers	47
4.10	Necessary tractor equipment.....	48
4.11	Gearbox – oils and filling capacities	49
4.12	Spur gear trough – oils and filling quantities	49
4.13	Hydraulic oil for the implement supply	50
5	Layout and function.....	51
5.1	Threaded cartridge.....	53
5.2	Mounting category	53



Table of Contents

5.2.1	KE Special / Super rotary harrow	53
5.2.2	KX / KG Special / Super rotary cultivator	54
5.2.3	Adapter frame Cat. 4 (optional)	54
5.2.4	Three-point hitch extension (option)	55
5.2.4.1	Three-point hitch extension for KE rotary harrows	55
5.2.4.2	Three-point extension cat. 2 for KX/KG rotary cultivators	56
5.2.4.3	Three-point extension cat. 3 for KX/KG rotary cultivators	57
5.3	Wheel mark eradicator (optional)	58
5.4	Rollers	59
5.4.1	Cage roller SW	61
5.4.2	Tooth packer roller PW	61
5.4.3	Wedge ring roller KW	61
5.4.4	KWM wedge ring roller with matrix tyre profile	62
5.4.5	TRW trapeze ring roller	62
5.5	Drive	63
5.5.1	Gearbox / Tractor PTO shaft speed / Tine speed	64
5.5.2	WHG/KE Special / Super gearbox	65
5.5.3	Gearbox WHG/KX	66
5.5.4	WHG/KG Special / Super gearbox	67
5.5.4.1	Oil cooler (optional)	67
5.6	Universal joint shafts	68
5.7	Electronic drive monitoring (optional, KG Super only)	70
5.8	Tool tines	72
5.8.1	Tool tine minimum length	74
5.8.2	stone release	74
5.9	Working depth of the soil tillage implement	75
5.9.1	Mechanical adjustment	75
5.9.2	Hydraulic adjustment (optional)	75
5.10	Side panel	76
5.10.1	Side panel, swivel-mounted	76
5.10.2	Side panel, spring-mounted	76
5.11	Soil guiding angle bracket (optional)	77
5.12	Levelling board (optional)	77
5.13	Operating tool	78
5.14	Combination possibilities with other AMAZONE implements	78
5.14.1	Lifting frame	78
5.14.2	QuickLink	79
5.15	Working with an AMAZONE mounted seed drill	80
5.15.1	Coupling parts (optional)	80
5.15.2	Lifting frame (optional)	80
5.15.3	Lift height limiter (optional)	82
5.15.4	Side stabiliser for lifting frame 2.2 (optional)	82
5.16	Shaft-mounted gearbox (optional)	83
5.17	Track markers (optional)	84
5.18	GreenDrill 200-E / 200-H catch crop seeding unit (optional)	85
6	Initial operation	86
6.1	Checking the suitability of the tractor	87
6.1.1	Calculating the actual values for the total tractor weight, tractor axle loads and load capacities, as well as the minimum ballast	88
6.1.1.1	Data required for the calculation (attached implement)	89
6.1.1.2	Calculation of the required minimum ballasting at the front $G_{V \min}$ of the tractor to ensure steering capability	90
6.1.1.3	Calculation of the actual front axle load of the tractor $T_{V \text{ tat}}$	90
6.1.1.4	Calculation of the actual total weight of the combined tractor and implement	90
6.1.1.5	Calculation of the actual rear axle load of the tractor $T_{H \text{ tat}}$	90
6.1.1.6	Tractor tyre load capacity	90
6.1.1.7	Table	91
6.2	Securing the tractor/implement against unintentional start-up and rolling	92



6.3	Attachment of the wheel mark eradicators	93
6.4	Adjusting the length of the universal joint shaft to the tractor (specialist workshop)	93
6.5	Fitting the coupling parts (specialist workshop)	95
6.6	Attaching the lifting frame (specialised workshop)	96
6.6.1	Attaching lifting frame 2.2 (specialist workshop)	97
6.6.2	Installing lifting frame 3.2 (specialist workshop)	98
6.6.3	Fitting the lift height limiter (specialist workshop)	99
7	Coupling and uncoupling the implement	100
7.1	Coupling the implement	102
7.2	Uncoupling the implement	105
7.3	Coupling the mounted seed drill	106
7.3.1	Attaching the seed drill with the coupling parts	106
7.3.2	Attaching the seed drill to the lifting frame	108
7.4	GreenDrill supply line	110
7.5	Hydraulic hose lines	110
7.5.1	Coupling the hydraulic hose lines	111
7.5.1.1	On lifting frame	112
7.5.1.2	On soil tillage implement	112
7.5.2	Uncoupling the hydraulic hose lines	112
8	Settings	113
8.1	Adjusting the working depth	114
8.1.1	Mechanical adjustment	114
8.1.2	Hydraulic adjustment (optional)	115
8.2	Adjusting the side panel	116
8.2.1	Side plate KE Super / KX / KG	116
8.2.1.1	Vertical adjustment	116
8.2.1.2	Adjusting the spring tension	116
8.2.2	Side plate KE Special	117
8.2.2.1	Vertical adjustment	117
8.2.2.2	Adjusting the spring tension	117
8.3	Adjusting the soil guiding angle bracket (optional)	117
8.4	Adjusting the wheel mark eradicator (optional)	118
8.4.1	Exceeding the maximum working depth	120
8.5	Adjusting the roller scraper	121
8.5.1	Wedge ring roller KW / KWM	122
8.5.2	Tooth packer roller PW	122
8.5.3	TRW trapeze ring roller	122
8.6	Adjusting the levelling board	123
8.6.1	Setting with decentralised levelling board adjustment	124
8.7	Transport locking mechanism for lifting frame (all types)	125
8.7.1	Locking the lifting frame	125
8.7.2	Unlocking the lifting frame	125
8.8	Adjusting the lift height limiter	126
8.9	Deactivating the lift height limiter	126
8.10	Adjusting the track marker	127
9	Transportation	128
9.1	Moving the implement in the transport position	130
9.2	Transporting with a transport vehicle	130
10	Use of the implement	131
10.1	Filling the hopper (optional)	133
10.2	On the field	134
10.2.1	Work commencement	134
10.2.2	Moving the wheel mark eradicator into working position	134
10.2.3	Moving the track marker into working position	135
10.2.4	Bring hinged side panel into working position	136

Table of Contents

10.3	During operation.....	137
10.3.1	Turning at end of the field	137
10.4	After use	138
10.4.1	Moving the wheel mark eradicator into transport position.....	138
10.4.2	Moving the track marker to transport position.....	139
10.4.3	Moving the sliding side plate into transport position	140
11	Fault indications.....	141
11.1	Initial use of the tooth packer roller	141
11.2	Tool tines stopping when work is in progress	141
11.3	Hall sensor on the gearbox	142
11.4	Shearing of the track marker safety	142
12	Cleaning, maintenance and repair.....	143
12.1	Safety	143
12.2	Cleaning the machine	144
12.3	Adjustment work.....	145
12.3.1	Repositioning the bevel wheels on the WHG/KE Special / Super (specialised workshop)	145
12.3.2	Repositioning / replacing the gear wheels on the WHG/KX / WHG/KG Special / Super (specialised workshop).....	146
12.3.2.1	Repositioning/replacing the gear wheels on the WHG/KX.....	146
12.3.2.2	Repositioning / replacing the gear wheels on the WHG/KG Special / Super (specialised workshop).....	147
12.3.3	Replacing the tool tines (specialist workshop).....	148
12.4	Checking the wheel mark eradicators	149
12.4.1	Changing the coulters (specialist workshop)	149
12.4.2	Replacing the tension springs of the overload safety device (workshop work)	150
12.5	Lubrication specifications	150
12.5.1	Lubricants.....	151
12.5.2	Greasing points – overview.....	152
12.6	Maintenance schedule – overview	154
12.7	WHG/KE Special / Super gearbox	156
12.7.1	Venting	156
12.7.2	Check the oil level	156
12.7.3	Changing transmission fluid (specialist workshop)	156
12.8	Gearbox WHG/KX.....	157
12.8.1	Venting	157
12.8.2	Check the oil level	157
12.8.3	Changing transmission fluid (specialist workshop)	157
12.9	WHG/KG Special / Super gearbox.....	158
12.9.1	Venting	158
12.9.2	Check the oil level	158
12.9.3	Changing transmission fluid (specialist workshop)	158
12.10	Spur gear trough	159
12.10.1	Venting	159
12.10.2	Checking the oil level (only KG and KX rotary cultivator)	159
12.10.3	Checking the oil level (only KE rotary harrow).....	159
12.11	Changing the oil filter in the cooling kit (specialist workshop).....	160
12.12	Checking the wheel mark eradicators	160
12.12.1	Changing the coulters (workshop work).....	161
12.12.2	Replacing the tension springs of the overload safety device (workshop work)	162
12.13	Checking the upper and lower link pins	162
12.14	Checking/cleaning/lubricating the ratchet clutch (specialist workshop).....	162
12.15	Hydraulic system	163
12.15.1	Identification of hydraulic hose lines	164
12.15.2	Maintenance intervals	164
12.15.3	Inspection criteria for hydraulic hose lines	165
12.15.4	Installing and removing hydraulic hose lines	166



12.16	Hydraulic diagram	167
12.17	Bolt tightening torques	169
13	Notes.....	172

1 User information

The User information section provides information concerning the operating manual.

1.1 Purpose of the document

This operating manual

- describes the operation and maintenance of the implement.
- provides important information on safe and efficient handling of the implement.
- is a component part of the implement and should always be kept with the implement or the towing vehicle.
- must be kept in a safe place for future use.

1.2 Locations in the operating manual

All the directions specified in the operating manual are always viewed in the direction of travel.

1.3 Presentations used

Instructions and reactions

Activities to be carried out by the user are presented as numbered instructions. Always observe the sequence of the instructions. The reaction to instructions is indicated by an arrow where applicable.

Example:

1. Instruction 1
- Reaction of the implement to handling instruction 1
2. Instruction 2

Lists

Listings without a mandatory sequence are presented as a listing with bullets.

Example:

- Item 1
- Item 2

Item numbers in illustrations

Numbers in round brackets refer to the item numbers in the illustrations. The first number refers to the diagram and the second number to the item.

Example: (Fig. 3/6)

- Figure 3
- Item 6

2 General Safety Information

This section contains important information on safe operation of the implement.

2.1 Obligations and liability

Comply with the instructions in the operating manual

Knowledge of the basic safety information and safety regulations is a basic requirement for safe handling and fault-free implement operation.

Obligations of the operator

The operator is obliged only to let those people work with/on the implement who

- are aware of the basic workplace safety information and accident prevention regulations.
- have been instructed in working with/on the implement.
- have read and understood this operating manual.

The operator is obliged

- to keep all the warning symbols on the implement in a legible state.
- to replace damaged warning symbols.

If you still have queries, please contact the manufacturer.

Obligations of the user

Before starting work, anyone charged with working with/on the machine is obliged

- to comply with the basic workplace safety instructions and accident prevention regulations.
- to read and understand the section "General safety information" of this operating manual.
- To read the section "Warning symbols and other labels on the implement" in this operating manual and to follow the safety instructions represented by the warning symbols when operating the implement.
- to get to know the implement.
- to read the sections of this operating manual, important for carrying out your work.

If the user discovers that a function is not working properly, then they must eliminate this fault immediately. If this is not the task of the user or if the user does not possess the appropriate technical knowledge, then they should report this fault to their superior (operator).

General Safety Information

Risks in handling the implement

The implement has been constructed to the state-of-the art and the recognised rules of safety. However, operating the implement may cause risks and restrictions

- the health and safety of the user or third parties,
- the implement,
- other property.

Only use the implement

- for the purpose for which it was intended.
- in a perfect state of repair.

Eliminate any faults immediately which could impair safety.

Guarantee and liability

Our "General conditions of sales and delivery" are always applicable. These shall be available to the operator, at the latest on conclusion of the contract. Guarantee and liability claims for damage to people or property will be excluded if they can be traced back to one or more of the following causes:

- Improper use of the implement.
- Improper installation, commissioning, operation and maintenance of the implement.
- Operation of the implement with defective safety equipment or improperly attached or non-functioning safety equipment.
- Non-compliance with the instructions in the operating manual regarding commissioning, operation and maintenance.
- Unauthorised design changes to the implement.
- Insufficient monitoring of implement parts which are subject to wear.
- Improperly executed repairs.
- Disasters due to the effects of foreign objects and force majeure.

2.2 Presentation of safety symbols

Safety instructions are indicated by the triangular safety symbol and the highlighted signal word. The signal word (DANGER, WARNING, CAUTION) describes the severity of the risk, and carries the following meaning:



DANGER

Indicates an immediate hazard with high risk, which will result in death or serious bodily harm (loss of limbs or long-term harm), if it is not avoided.

If the instructions are not followed, then this will result in immediate death or serious physical injury.



WARNING

Indicates a medium risk, which could result in death or (serious) physical injury if not avoided.

If the instructions are not followed, then this may result in death or serious physical injury.



CAUTION

Indicates a low risk which could cause minor or medium level physical injury or damage to property if not avoided.



IMPORTANT

Indicates an obligation to special behaviour or an activity required for proper implement handling.

Non-compliance with these instructions can cause faults on the implement or disturbance to the environment.



NOTE

Indicates handling tips and particularly useful information.

These instructions will help you to use all the functions of your implement in the best way possible.

2.3 Organisational measures

The operator must provide the necessary personal protective equipment as per the information provided by the manufacturer of the crop protection agent to be used, such as:

- Safety glasses
- Protective shoes
- Chemical-resistant overalls
- Skin protection agents, etc.



The operating manual

- must always be kept at the place at which the implement is operated.
- must always be easily accessible for the user and maintenance personnel.

Check all the available safety equipment regularly.

2.4 Safety and protection equipment

Before starting up the implement each time, all the safety and protection equipment must be properly attached and fully functional. Check all safety and protection equipment regularly.

Faulty safety equipment

Faulty or disassembled safety and protection equipment can lead to dangerous situations.

2.5 Informal safety measures

As well as all the safety information in this operating manual, comply with the general, national regulations pertaining to accident prevention and environmental protection.

When driving on public roads and routes you should comply with the statutory road traffic regulations.

2.6 User training

Only those people who have been trained and instructed may work with/on the implement. The operator must clearly specify the responsibilities of the people charged with operation and maintenance work.

People being trained may only work with/on the implement under the supervision of an experienced person.

Person Job	Person specially trained for the activity ¹⁾	Trained operator ²⁾	Persons with specialist training (specialist workshop) ³⁾
Loading/Transport	X	X	X
Initial operation	--	X	--
Set-up, tool installation	--	--	X
operation	--	X	--
Maintenance	--	--	X
Troubleshooting and fault elimination	--	X	X
Disposal	X	--	--

Legend: X..permitted --..not permitted

¹⁾ A person who can assume a specific task and who can carry out this task for an appropriately qualified company.

²⁾ Instructed persons are those who have been instructed in their assigned tasks and in the possible risks in the case of improper behaviour, have been trained if necessary, and have been informed about the necessary protective equipment and measures.

³⁾ Persons with specialised technical training shall be considered as a specialist. Due to their specialist training and their knowledge of the appropriate regulations, they can evaluate the work with which they have been charged and detect possible dangers.

Comment:

A qualification equivalent to specialist training can be obtained from several years' experience in the relevant field.



If maintenance and repair work on the implement is additionally marked "Workshop work", only a specialist workshop may carry out such work. The personnel of a specialist workshop shall possess the appropriate knowledge and suitable aids (tools, lifting and support equipment) for carrying out the maintenance and repair work on the implement in a way which is both appropriate and safe.

2.7 Safety measures in normal operation

Only operate the implement if all the safety and protection equipment is fully functional.

Check the implement at least once a day for visible damage and check the function of the safety and protection equipment.

2.8 Danger from residual energy

Note that there may be residual mechanical, hydraulic, pneumatic and electrical/electronic energy on the implement.

Use appropriate measures to inform the operating personnel. You can find detailed information in the relevant sections of this operating manual.

2.9 Maintenance and repair work, fault elimination

Carry out prescribed setting, maintenance and inspection work in good time.

Secure all media such as compressed air and the hydraulic system against unintentional start-up.

Carefully fix and secure larger assembly groups to lifting units when carrying out replacement work.

Check all the bolted connections for tightness. On completion of the maintenance work, check the function of the safety devices.

2.10 Design changes

You may make no changes, expansions or modifications to the implement without the authorisation of AMAZONEN-WERKE. This also applies when welding support parts.

Any expansion or conversion work shall require the written approval of AMAZONEN-WERKE. Only use modification and accessory parts approved by AMAZONEN-WERKE so that the type approval, for example, remains valid in accordance with national and international regulations.

Vehicles with an official type approval or with equipment connected to a vehicle with a valid type approval or approval for road transport according to the German road traffic regulations must be in the state specified by the approval.



WARNING

Risk of crushing, cutting, being trapped or drawn in, or impact through the failure of support parts.

It is strictly forbidden to

- drill holes in the frame or on the running gear.
- increase the size of existing holes on the frame or the running gear.
- weld on load-bearing parts.

2.10.1 Spare and wear parts and aids

Immediately replace any implement parts which are not in a perfect state.

Use only genuine AMAZONE spare and wear parts or the parts cleared by AMAZONEN-WERKE so that the operating permit retains its validity in accordance with national and international regulations. If you use wear and spare parts from third parties, there is no guarantee that they have been designed and manufactured in such a way as to meet the requirements placed on them.

AMAZONEN-WERKE shall accept no liability for damage caused by the use of non-approved spare and wear parts or aids.

2.11 Cleaning and disposal

Handle and dispose of any materials used carefully, in particular

- when carrying out work on lubrication systems and equipment and
- when cleaning using solvents.

2.12 Workstation of the operator

The implement must be operated by only one person from the driver's seat of the tractor.

2.13 Warning symbols and other markings on the machine



Always keep all the warning signs of the machine clean and in a legible state. Replace illegible warning signs. You can obtain the warning signs from your dealer using the order number (e.g. MD 075).

Warning symbols – structure

Warning symbols indicate danger areas on the implement and warn against residual dangers. At these points, there are permanent or unexpected dangers.

A warning symbol consists of two fields:



Field 1

is a symbol describing the danger, surrounded by triangular safety symbol.

Field 2

is a symbol showing how to avoid the danger.

Warning symbols – explanation

The column **Order number and explanation** provides an explanation of the neighbouring warning symbol. The description of the warning symbols is always the same and specifies, in the following order:

1. A description of the danger.
For example: risk of cutting
2. The consequence of non-compliance with the risk avoidance instructions.
For example: causes serious injuries to fingers or hands.
3. The risk avoidance instructions.
For example: only touch implement parts when they have come to a complete standstill.

Order number and explanation

Warning signs

MD 075

Risk of cutting or severing of fingers/hand through direct contact with moving parts involved in the working process!

This hazard can cause extremely serious injuries resulting in the loss of limbs.

- Never reach into the danger area when the tractor engine is running with the universal joint shaft or hydraulic/electrical system connected.
- Wait until all moving parts of the implement are at a standstill before reaching into the danger area.



MD 078

Risk of crushing of fingers/hand by accessible, moving parts of the implement!

This hazard can cause extremely serious injuries resulting in the loss of limbs.

Never reach into the hazardous area while the engine of the tractor with connected universal joint shaft/hydraulic system/electronic system is running.




MD 079

Risk of materials or foreign objects being flung away from or out of the implement when entering or remaining in the danger area of the implement!

These dangers can inflict severe injuries on all parts of the body.

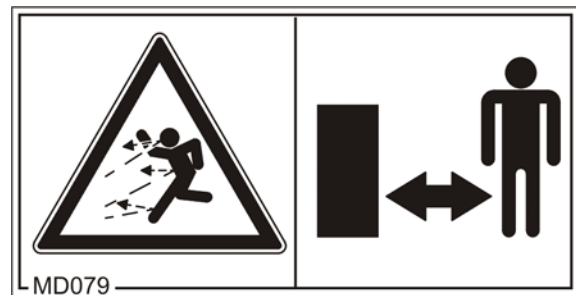- Stay well clear of the danger area of the implement.
- Ensure that all persons maintain a sufficient safety distance from the danger area of the implement as long as the tractor engine is running.



General Safety Information

MD 082

Risk of falling when riding the implement on treads or platforms!

Causes serious, potentially fatal injuries anywhere on the body.

It is forbidden to ride on the implement or climb the implement when it is running. This prohibition also applies to implements with step surfaces or platforms.

Make sure that nobody is riding on the implement.




MD 087

Risk of cutting or severing of toes or feet through direct contact with moving parts involved in the working process!

This hazard can cause extremely serious injuries resulting in the loss of limbs.

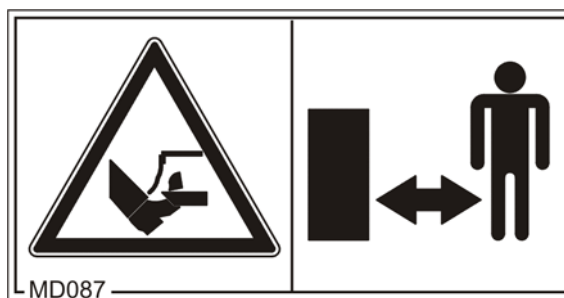Stay well clear of the danger area when the tractor engine is running with the universal joint shaft or hydraulic/electrical system connected.



MD 084

Risk of crushing the entire body due to standing in the swivel range when implement parts are being lowered.


Causes serious, potentially fatal injuries anywhere on the body.

- It is forbidden to stand in the swivel range of the implement when implement parts are being lowered.
- Instruct personnel to leave the swivel range of any implement parts which can be lowered before you lower the parts.



MD095

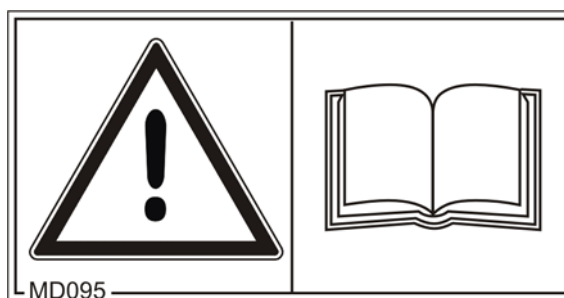Before commissioning the machine read and observe the operating manual and the safety instructions carefully!




MD 096

Danger from escaping high-pressure hydraulic fluid due to leaking hydraulic hose lines.

This danger may cause serious injuries, perhaps even resulting in death, if escaping high-pressure hydraulic fluid passes through the skin and into the body.

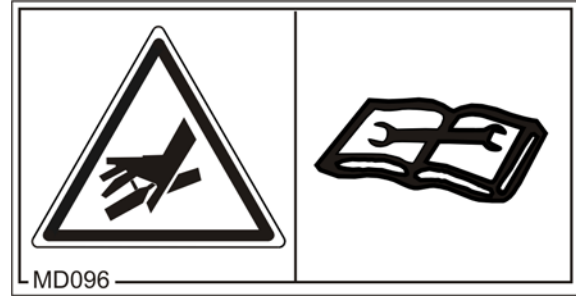- Never attempt to plug leaks in hydraulic hose lines with your hand or fingers.
- Read and observe the information in the operating manual before carrying out maintenance work on the hydraulic hose lines.
- If you are injured by hydraulic fluid, contact a doctor immediately.




MD 097

Risk of crushing the entire body when standing in the lifting area of the three-point linkage when the three-point hydraulic system is operated!

Causes serious, potentially fatal injuries anywhere on the body.

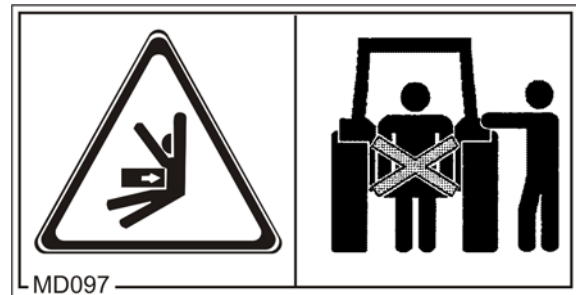- It is forbidden to stand in the lifting area of the three-point linkage when actuating the three-point hydraulic system.
- Actuate the operator controls for the tractor's three-point hydraulic system:
 - only from the designated workstation.
 - under no circumstances if you are in the lifting area between the tractor and implement.



MD 102

Danger from intervention in the implement, e.g. installation, adjusting, troubleshooting, cleaning, maintaining and repairing, due to the tractor and the implement being started unintentionally and rolling.

These dangers can cause extremely serious and potentially fatal injuries.


- Secure the tractor and the implement against unintentional start-up and rolling before any intervention in the implement.
- Depending on the type of intervention, read and understand the information in the relevant sections of the operating manual.



General Safety Information


MD 113

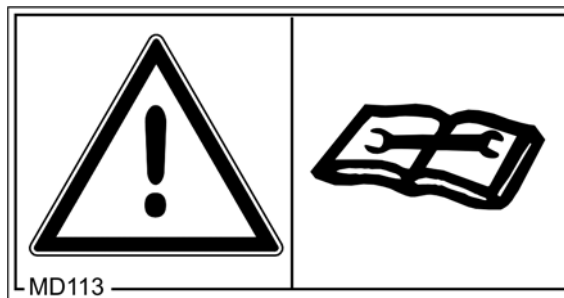Study and observe the instructions for cleaning, servicing and maintaining in the appropriate chapter of the operating manual.




MD 119

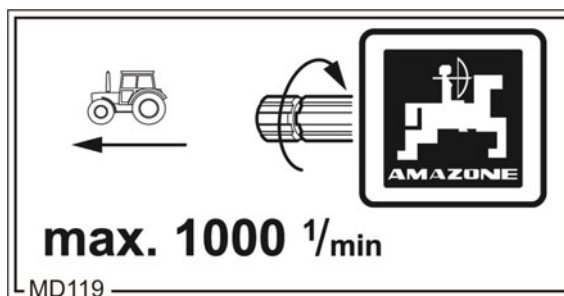This symbol indicates the maximum drive speed (1000 rpm) and direction of rotation of the drive shaft on the implement side.



MD 199

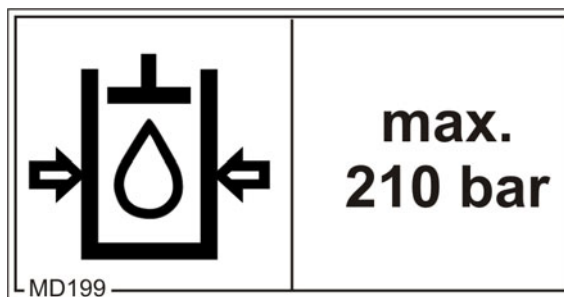The maximum operating pressure of the hydraulic system is 210 bar.



2.13.1 Positions of warning symbols and other labels

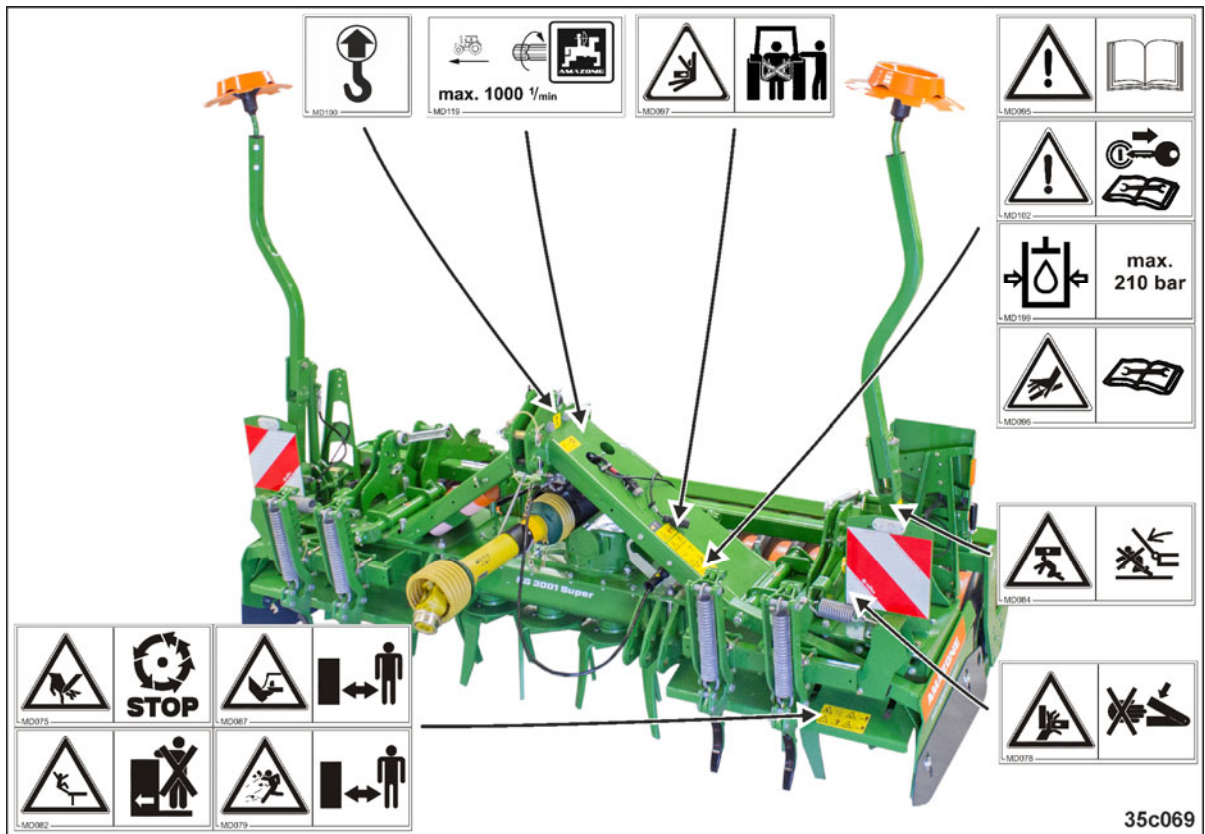


Fig. 1: KG 3001

2.14 Dangers in case of non-observance of the safety instructions

Non-compliance with the safety instructions

- can pose both a danger to people and also to the environment and machine.
- can result in the loss of an claims for damages.

In particular, non-compliance with the safety information could pose the following risks:

- Risks to persons due to insecure working area.
- Failure of important implement functions.
- failure of prescribed methods for maintenance and repair.
- hazard for personnel due to mechanical and chemical effects.
- environmental hazard through leakage of hydraulic fluid.

2.15 Safety-conscious working

In addition to the safety instructions in this operating manual, the generally applicable national occupational health and safety and accident prevention regulations are also binding.

Comply with the accident prevention instructions on the warning pictograms.

When driving on public roads and routes, comply with the appropriate statutory road traffic regulations.

2.16 Safety information for users



WARNING

Risk of crushing, cutting, being trapped or drawn in, or impact through inadequate roadworthiness and operational safety.

Before starting up the implement and the tractor, always check their traffic and operational safety.

2.16.1 General safety instructions and accident prevention instructions

- In addition to these instructions, also comply with the generally valid national and safety and accident prevention regulations!
- The warning signs attached on the implement provide important instructions for safe operation of the machine. Compliance with these instructions is essential for your safety!
- Before moving off and starting up the implement, check the immediate area of the implement (children). Ensure that you can see clearly.
- It is forbidden to ride on the machine or use it as a means of transport!
- Drive in such a way that you always have full control over the tractor with the attached machine.
In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor and the connected or coupled implement.

Coupling and uncoupling the implement

- Only connect and transport the implement with tractors suitable for the task.
- When connecting implements to the tractor's three-point hydraulic system, the attachment categories of the tractor and the implement must always be the same!
- Connect the implement to the prescribed equipment in accordance with the specifications.
- When coupling implements to the front or the rear of the tractor, the following may not be exceeded:
 - The permissible total tractor weight
 - The permissible tractor axle loads
 - The permissible load capacities of the tractor tyres
- Secure the tractor and the implement against unintentional rolling before coupling or uncoupling the implement.
- It is forbidden for people to stand between the implement to be coupled and the tractor while the tractor is approaching the implement.
Any helpers may only act as guides standing next to the vehicles, and may only move between the vehicles when both are at a standstill.
- Before the implement is connected to or disconnected from the tractor's three-point hydraulic system, secure the operating lever of the tractor hydraulic system such that unintentional raising or lowering is impossible.
- When coupling and uncoupling implements, move the support equipment (if available) to the appropriate position (stability).
- When actuating the support equipment, there is a danger of injury from contusion and cutting points!
- Be particularly careful when coupling the implement to the tractor or uncoupling it from the tractor! There are nip and shear points in the area of the coupling point between the tractor and the implement.



General Safety Information

- It is forbidden to stand between the tractor and the implement when actuating the three-point hydraulic system!
- Coupled supply lines:
 - must give without tension, bending or rubbing on all movements when travelling round corners.
 - must not chafe against other parts.
- The release ropes for quick action couplings must hang loosely and may not release themselves when lowered.
- Also ensure that uncoupled implements are stable!

Use of the implement

- Before starting work, make sure that you understand all the equipment and control elements of the implement and their functions. It is too late to do this during working operation.
- Wear tight-fitting clothing! There is an increased risk of loose clothing getting caught or entangled on drive shafts!
- Only place the implement in service after all protective devices have been attached and are in protective position!
- Comply with the maximum load of the connected implement and the permissible axle and drawbar loads of the tractor. If necessary, drive only with a partially filled hopper.
- It is forbidden to stand in the working area of the machine.
- It is forbidden to stand in the turning and swivel range of the implement.
- There are crushing and shearing hazards on implement parts actuated by external force (e.g. hydraulically)!
- Only actuate implement parts actuated by external force if personal are maintaining an adequate safety distance to the implement!
- Secure the tractor against unintentional start-up and rolling, before you leave the tractor.
For this:
 - Lower the implement onto the ground.
 - Apply the parking brake.
 - Switch off the tractor engine.
 - Remove the ignition key.

Implement transportation

- When using public roads, national road traffic regulations must be observed.
- Before moving off, check:
 - the correct connection of the supply lines,
 - the lighting system for damage, function and cleanliness,
 - that the brake and hydraulic systems shows no visible signs of defect
 - that the parking brake is completely released,
 - the functioning of the brake system.
- Always ensure that the tractor has sufficient steering and braking power.
Any implements and front/rear weights connected to the tractor influence the driving behaviour and the steering and braking power of the tractor.
- If necessary, use front weights.
The tractor front axle must always be loaded with at least 20 % of the tractor tare weight, in order to ensure sufficient steering power.
- Always fix the front or rear weights to the intended fixing points according to regulations.
- Comply with the maximum payload of the connected implement and the permissible axle and drawbar loads of the tractor.
- The tractor must guarantee the prescribed brake delay for the loaded vehicle combination (tractor plus connected implement).
- Check the brake power before moving off.
- When turning corners with the implement coupled, take the wide sweep and centrifugal mass of the implement into account.
- Before transport of the implement, ensure sufficient side locking of the tractor lower links if the implement is attached to the three-point hydraulic system or lower links of the tractor.
- Before road transport, move all the swivel implement parts to the transport position.
- Before road transport, secure all the swivel implement parts in the transport position against risky position changes. Use the transport locks intended for this.
- Before transporting, lock the operating lever of the tractor's three-point hydraulic system against the unintentional raising or lowering of the connected or hitched implement.
- Check that the transport equipment, e.g. lighting, warning equipment and protective equipment, is correctly installed on the implement.
- Before road transport, carry out a visual check that the top and lower link pins are firmly fixed with the linch pin against unintentional release.
- Adjust your forward speed to the prevailing conditions.
- Before driving downhill, switch to a low gear.
- Before road transport, always switch off the independent wheel braking (lock the pedals).

2.16.2 Mounted implements

- When attaching to the three-point linkage, the attachment categories on tractor and implement must be compatible or an adapter must be used!
- Take note of the manufacturer's instructions.
- Before attaching implements to or removing them from the three-point suspension, shift the operating equipment to a position in which unintended raising or lowering is impossible.
- There is a danger of crushing or shearing injury around the three-point linkage.
- The implement may be transported and towed only by the tractors intended for this purpose.
- There is a risk of injury when implements are coupled to and uncoupled from the tractor.
- Do not step between tractor and implement when operating the external control for the three-point attachment!
- There is a danger of crushing and shearing injury when operating the support devices.
- When mounting implements at the front or rear of a tractor, do not exceed
 - The permissible total tractor weight
 - The permissible tractor axle loads
 - The approved load capacities of the tractor tyres
- Observe the max. payload of the mounted implement and the permissible axle loads of the tractor!
- Always ensure that the tractor lower links are adequately locked against sideways movement before transporting the implement.
- The operating lever for the tractor lower link must be locked against lowering when driving on roads.
- Shift all equipment into the transport position before travelling on the road.
- Any mounted implements and ballast weights affect the handling, steering and braking of the tractor!
- The tractor front axle must always be loaded with at least 20 % of the tractor empty weight, in order to ensure sufficient steering power. Apply front weights if necessary!
- Only ever carry out any servicing, maintenance or cleaning operations or remedy malfunctions with the ignition key removed.
- Leave safety devices attached and always position them in the protective position.

2.16.3 Hydraulic system

- The hydraulic system is under high pressure.
- Ensure that the hydraulic hose lines are connected correctly!
- When connecting the hydraulic hose lines, ensure that the hydraulic system is depressurized on both the implement and tractor sides.
- It is forbidden to block the operator controls on the tractor which are used for hydraulic and electrical movements of components, e.g. folding, swivelling and pushing movements. The movement must stop automatically when you release the appropriate control. This does not apply to equipment movements that:
 - are continuous or
 - are automatically locked or
 - require a float position or pressure position due to their function.
- Before working on the hydraulic system,
 - lower the implement
 - Depressurise the hydraulic system.
 - Switch off the tractor engine
 - Apply the parking brake.
 - Remove the ignition key.
- Have the hydraulic hose lines checked for proper functioning by a specialist at least once a year.
- Replace the hydraulic hose lines if they are damaged or worn. Use only genuine AMAZONE hydraulic hose lines!
- The hydraulic hose lines should not be used for longer than six years, including any storage time of maximum two years. Even with proper storage and approved use, hoses and hose connections are subject to natural aging, thus limiting the duration of use. However, it may be possible to specify the length of use from experience values, in particular when taking the risk potential into account. In the case of hoses and hose lines made of thermoplastics, other guide values may be decisive.
- Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.

Escaping high pressure fluid (hydraulic fluid) may pass through the skin and ingress into the body, causing serious injuries!

If you are injured by hydraulic fluid, contact a doctor immediately. Risk of infection.
- When searching for leakage points, use suitable aids, to avoid the serious risk of infection.

2.16.4 Electrical system

- When working on the electrical system, always disconnect the battery (negative terminal).
- Only use the prescribed fuses. If fuses are used that are too highly rated, the electrical system will be destroyed – risk of fire
- Ensure that the battery is connected correctly – connect the positive terminal first and then connect the negative terminal! When disconnecting the battery, disconnect the negative terminal first, followed by the positive terminal.
- Always place the appropriate cover over the positive battery terminal. If there is accidental earth contact, there is a risk of explosion
- Risk of explosion: avoid the production of sparks or the presence of naked flames in the vicinity of the battery.
- The implement may be equipped with electronic components whose function is influenced by electromagnetic interference from other units. Such interference can pose risks to people, if the following safety information is not observed.
 - In the case of retrofitting electrical units and/or components on the implement, with a connection to the on-board power supply, the operator is responsible for checking whether the installation might cause faults on the vehicle electronics or other components.
 - Ensure that the retrofitted electrical and electronic components comply with the EMC Directive in the appropriate version and carry the CE mark.

2.16.5 PTO shaft operation

- Use only the universal joint shafts prescribed by the AMAZONEN-WERKE factories, equipped with the proper safety devices.
- Also read and follow the operating manual from the universal joint shaft manufacturer.
- The protective tube and universal joint shaft guard must be undamaged, and the shield of the tractor and implement PTO shaft must be attached and be in proper working condition.
- Work is prohibited while the safety devices are damaged.
- You can attach and detach the universal joint shaft only when
 - the PTO shaft is switched off.
 - the tractor engine is switched off.
 - the parking brake has been applied.
 - the ignition key has been removed.
- Always ensure that the universal joint shaft is installed and secured correctly.
- When using wide-angle universal joint shafts, always install the wide angle joint at the pivot point between the tractor and implement.
- Secure the universal joint shaft guard by attaching the chain(s) to prevent movement.
- Observe the prescribed pipe overlaps for universal joint shafts in transport and working positions. (Read and follow the operating manual from the universal joint shaft manufacturer.)


- When turning corners, observe the permitted bending and displacement of the universal joint shaft.
- Before switching on the PTO shaft, check that the selected PTO shaft speed of the tractor matches the permitted drive speed of the implement.
- Instruct everyone to leave the danger area of the implement before switching on the PTO shaft.
- While work is being carried out with the PTO shaft, there must be no one in the area of the PTO or universal joint shaft while it is turning.
- Never switch on the PTO shaft while the tractor engine is turned off.
- Always switch off the PTO shaft whenever excessive bending occurs or it is not needed.
- **WARNING!** After the PTO shaft is switched off, there is a danger of injury from the continued rotation of freewheeling implement parts.
Do not approach the implement too closely during this time. You must only start work on the implement once all implement parts are at a complete standstill!
- Secure the tractor and implement against unintentional starting and unintentional rolling away before you perform any cleaning, servicing or maintenance work on PTO shaft-driven implements or universal joint shafts.
- After uncoupling the universal joint shaft, place it on the holder provided.
- After removing the universal joint shaft, attach the protective sleeve to the PTO shaft stub.
- When using the travel-dependent PTO shaft, note that the PTO shaft speed depends on the drive speed, and that the direction of rotation reverses when you drive in reverse.

2.16.6 Cleaning, maintenance and repair

- Only carry out cleaning, maintenance and repair work on the implement when:
 - The drive is switched off.
 - the tractor engine is at a standstill
 - the ignition key has been removed.
 - The implement plug has been disconnected from the on-board computer
- Regularly check the nuts and bolts for a firm seat and retighten them as necessary.
- Secure the raised implement and/or raised implement parts against unintentional lowering before performing any cleaning, maintenance or repair work on the implement!
- When replacing work tools with blades, use suitable tools and gloves.
- Dispose of oils, greases and filters in the appropriate way.
- Disconnect the cable to the tractor generator and battery, before carrying out electrical welding work on the tractor and on attached implements.
- Spare parts must meet at least the technical requirements specified by AMAZONEN-WERKE! This is ensured through the use of original AMAZONE spare parts.

3 Loading and unloading

The pictogram marks the location at which the lifting gear is to be secured to the implement.



DANGER

Only attach the lifting gear at the marked location.

Do not stand under suspended loads.

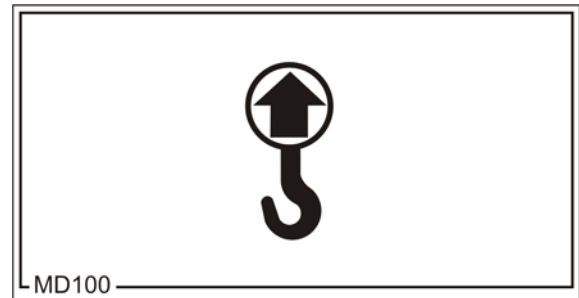


Fig. 2

Loading the implement on a transport vehicle

1. Uncouple the seed drill and deep loosener from the soil tillage implement.
2. Attach the lifting gear at the marked location.
3. Place the implement on the transport vehicle and lash it down as prescribed.

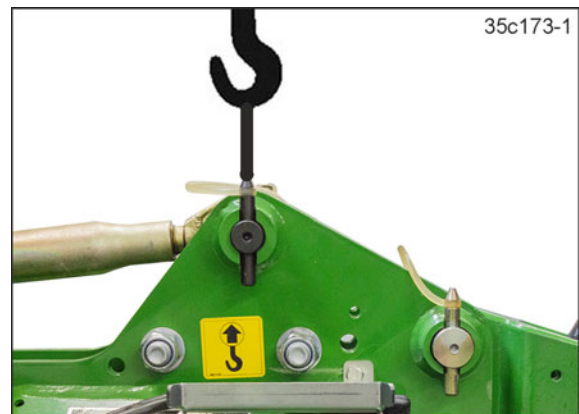


Fig. 3

4 Product description

This section:

- provides a comprehensive overview of the implement structure.
- provides the names of the individual assembly groups and operating controls.

If possible, read this section when actually at the implement. This helps you to understand the implement better.

4.1 Overview of assembly groups

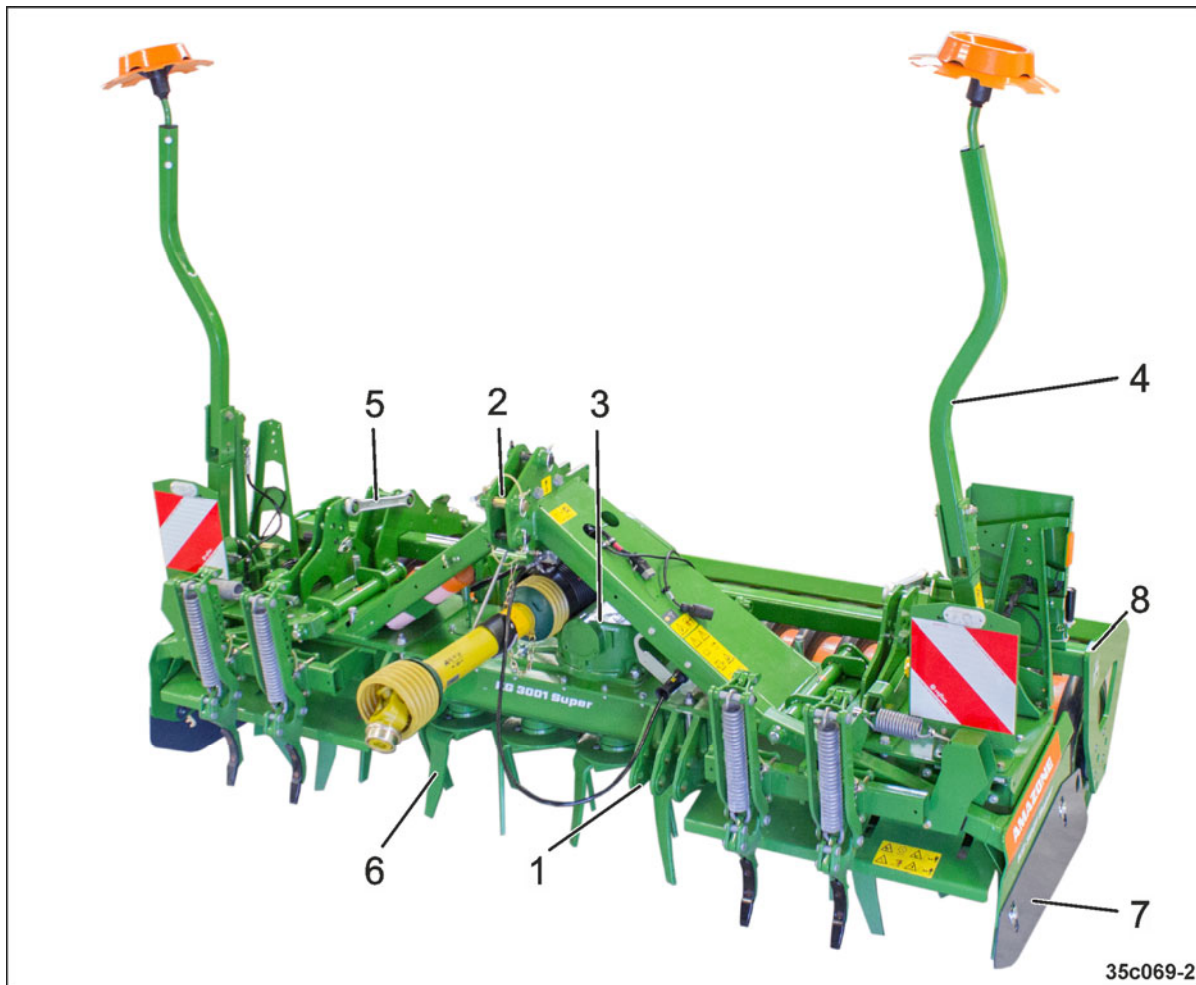


Fig. 4: KG 3001

- | | |
|---------------------------------------|---|
| (1) Lower link coupling points | (5) Segment for adjusting the working depth |
| (2) Upper link coupling point | (6) Tool tines |
| (3) Gearbox | (7) Side panel |
| (4) Track marker with overload safety | (8) Trailing roller |

4.2 Safety and protection equipment

Fig. 5

- (1) Universal joint shaft guard

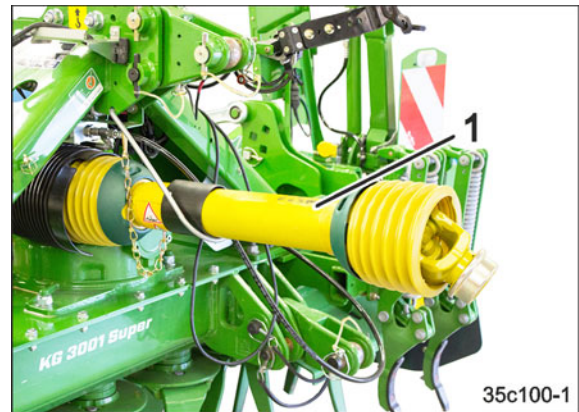


Fig. 5

Fig. 6/...

- (1) Tool guard plate
(2) Side panel



Fig. 6

Fig. 7/...

- (3) Roller, trailing
(4) Tool hoop guard
(5) Tool guard plate

The above-mentioned components serve as tool protection; use of the implement without these components is not permitted.

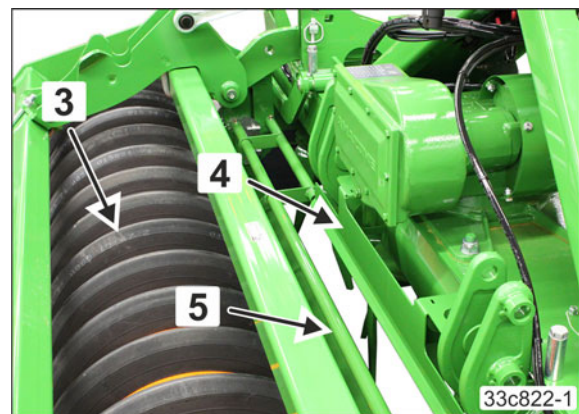


Fig. 7

4.3 Overview – Supply lines between the tractor and the implement

Supply cable

Designation	Function
Plug (7-pin)	Road traffic lighting system (optional)
Plug for tractor socket	Oil cooler fan (optional)

Hydraulic hose lines

All hydraulic hose lines have handles with coloured markings and a code number or code letter to assign the respective hydraulic function to the pressure line of a tractor control unit!

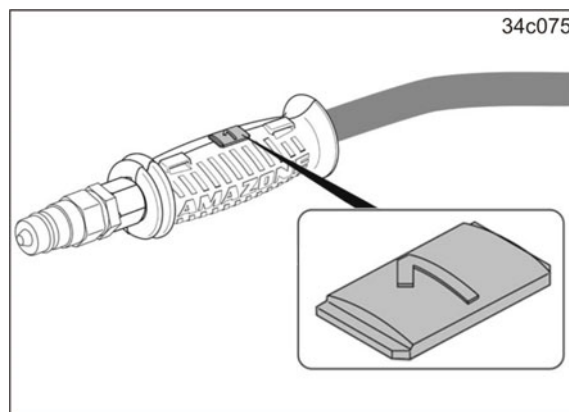












Fig. 8

The function of the tractor control unit is represented symbolically:

Latched, for a permanent oil circulation	
When the button is pressed, as long as the function is active	
Float position, free oil flow in the control unit	

Hydraulic hose		Implement functions		Note	Tractor control unit	
Identification					Function / Designation	
Green		Lifting frame (optional)	lifting		Single acting	
beige		Working depth (optional)	Shallower		Double acting	
			Deeper			
yellow		Tramline marking (optional, on the seed drill)	raise / lower		Single acting	

4.4 Transportation equipment

Fig. 9/...

- (1) 2 rear-facing warning signs
- (2) 2 rear facing rear lights brake lights and turn indicators
- (3) 2 side-facing spotlights, yellow
- (4) 2 spotlights facing the rear, red

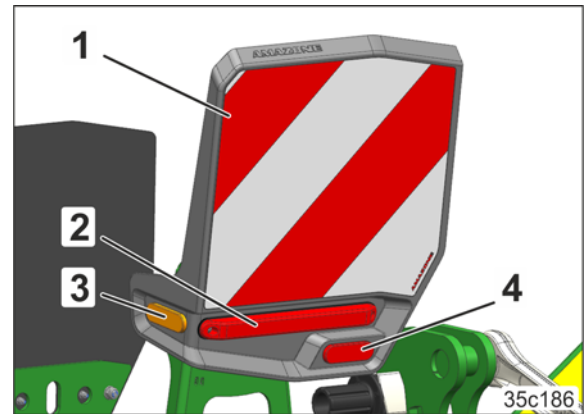


Fig. 9

Fig. 10/...

- (1) 2 forwards-facing warning signs
- (2) 2 forwards-facing marker lights

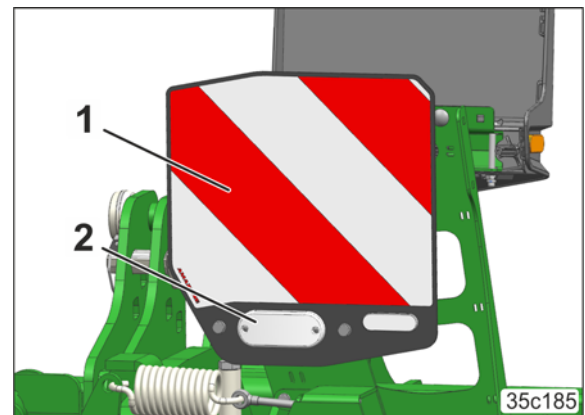


Fig. 10

Fig. 11/...

- (1) 2 side-facing warning signs
(France kit; not permitted in Germany)

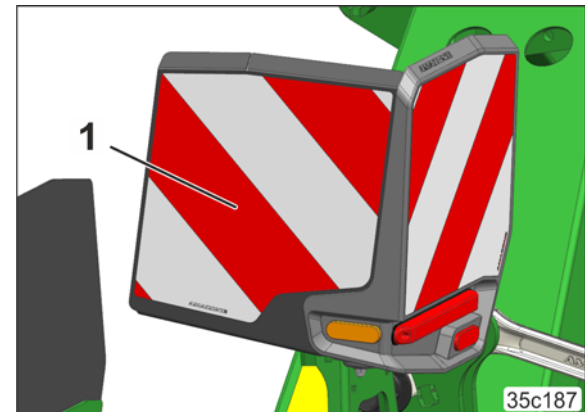


Fig. 11

4.5 Intended use

The soil tillage implement

- has been designed for conventional soil tillage on agricultural crop lands.
- is coupled to the tractor using the tractor three-point hitch attachment and is controlled by an operator.
- may be used only with the levelling board, side panels and trailing roller fitted.
This also applies if the soil tillage implement is part of a seeding combination.

Slopes can be travelled

- Along the contours
Direction of travel to the left 15 %
Direction of travel to the right 15 %
- Along the gradient
Up the slope 15 %
Down the slope 15 %

"Intended use" also covers:

- compliance with all the instructions in this operating manual
- adherence of inspection and maintenance work
- exclusive use of original AMAZONE spare parts.

Other uses to those specified above are forbidden and shall be considered as improper.

For any damage resulting from improper use

- the operator bears sole responsibility
- AMAZONEN-WERKE accepts no liability.

4.6 Danger areas and danger points

The danger area is the area around the machine in which people can be caught:

- by work movements made by the implement and its tools
- by materials or foreign bodies thrown out of the implement
- by tools rising or falling unintentionally
- by unintentional rolling of the tractor and the implement

Within the implement danger area, there are danger points with permanent or unexpected risks. Warning pictograms indicate these danger points and warn against residual dangers, which cannot be eliminated for construction reasons. Here, the special safety regulations of the appropriate section shall be valid.

No-one may stand in the implement danger area:

- as long as the tractor engine is running with the universal joint shaft/hydraulic system connected.
- as long as the tractor and implement are not protected against unintentional start-up and running.

The operating person may only move the implement or switch or drive the tools from the transport position to the working position or vice-versa when there is no-one in the implement danger area.

Danger points exist:

- between the tractor and the implement, particularly during coupling and uncoupling operations.
- in the area of moving parts
- By climbing onto the implement.
- underneath raised, unsecured implements or parts of implements.
- In the area of the swivelling track markers.

4.7 Rating plate and CE mark

Fig. 12/...

The following information is specified on the rating plate and the CE mark:

- (1) Implement number
- (2) Vehicle identification number
- (3) Product
- (4) Permissible technical implement weight
- (5) Model year
- (6) Year of manufacture



Fig. 12

4.8 Noise production data

The workplace-related emission value (acoustic pressure level) is 72 dB(A), measured in operating condition at the ear of the tractor driver with the cab closed.

Measuring unit: OPTAC SLM 5.

The noise level is primarily dependent on the vehicle used.

4.9 Technical data

4.9.1 KE Special / Super rotary harrow

Rotary harrow KE 2501 Special		
Working width	[m]	2.50
Transport width	[m]	2.55
Mount categories		see section 5.2, page 53
Number of rotors		8
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	995
Distance d	[m]	0.89

Data for calculating the tractor weights and tractor axle loads		
KE 2501 Special	KG	995
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Rotary harrow KE 3001 Special		
Working width	[m]	3.0
Transport width	[m]	3.0
Mount categories		see section 5.2, page 53
Number of rotors		10
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1060
Distance d	[m]	0.89

Data for calculating the tractor weights and tractor axle loads		
KE 3001 Special	KG	1060
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Product description

KE 3001 Super rotary harrow		
Working width	[m]	3.0
Transport width	[m]	3.0
Mount categories		see section 5.2, page 53
Number of rotors		10
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1120
Distance d	[m]	0.89

Data for calculating the tractor weights and tractor axle loads		
KE 3001 Super	KG	1120
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Rotary cultivator KE 3501 Super		
Working width	[m]	3.50
Transport width	[m]	3.50
Mount categories		see section 5.2, page 53
Number of rotors		12
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1220
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KE 3501 Super	KG	1220
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	



Rotary harrow KE 4001 Super		
Working width	[m]	4.0
Transport width	[m]	4.03
Mount categories		see section 5.2, page 53
Number of rotors		14
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1330
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KE 3001 Special	KG	1330
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

4.9.2 Rotary cultivator KX

KX 3001 rotary cultivator		
Working width	[m]	3.0
Transport width	[m]	3.0
Mount categories		see section 5.2, page 53
Number of rotors		10
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1350
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KE 3001 Special	KG	1350
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

4.9.3 Rotary cultivator KG Special / Super

Rotary cultivator KG 3001 Special		
Working width	[m]	3.0
Transport width	[m]	3.0
Mount categories		see section 5.2, page 53
Number of rotors		10
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1340
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KG 3001 Special	KG	1340
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Rotary cultivator KG 3501 Special		
Working width	[m]	3.50
Transport width	[m]	3.50
Mount categories		see section 5.2, page 53
Number of rotors		12
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1450
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KG 3501 Special	KG	1450
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Rotary cultivator KG 4001 Special		
Working width	[m]	4.00
Transport width	[m]	4.03
Mount categories		see section 5.2, page 53
Number of rotors		14
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1580
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KG 4001 Special	KG	1580
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Rotary cultivator KG 3001 Super		
Working width	[m]	3.0
Transport width	[m]	3.0
Mount categories		see section 5.2, page 53
Number of rotors		10
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1360
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KG 3001 Super	KG	1360
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Product description

Rotary cultivator KG 3501 Super		
Working width	[m]	3.50
Transport width	[m]	3.50
Mount categories		see section 5.2, page 53
Number of rotors		12
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1480
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KG 3501 Super	KG	1480
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

Rotary cultivator KG 4001 Super		
Working width	[m]	4.00
Transport width	[m]	4.03
Mount categories		see section 5.2, page 53
Number of rotors		14
Tool tines		see section 5.8, page 72
Working depth, max.	[cm]	20
Basic weight	KG	1610
Distance d	[m]	0.89

Data for the calculation of tractor weights and tractor axle loads		
KG 4001 Super	KG	1610
+ roller (see section 4.9.4, page 47)	KG	
Total weight G_H:	KG	

4.9.4 Rollers

Working width Roller		2500 mm	3000 mm	3500 mm	4000 mm
Type	Ø [mm]	[kg]	[kg]	[kg]	[kg]
Cage roller	520	-	280	320	360
Tooth packer roller	500	327	380	440	500
	600	-	607	706	809
Wedge ring roller Row spacing 12.5 cm	520	-	410	-	-
Wedge ring roller Row spacing 12.5 cm	580	-	545	610	705
Wedge ring roller Row spacing 15.0 cm		-	510	-	-
Wedge ring roller Row spacing 15.4 cm		-	-	-	630
Matrix wedge ring roller Row spacing 12.5 cm	600	-	555	605	702
Matrix wedge ring roller Row spacing 15.0 cm		-	525	-	-
Matrix wedge ring roller Row spacing 15.4 cm		-	-	-	670
Trapeze ring roller Row spacing 12.5 cm	500	-	560	612	691
	600	-	665	-	870
Trapeze ring roller Row spacing 15.0 cm	500	-	520	-	-
	600	-	620	-	-
Trapeze ring roller Row spacing 15.4 cm	600	-	-	-	806

4.10 Necessary tractor equipment

For the implement to be operated as intended, the tractor must fulfil the following requirements:

Machine type	Tractor engine power	
	for solo operation with roller	maximum permitted for operation with a seed drill
KE 2501 Special	from 40 kW/55 HP	to 103 kW/140 HP
KE 3001 Special	from 48 kW/65 HP	
KE 3001 Super	from 59 kW/80 HP	to 132 kW/180 HP
KE 3501 Super	from 59 kW/80 HP	
KE 4001 Super	from 63 kW/85 HP	
KX 3001	from 66 kW/90 HP	to 140 kW/190 HP
KG 3001 Special	from 66 kW/90 HP	to 162 kW/220 HP
KG 3501 Special	from 77 kW/105 HP	
KG 4001 Special	from 88 kW/120 HP	
KG 3001 Super	from 66 kW/90 HP	to 220 kW/300 HP
KG 3501 Super	from 77 kW/105 HP	
KG 4001 Super	from 88 kW/120 HP	

Electrical equipment	Battery voltage	12 V (volts)
	Lighting socket	7-pin (optional)
Hydraulic system	Tractor control units	see section 4.3, Seite 36
	Maximum approved operating pressure	210 bar
	Tractor pump capacity	At least 80 l/min at 150 bar
	Hydraulic oil for supplying the implement	see section 4.13, Seite 50
Tractor PTO shaft connection	Speed (optionally)	1000 rpm, 750 rpm or 540 rpm
	Direction of rotation (as seen in the direction of travel)	Clockwise

4.11 Gearbox – oils and filling capacities

Gearbox / WHG	Filling quantity	Gear oil
KE Special / Super	1.4 litres (without oil cooler)	ISO VG SAE 80W-90
KX	4.0 litres (without oil cooler)	SAE 90 EP GL4
KG Special	4.0 litres (without oil cooler)	
	5.5 litres (with oil cooler)	
KG Super	5.2 litres (without oil cooler)	
	6.7 litres (with oil cooler)	

4.12 Spur gear trough – oils and filling quantities

Spur gear trough gear oil

Spur gear trough gear oil:	Gear oil CLP/CKC 460 DIN 51517, Part 3 / ISO 12925
----------------------------	---

Oils that comply with this standard can be topped up or used to replace the existing oil in the spur gear trough. Only fill with new and clean gear oil.

The following table lists several gear oil types that comply with the standard. The spur gear trough is filled with gear oil Wintershall ERSOLAN 460 in the factory.

Manufacturer	Designation
Wintershall	ERSOLAN 460
Agip	Blasia 460
ARAL	Degol BG 460
Autol	Precis GEP 460
Avia	Avilub RSX 460
BP	Energol GR-XP 460
Castrol	Alpha SP 460
DEA	Falcon CLP 460
ESSO	Spartan EP 460
FINA	Giran 460
Fuchs	Renep Compound 110
Mobil	Mobilgear 600 XP 460
Shell	Omala 460
OMV	OMV Gear HST 460

Product description

Spur gear trough filling quantities

Machine type	Spur gear trough filling quantities
KE 2501 Special	21 litres
KE 3001 Special / Super	25 litres
KE 3501 Super	30 litres
KE 4001 Super	35 litres
KX 3001	25 litres
KG 3001 Special/Super	25 litres
KG 3501 Special/Super	30 litres
KG 4001 Special/Super	35 litres

4.13 Hydraulic oil for the implement supply

Hydraulic oil for the implement supply (connection to the tractor hydraulic system)	Hydraulic fluid HLP68 DIN 51524
--	---------------------------------

5 Layout and function

The implement is used on agricultural land for tilling the soil

- As a stand-alone machine with trailing roller
- As part of a cultivation combination with trailing roller and
 - Mounted seed drill.
 - Pack-top seed drill.

KE rotary harrows

KE rotary harrows have dragging tool tines.

The rotary harrow is used for seedbed preparation on fields with little organic matter

- After the plough
- On light soils without pre-tilling.



35c608

Fig. 13

Rotary cultivator KX / KG

KG rotary cultivator have tool tines in the on-grip position

- For seedbed preparation
 - Without pre-tilling (mulch seeding).
Straw and other organic matter is mulched close to the surface.
 - After chisel cultivators or deep looseners
 - After the plough
- For stubble cultivation
- For ploughing up of grassland

KX rotary cultivators can be fitted with on-grip position tool tines or dragging tool tines, as required.



Fig. 14

On-grip tines in the forward position have a sifting effect:

- Coarse particles of soil are transported further than fine particles of soil.
- The fine earth is concentrated in the lower area of the tilled zone; the large particles of soil remain at the surface and protect against capping.

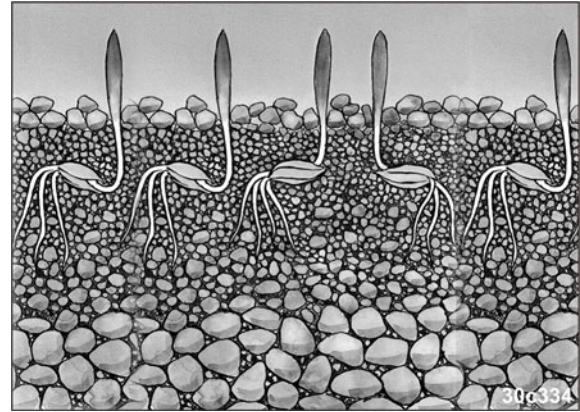


Fig. 15

5.1 Threaded cartridge

The threaded cartridge (Fig. 16/1) contains

- the operating manual,

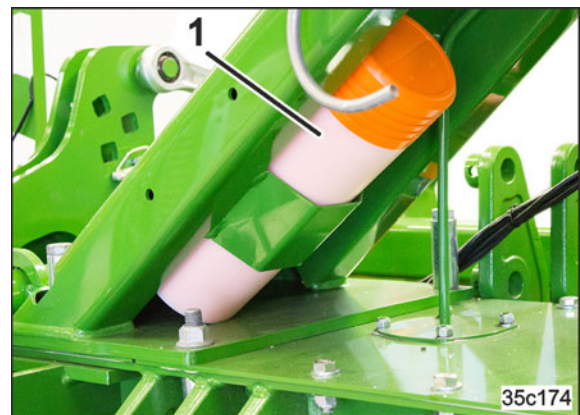


Fig. 16

5.2 Mounting category

5.2.1 KE Special / Super rotary harrow

The rotary harrow has two upper link pins (cat. 2 and cat. 3).

If a cat. 2 top link is to be connected to the cat. 3 top link pin (Fig. 17/2), the holes must be retrofitted in a specialist workshop with two expansion bushings (see online spare parts list).

With the expansion bushes, the upper link pin Ø 25.0 mm (Fig. 17/1) replaces the upper link pin Ø 31.7 mm (Fig. 17/2).

Fig. 17/...

- (1) Top link pin, Ø 25 mm, Cat. 2
- (2) Top link pin, Ø 31.7 mm, Cat. 3
- (3) Lower link pin, Ø 28 mm, Cat. 2

The ball sleeves are tractor accessories



Fig. 17

5.2.2 KX / KG Special / Super rotary cultivator

Fig. 18/...

- (1) Top link pin, Ø 25 mm, Cat. 2
- (2) Top link pin, Ø 31.7 mm, Cat. 3
- (3) Lower link pin, Ø 28 mm, Cat. 2
- (4) Lower link pin, Ø 36.6 mm, Cat. 3

The ball sleeves are tractor accessories

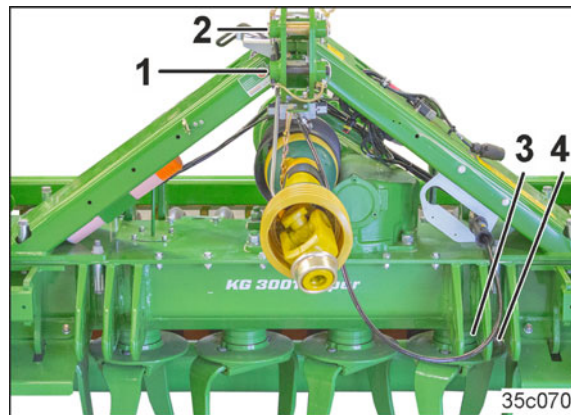


Fig. 18

5.2.3 Adapter frame Cat. 4 (optional)

The adapter frame enables use with Cat. 4. lifting gear. A special universal joint shaft is required for the drive.

Fig. 19/...

- 1. Cat. 4 adapter frame (only KX, KG)

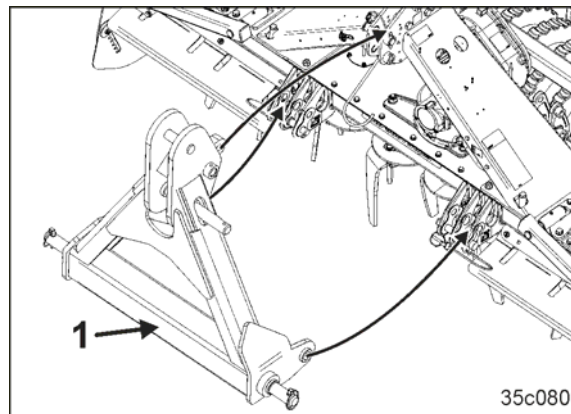


Fig. 19

5.2.4 Three-point hitch extension (option)

The three-point hitch extension serves to increase the distance between the tractor and implement.

The three-point extension consists of 3 spacers. Each spacer is pegged to the implement using 2 pins and secured using linch pins.

5.2.4.1 Three-point hitch extension for KE rotary harrows

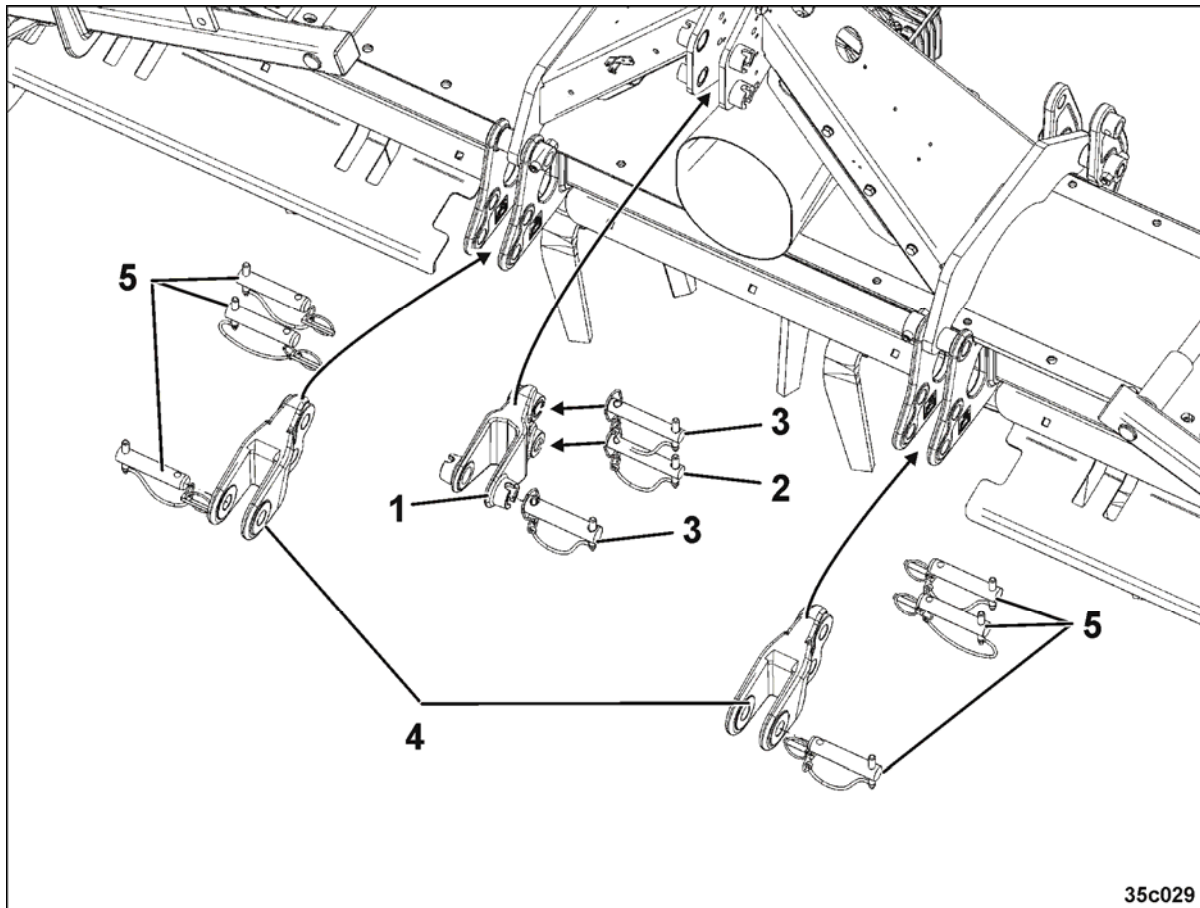


Fig. 20

Three-point hitch extension for KE rotary harrows				
Fig. 20/...	Part name	Pin diameter [mm]	Mounting category	Pieces
1	Upper link extension	—	—	1
2	Upper link pin	Ø 25	Cat. 2	1
3	Upper link pin	Ø 31.7	Cat. 3	2
4	Lower link extension	—	—	2
5	Lower link pin	Ø 28	Cat. 2	6

5.2.4.2 Three-point extension cat. 2 for KX/KG rotary cultivators

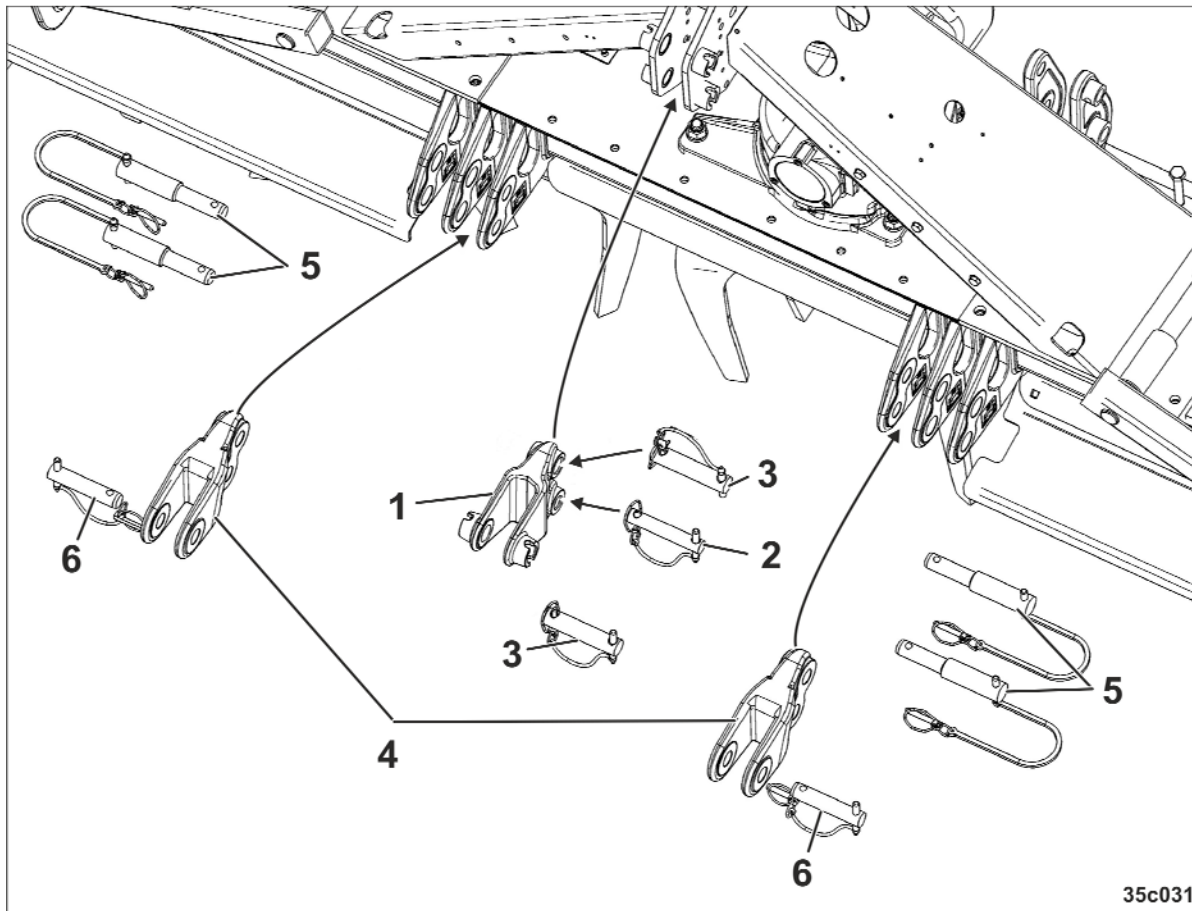


Fig. 21

Three-point extension for KX/KG rotary cultivators				
Fig. 21/...	Part name	Pin diameter [mm]	Mounting category	Pieces
1	Upper link extension	—	—	1
2	Upper link pin	Ø 25	Cat. 2	1
3	Upper link pin	Ø 31.7	Cat. 3	2
4	Lower link extension	—	—	2
5	Lower link pin	Ø 28/36.6	Cat. 2/3	4
6	Lower link pin	Ø 28	Cat. 2	2

5.2.4.3 Three-point extension cat. 3 for KX/KG rotary cultivators

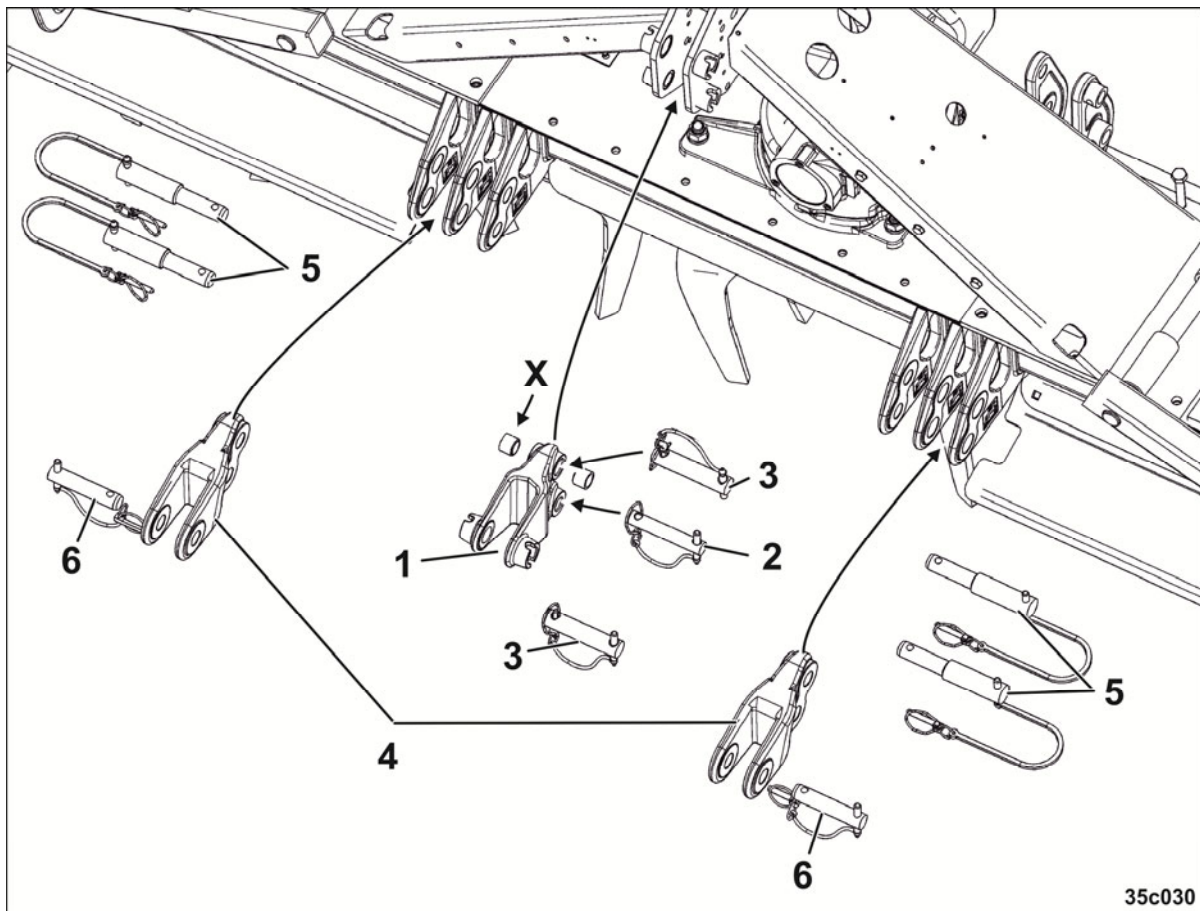


Fig. 22

Three-point extension for KX/KG rotary cultivators				
Fig. 22/...	Part name	Pin diameter [mm]	Mounting category	Pieces
1	Upper link extension	—	—	1
2	Upper link pin	Ø 25	Cat. 2	1
3	Upper link pin	Ø 31.7	Cat. 3	2
4	Lower link extension	—	—	2
5	Lower link pin	Ø 28/36.6	Cat. 2/3	4
6	Lower link pin	Ø 36.3	Cat. 3	2
X	Note: Remove expansion bush			

5.3 Wheel mark eradicator (optional)



With installed wheel mark eradicators, the space between the tractor and the implement can become very small. It helps to use three-point extensions (see section 5.2.4, page 55).

The wheel mark eradicators eliminate deep wheel marks on the field.

The wheel mark eradicators are equipped with a tension spring. The overload safety allows the tines to deflect in overload situations.

The mounting frame (Fig. 23/1) serves to attach the horizontally and vertically adjustable wheel mark eradicators (Fig. 23/2).

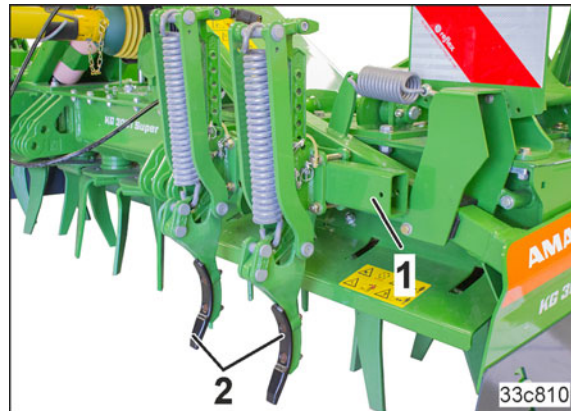


Fig. 23

The wheel mark eradicators can be adjusted horizontally and vertically. The maximum working depth is 150 mm (Fig. 24/1).

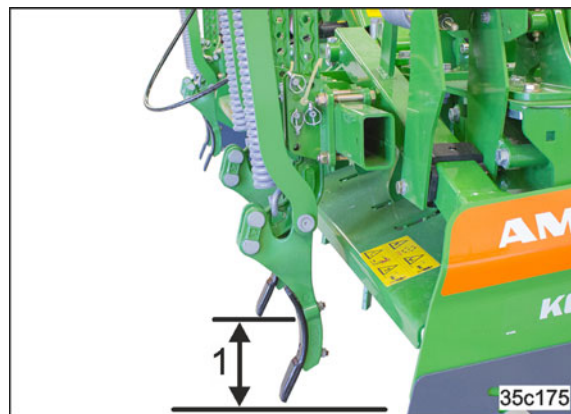


Fig. 24

The design of the wheel mark eradicator tools depends on the field of application.

Fig. 25/...

- (1) Narrow coulter (optional)
- (2) Heart-shaped coulter (optional)
- (3) Wing coulter (optional)

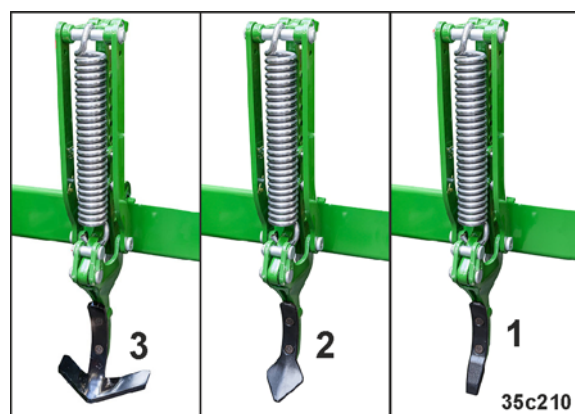


Fig. 25

5.4 Rollers

The rollers serve to

- support the soil tillage implement and maintain the working depth.
- reconsolidate the soil
- protect against the rotating tools of the soil tillage implement.

Only use the soil tillage implement

- for solo operation with the rollers specified below
- in combination with a seed drill with the rollers specified in the seed drill operating manual.

Soil tillage implement	KE 2501 Special	KE 3001 Special / Super	KX 3001 KG 3001 Special / Super	KE 3501 Super KG 3501 Special / Super	KE 4001 Super KG 4001 Special / Super
Cage roller	—	SW 3000-520	SW 3000-520	SW 3500-520	SW 4000-520
Tooth packer roller Row spacing 12.5 cm	PW 2500-500/125	PW 3000-500/125	PW 3000-500/125	PW 3500-500/125	PW 4000-500/125
	—	PW 3000-600/125	PW 3000-600/125	PW 3500-600/125	PW 4000-600/125
Wedge ring roller Row spacing 12.5 cm	—	KW 3000-520/125	KW 3000-520/125	—	—
	—	KW 3000-580/125	KW 3000-580/125	KW 3500-580/125	KW 4000-580/125
Wedge ring roller Row spacing 15.0 cm	—	KW 3000-580/150	KW 3000-580/150	—	—
Wedge ring roller Row spacing 15.4 cm	—	—	—	—	KW 3000-580/154
Wedge ring roller (matrix) Row spacing 12.5 cm	—	KWM 3000-600/125	KWM 3000-600/125	KWM 3500-600/125	KWM 4000-600/125
Wedge ring roller (matrix) Row spacing 15.0 cm	—	KWM 3000-600/150	KWM 3000-600/150	—	—
Wedge ring roller (matrix) Row spacing 15.4 cm	—	—	—	—	KWM 4000-600/154
Trapeze ring roller Row spacing 12.5 cm	—	TRW 3000-500/125	TRW 3000-500/125	TRW 3500-500/125	TRW 4000-500/125
	—	TRW 3000-600/125	TRW 3000-600/125	TRW 3500-600/125	TRW 4000-600/125
Trapeze ring roller Row spacing 15.0 cm	—	TRW 3000-500/150	TRW 3000-500/150	—	—
	—	TRW 3000-600/150	TRW 3000-600/150	—	—
Trapeze ring roller Row spacing 15.4 cm	—	—	—	—	TRW 4000-600/154
Simplex prismatic roller with spheroidal graphite iron rings made by Güttler	—	3000-SX-45 SG	3000-SX-45 SG	—	—
Simplex prismatic roller with synthetic ultra rings made by Güttler	—	3000-SX-45 SU	3000-SX-45 SU	—	—
	—	3000-SX-50 SU	3000-SX-50 SU	3500-SX-50SU	4000-SX-50SU
	—	3000-SX-56 SU	3000-SX-56 SU	3500-SX-56SU	4000-SX-56SU

Roller frames

Roller type	1-tube roller frame	2-tube roller frame
Cage roller	SW 3000-520 SW 3500-520 SW 4000-520	—
Tooth packer roller	L PW 2500-500 L PW 3000-500 L PW 3500-500 L PW 4000-500	—
	—	PW 3000-600 PW 3500-600 PW 4000-600
Wedge ring roller	L KW 2500-520 L KW 3000-520	—
	—	KW 3000-580 KW 3500-580 KW 4000-580
Wedge ring roller with matrix tyre profile	—	KWM 3000/600 KWM 3500/600 KWM 4000/600
Trapeze ring roller	L TRW 3000-500	TRW 3000-500
	—	TRW 3000-600 TRW 4000-600
Simplex prismatic roller with spheroidal graphite iron rings made by Güttler	3000-SX-45 SG	—
Simplex prismatic roller with synthetic ultra rings made by Güttler	3000-SX-45 SU	—
	—	3000-SX-50 SU 3500-SX-50 SU 4000-SX-50 SU
	—	3000-SX-56 SU 3500-SX-56 SU 4000-SX-56 SU

5.4.1 Cage roller SW

- SW520

Field of application

Using the SW cage roller on light soils.

- The cage roller can be used where lighter reconsolidation of the soil is required.
- Disposes of a very good self-propulsion.

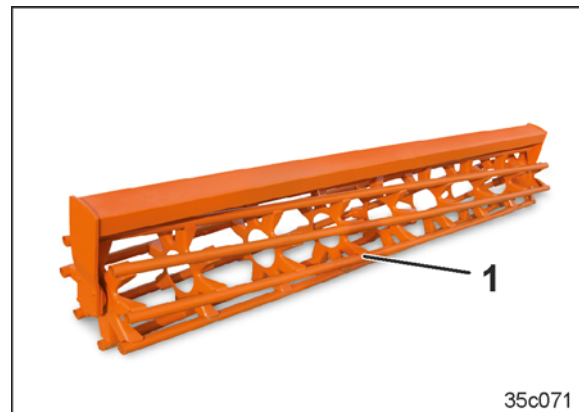


Fig. 26

5.4.2 Tooth packer roller PW

- PW500
- PW600

Field of application

The PW tooth packer roller is used on medium and heavy soils.

Mode of operation

The tooth packer roller compacts the soil uniformly over the entire working width.

Cleaning

Adjustable, carbide-coated scrapers clean the roller.

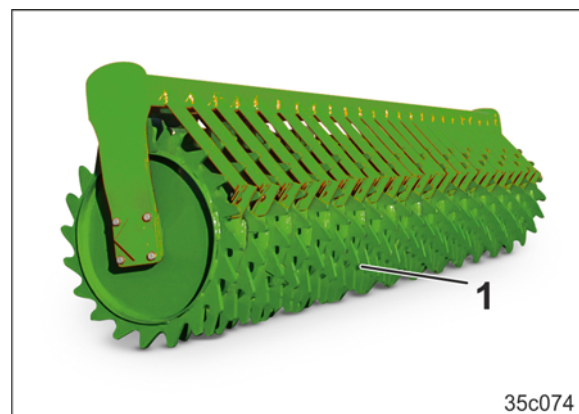


Fig. 27

5.4.3 Wedge ring roller KW

- KW520
- KW580

Field of application

Use the wedge ring roller KW on medium to heavy soils.

Mode of operation

The wedge rings compact the soil in strips. In combination with a seed drill, the seed is embedded in the compacted soil. Good soil coverage means that more humidity is available for germination.

The loose soil between the wedge rings is used to close the furrows.

Cleaning

Adjustable, carbide-coated scrapers clean the roller.

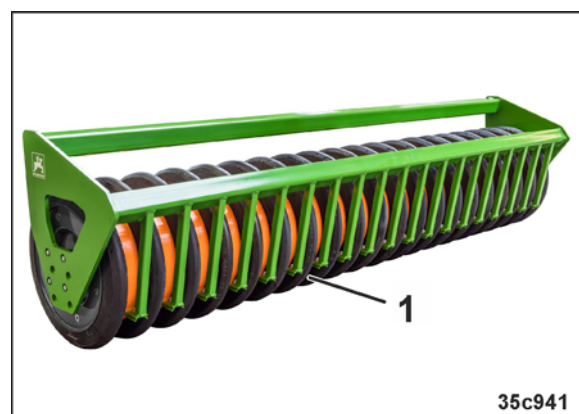


Fig. 28

5.4.4 KWM wedge ring roller with matrix tyre profile

- KWM600

Field of application

Use the wedge ring roller with matrix tyre profile on medium to heavy soils.

Mode of operation

With high self-propulsion of the transverse profiles, the matrix tyre profile particularly ensures reconsolidation in strips. In combination with a seed drill, the seed is embedded in the compacted soil. Good soil coverage means that more humidity is available for germination. The loose soil between the matrix tyre profile is used to close the furrows.

Cleaning

Adjustable, carbide-coated scrapers clean the roller.

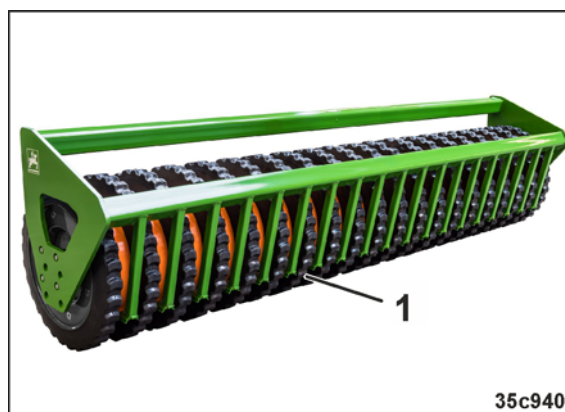


Fig. 29

5.4.5 TRW trapeze ring roller

- TRW500
- TRW600

Field of application

The trapeze ring roller is used on medium to heavy soils.

Mode of operation

The trapeze ring roller reconsolidates the soil in strips. The integrated cross bars of the trapeze rings provide additional traction for the roller. In combination with a seed drill, the seed is embedded in the compacted soil. Good soil coverage means that more humidity is available for germination.

The loose soil between the trapeze rings is used to close the furrows.

Cleaning

Adjustable, carbide-coated scrapers clean the roller.

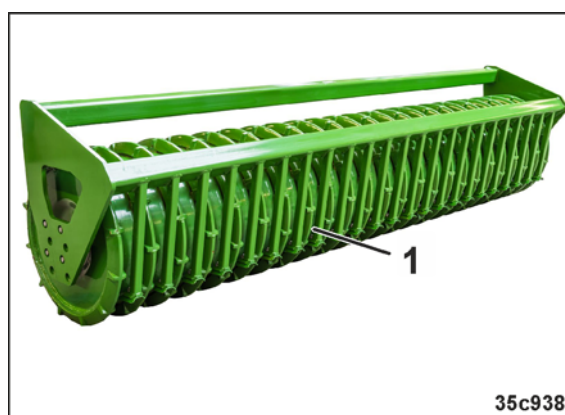


Fig. 30

5.5 Drive

The universal joint shaft (Fig. 31/1) transfers the drive force from the tractor PTO shaft to the tool carrier through the implement gearbox.

If the implement encounters a fixed obstacle, the tool carriers may come to a stop. To prevent damage to the gearbox, the implement is equipped with an overload clutch.

The overload clutch is located on the input shaft of the implement gearbox, under the all-round protective cover.

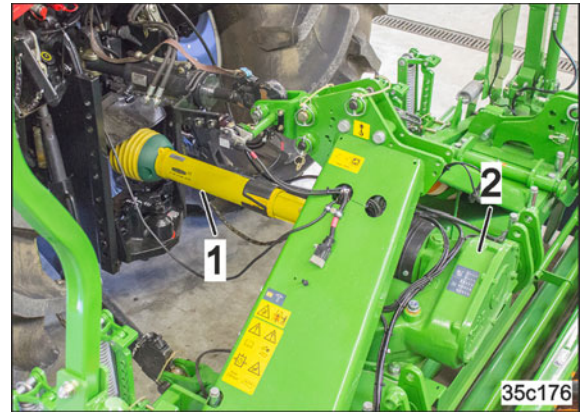


Fig. 31

As an option, the gearbox can be fitted with a PTO shaft through drive. The speed corresponds to the tractor's PTO shaft speed.

Fig. 32/...

- WHG/KG Super PTO shaft through drive



Fig. 32

5.5.1 Gearbox / Tractor PTO shaft speed / Tine speed

Different soils require that the tine speed be adjusted in order to attain the desired fine seedbed. The implement gearbox makes this adjustment possible.

Never select a higher tine speed than is absolutely necessary. If the tine speed is increased, the power requirement and tine wear increase disproportionately.

Selecting the right tine speed lowers wear costs and increases area efficiency.

Always set the tractor PTO shaft speed to 1000 rpm. Lower tractor PTO shaft speeds lead to higher torques at the universal joint shaft and can cause rapid wear of the overload clutch.

The gearbox type depends on the machine type and the permissible tractor engine power (see table). Do not couple the implement with tractors which exceed the permissible tractor engine power.

Implement			Gearbox / WHG	Maximum permissible tractor engine power	PTO shaft through drive
Rotary harrow	KE 2501	Special	KE Special	up to 103 kW(140 bhp)	Option
	KE 3001				
	KE 3001	Super	KE Super	up to 129 kW (175 HP)	Option
	KE 3501				
	KE 4001				
Rotary cultivator	KX 3001		KX	up to 140 kW (190 HP)	Option
Rotary cultivator	KG 3001	Special	KG Special	up to 161 kW (220 HP)	Option
	KG 3501				
	KG 4001				
	KG 3001	Super	KG Super	up to 220 kW (300 HP)	Option
	KG 3501				
	KG 4001				

5.5.2 WHG/KE Special / Super gearbox

The rotational speed of the tines can be adjusted by repositioning the bevel gears in the WHG/KE Special and WHG/KE Super (Fig. 33) gearboxes.

The tables (Fig. 34/Fig. 35) show

- the tractor PTO shaft speeds.
- the gear wheel pairings.
- the tine speeds.

Both gearboxes are fitted with a PTO shaft through drive. The speed at the PTO shaft through drive corresponds to the tractor's PTO shaft speed.



Fig. 33

Speed table for WHG/KE Special

Fig. 34/...

(1) Gear wheel pairing

The gearbox is fitted with the following as standard:


Gear wheel I: 20 teeth

Gear wheel II: 23 teeth

(2) Tine speed [rpm] at the set tractor PTO shaft speed

Example:

Gear wheel pairing I/II:	20/23
Tractor PTO shaft speed:	1000 rpm
Tine speed:	282 rpm

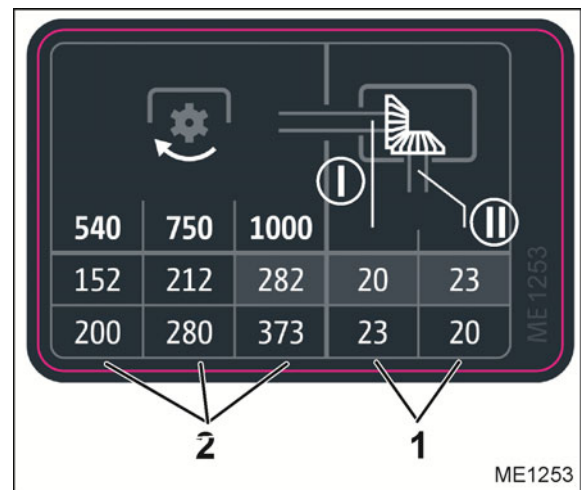

540	750	1000	20	23
152	212	282	20	23
200	280	373	23	20

ME1253

Fig. 34

Speed table for WHG/KE Super

Fig. 35/...

(1) Gear wheel pairing

The gearbox is fitted with the following as standard:


Gear wheel I: 22 teeth

Gear wheel II: 25 teeth

(2) Tine speed [rpm] at the set tractor PTO shaft speed

Example:

Gear wheel pairing I/II:	22/25
Tractor PTO shaft speed:	1000 rpm
Tine speed:	286 rpm

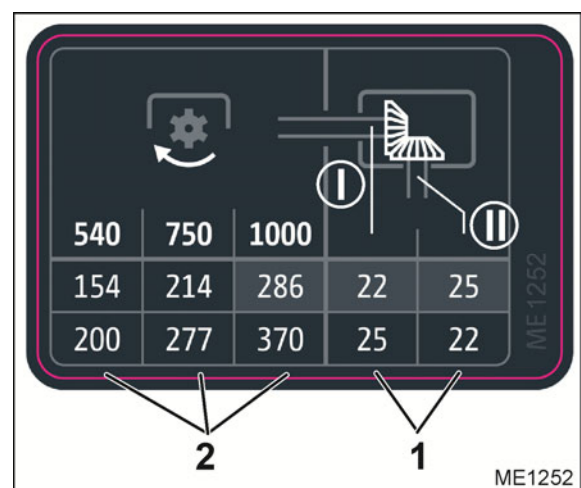

540	750	1000	22	25
154	214	286	22	25
200	277	370	25	22

ME1252

Fig. 35

5.5.3 Gearbox WHG/KX

The rotational speed of the tines can be adjusted by repositioning or replacing the gears in the WHG/KX gearbox (Fig. 36). Only replace the gear wheels in pairs.

The table (Fig. 37) shows

- the tractor PTO shaft speeds.
- the gear wheel pairings.
- the tine speeds.



Fig. 36

Speed table WHG/KX

Fig. 37/...

(1) Gear wheel pairing

The gearbox is fitted with the following as standard:


Gear wheel I: 29 teeth


Gear wheel II: 36 teeth

(2) Tine speed [rpm] at the set tractor PTO shaft speed

Example:

Gear wheel pairing I/II:	29/36
Tractor PTO shaft speed:	1000 rpm
Tine speed:	342 rpm

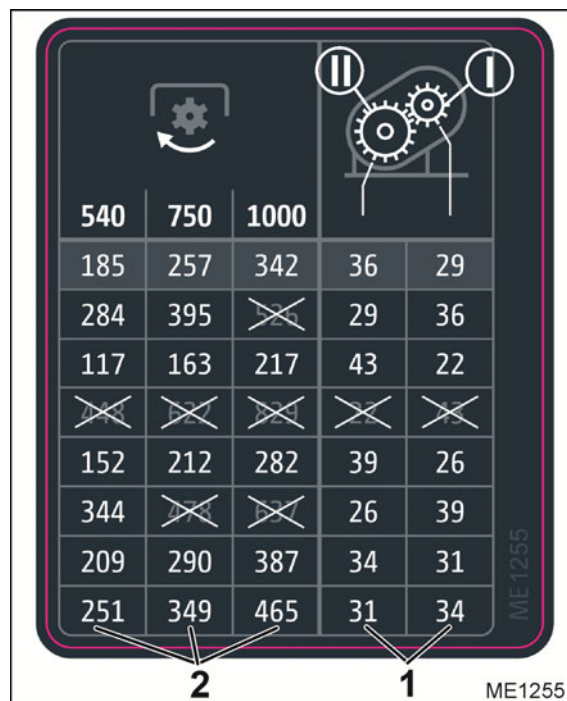

				
540	750	1000	I/II	Tine speed [rpm]
185	257	342	36	29
284	395	342	29	36
117	163	217	43	22
185	257	342	36	29
152	212	282	39	26
344	395	217	26	39
209	290	387	34	31
251	349	465	31	34

ME 1255

Fig. 37



Never set the crossed out tine speeds. These high speeds are unsuitable for soil tillage and could cause the implement to be damaged.

5.5.4 WHG/KG Special / Super gearbox

The rotational speed of the tines can be adjusted by repositioning or replacing the gear pairings in the WHG/KG Special and WHG/KG Super (Fig. 38) gearboxes.

The table (Fig. 39) shows

- the tractor PTO shaft speeds.
- the gear wheel pairings.
- the tine speeds.



Fig. 38

Speed table WHG/KG Special and WHG/KG Super

Fig. 39/...

(1) Gear wheel pairing

The gearbox is fitted with the following as standard:


Gear wheel I: 21 teeth

Gear wheel II: 23 teeth

(2) Tine speed [rpm] at the set tractor PTO shaft speed

Example:

Gear wheel pairing I/II:	21/236
Tractor PTO shaft speed:	1000 rpm
Tine speed:	280 rpm

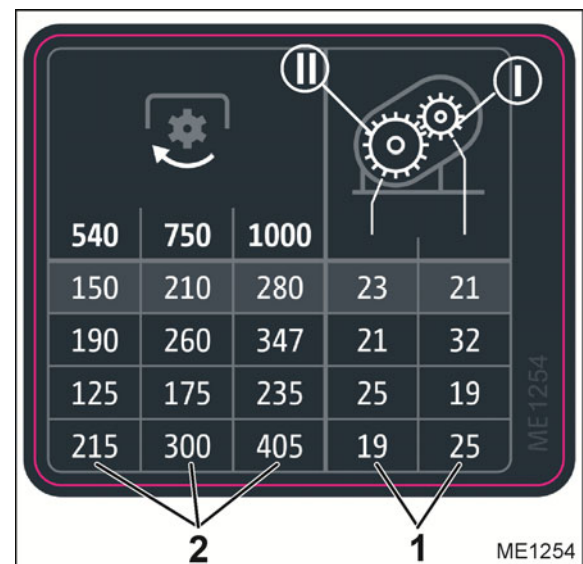

I			II	
540	750	1000	280	347
150	210	280	23	21
190	260	347	21	32
125	175	235	25	19
215	300	405	19	25

Fig. 39

5.5.4.1 Oil cooler (optional)

The oil cooler (Fig. 40/1) cools the transmission fluid.

The gear shaft drives the oil pump (Fig. 40/2). The oil flows through an oil filter (Fig. 40/3).

The fan in the oil cooler is connected to the tractor socket. Every 20 minutes, the fan changes its direction of rotation for approx. 40 seconds, in order to remove any impurities from the radiator fins.



Fig. 40

5.6 Universal joint shafts

The universal joint shaft transfers the drive force of the tractor PTO shaft to the tool carrier through the implement gearbox.

The universal joint shaft type depends on the implement type and the tractor PTO shaft.

Soil tillage implement	Universal joint shaft	Order number
Rotary harrow KE 2501 Special KE 3001 Special	Bondioli & Pavesi LR23 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ628
	Bondioli & Pavesi LR23 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ629
	Walterscheid W2400 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ547

Soil tillage implement	Universal joint shaft	Order number
Rotary harrow KE 3001 Super KE 3501 Super KE 4001 Super	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ578
	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ579
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ647
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ654

Soil tillage implement	Universal joint shaft	Order number
Rotary cultivator KX 3001	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ578
	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ579
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ647
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ654

Soil tillage implement	Universal joint shaft	Order number
Rotary cultivator KG 3001 Special KG 3501 Special KG 4001 Special	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ582
	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ583
	Bondioli & Pavesi SFT-H7 Universal joint shaft with ratchet clutch 1 3/4 inch, 6 parts, 760 mm	EJ584
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ649
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ658
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/4 inch, 6 parts, 760 mm	EJ659

Soil tillage implement	Universal joint shaft	Order number
Rotary cultivator KG 3001 Super KG 3501 Super KG 4001 Super	Bondioli & Pavesi SFT-S8 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ592
	Bondioli & Pavesi SFT-S8 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ593
	Bondioli & Pavesi SFT-S8 Universal joint shaft with ratchet clutch 1 3/4 inch, 6 parts, 760 mm	EJ594
	Bondioli & Pavesi SFT-S8 Universal joint shaft with ratchet clutch 1 3/4 inch, 20 parts, 760 mm	EJ595
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 6 parts, 760 mm	EJ648
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/8 inch, 21 parts, 760 mm	EJ657
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/4 inch, 6 parts, 760 mm	EJ656
	Walterscheid P500 Universal joint shaft with ratchet clutch 1 3/4 inch, 20 parts, 760 mm	EJ655

5.7 Electronic drive monitoring (optional, KG Super only)

If the implement encounters a fixed obstacle, the tool carriers may come to a stop.

An overload clutch on the input shaft of the implement gearbox prevents the gearbox from being damaged.

The KG Super rotary cultivator can be equipped with the electronic drive monitor.

If the tool carriers come to a stop, the on-board computer issues an alarm via

- the display on the control terminal (Fig. 41)
- an acoustic signal.

The gearbox stop is detected by

- sensors (Fig. 42/1) installed on the gearbox, in combination with Bondioli & Pavesi universal joint shafts (Fig. 42/2).
- sensors (Fig. 43/1) installed on the gearbox, in combination with Walterscheid universal joint shafts (Fig. 43/2).



Fig. 41

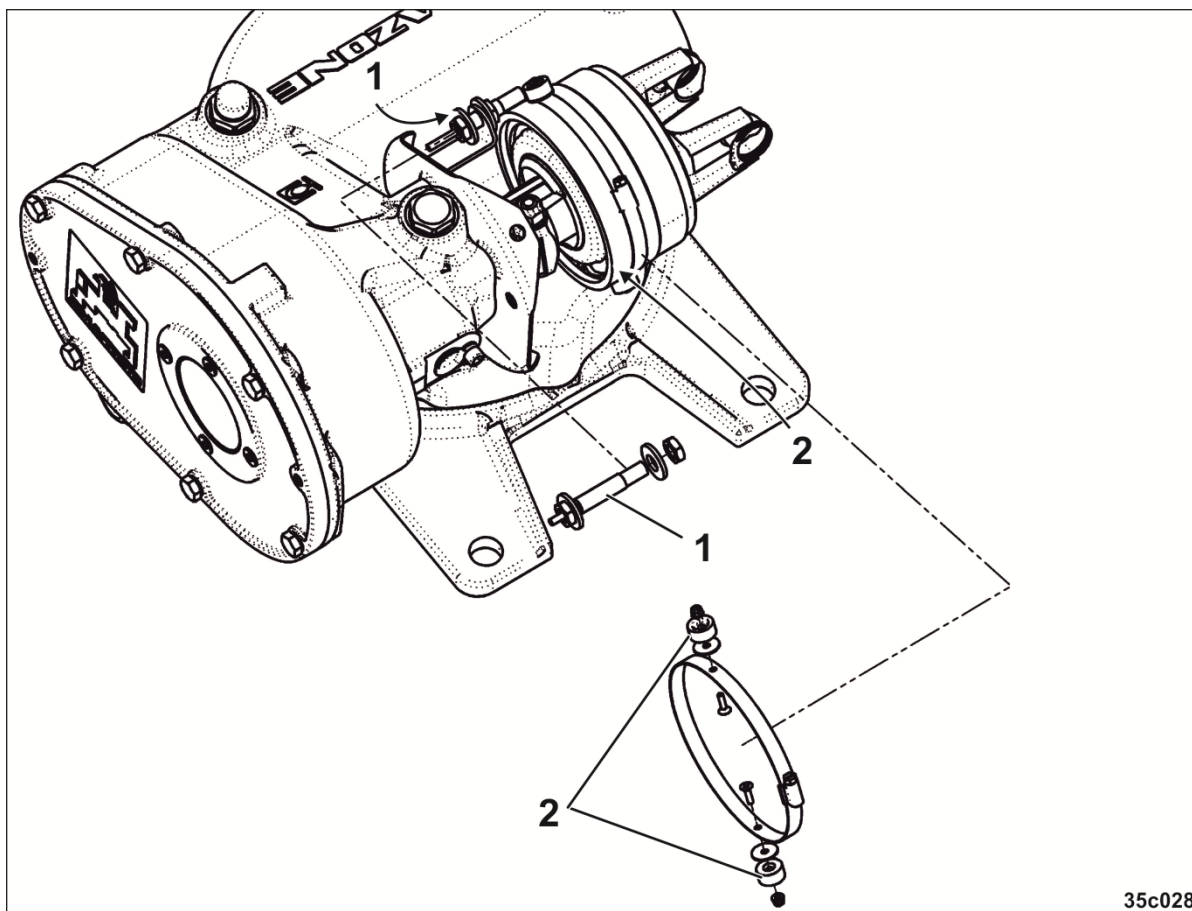


Fig. 42

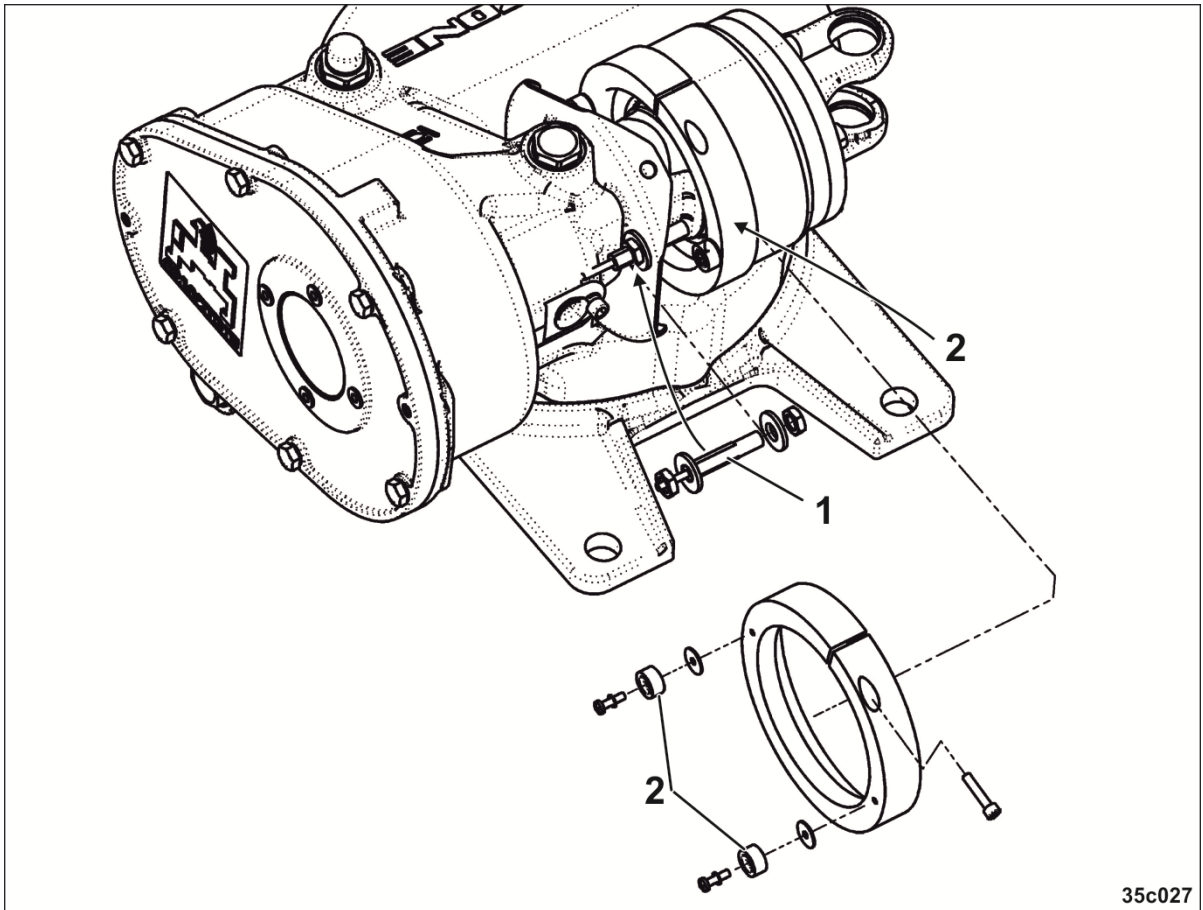


Fig. 43

5.8 Tool tines

Soil tillage implement		Tool tines	Length of the tool tines
Rotary harrow	KE 2501 Special	KE trailing Special	26 cm
	KE 3001 Special / Super		
	KE 3501 Super		
	KE 4001 Super		
Rotary cultivator	KX 3001	KG trailing	33 cm
		KG grip Special	33 cm
		Potato tines	40 cm
Rotary cultivator	KG 3001 Special KG 3501 Special KG 4001 Special	KG trailing	33 cm
		KG grip Special	33 cm
		KG grip Special HD	33 cm
		Potato tines	40 cm
	KG 3001 Super KG 3501 Super KG 4001 Super	KG trailing	33 cm
		KG grip Super	33 cm
		Potato tines	40 cm


Tool tines
KE trailing Special (anticlockwise)



965781
31c207-1

Fig. 44

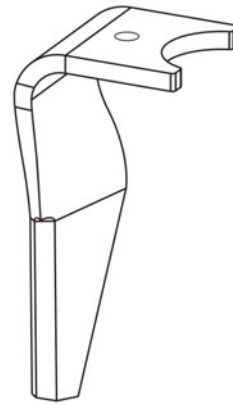
Tool tines
KG trailing (anticlockwise)



962338
31c208-1

Fig. 45

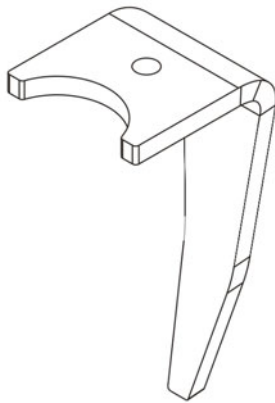
Tool tines
KG grip Special (HD) (anticlockwise)



967496
31c210-1

Fig. 46

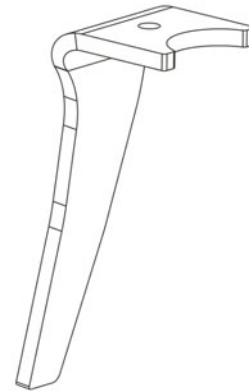
Tool tines
KG grip Super (anticlockwise)



967496
31c209-1

Fig. 47

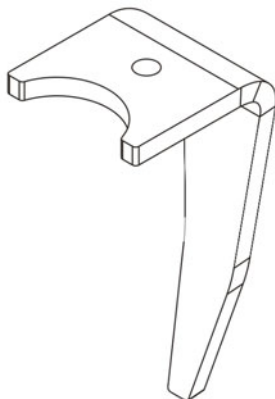
Tool tines
KG grip Special (HD) (anticlockwise)



967496
31c210-1

Fig. 48

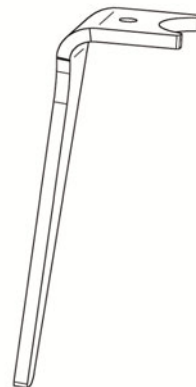Tool tines
Potato tines (anticlockwise)



35c043

Fig. 49

5.8.1 Tool tine minimum length

The tool tines are subject to wear. Replace the tines

- once they reach the minimum length $L = 150 \text{ mm}$.
- before they reach the minimum length when working at great working depths, in order to prevent damage/wear to the tool carriers.

If the tines fall below the minimum length prescribed by the manufacturer, claims due to rock damage shall not be accepted.

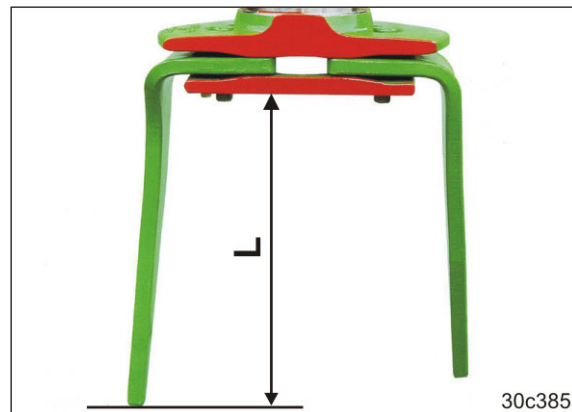


Fig. 50

5.8.2 stone release

The tool tines (Fig. 51/1) are fastened to the sockets (Fig. 51/2) of the tool carriers.

The sockets are shaped in such a way that the tines have a spring action and can avoid rocks and other obstacles.

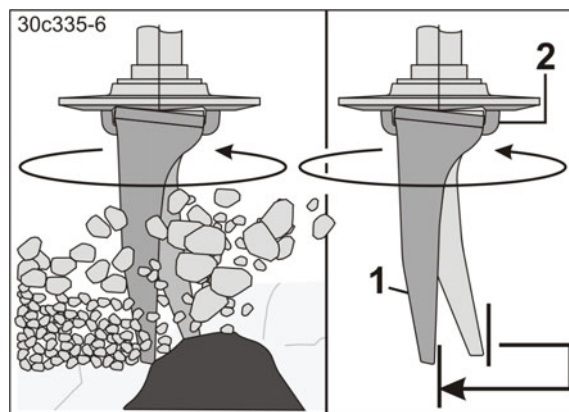


Fig. 51

5.9 Working depth of the soil tillage implement

The soil tillage implement is supported by the roller. This ensures that the working depth of the soil tillage implement is precisely maintained.

5.9.1 Mechanical adjustment

The adjuster segment (Fig. 52/1) is used to adjust the working depth.

The working depth is adjusted by relocating the depth setting pin (Fig. 52/2) in the adjuster segment.

The various settings have an effect on a roller carrying arm (Fig. 52/3) below the depth setting pin.

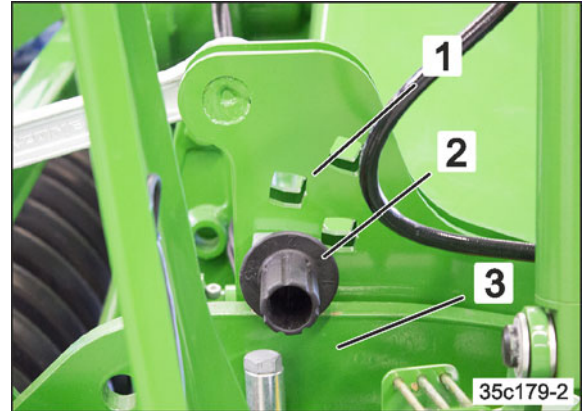


Fig. 52

A finer graduation of the working depth is attained by turning the depth setting pin in the same square hole.

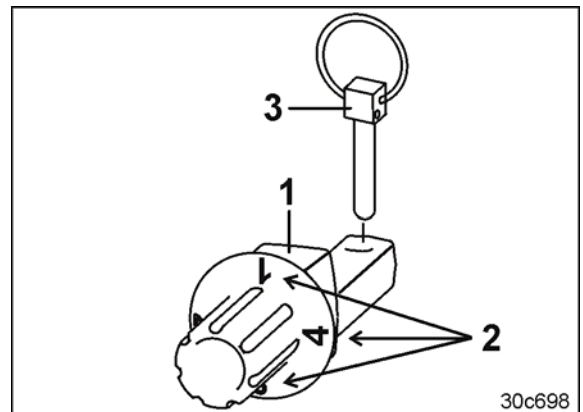


Fig. 53

5.9.2 Hydraulic adjustment (optional)

The rotary cultivator is supported on the roller by the carrying arms and maintains a constant working depth. The working depth can be adjusted hydraulically during work.

Two hydraulic cylinders are connected to the tractor control unit (*beige*) for adjusting the working depth. The scale (Fig. 54/1) displays the set working width.



Fig. 54

5.10 Side panel

In order to restrict the soil flow effectively, the working depth of the side panels and the working depth of the soil tillage implement must be adjusted to the soil conditions. The side panel is fastened with two bolts and can be adjusted in height.

Soil tillage implement		Side panel
Rotary harrow	KE 2501 Special KE 3001 Special	Side panel, spring-mounted
	KE 3001 Super KE 3501 Super KE 4001 Super	Side panel, swivel-mounted. Depending on the implement equipment may also be hinged.
Rotary cultivator	KX 3001	
Rotary cultivator	KG 3001 Special KG 3501 Special KG 4001 Special	
	KG 3001 Super KG 3501 Super KG 4001 Super	

5.10.1 Side panel, swivel-mounted

The swivelling side panel (Fig. 55/1) moves over obstacles.

Depending on the implement equipment, it may be necessary to bring the side panel into working position before operation.

For road transport, it must be moved into transport position.

The dead weight of the side panel and a tension spring bring the side panel back into working position.

The height has been adjusted at the factory for light and medium soils.

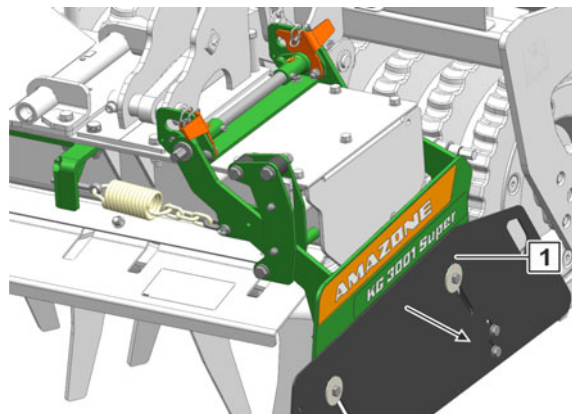


Fig. 55

5.10.2 Side panel, spring-mounted

The spring-mounted side panel (Fig. 56/1) moves around obstacles.

Two tension springs bring the side panel back to the working position.



Fig. 56

5.11 Soil guiding angle bracket (optional)

Free-flowing soil can escape between the side panel and the roller, even when adjusted correctly. The soil guiding angle bracket (Fig. 57/1) prevents the soil from escaping.

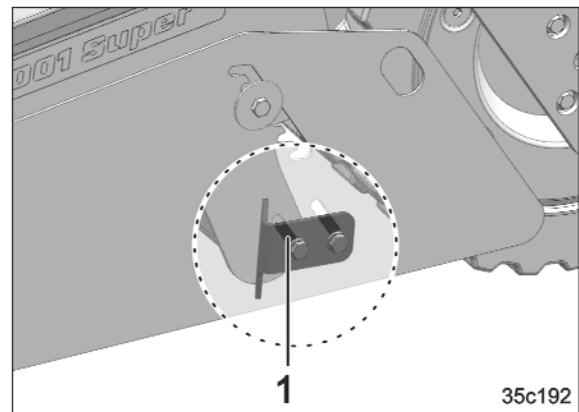


Fig. 57

5.12 Levelling board (optional)

The levelling board (Fig. 58/1)

- removes ground undulations behind the implement.
- pulverises remaining clods on heavy soil.
- compacts loose soil.



Fig. 58

The height of the levelling board is adjustable (Fig. 59/1). To lift the levelling board, lock the adjustment in the topmost position.

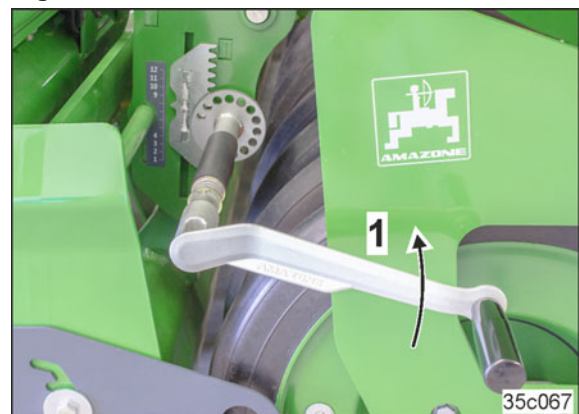


Fig. 59

5.13 Operating tool

- Operating tool in parking position.



When in parking position, the operating tool must not protrude beyond the implement contour, otherwise the maximum transport width will be exceeded.



Fig. 60

5.14 Combination possibilities with other AMAZONE implements

5.14.1 Lifting frame

The soil tillage implement can be combined with a mounted seed drill with the aid of the lifting frame (Fig. 61).

This operating manual describes how to couple the mounted seed drill (see section 5.15, page 80).



Fig. 61

5.14.2 QuickLink

The soil tillage implement can be combined with an AMAZONE pack top seed drill with the aid of the QuickLink mount (Fig. 62/1).

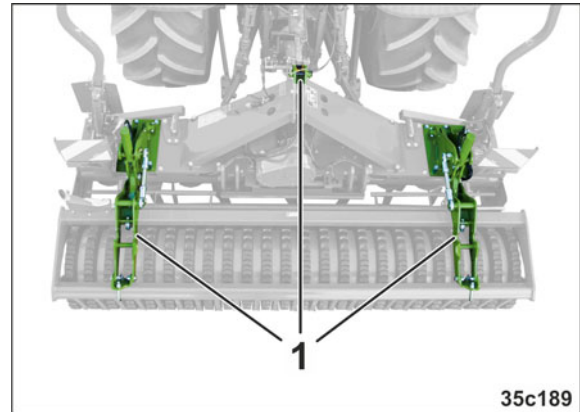


Fig. 62

The distance between the inner edge of the mounting points (Fig. 63/A) depends on the working width of the seeding combination.

Working width [m]	Distance A [mm]
2.5	1529 ±3
3.0	2029 ±3
3.5	2529 ±3
4.0	3029 ±3

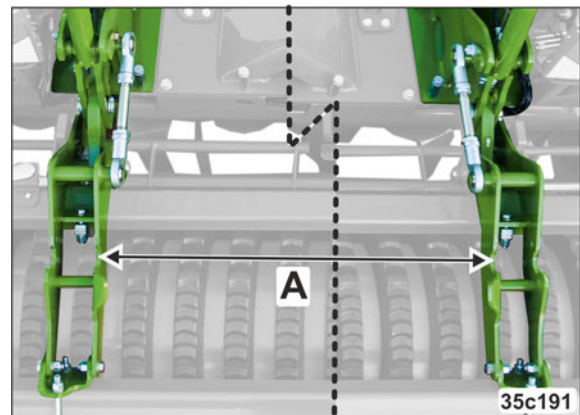


Fig. 63

Soil tillage implement in combination with a

- Pack-top seed drill, mechanical (Fig.64/1)
- Pack-top seed drill, pneumatic (Fig. 65)
- Deep loosener (not shown)



Use of a rotary harrow in combination with the Centaya pack top seed drill or Precea 300 ACC precision air seeder is not permitted!

Additional information via Customer Service / Dealers.



Fig.64



Fig. 65

5.15 Working with an AMAZONE mounted seed drill

To couple the mounted seed drill, fit the soil tillage implement with the following, as required:

- Coupling parts
- Lifting frame.

5.15.1 Coupling parts (optional)

The coupling parts are used to attach the mounted seed drill.

The coupling parts have Cat. II pivot points to attach mounted seed drills of the same category.

The coupling parts are approved for seed drills up to a total weight of 1200 kg.



Fig. 66

5.15.2 Lifting frame (optional)

If the lifting power of the tractor is not sufficient to raise the combination of soil tillage implement, roller and mounted seed drill with the coupling parts, the lifting power requirement can be reduced using the lifting frame.

The lifting frame first lifts the seed drill over the roller. This reduces the total lifting power requirement. With a reduced lifting power requirement, the tractor hydraulics raise the combination in order to turn at the end of a field or for transport.

During road transport, the raised lifting frame is locked.

The lifting frame is used to attach the mounted seed drill and is available in two versions, depending on the total weight of the seed drill.

Lifting frame 2.2 (Fig. 67) is approved for seed drills up to a total weight of 1,600 kg.

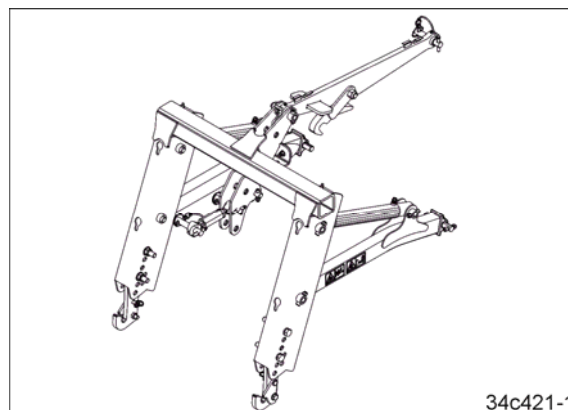


Fig. 67

Lifting frame 3.2 (Fig. 68) is approved for seed drills up to a total weight of 2,500 kg.

The lifting frames have Cat. II pivot points to attach mounted seed drills of the same category. The lifting frame serves to reduce the tractor lifting power.

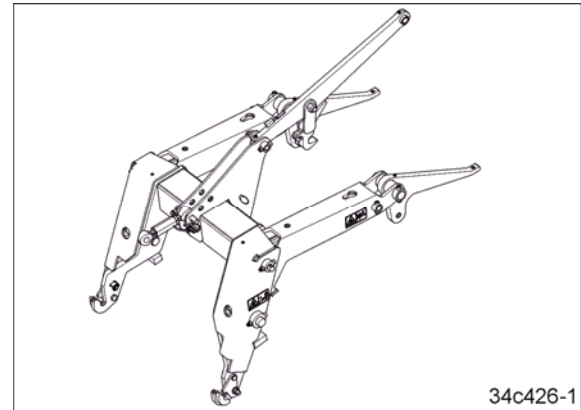
A single-acting tractor control unit is required to actuate the lifting frame.

The lifting frame allows the tractor to turn at the end of the field while the universal joint shaft is running.

Once the seed drill has been raised, the tractor lower links should raise the implement combination only to the point where the tines of the soil tillage implement and the roller are just out of the soil.

In this position, the angling of the universal joint shaft in most tractors is only very slight which means it is possible to turn with the universal joint shaft running.

Once the turn is complete, the combination is then lowered and work with the soil tillage implement starts, and as the tractor moves off, the seed drill is applied roughly at the point where the soil tillage implement has started work. This makes working in narrower headlands possible.




34c426-1

Fig. 68



31c551

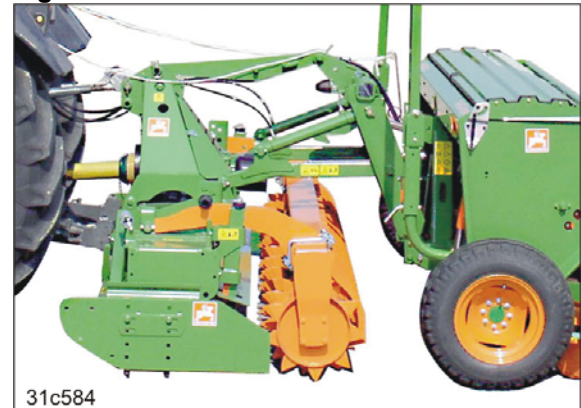Fig. 69



31c584

Fig. 70

5.15.3 Lift height limiter (optional)

If the soil tillage implement is combined with a PTO shaft driven seed drill, the lift height of the lifting frame can be limited in order that the PTO shaft can continue to run, even while turning.

A precision airplanter remains functional even during turning with the tractor's PTO shaft running. This eliminates the need to switch off the PTO shaft and the associated loss of pressure in the precision airplanter.

If the seed drill is raised by the lifting frame, the top link (Fig. 71/1) pulls up the activation hook (Fig. 71/2) and closes the valve that regulates the flow of oil to the cylinders.

The lift height of the seed drill is adjustable.

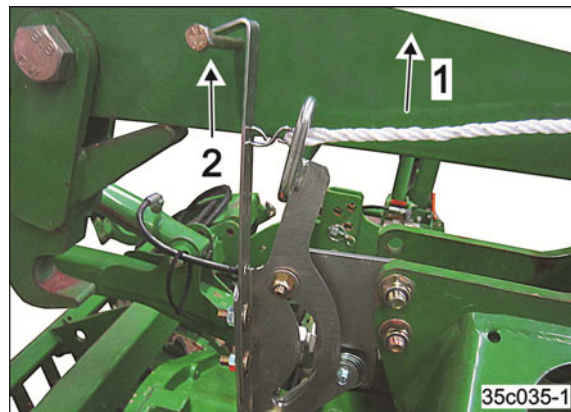


Fig. 71

5.15.4 Side stabiliser for lifting frame 2.2 (optional)

The side stabiliser (Fig. 72/1) improves the seed drill's tracking on sloping terrain and reduces the swaying of the raised seed drill during transport.

The side stabiliser connects the lower links of lifting frame 2.2 to each other.

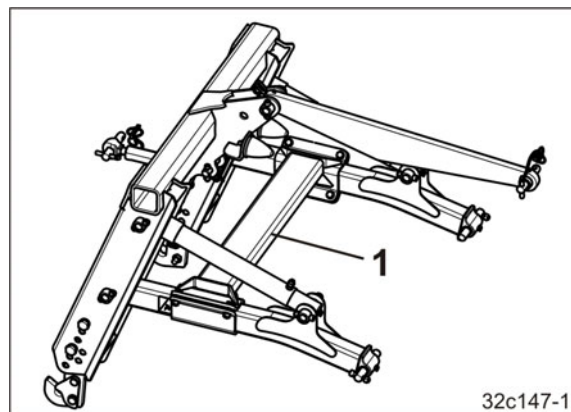


Fig. 72

5.16 Shaft-mounted gearbox (optional)

If a PTO shaft driven seed drill is to be connected to the PTO shaft through drive, the high roller frame can prevent the universal joint shaft from being mounted on the PTO shaft stub.

The PTO shaft is connected via the roller frame by means of a shaft-mounted gearbox.

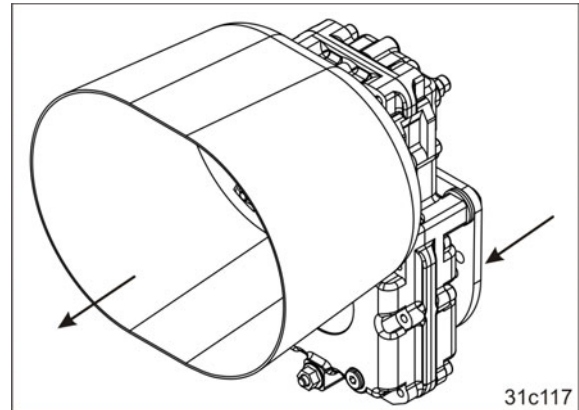


Fig. 73

There are two gearboxes available, each with a

- Gear ratio 1:1
Input speed: 1000 rpm
Output speed: 1000 rpm
- Gear ratio 1:1.85
Input speed: 540 rpm
Output speed: 1000 rpm

The gearbox mounted on the PTO shaft is screwed to the implement gearbox.

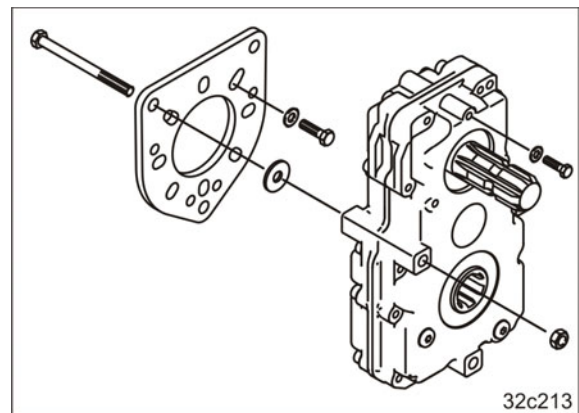


Fig. 74

5.17 Track markers (optional)

The hydraulically-actuated track markers dig into the ground alternately on the left and the right of the implement.

Here, the active track marker (Fig. 75/1) creates a mark. This mark serves the tractor driver as an orientation aid.

The tractor driver drives over the centre of the mark.

The track markers are attached to the soil tillage implement.



Fig. 75

Both track markers (Fig. 76/1) must be raised when turning at the end of the field.

Both track markers (Fig. 76/1) must be raised for transporting the implement. Each track marker is secured with a bar.



Fig. 76

5.18 GreenDrill 200-E / 200-H catch crop seeding unit (optional)

The GreenDrill catch crop seeding unit enables the seeding of fine seeds and catch crops during soil tillage.



Observe the corresponding operating manuals when using the implement with the GreenDrill catch crop seeding unit!



- (1) Blower fan with electric drive
- (2) Foldable ascent
- (3) Automatic locking of the foldable ascent



Fold the ascent to the transport position before driving.
Use the step of the ladder as handle.

6 Initial operation

This section contains information

- on initial operation of your implement
- on checking how you may mount the implement to your tractor.



DANGER

Risk of crushing, cutting, being caught or drawn in and knocks!

Before starting up the implement and tractor, always check their roadworthiness and operational safety.



- Before operating the implement for the first time, the operator must have read and understood the operating manual.
- Follow the instructions given in the section "Safety information for the operator" when
 - Coupling and uncoupling the implement
 - Implement transportation
 - Use of the implement
- Only couple and transport the implement to/with a tractor which is suitable for the task.
- The tractor and implement must meet the national road traffic regulations.
- The operator and the user shall be responsible for compliance with the statutory road traffic regulations.



DANGER

Risk of crushing, shearing, cutting, or being caught and drawn in in the area of hydraulically or electrically actuated components.

Do not block the operator controls on the tractor which are used for hydraulic and electrical movements of components, e.g. folding, swivelling and pushing movements. The movement must stop automatically when the appropriate control is released. This does not apply to equipment movements that:

- are continuous or
- are automatically locked or
- require a float position or pressure position due to their function.

6.1 Checking the suitability of the tractor



WARNING

Danger of breaking during operation, insufficient stability and insufficient tractor steering and braking power on improper use of the tractor!

- Check the suitability of your tractor before you mount or hitch the implement.
You may only connect the implement to tractors suitable for the purpose.
- Carry out a brake test to check whether the tractor achieves the required braking delay with the machine connected.

Requirements for the suitability of a tractor are, in particular:

- the permissible total weight
- the permissible axle loads
- the permissible drawbar load at the tractor coupling point
- the load capacity of the installed tyres
- The permissible trailer load must be sufficient

You can find this data on the rating plate or in the vehicle documentation and in the tractor operating manual.

The front axle of the tractor must always be subjected to at least 20 % of the tare weight of the tractor.

The tractor must achieve the brake delay specified by the tractor manufacturer, even with the implement connected.

6.1.1 Calculating the actual values for the total tractor weight, tractor axle loads and load capacities, as well as the minimum ballast



The permissible total tractor weight, specified in the vehicle documentation, must be greater than the sum of the

- tractor empty weight
- ballast weight and
- total weight of the attached implement or drawbar load of the hitched implement.



This notice applies only to Germany:

If, having tried all possible alternatives, it is not possible to comply with the axle loads and/or the permissible total weight, then a survey by an officially recognised motor traffic expert can, with the approval of the tractor manufacturer, be used as a basis for the responsible authority to issue an exceptional approval according to § 70 of the German Regulations Authorising the Use of Vehicles for Road Traffic and the required approval according to § 29, paragraph 3 of the German Road Traffic Regulations.

6.1.1.1 Data required for the calculation (attached implement)

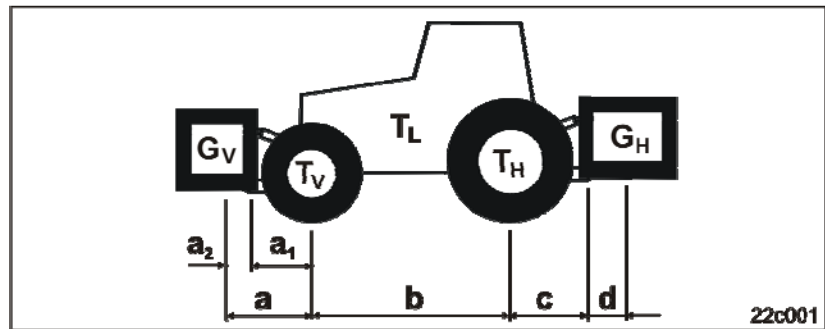


Fig. 77

T_L	KG	Tractor tare weight	See tractor operating manual or vehicle documentation
T_V	KG	Front axle load of the empty tractor	
T_H	KG	Rear axle load of the empty tractor	
G_H	KG	Total weight of rear-mounted implement or rear ballast	See the section "Technical Data" or rear ballast
G_V	KG	Total weight of front-mounted implement or front ballast	See technical data for front-mounted implement or front ballast
a	[m]	Distance between the centre of gravity of the front implement mounting or the front weight and the centre of the front axle (total $a_1 + a_2$)	See technical data of tractor and front implement mounting or front weight or measurement
a_1	[m]	Distance from the centre of the front axle to the centre of the lower link connection	See tractor operating manual or measurement
a_2	[m]	Distance between the centre of the lower link connection point and the centre of gravity of the front-mounted implement or front ballast (centre of gravity distance)	See technical data of front implement mounting or front weight or measurement
b	[m]	Tractor wheel base	See tractor operating manual or vehicle documents or measurement
c	[m]	Distance between the centre of the rear axle and the centre of the lower link connection	See tractor operating manual or vehicle documents or measurement
d	[m]	Distance between the centre of the lower link connection point and the centre of gravity of the rear-mounted implement or rear ballast (centre of gravity distance)	See section "Technical Data"

Initial operation

6.1.1.2 Calculation of the required minimum ballasting at the front $G_{V \min}$ of the tractor to ensure steering capability

$$G_{V \min} = \frac{G_H \cdot (c + d) - T_V \cdot b + 0,2 \cdot T_L \cdot b}{a + b}$$

Enter the numeric value for the calculated minimum ballast $G_{V \min}$, required on the front side of the tractor, in the following table.

6.1.1.3 Calculation of the actual front axle load of the tractor $T_{V \text{ tat}}$

$$T_{V \text{ tat}} = \frac{G_V \cdot (a + b) + T_V \cdot b - G_H \cdot (c + d)}{b}$$

Enter the numeric value for the calculated actual front axle load and the approved tractor front axle load specified in the tractor operating manual in the following table.

6.1.1.4 Calculation of the actual total weight of the combined tractor and implement

$$G_{\text{tat}} = G_V + T_L + G_H$$

Enter the numeric value for the calculated actual total weight and the approved total tractor weight specified in the tractor operating manual in the following table.

6.1.1.5 Calculation of the actual rear axle load of the tractor $T_{H \text{ tat}}$

$$T_{H \text{ tat}} = G_{\text{tat}} - T_{V \text{ tat}}$$

Enter the numeric value for the calculated actual rear axle load and the approved tractor rear axle load specified in the tractor operating manual in the following table.

6.1.1.6 Tractor tyre load capacity

Enter twice the value (two tyres) of the approved tyre load capacity (see tyre manufacturer's documentation, for example) in the following table.

6.1.1.7 Table

	Actual value according to calculation	Approved value according to tractor operating manual	Double approved load capacity (two tyres)
Minimum ballast front/rear	/ kg	--	--
Total weight	kg	≤ kg	--
Front axle load	kg	≤ kg	≤ kg
Rear axle load	kg	≤ kg	≤ kg



- You can find the approved values for the total tractor weight, axle loads and load capacities in the tractor registration papers.
- The actual calculated values must be less than or equal to (\leq) the permissible values!



WARNING

Risk of contusions, cutting, catching, drawing in and impact through insufficient stability and insufficient tractor steering and brake power.

It is forbidden to couple the implement to the tractor used as the basis for calculation, if

- one of the actual, calculated values is greater than the approved value.
- there is no front weight (if required) attached to the tractor for the minimum front ballast ($G_{V \min}$).



- Ballast your tractor with weights at the front or rear if the tractor axle load is exceeded on only one axle.
- Special cases:
 - If you do not achieve the minimum ballast at the front ($G_{V \min}$) from the weight of the front-mounted implement (G_V), you must use ballast weights in addition to the front-mounted implement.
 - If you do not achieve the minimum ballast at the rear ($G_{H \min}$) from the weight of the rear-mounted implement (G_H), you must use ballast weights in addition to the rear-mounted implement.

6.2 Securing the tractor/implement against unintentional start-up and rolling



WARNING

Risk of crushing, shearing, cutting, being caught and/or drawn in, or impact when making interventions in the implement, through

- unintentional lowering of the unsecured implement raised using the tractor's three-point hydraulic system
- unintentional lowering of raised, unsecured parts of the implement.
- unintentional start-up and rolling of the tractor-implement combination.

Secure the tractor and the implement against unintentional start-up and rolling before any intervention in the implement.

It is forbidden to make any intervention in the implement, such as installation, adjustment, troubleshooting, cleaning, maintenance and repairs

- while the implement is being driven
- as long as the tractor engine is running with the PTO shaft/hydraulic system connected.
- if the ignition key is inserted in the tractor and the tractor engine can be started unintentionally with the tractor PTO shaft/hydraulic system connected.
- if the tractor and implement have not been prevented from unintentionally rolling off by engaging their respective parking brakes and/or securing tractor and implement with wheel chocks
- if moving parts are not blocked against unintentional movement.
- When carrying out such work, in particular, there is a high risk of contact with unsecured components.

1. Park the tractor and the implement on solid, level ground only.
2. Lower the raised, unsecured implement/raised, unsecured implement parts.

→ This is how to prevent unintentional lowering:

3. Shut down the tractor engine.
4. Remove the ignition key.
5. Apply the tractor parking brake.

6.3 Attachment of the wheel mark eradicators

Mount the wheel mark eradicators (optional).

1. Screw the wheel mark eradicator bracket (Fig. 78/1) onto the mounting frame using the clamping plate (Fig. 78/2).
2. Pin the wheel mark eradicator (Fig. 78/4) right at the top with the positioning pin (Fig. 78/3) and secure with a linch pin.

The working depth adjustment is carried out on the field.

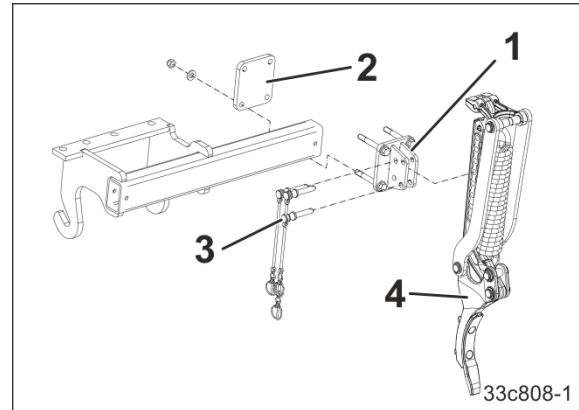


Fig. 78

6.4 Adjusting the length of the universal joint shaft to the tractor (specialist workshop)



WARNING

Only a specialist workshop may make structural changes to the universal joint shaft.



WARNING

Danger of crushing from unintentional

- Rolling of the tractor and the coupled implement!
- Lowering of the lifted implement!

Secure the tractor and implement from unintentional starting and unintentional rolling and secure the implement from unintentional lowering before entering the danger zone between the tractor and lifted implement in order to adjust the universal joint shaft.

1. Couple the soil tillage implement to the tractor.
2. Secure the tractor and implement against unintentional start-up and rolling.
3. Clean and grease the tractor PTO shaft and the implement's gearbox input shaft.
4. Fix the two universal joint shaft halves to the tractor PTO shaft and the gearbox input shaft.
 - o Do not interconnect the universal joint shaft halves.
 - o Observe the operating manual from the universal joint shaft manufacturer.
5. Raise and lower the implement.
To do so, actuate the control valves at the rear of the tractor.
6. Before entering the danger area between the tractor and implement, secure the raised implement against unintentional lowering, by supporting it or hooking it to a crane.
7. Determine the shortest and longest operating position for the universal joint shaft by holding the universal joint shaft halves next to each other.
8. If necessary, have the universal joint shaft shortened in a specialist workshop. Observe the operating manual from the universal joint shaft manufacturer.

The safety devices and guards of the extended universal joint shaft must overlap by at least 50 mm.



WARNING

Never actuate the operator controls for the tractor's three-point hydraulic system while you are in the danger area between the tractor and implement.

6.5 Fitting the coupling parts (specialist workshop)

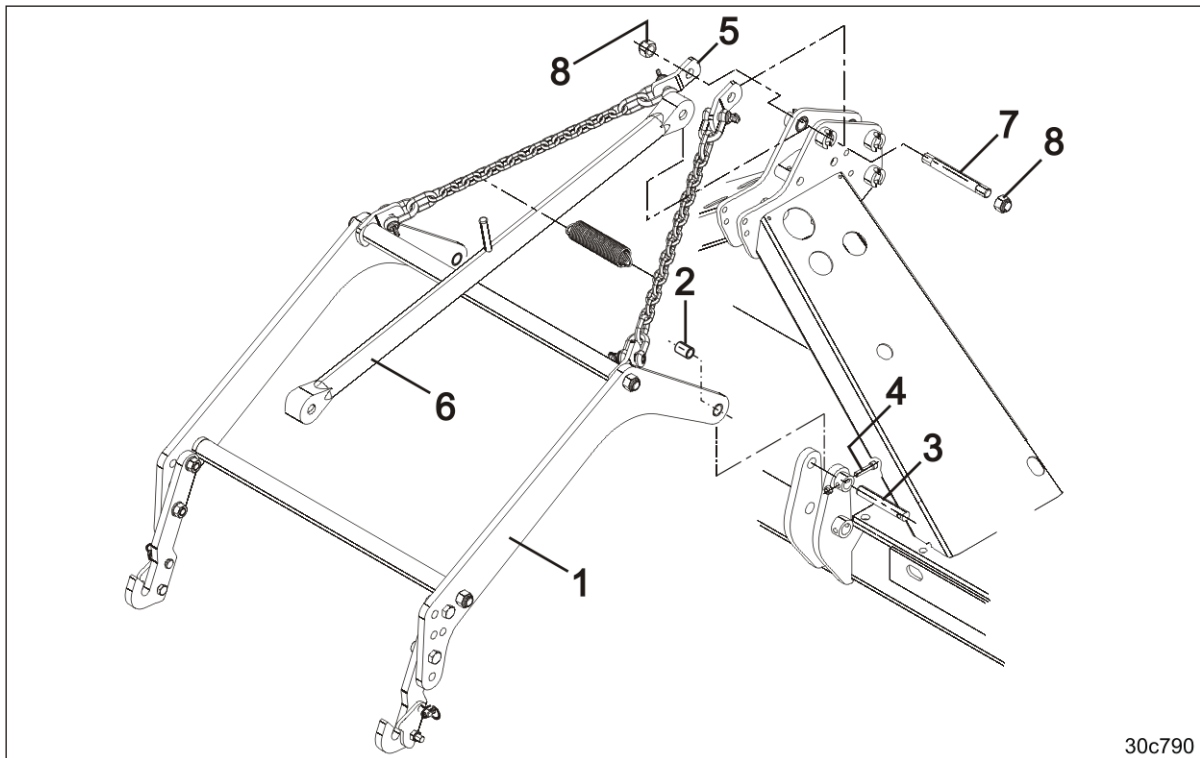


Fig. 79

1. Attach the coupling carrier arms (Fig. 79/1) to a crane.
2. Secure the coupling carrier arms with two spacer sleeves (Fig. 79/2) to the soil tillage implement with two pins (Fig. 79/3).
3. Secure the pins with bolts (Fig. 79/4) and nuts.
4. Secure the chains (Fig. 79/5), together with the top link (Fig. 79/6), to the soil tillage implement with a pin (Fig. 79/7).
5. Secure the pin with two securing nuts (Fig. 79/8).
6. Connect the chains using a tension spring (Fig. 80/1). When untensioned, the chains should not touch the tower of the soil tillage implement.

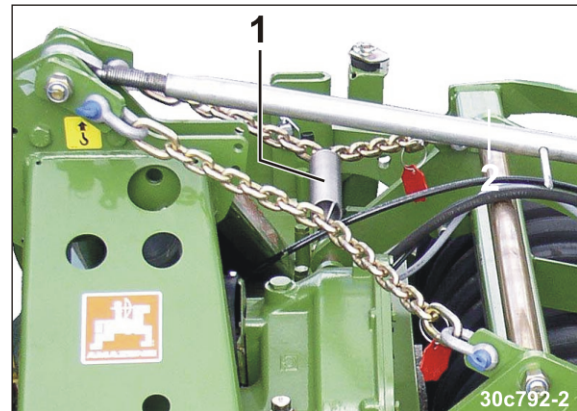


Fig. 80

6.6 Attaching the lifting frame (specialised workshop)



Before start-up, check with the tractor rear window open whether parts of the lifting frame collide with the rear window.



Connecting the hydraulic line of the lifting frame to the hydraulic system for the tractor lower links brings advantages

When actuating the tractor lower link,

- first, the seed drill is raised over the roller. This reduces the required lifting power of the tractor lower links.
- the implement combination (with reduced lifting power requirement) is lifted by the tractor lower links.

To do this, it is necessary to install an additional hydraulic coupling in the tractor (specialist workshop).

6.6.1 Attaching lifting frame 2.2 (specialist workshop)

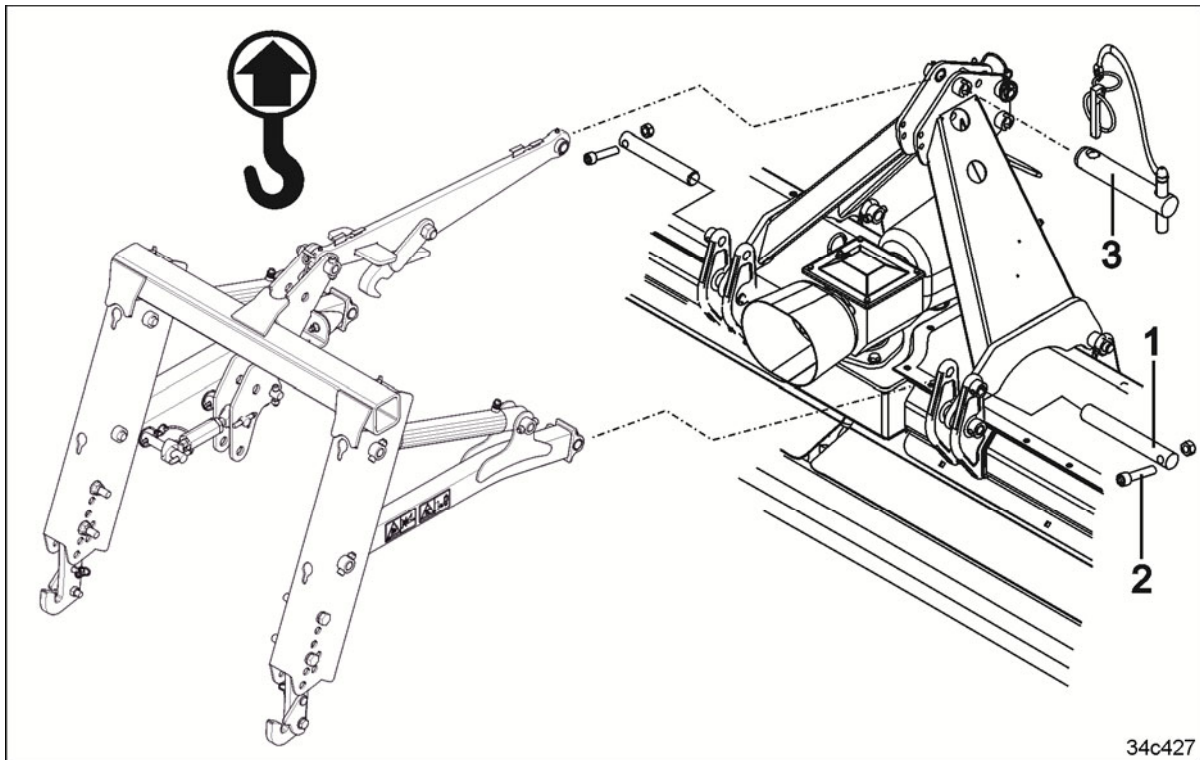


Fig. 81

1. Couple the tractor to the implement.
2. Park the implement on a firm surface.
3. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
4. Hook the lifting frame to a crane.
5. Peg the lifting frame at the lower pivot points. Secure the pin (Fig. 81/1) with a bolt (Fig. 81/2) and nut.
6. Position the top link with a pin (Fig. 81/3) and secure with a linch pin.
7. Connect the hydraulic lines to the hydraulic cylinder and secure with cable ties.
8. Connect the hydraulic plug to a single-acting control unit (*green*) on the tractor.
9. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
10. Actuate the tractor control unit (*green*) in the tractor cab.
11. Check the lifting frame for correct operation and inspect it for leaks.

6.6.2 Installing lifting frame 3.2 (specialist workshop)

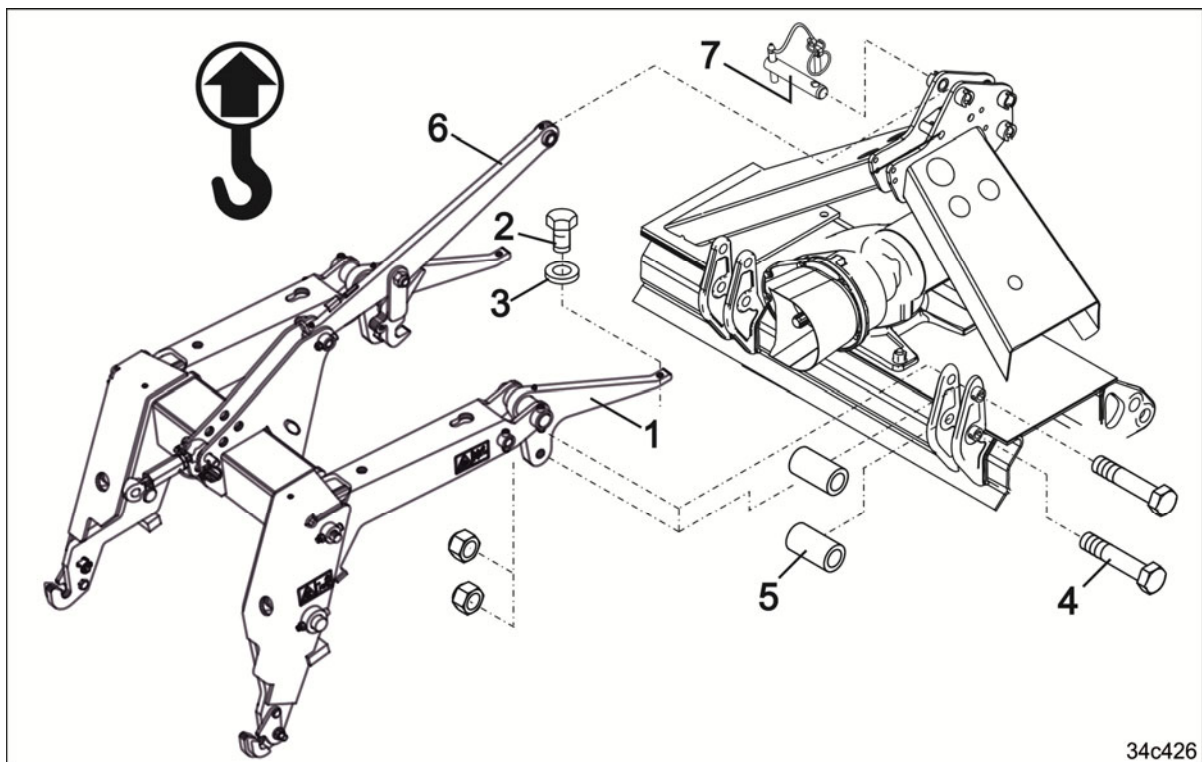


Fig. 82

1. Couple the tractor to the implement.
2. Park the implement on a firm surface.
3. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
4. Hook the lifting frame to a crane
5. Screw the bracket (Fig. 82/1) to the soil tillage implement using
 - o two implement bolts (Fig. 82/2) with discs (Fig. 82/3)
 - o 4 bolts (Fig. 82/4) with 4 spacer sleeves (Fig. 82/5).
6. Position the top link (Fig. 82/6) with a pin (Fig. 82/7) and secure with a linch pin.
7. Connect the hydraulic lines to the hydraulic cylinder and secure with cable ties.
8. Connect the hydraulic plug to a single-acting control unit (*green*) on the tractor.
9. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
10. Actuate the tractor control unit (*green*) in the tractor cab.
11. Check the lifting frame for correct operation and inspect it for leaks.

6.6.3 Fitting the lift height limiter (specialist workshop)



CAUTION

The hydraulic system is under high pressure.

Depressurise the hydraulic system before starting work on the lifting frame.

1. Couple the tractor to the implement.
2. Lower the lifting frame.
3. Secure tractor and implement against unintentional starting and rolling away.
4. Depressurise the hydraulic system.
5. Uncouple the lifting frame hydraulic hose line from the tractor.
6. Disconnect the hydraulic hose line from the installed T-connector (Fig. 83/5).
7. Screw on the pre-assembled valve holder (Fig. 83/1).
8. Connect the hydraulic hoses to the new T-connector on the valve (Fig. 83/5).
9. Attach the white pull rope with the eyelet onto the catch hook (Fig. 83/2).
10. Mount the eye bolt as a rope guide (Fig. 83/3).
11. Mount the actuation bolt onto the top link (Fig. 83/4).
12. Connect the hydraulic plug to a single-acting control unit (*green*) on the tractor.
13. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
14. Actuate the tractor control unit in the tractor cab.
15. Check the lifting frame for correct operation and inspect it for leaks.

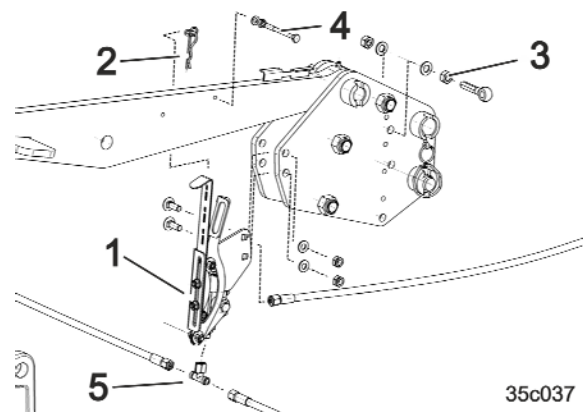


Fig. 83

35c037

7 Coupling and uncoupling the implement



When coupling and uncoupling the implement take heed of the section "Safety information for users".



Danger

- **Secure the tractor and the implement against unintentional start-up and rolling before working on the implement.**
- **Direct people out of the danger area between the tractor and implement before you approach the implement with the tractor.**
- **Any helpers may only act as guides standing next to the tractor and the implement, and may only move between the vehicles when both are at a standstill.**
- **Never actuate the operating controls for the tractor's three-point hydraulic system while you are in the danger area between the tractor and implement.**



When handling the universal joint shaft, observe the following:

- Use only the provided universal joint shaft or one of the prescribed type.
- Read and follow the operating manual for the universal joint shaft supplied by the universal joint shaft manufacturer. Correct use and maintenance of the universal joint shaft prevents serious accidents.
- When coupling the universal joint shaft, observe the operating manual from the universal joint shaft manufacturer.
- The installation length of the universal joint shaft must be according to the specifications (see included operating manual from the universal joint shaft manufacturer). Have the universal joint shaft shortened by a specialist workshop if necessary.
- Ensure sufficient clearance in the swivelling area of the universal joint shaft. Insufficient clearance causes damage to the universal joint shaft.
- Observe the permitted drive rev. speed of the implement.
- Observe the correct installation position of the universal joint shaft. The tractor symbol on the protective tube of the universal joint shaft identifies the tractor-side connection of the universal joint shaft.

Always mount the universal joint shaft overload clutch on the implement side.

- Before switching on the tractor PTO shaft, read and follow the safety precautions for PTO shaft operation (see section "Safety information for the operator").

**WARNING**

Risk of contusions, cutting, catching, drawing in and knocks when the implement unexpectedly releases from the tractor!

- Use the intended equipment to connect the tractor and the implement in the proper way.
- When coupling the implement to the tractor's three-point hydraulic system, ensure that the attachment categories of the tractor and the implement are the same.
- Only use the upper and lower link pins provided for coupling the implement.
- Check the upper and lower link pins for visible defects whenever the implement is coupled. Replace the top and lower link pins if there are clear signs of wear.
- Secure the upper link pin and the lower link pins against unintentional detachment using linch pins.

**WARNING**

Risk of energy supply failure between the tractor and the implement through damaged power lines!

During coupling, check the course of the power lines. The supply lines

- must give slightly without tension, bending or rubbing on all movements of the connected implement.
- Must not chafe against other parts.

7.1 Coupling the implement



Adjust the length of the universal joint shaft to the tractor (see section "Adjusting the universal joint shaft to the tractor")

- before initial use.
- after fitting/removing the three-point hitch extension
- when using a different implement type.



Category 2 top link pins are only permitted for use without mounted seed drills.

- See section "Mounting category"



DANGER

For your own safety, always observe the fundamental rules when handling universal joint shafts. If you identify any defects on a universal joint shaft, the universal joint shaft must not be used.

1. Clean and grease the tractor PTO shaft and the implement's gearbox input shaft.
2. Limit the lateral play of the tractor lower link, to prevent the connected implement from oscillating.
3. Fasten the implement-side universal joint shaft half to the overload clutch on the gearbox input shaft and secure.
Observe the operating manual from the universal joint shaft manufacturer.
4. Interconnect the two halves of the universal joint shaft.
5. Hook the universal joint shaft into the bracket (Fig. 84/1).

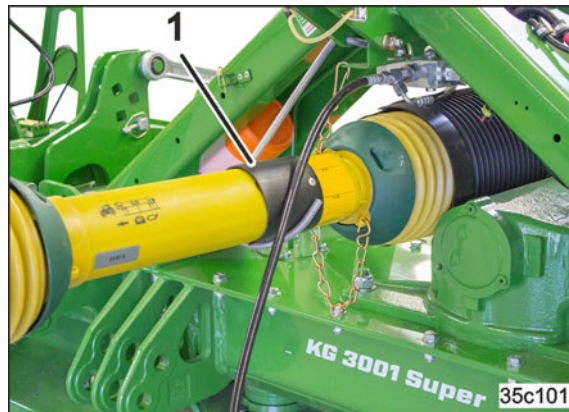


Fig. 84

6. Instruct persons to get out of the danger area between the tractor and the implement.
7. Drive the tractor towards the implement, leaving a clearance of approx. 25 cm. The tractor lower links must be flush with the lower hinging points of the implement.
8. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
9. Fasten the universal joint shaft to the tractor PTO shaft and secure (see operating manual of the universal joint shaft manufacturer).
10. Couple the supply lines (see section "Overview – Supply lines between the tractor and the implement", Seite 36) onto the tractor.
11. Secure the universal joint shaft guard on the tractor and the implement using supporting chains so that they do not rotate.



Ensure that the universal joint shaft has a sufficient swivelling range in all operating conditions. The supporting chains must not become caught on implement or tractor parts.

12. Fasten the bracket to the transport bracket and secure it using a linch pin (Fig. 85/1).
13. Instruct persons to get out of the danger area between the tractor and the implement.
14. Engage the lower hinging points (Fig. 86/1) of the implement using the tractor lower links. The lower link hooks lock automatically.
15. Fasten the tractor top link (Fig. 86/2) to the implement. The upper link hook locks automatically.

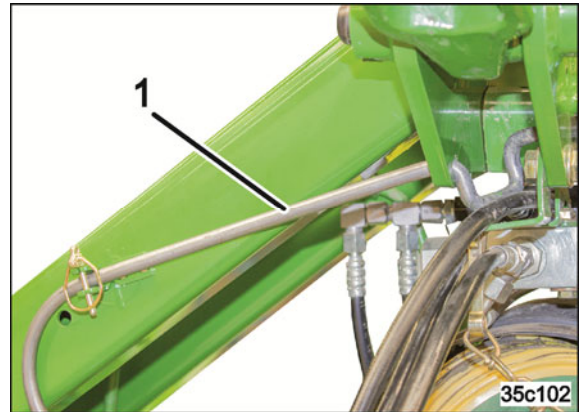


Fig. 85

Coupling and uncoupling the implement

The amount of lifting force required to lift the implement is at a minimum when the tractor top link is horizontal.

16. Bring the soil tillage implement into a straight position by adjusting the top link.
17. Secure the top link against twisting.
18. Check that the upper and lower link hooks are locked correctly.

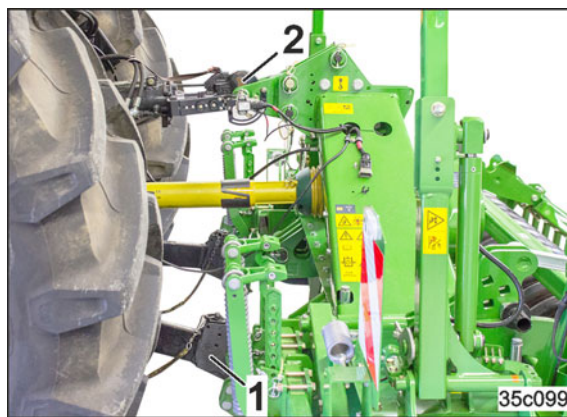


Fig. 86

7.2 Uncoupling the implement



WARNING

Danger of being crushed, cut, caught, drawn in or struck through insufficient stability and possible tilting of the uncoupled implement!

Park the implement on a level surface on solid ground.



CAUTION

Avoid coming into contact with hot gearbox and universal joint shaft components.

Wear protective gloves.

1. Switch off the tractor PTO shaft.
Wait until the tool tines have come to a complete stop.
2. Park the implement on a level surface on solid ground.
Ensure that:
 - o The tractor wheel mark eradicators (optional) can sink into loose soil. Or pin the tractor wheel mark eradicators all the way at the top.
3. Apply the tractor parking brake, switch the tractor engine off and remove the ignition key.
4. Relieve the top link by adjusting the top link length.
5. Decouple the upper link hook, working from the tractor cab.
6. Decouple the lower link hooks, working from the tractor cab.
7. Pull the tractor forward approx. 25 cm.
The clearance between tractor and implement provides convenient access for uncoupling the universal joint shaft and supply lines.
8. Apply the tractor parking brake, switch the tractor engine off and remove the ignition key.
9. Uncouple the hydraulic hose lines.
10. Fasten the supply lines to the hose cabinet.

11. Remove the universal joint shaft from the tractor PTO shaft (see operating manual from the universal joint shaft manufacturer).
12. Hook the universal joint shaft into the bracket (Fig. 87/1).



Fig. 87

7.3 Coupling the mounted seed drill



DANGER

Risk of injury from the movement of the lifting frame.

Maintain a minimum distance of 10.0 m from the implement combination.



When raising the seed drill, check whether parts of the lifting frame collide with the tractor rear window.

7.3.1 Attaching the seed drill with the coupling parts

1. Fasten the catch hooks (Fig. 88/1) to the lifting frame using two bolts for each one (Fig. 88/2).



Screw the catch hooks to the coupling parts so that the seed drill

- can be connected without problem
- runs closely behind the roller.

The closer the seed drill is attached to the roller, the lower the lifting power required.

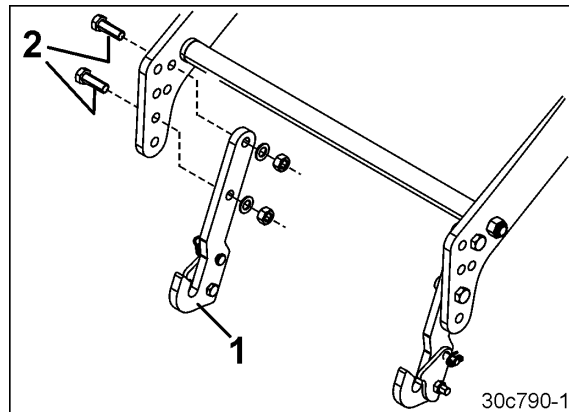


Fig. 88

2. Release the locking straps (Fig. 89/1).
 - 2.1 Remove the pins (Fig. 89/2).
3. Instruct persons to stay out of the danger area between the soil tillage implement and the seed drill.
4. Drive the soil tillage implement up to the seed drill.
5. Engage the lower pivot points (Fig. 89/3) of the seed drill using the catch hooks.
6. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.

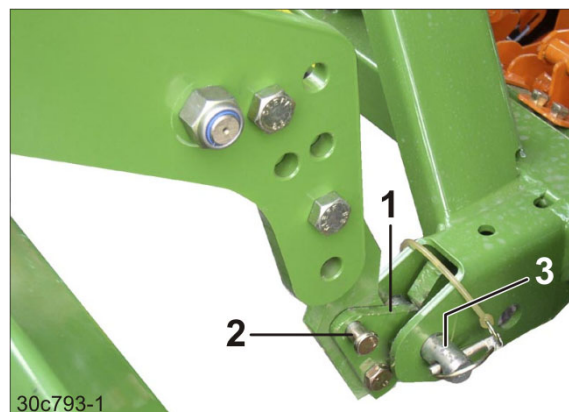


Fig. 89

7. Swivel the locking straps (Fig. 89/1) and secure each with a pin (Fig. 89/2). Secure the pins with linch pins.
8. Position the top link (Fig. 90/1) to the top pivot point (Cat. II) of the seed drill.
9. Secure the pin with a linch pin.
10. Align the seed drill so that it is straight by lengthening or shortening the top link. Secure the position of the top link with the lock nut (Fig. 90/2).
11. Couple the supply lines for the tramline marker (Fig. 91/1).
12. Couple the supply line for the hydraulic hose lines (see section "Hydraulic hose lines", Seite 110).



Fig. 90

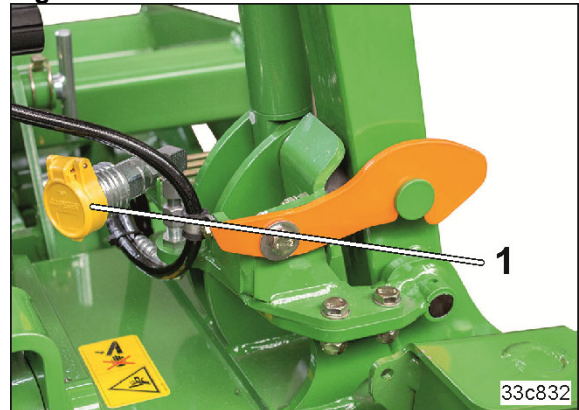


Fig. 91

7.3.2 Attaching the seed drill to the lifting frame



Fig. 92

Lifting frame 2.2 only

1. Fasten the catch hooks (Fig. 93/1) to the lifting frame using two bolts for each one (Fig. 93/2).



Lifting frame 2.2 has two groups of holes for screwing on the catch hooks.

The required group of holes depends on the roller diameter:

- Holes (Fig. 93/3) for small roller diameter
- Holes (Fig. 93/4) for large roller diameter.

The closer the seed drill is attached to the roller, the lower the lifting power required.

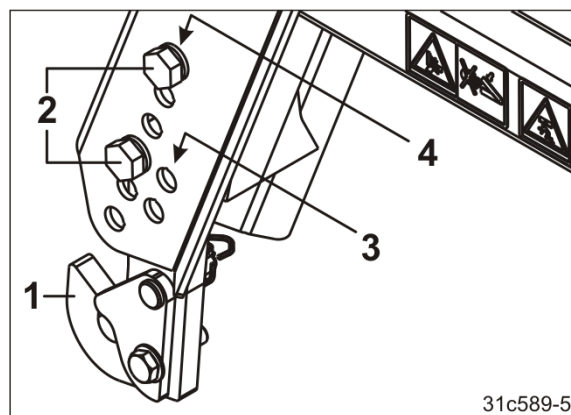


Fig. 93

All types:

2. Release the locking straps (Fig. 94/1).
- 2.1 Remove the pins (Fig. 94/2).
3. Instruct persons to stay out of the danger area between the soil tillage implement and the seed drill.
4. Drive the soil tillage implement up to the seed drill.
5. Engage the lower pivot points (Fig. 94/3) of the seed drill using the catch hooks.
6. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
7. Swivel the locking straps (Fig. 94/1) and secure each with a pin (Fig. 94/2). Secure the pins with linch pins.
8. Position the top link (Fig. 95/1) to the top pivot point (Cat. II) of the seed drill.
9. Secure the pin with a linch pin.
10. Align the seed drill so that it is straight by lengthening or shortening the top link. Secure the position of the top link with the lock nut (Fig. 95/2).
11. Limit the lift height of the seed drill by inserting the pin (Fig. 96/2) in the required actuation.
12. Couple the supply lines for the tramline marker (Fig. 91/1).

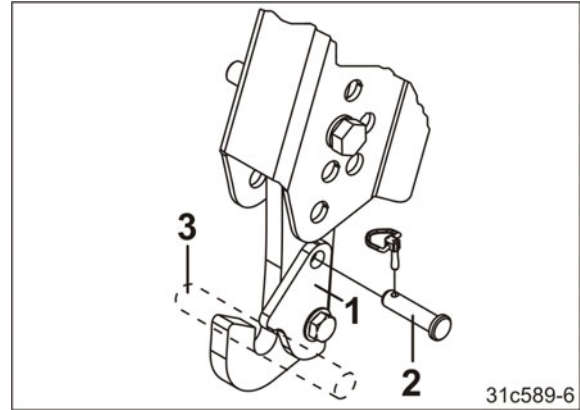


Fig. 94

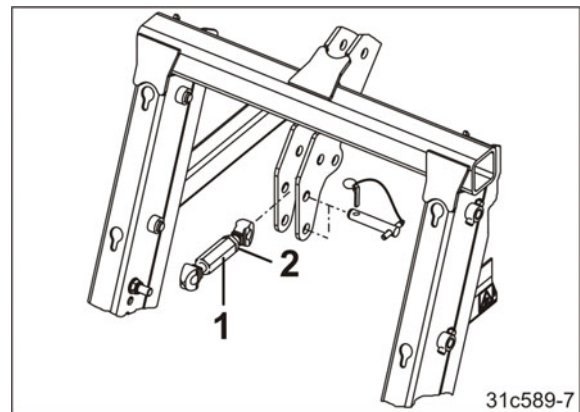


Fig. 95

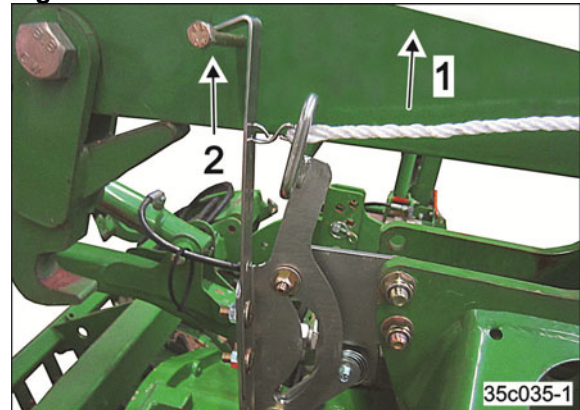


Fig. 96

7.4 GreenDrill supply line



Observe the corresponding operating manuals when using the implement with the GreenDrill catch crop seeding unit!

Fig. 94/...

- (1) Park the calibration button safely under the blower fan.
- (2) Place the supply line in the hose cabinet.

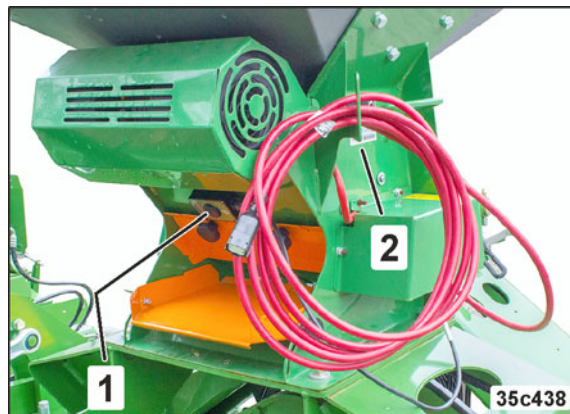


Fig. 97

7.5 Hydraulic hose lines



WARNING

Danger of infection from escaping hydraulic fluid at high pressure!

When coupling and uncoupling the hydraulic hose lines, ensure that the hydraulic system is depressurized on both the implement and tractor sides.

If you are injured by hydraulic fluid, contact a doctor immediately.

7.5.1 Coupling the hydraulic hose lines



Check the compatibility of the hydraulic fluids.
Do not mix any mineral oils with biological oils.



The maximum operating pressure of the hydraulic system is 210 bar.

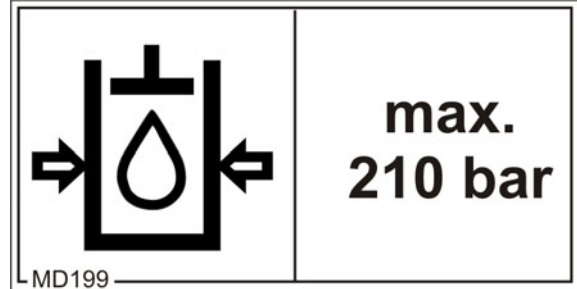


Fig. 98

1. Clean the hydraulic connector and hydraulic socket of the tractor control unit.
2. Put the tractor control valve into the float position (neutral position).
3. Push the hydraulic connector into the hydraulic socket until the hydraulic connector perceivably locks.

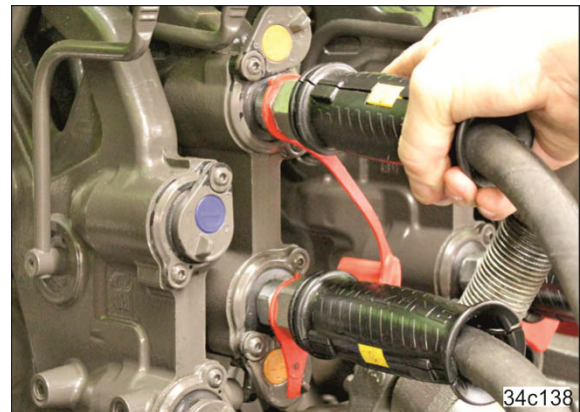


Fig. 99



WARNING

Risk of being crushed, cut, caught, drawn in or struck due to faulty hydraulic functions when the hydraulic hose lines are connected incorrectly!

When coupling the hydraulic hose lines, observe the coloured markings on the hydraulic connectors.

Coupling and uncoupling the implement

7.5.1.1 On lifting frame

Fig. 100/...

1. Couple the supply line for the hydraulic hose lines

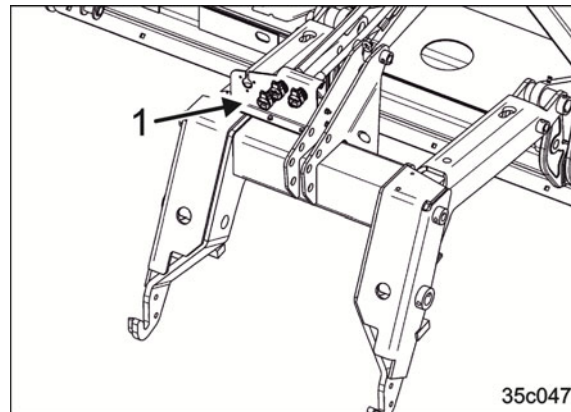


Fig. 100

7.5.1.2 On soil tillage implement

Fig. 101/...

1. Couple the supply line for the tramline marker.

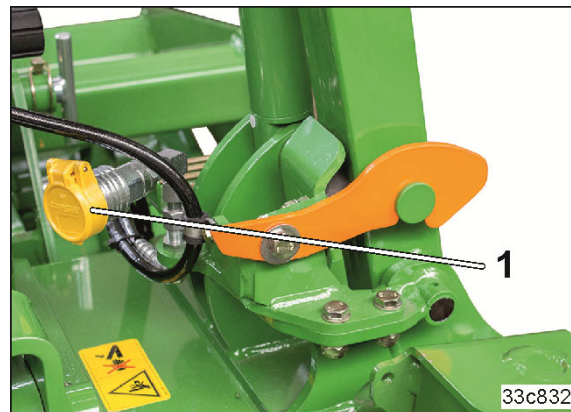


Fig. 101

7.5.2 Uncoupling the hydraulic hose lines

1. Put the tractor control valve into the float position (neutral position).
2. Unlock the hydraulic connector.
3. Place the hydraulic hose lines in the hose cabinet.



Fig. 102

8 Settings



DANGER

Carry out the adjustments only if the following apply:

- The tractor PTO shaft is switched off (wait until the tool carriers have come to a complete stop).
- lowered and unfolded.
- The tractor parking brake is applied.
- The tractor engine is switched off.
- The ignition key is removed.



WARNING

Danger of crushing, shearing, cutting, being caught or drawn in, winding and knocks through:

- unintentional lowering of the implement raised using the tractor's three-point hydraulic system.
- unintentional lowering of raised, unsecured implement parts.
- Unintentional start-up and rolling of the tractor-implement combination.

Secure the tractor and the implement against unintentional starting and rolling away before you make any adjustments to the implement.

8.1 Adjusting the working depth

The soil tillage implement is supported by the roller. This ensures that the working depth of the soil tillage implement is precisely maintained.

8.1.1 Mechanical adjustment

1. Lift the implement just enough for the depth setting pins (Fig. 103/2) to clear the carrying arms (Fig. 103/1).
2. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition key.

Wait until the tool carriers have come to a complete stop.

3. Insert the depth setting pins in the same square hole in the two outer segments. A finer graduation of the working depth can be achieved by turning the depth setting pin in the same square hole. (Fig. 104/3)

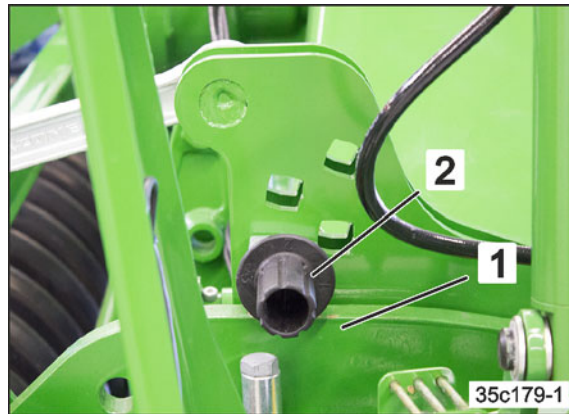


Fig. 103

The working depth increases

- o the higher the position of the depth setting pin (Fig. 104/3+) in the adjuster segment

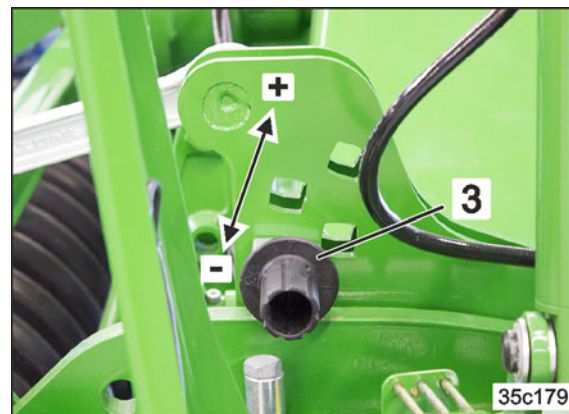


Fig. 104



DANGER

Touch the depth setting pin by the handle only.

Never reach between the carrying arm and the depth setting pins.

The working depth increases

- o the larger the number (Fig. 105/2) present at the carrying arm (Fig. 105/3).

4. Secure the depth setting pins with linch pins.
 5. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
 6. Lower the soil tillage implement.
- The carrying arms (Fig. 106/1) are supported by the depth setting pins (Fig. 106/2).
7. Check that both carrying arms (Fig. 106/1) are resting on depth setting pins.
 8. Always secure the depth setting pins using a linch pin.
 9. Check the setting of the side panels, adjust if required (see section "Adjusting the side panel", Seite 116).

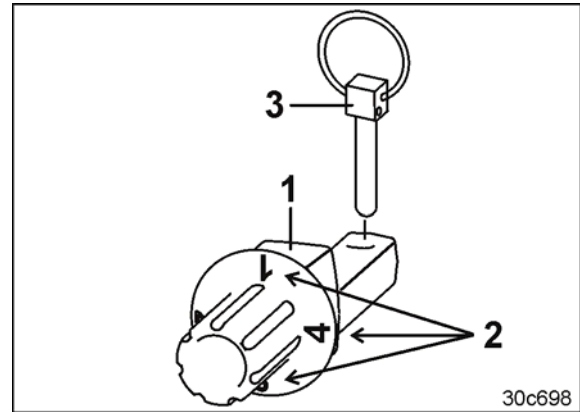


Fig. 105

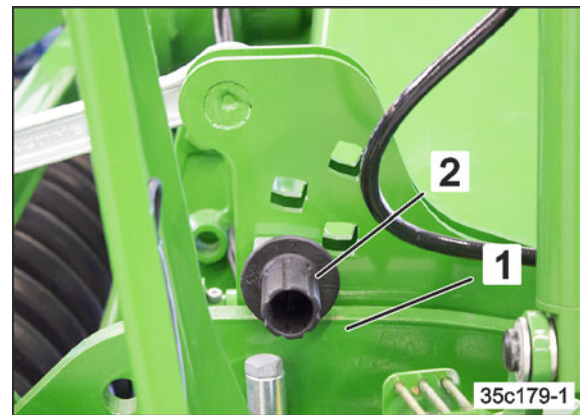


Fig. 106



WARNING

Whenever you relocate the depth setting pin, secure it using a linch pin (Fig. 105/3).

8.1.2 Hydraulic adjustment (optional)

Two hydraulic cylinders are connected to the tractor control unit (*beige*) for adjusting the working depth. The scale (Fig. 54/1) displays the set working width.

Actuation of the control unit (*beige*) adjusts the working depth of the rotary cultivator.

Lock the control unit (*beige*) after each adjustment.

Check the setting of the side panels, adjust if required (see section "Adjusting the side panel", Seite 116).



Fig. 107

8.2 Adjusting the side panel

- Adjust the side panels so that they glide through the soil at a depth of approx. 3 cm.
- If the field is covered with a lot of straw and / or soil is piled up, adjust the side panels higher up.



Check the work results after each adjustment.



NOTE

When tightening the bolts, ensure that there is no soil between the components.

8.2.1 Side plate KE Super / KX / KG

8.2.1.1 Vertical adjustment

1. Loosen the bolts with the operating tool (Fig. 108/1) (do NOT remove)
2. Move the side plates to the desired position (Fig. 108/2)
3. Tighten the bolts with the operating tool
4. After 5 hours of operation, check the bolt connection for tight fit.



Fig. 108

8.2.1.2 Adjusting the spring tension

The adjustable tension of the spring is adjusted at the factory for light and medium soils.

By turning the locking nut (Fig. 109/1), the tension of the spring is

- increased for heavy soils.
- decreased for incorporating straw.

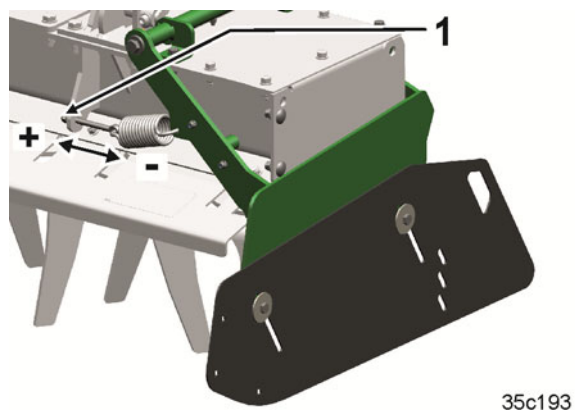


Fig. 109

8.2.2 Side plate KE Special

8.2.2.1 Vertical adjustment

1. Unscrew and remove the bolts (Fig. 110/1)
2. Move the side plates to the desired position (Fig. 110/2)
3. Insert the bolts and tighten
4. After 5 hours of operation, check the bolt connection for tight fit.



Fig. 110

8.2.2.2 Adjusting the spring tension

The adjustable tension of the spring is adjusted at the factory for light and medium soils.

By turning the two lock nuts (Fig. 111/2), the tension of the spring is

- increased on heavy soils (Fig. 111/2+),
- reduced for incorporating straw (Fig. 111/2-).

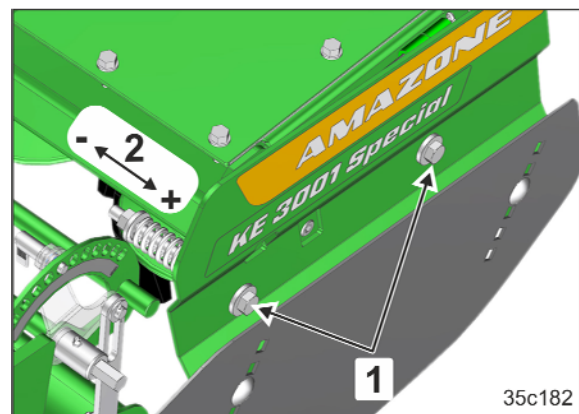


Fig. 111

8.3 Adjusting the soil guiding angle bracket (optional)

1. Loosen the bolts (Fig. 112/1).
2. Move the soil guiding angle bracket (Fig. 112/2) to the desired position.
3. Tighten the bolts.
4. After 5 hours of operation, check the bolt connection for tight fit.

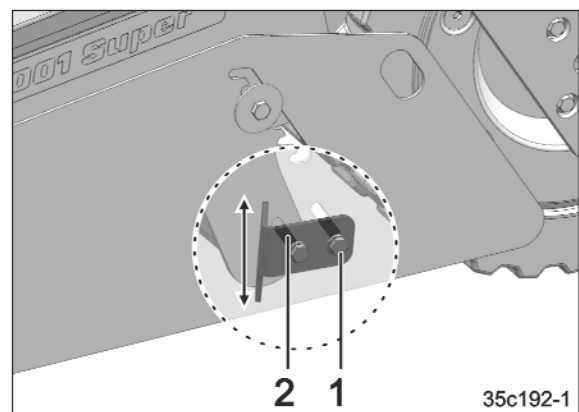


Fig. 112

8.4 Adjusting the wheel mark eradicator (optional)



DANGER

Switch off the tractor PTO shaft, apply the tractor parking brake, switch off the tractor engine and remove the ignition key.



To prevent damage, the implement must not be put down on the wheel mark eradicators. Using the recessed grip, secure the wheel mark eradicators in the topmost position (see Fig. 148).

- Complaints shall not be accepted if damage is caused by putting the implement down on the wheel mark eradicators.



To prevent damage to the wheel mark eradicators, the overload safety may only be triggered by brief overloads. Permanent activation of the overload safety leads to increased wear. In this case, proceed as follows:

- reduce the working speed
- reduce the working depth
- use a coulter that is easy to pull (see Fig. 185, section "Changing the coulters (workshop work)", Seite 161).

Horizontal adjustment

Adjust the wheel mark eradicator horizontally to the desired position (Fig. 113/2) and secure it with the bolts (Fig. 113/1).

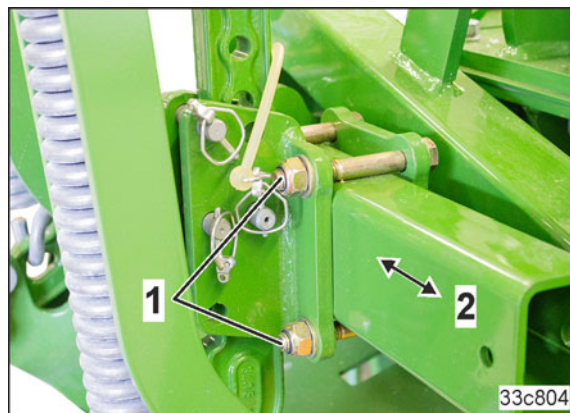


Fig. 113

Vertical adjustment

The recessed grip (Fig. 114/1) serves to safely adjust the working depth.

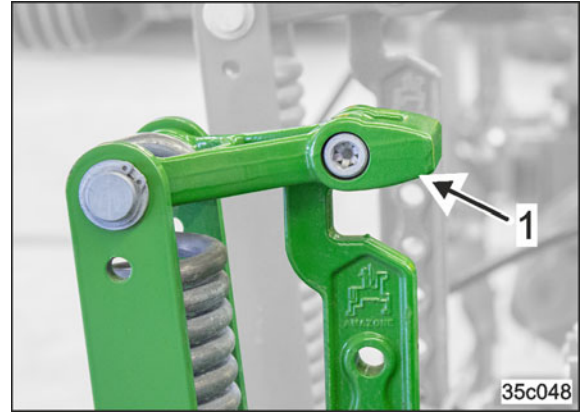


Fig. 114



The top locking pin (Fig. 115/1) may not be removed.

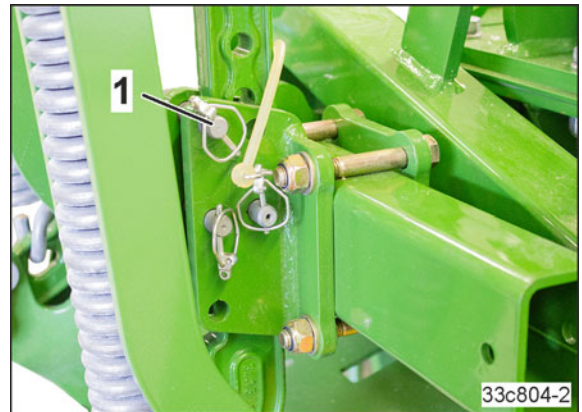


Fig. 115

Adjusting the working depth of the wheel mark eradicator:

1. Remove the linch pin (Fig. 116/1)
 2. Grab the wheel mark eradication by the recessed grip (Fig. 114/1)
 3. Remove the locking pins
 4. Using the recessed grip, move the wheel mark eradicator to the desired position and insert the locking pin.
- The maximum working depth is 150 mm!
5. Secure the locking pin with a linch pin (Fig. 116/1)

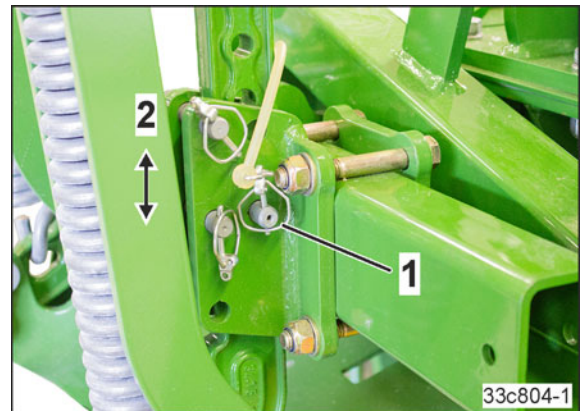


Fig. 116



Check the work results after each adjustment.

8.4.1 Exceeding the maximum working depth

If increasing wear of the tool tines on the soil tillage implement causes the maximum working depth of the wheel mark eradicators to be exceeded (Fig. 117/2), the wheel mark eradicator bracket (Fig. 117/1) must be installed at a higher position

- To prevent damage or wear to the tool carriers.
- Complaints are not accepted when the maximum working depth has been exceeded.

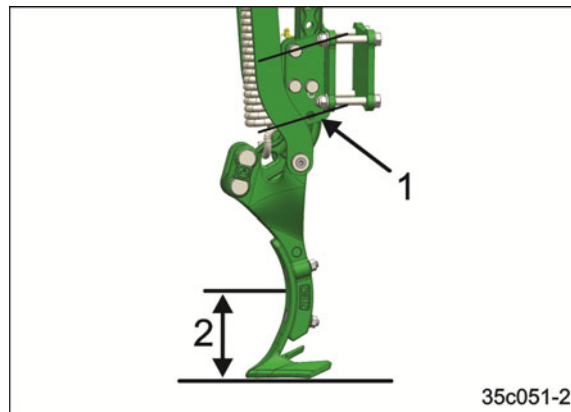


Fig. 117

→ By turning the wheel mark eradicator bracket (Fig. 118/1), the working depth can be reduced.

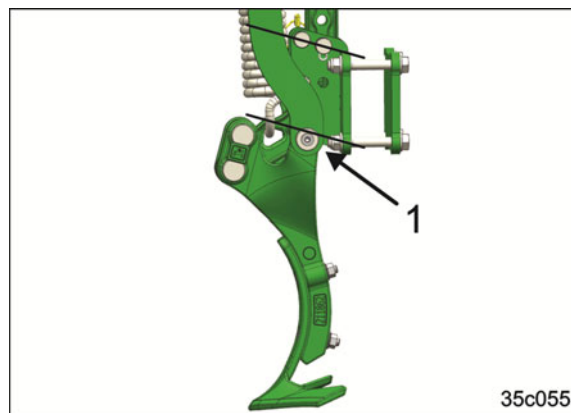


Fig. 118

1. Remove all of the linch pins (Fig. 119/1).
2. Grab the wheel mark eradication by the recessed grip (Fig. 114/1)
3. Remove all of the positioning pins (Fig. 119/2).
4. Holding it by the recessed grip, remove the wheel mark eradicator from the wheel mark eradicator bracket (Fig. 116/3)

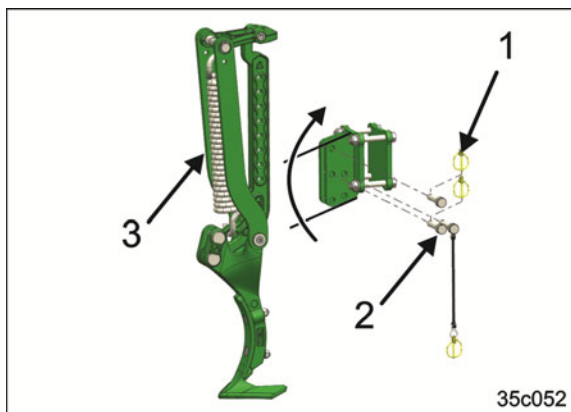


Fig. 119

5. Remove the fixing bolts from the wheel mark eradicator bracket (Fig. 120/1)
6. Turn the wheel mark eradicator bracket upwards (Fig. 120/2)
7. Insert the fixing bolts of the wheel mark eradicator bracket and tighten them (Fig. 120/1)

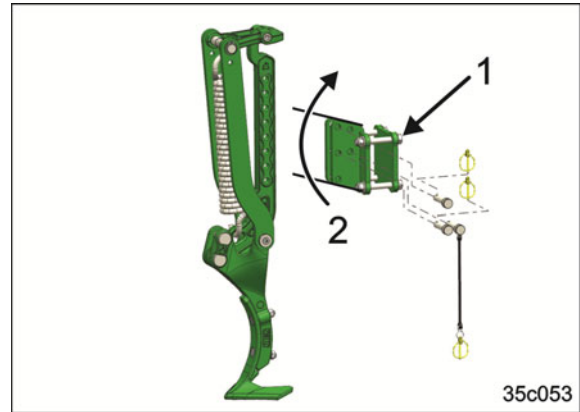


Fig. 120

8. Holding it by the recessed grip, insert the wheel mark eradicator in the bracket (Fig. 121/1)
- Using the recessed grip, put the wheel mark eradicator into the desired position (Fig. 116/3)
9. Insert all of the positioning pins (Fig. 121/2).
10. Secure the positioning pins with linch pins (Fig. 121/3).

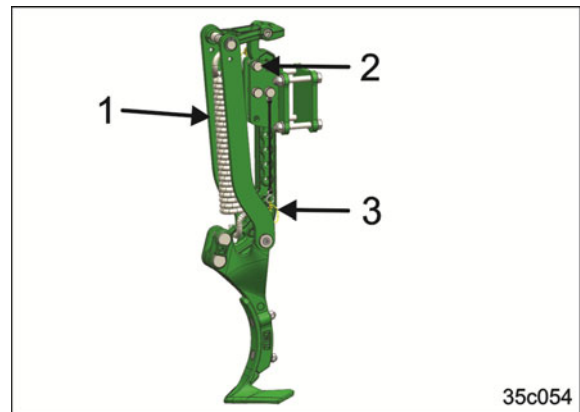


Fig. 121



Insert the locking pin into the top hole (Fig. 122/1). The locking pin may not be removed.

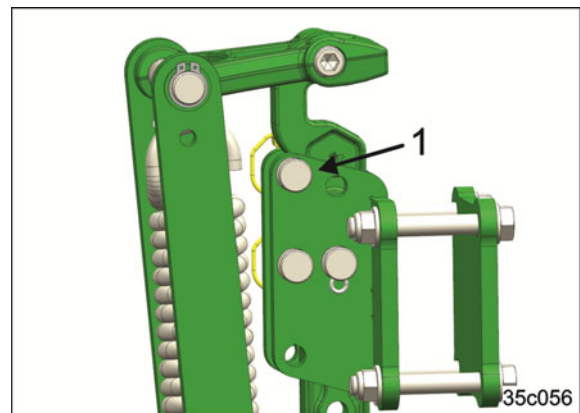


Fig. 122

8.5 Adjusting the roller scraper



To prevent damage to the roller sleeve, the carbide-coated scrapers must not touch the roller sleeve.

8.5.1 Wedge ring roller KW / KWM

1. Uncouple the seed drill.
2. Using the tractor hydraulics, lift the soil tillage implement just enough for the roller to clear the ground.
3. Support the soil tillage implement against unintentional lowering.
4. Loosen the bolt.
5. The distance between the scraper (Fig. 123/1) and the roller tube is 10 mm. Adjust worn scrapers to the correct dimension or replace.
6. Rotate the roller to check whether the distance is maintained at all points.



Fig. 123

8.5.2 Tooth packer roller PW

1. Uncouple the seed drill.
2. Using the tractor hydraulics, lift the soil tillage implement just enough for the roller to clear the ground.
3. Support the soil tillage implement against unintentional lowering.
4. Unscrew the screw (Fig. 124/2).
5. Screw on the scraper (Fig. 124/1) with a distance of 0.5 mm to the roller tube.
6. Rotate the roller to check whether the distance of 0.5 mm is maintained at all points.

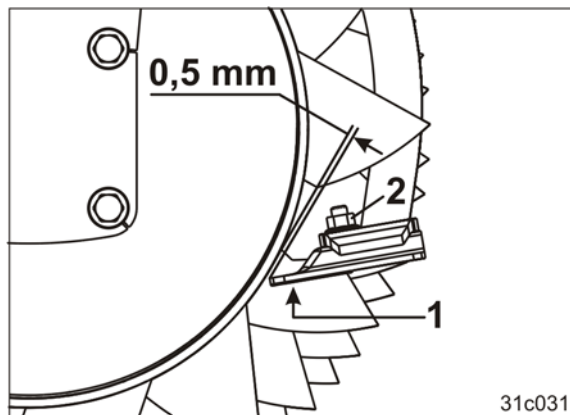


Fig. 124

8.5.3 TRW trapeze ring roller

1. Uncouple the seed drill.
2. Using the tractor hydraulics, lift the soil tillage implement just enough for the roller to clear the ground.
3. Support the soil tillage implement against unintentional lowering.
4. Unscrew the screw (Fig. 125/2).
5. Screw on the scraper (Fig. 125/1) with a distance of 0.5 mm to the roller tube.
6. Rotate the roller to check whether the distance of 0.5 mm is maintained at all points.

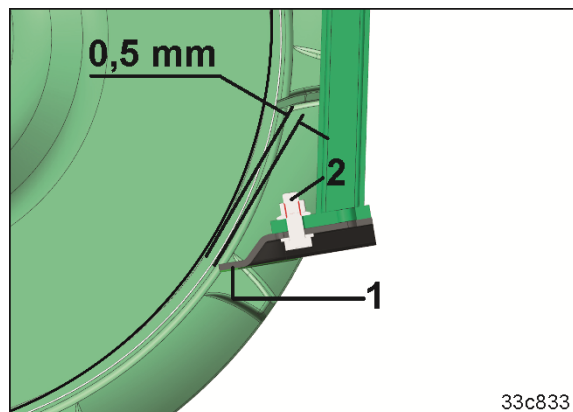


Fig. 125

8.6 Adjusting the levelling board

To adjust the levelling board to the desired height, proceed as follows:

1. Remove the operating tool from the parking position (Fig. 60/1, see page 78) and fit in on the adjustment device (Fig. 126/1).



CAUTION

Danger due to the operating tool swinging out!

Before releasing the locking mechanism, hold the operating tool (Fig. 126/3) in position with a firm grip!

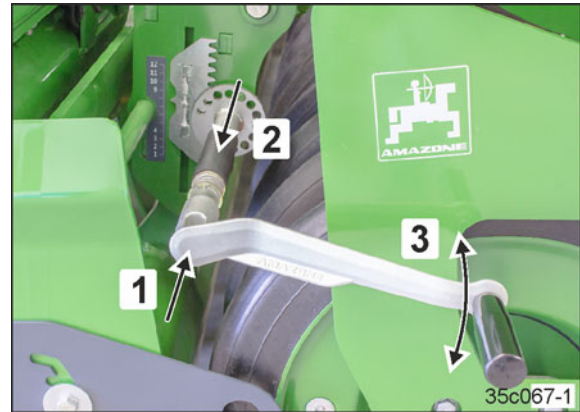


Fig. 126

2. By turning the operating tool (Fig. 126/3), offload and unlock the locking teeth (Fig. 126/2).
3. Adjust the levelling board to the desired height by turning the operating tool.

For plough seeding, adjust the levelling board such that a small ridge of soil is always pushed ahead of the bar to even out any undulations.

For mulch seeding, adjust the levelling board high enough for crop residues to be able to pass underneath.

4. After the adjustment procedure, the locking teeth must latch in completely (Fig. 127/1).

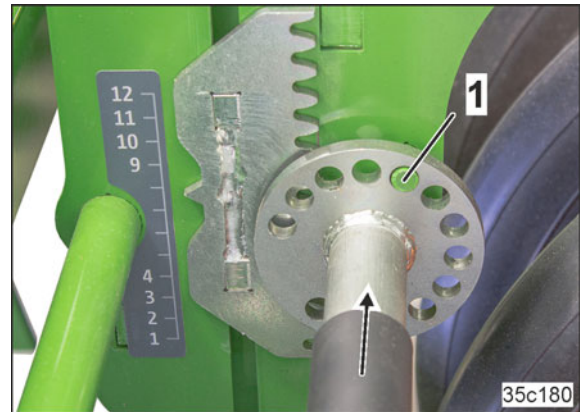


Fig. 127

8.6.1 Setting with decentralised levelling board adjustment



Always perform the same settings on all adjuster segments.

To adjust the levelling board to the desired height, proceed as follows:

1. Remove the operating tool from the parking position (Fig. 60/1, see page 78) and fit in on the adjustment device (Fig. 129/1).



CAUTION

Danger due to the operating tool swinging out!

Before releasing the locking mechanism, hold the operating tool (Fig. 129/3) with a tight grip!

2. Release the locking pin by turning it (Fig. 128/1).
3. Adjust the levelling board to the desired height (Fig. 129/3) by turning (Fig. 129/2) the operating tool.

For plough seeding, adjust the levelling board such that a small ridge of soil is always pushed ahead of the bar to even out any undulations.

For mulch seeding, adjust the levelling board high enough for crop residues to be able to pass underneath.

4. After the adjustment procedure, the locking pin must latch in completely.

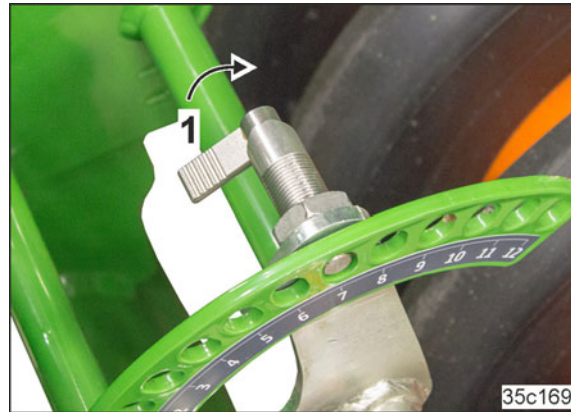


Fig. 128

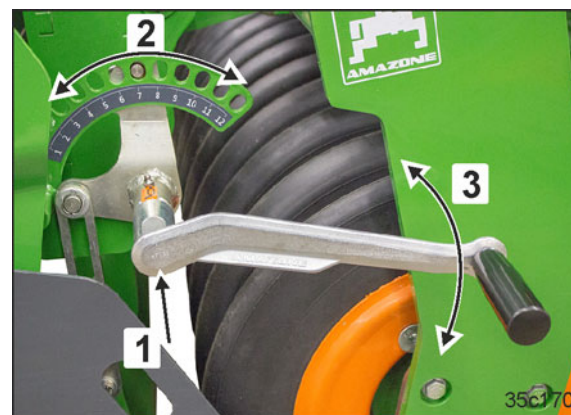


Fig. 129

8.7 Transport locking mechanism for lifting frame (all types)

8.7.1 Locking the lifting frame

1. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
2. Pull on the cord (Fig. 131/1).
- The locking hook (Fig. 131/2) opens.
3. Actuate the tractor control unit (*green*).
- The lifting frame is raised. Actuate tractor control unit (*green*) until the lifting frame is fully raised and locked.
4. Release the (Fig. 131/1) cord.
- The locking hook (Fig. 130/3) represents the mechanical locking mechanism of the lifting frame.

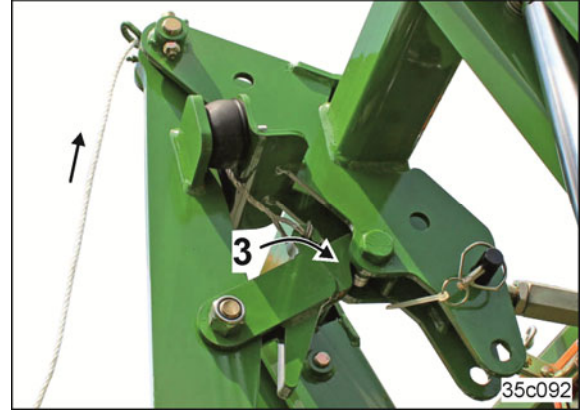


Fig. 130

8.7.2 Unlocking the lifting frame

1. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
 2. Pull on the cord (Fig. 131/1).
 - The locking hook (Fig. 131/2) opens.
 3. Actuate the tractor control unit (*green*).
 - The lifting frame is lowered.
- Actuate tractor control unit (*green*) until the lifting frame is fully lowered.

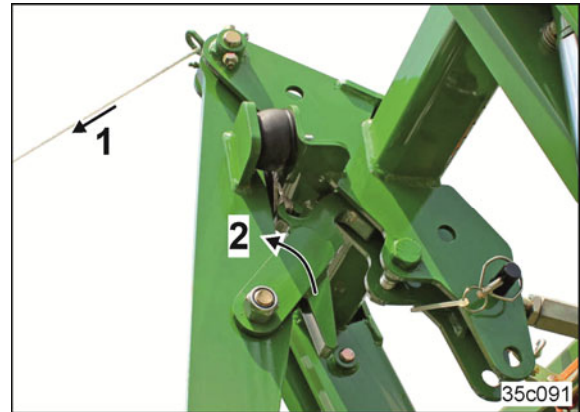


Fig. 131



If the lifting frame fails to lock, e.g. when turning at the end of a field (see Fig. 132), do not pull the cord (Fig. 131/1).



Fig. 132

8.8 Adjusting the lift height limiter



CAUTION

Danger from failure of the universal joint shaft in case of excessive bending of the driven universal joint shaft!

Observe the permitted bending of the driven universal joint shaft when lifting the implement. Excessive bending of the driven universal joint shaft causes increased, premature wear to or immediate destruction of the universal joint shaft.

Switch off the PTO shaft of the tractor immediately if the lifted implement makes a lot of noise while running.

The lift height limiter can be adjusted:

1. Unscrew the nuts (Fig. 133/1).
2. Put the actuation hooks into the desired position (Fig. 133/2), so that it is possible to lift with the universal joint shaft running.
3. Tighten the nuts (Fig. 133/1).

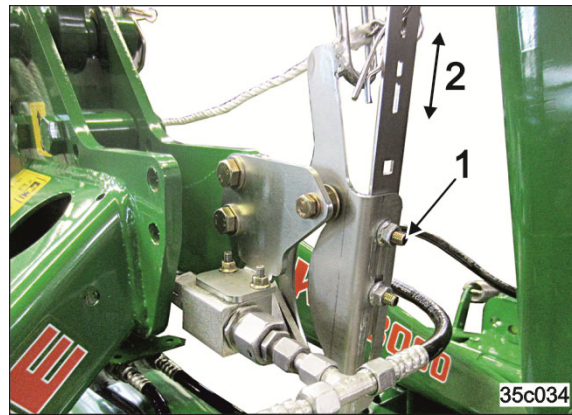


Fig. 133

8.9 Deactivating the lift height limiter

The lift height limiter can be deactivated:

1. Actuate the white pull rope and pull the eyelet through the hole (Fig. 134/1).
2. Lock the eyelet with the spring cotter pin (Fig. 134/2).
3. The actuation hook is fixed in the front position and is not caught by the actuation bolt (Fig. 134/3).

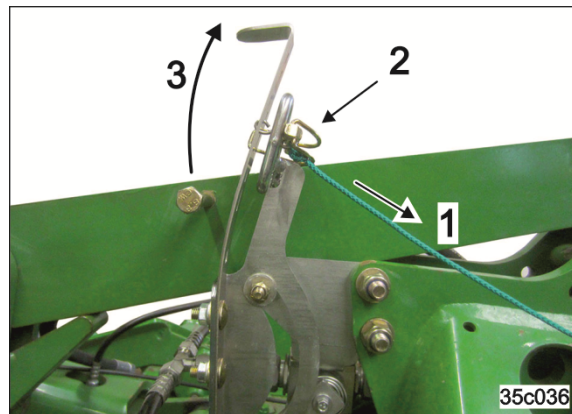


Fig. 134

8.10 Adjusting the track marker

It is possible to set:

- The length of the track marker (Fig. 135/3)
 - The working intensity of the track marker, depending on the type of soil (Fig. 135/4).
1. Apply the tractor parking brake, switch the tractor engine off and remove the ignition key.
 2. Loosen the bolts (Fig. 135/2) with the operating tool (Fig. 135/1)
 3. Adjust the track marker length by shifting (Fig. 135/3) to length "A" [see Table (Fig. 136)].
 4. Adjust the working intensity by turning (Fig. 135/4) the track marker axis so that it runs roughly parallel to the direction of travel on light soils and stand more on grip on heavier soils.
 5. Tighten up the bolts (Fig. 135/2).

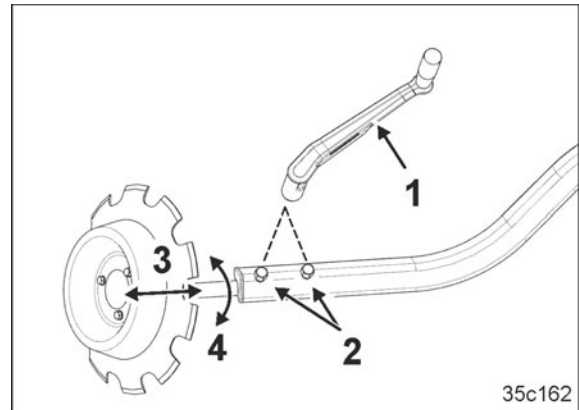


Fig. 135

Working width	Distance A ¹⁾
KE/KX/KG 3001	3.0 m
KE/KG 3501	3.5 m
KE/KG 4001	4.0 m

¹⁾ Distance from the centre of the implement to the contact area of the track marker disc

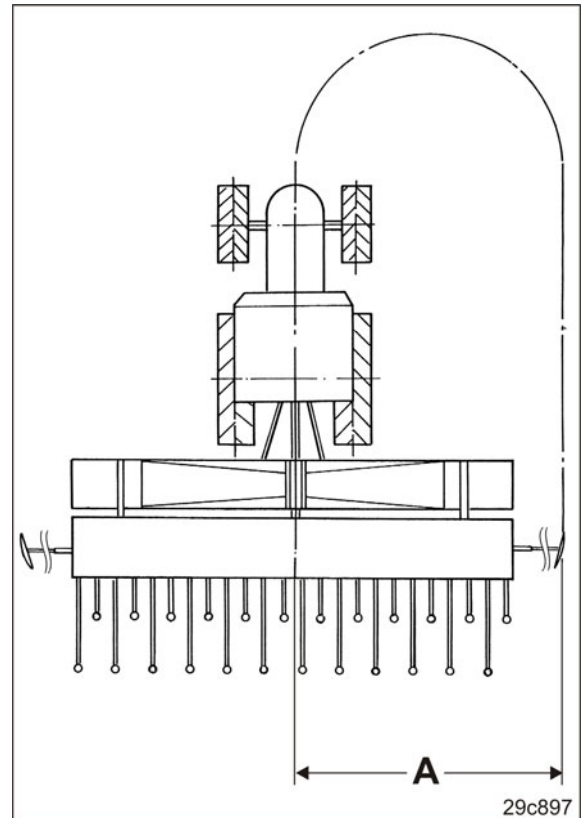


Fig. 136

9 Transportation

When driving on public streets or roads, the tractor and implement must comply with the national road traffic regulations (in Germany the StVZO and the StVO) and the accident prevention regulations (in Germany those of the industrial injury mutual insurance organisation).

In Germany and in many other countries, the maximum transport width of the implement combination mounted on the tractor is 3.0 m.

The maximum permitted speed^{1.)} is:

- 25 km/h for tractors with attached soil tillage implement, trailing roller and seeding rail with front tank
- 40 km/h for tractors with attached soil tillage implement, trailing roller with or without
 - o Mounted seed drill.
 - o pack-top seed drill

The implement must always be driven at much lower speeds than those specified when travelling on poor roads and unclassified roads in particular.

^{1.)} The maximum permitted speed for mounted implements differs in the various countries according to national road traffic regulations. Ask your local importer/implement dealer about the maximum permitted speed for road travel.

**DANGER**

- Before transportation, carry out a visual check that the upper and lower link pins are secured with the original linch pins against unintentional release.
- Before transportation, fasten the side locking device of the tractor lower link so that the mounted or towed implement cannot swing back and forth.
- In bends take into consideration the wide sweep and the centrifugal mass of the implement.
- Drive in such a way that you always have full control over the tractor with the attached implement. In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor and the influence of the mounted or attached implement.
- It is forbidden to ride on the implement as a passenger and/or to climb onto implements while they are running.



- Before transport, follow the instructions given in the section "Safety information for the operator".
- Before moving off, check:
 - that the permissible weight is not exceeded.
 - that the supply lines are connected correctly
 - the lighting system for damage, function and cleanliness.
 - the brake and hydraulic system for visible damage.
- That the tractor parking brake is released completely.
- The warning signs and yellow reflectors must be clean and undamaged.
- Switch on the warning beacon (if present), which is subject to authorisation, prior to starting a journey and check for operability.

9.1 Moving the implement in the transport position

1. Instruct any people in the area to stand at a minimum distance of 10.0 m from the implement.
2. Deactivate the lifting frame height limiter (optional):
Using the white pull rope (Fig. 137/1), pull the actuation hook to the front (Fig. 137/1).
3. Raise the lifting frame:
Actuate tractor control unit (*green*) until the lifting frame is fully raised.
4. Check whether the lifting frame is locked (see section "Transport locking mechanism for lifting frame ", Seite 125).
5. Swivel the track marker into transport position:
Actuate the tractor control unit (yellow) until the track markers are fully raised.
6. Lock the track markers (see section "Moving the track marker to transport position", Seite 139)
7. Raise the soil tillage implement.
8. Lock the tractor control units.
9. Switch off the on board computer.
10. Check the lighting system for correct operation.
11. Switch on the warning beacon (if present), which is subject to authorisation, and check for correct function.

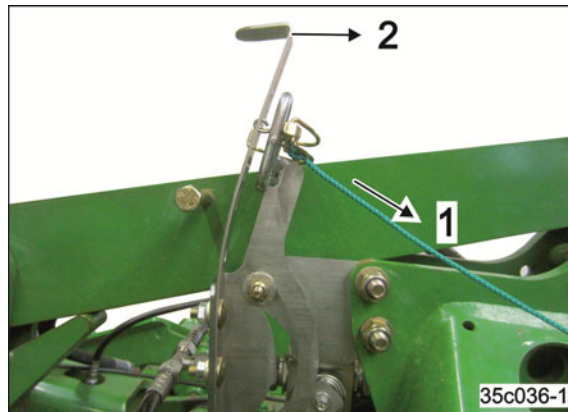


Fig. 137



Fig. 138

9.2 Transporting with a transport vehicle



Transport of a implement combination over 3.0 m wide is only permitted on a transport vehicle.

When transporting implement combinations (see section "Combination possibilities with other AMAZONE implements", Seite 78), pay attention to the width of the loaded transport vehicle.

The vehicle keeper and driver are responsible for compliance with the statutory stipulations.

10 Use of the implement



When using the implement, observe the information in the following sections:

- Warning symbols and other labels on the implement.
- Safety information for the operator.



DANGER

Risk of crushing, being pulled in or caught during implement operation because of unprotected drive elements.

Only operate the implement if

- all safety equipment is fully installed.
- the side panel is installed.
- the roller is coupled up.



DANGER

Danger of being entangled and drawn in by an unguarded universal joint shaft or damaged safety devices!

Work only when the drive between the tractor and driven implement is fully guarded, i.e.:

The tractor must be equipped with a shield, and the implement must be equipped with the standard universal joint shaft guard.

Whenever the implement is used, first check to ensure that the safety devices and guards of the universal joint shaft are fully intact and functional.

Danger of being entangled and drawn in

- by unguarded parts of the universal joint shaft.
- by damaged safety devices.
- by an unsecured universal joint shaft (supporting chain).

Have damaged safety devices and guards of the universal joint shaft replaced immediately by a specialist workshop.

- Maintain a sufficient safety clearance between you and the driven universal joint shaft.
- Direct people out of the danger area of the driven universal joint shaft.
- Shut down the tractor engine immediately in case of danger.



WARNING

Risk of being crushed, caught or struck by objects ejected by the implement when it is driven!

Instruct people to leave the danger area of the implement before you switch on the PTO shaft.



DANGER

- Before transportation, carry out a visual check that the upper and lower link pins are secured with the original lynch pins against unintentional release.
- Before transportation, fasten the side locking device of the tractor lower link so that the mounted or towed implement cannot swing back and forth.
- When turning corners, take into consideration the wide sweep and the centrifugal mass of the implement.
- Drive in such a way that you always have full control over the tractor with the attached implement. In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor and the influence of the mounted or attached implement.
- It is forbidden to ride on the implement as a passenger and/or to climb onto implements while they are running.



WARNING

Risk of being crushed, caught or struck by damaged components or foreign objects ejected by the implement!

Observe the permissible implement drive speed before switching on the tractor PTO shaft.



CAUTION

Danger from failure of the universal joint shaft in case of excessive bending of the driven universal joint shaft!

Observe the permitted bending of the driven universal joint shaft when lifting the implement. Excessive bending of the driven universal joint shaft causes increased, premature wear to or immediate destruction of the universal joint shaft.

Switch off the PTO shaft of the tractor immediately if the lifted implement makes a lot of noise while running.



CAUTION

Danger from failure during operation when the overload clutch engages!

Switch off the PTO shaft of the tractor immediately if the overload clutch engages. This avoids damaging the overload clutch.

10.1 Filling the hopper (optional)



Observe the corresponding operating manuals when using the implement with the GreenDrill catch crop seeding unit!

1. Switch off the control terminal.
2. Unlock the ascent (Fig. 139/1) and swivel it down (Fig. 139/2). Use the step of the ladder as handle.
3. To fill and adjust the GreenDrill, use the existing loading board (Fig. 140/1).

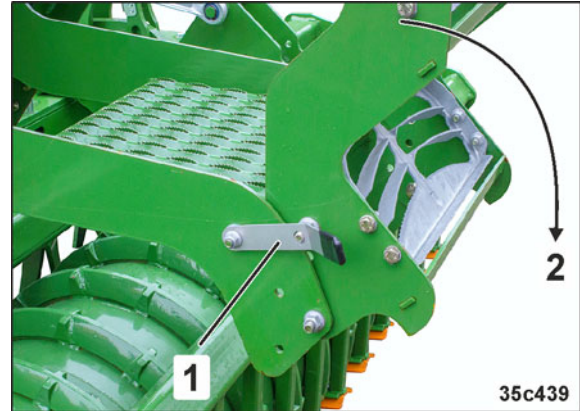


Fig. 139

4. The seed hopper cover has a threaded seal (Fig. 140/2).
5. Open the seed hopper cover and slowly fill the seed hopper. Do not exceed the nominal volume.
6. Screw on the seed hopper cover so that the seed hopper is closed air-tight.
7. To prevent collisions, the ladder should always be folded up when it is not in use, e.g. during operation and before road transport.

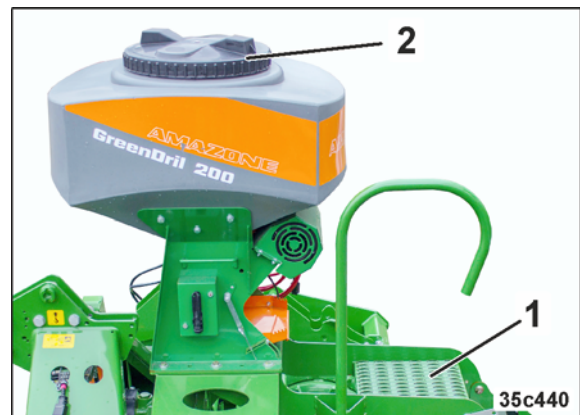


Fig. 140

10.2 On the field



DANGER

Instruct any people in the area to stand at a minimum distance of 20.0 m from the machine.

10.2.1 Work commencement

1. Lower the soil tillage implement until the tines are just above, but not yet touching, the soil.
2. Bring the tractor's PTO shaft up to the prescribed speed.
3. Start up the tractor and fully lower the soil tillage implement.



A tractor PTO shaft speed of 1000 rpm is recommended.

Setting a lower PTO shaft speed leads to high torques at the universal joint shaft and can cause rapid wear of the overload clutch.

10.2.2 Moving the wheel mark eradicator into working position

Vertical adjustment

Adjust the wheel mark eradicator vertically to the desired working depth (Fig. 148/2), and secure the positioning bolt (Fig. 148/1) with a linch pin.

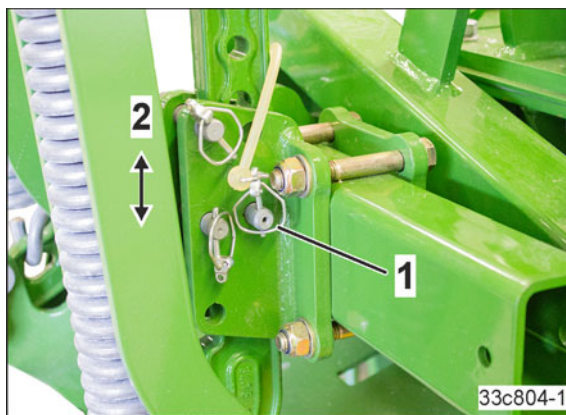


Fig. 141

10.2.3 Moving the track marker into working position

In transport position, each track marker is secured with a bar (Fig. 142/1).

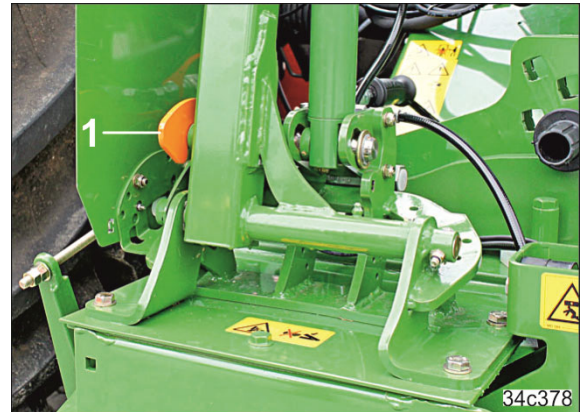


Fig. 142

1. Position the implement on the field.
2. Unlock both track markers.
 - 2.1 Disengage the tractor's PTO shaft, engage the parking brake, shut off the engine and remove the ignition key.
 - 2.2 Take hold of the track marker
 - 2.3 Move the bar (Fig. 143/1).
3. Direct people out of the swivel area of the track marker.
4. Move track markers into working position.



Fig. 143



Raise the active track marker on the field before passing obstacles.

10.2.4 Bring hinged side panel into working position



Specifications for the direction of rotation refer to the illustrated left side of the implement. When working on the right side of the implement, the direction of rotation is the opposite.

1. Remove the linch pin (Fig. 144/4)
 2. Put the operating tool (Fig. 144/2) on the setting shaft (Fig. 144/3).
 3. To relieve the angle bracket (Fig. 144/1), turn the operating tool counterclockwise.
 4. Hold the operating tool firmly and open the angle bracket.
 5. To move the side plate into working position, turn the setting shaft clockwise with the operating tool.
 6. To fix the setting shaft, close the angle bracket and install the linch pin
- The side plate (Fig. 145/1) is fixed in the outer position.

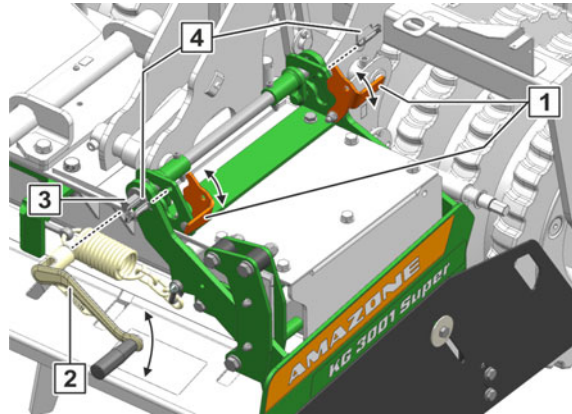


Fig. 144

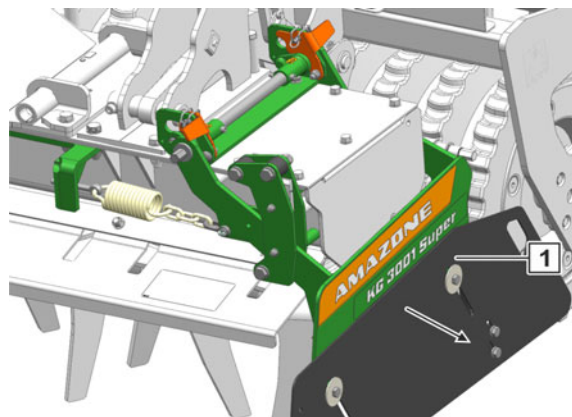


Fig. 145

10.3 During operation



In the event of tine wear, correct the following settings:

- the working depth of the soil tillage implement,
- the side panels,
- the wheel mark eradicators.

When working at great working depths, it is necessary to replace the tool tines with new ones even before they reach the minimum length in order to prevent damage or wear to the tool carriers.

The working depth (Fig. 146/1) can be adjusted hydraulically during operation.

Actuation of the control unit (*beige*) adjusts the working depth of the rotary cultivator.

Lock the control unit (*beige*) after each adjustment.

The scale (Fig. 146/2) displays the set working width.



Fig. 146

10.3.1 Turning at end of the field



Switch off the tractor PTO shaft when turning if the angle of the universal joint shaft becomes too large or the implement does not run smoothly when raised.

Before turning at the end of the field

- raise the mounted seed drill over the packer roller using the lifting frame (optional)
- raise the combination with the tractor hydraulics until the combination has sufficient ground clearance.



Fig. 147

10.4 After use



When switching off the implement, ensure that the soil tillage implement is parked on firm ground.

10.4.1 Moving the wheel mark eradicator into transport position



When switching off the implement, ensure that the soil tillage implement is parked on firm ground.



To prevent damage, the implement must not be put down on the wheel mark eradicators. Using the recessed grip, secure the wheel mark eradicators in the topmost position (see Fig. 148).

- Complaints shall not be accepted if damage is caused by putting the implement down on the wheel mark eradicators.

1. Remove the linch pin (Fig. 148/1)
2. Grab the wheel mark eradication by the recessed grip (Fig. 114/1)
3. Remove the locking pins
4. Using the recessed grip, secure the wheel mark eradicators in the topmost position (see Fig. 148/2)
5. Secure the locking pin with a linch pin (Fig. 148/1)

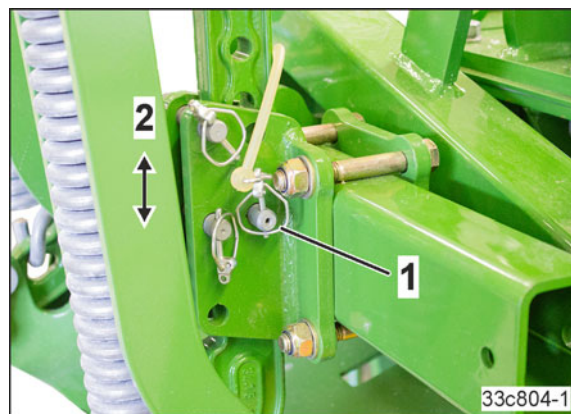


Fig. 148

10.4.2 Moving the track marker to transport position



DANGER

Secure the track markers immediately after work on the field (transport lock).

Unsecured track markers could unintentionally move to the working position and cause serious injury.

Only remove the transport lock for the track marker immediately before beginning field work.



WARNING

Direct people out of the danger area.

The hydraulic cylinder of the track marker and of the tramline marker can be actuated simultaneously.

1. Direct people out of the swivel area of the track marker.
2. Actuate the tractor control unit (yellow).
- Swivel both track markers into transport position (see Fig. 149/1).
3. Position the implement on the field.
- 3 Switch off the tractor's PTO shaft, engage the parking brake, shut off the engine and remove the ignition key.
4. Move both bars (Fig. 150/1). Pay attention to the secure connection of the track marker pintles and bars.



Fig. 149



Fig. 150

10.4.3 Moving the sliding side plate into transport position



Specifications for the direction of rotation refer to the left side of the implement. When working on the right side of the implement, the direction of rotation is the opposite.

1. Remove the linch pin (Fig. 151/4)
 2. Put the operating tool (Fig. 151/3) on the setting shaft (Fig. 151/2).
 3. To relieve the angle bracket (Fig. 151/1), turn the operating tool clockwise.
 4. Hold the operating tool firmly and open the angle bracket.
 5. To move the side plate into transport position, turn the setting shaft counterclockwise with the operating tool.
 6. To fix the setting shaft, close the angle bracket and install the linch pin
- The side plate (Fig. 152/1) is fixed in the inner position.

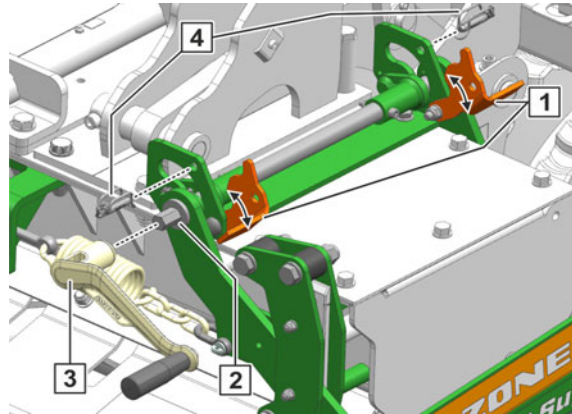


Fig. 151

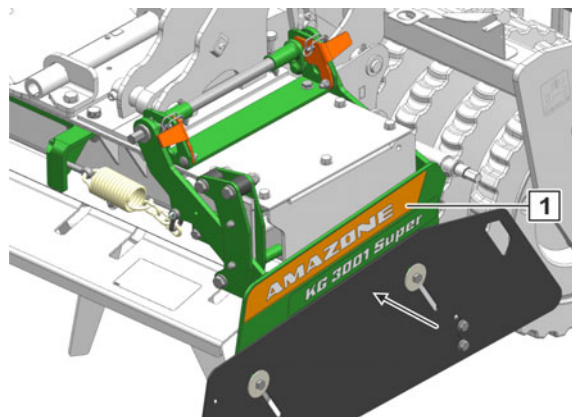


Fig. 152

11 Fault indications



WARNING

Danger of crushing, shearing, cutting, being caught or drawn in, winding and knocks through:

- **unintentional lowering of the implement raised using the tractor's three-point hydraulic system.**
- **unintentional lowering of raised, unsecured implement parts.**
- **Unintentional start-up and rolling of the tractor-implement combination.**

Secure the tractor and the implement against unintentional start-up and rolling before eliminating faults on the implement.

Wait for the implement to stop, before entering the implement danger area.

11.1 Initial use of the tooth packer roller



If the tooth packer roller rotates with difficulty when first used, e.g. because of areas glued by paint, do not adjust the scrapers of the tooth packer roller, but rather pull the roller over solid ground.

11.2 Tool tines stopping when work is in progress

If the implement encounters an obstacle, the tool carriers may come to a stop.

To prevent damage to the gearbox, the gearbox input shaft is fitted with an overload clutch.

If the tool carriers come to a stop, stop driving and reduce the tractor's PTO shaft speed (approx. 300 rpm) until you hear the ratchet clutch engage. Bring the PTO shaft back to its original speed and continue working.

If the tool carriers do not turn, rectify the malfunction:

1. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
2. Wait until the tractor PTO shaft comes to a complete stop.
3. Remove the obstacle.
The ratchet clutch is now ready to be used again.

11.3 Hall sensor on the gearbox

The Hall sensor is magnetic.

In event of faults, unscrew the Hall sensor, free the contact surface from chippings and clean it.

Fig. 153/1

- Hall sensor on the WHG/KG Super gearbox

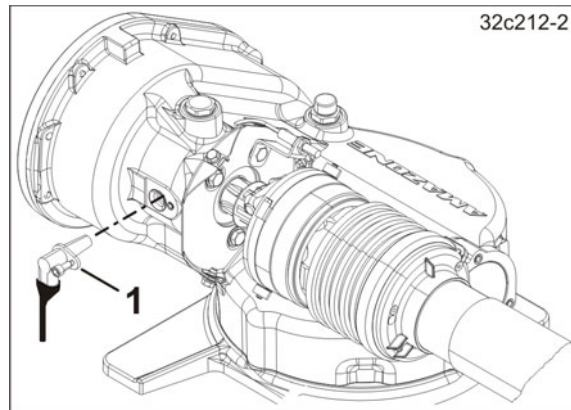


Fig. 153

11.4 Shearing of the track marker safety

If the track marker strikes against a solid obstacle, a bolt is (Fig. 154/1) sheared off. The nut (Fig. 154/2) loosens and the track marker (Fig. 154/3) folds to the rear.

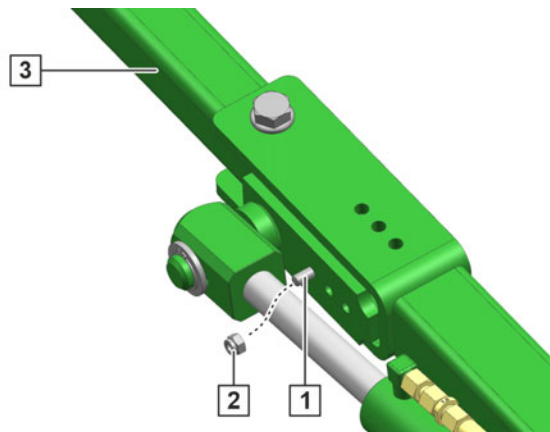


Fig. 154

Spare shear bolts can be found in a holder on the track marker (Fig. 155/1).

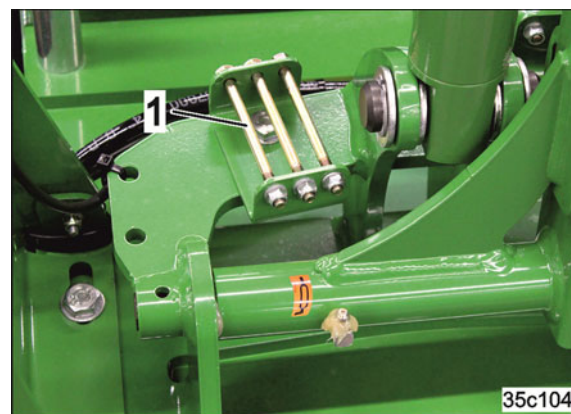


Fig. 155

12 Cleaning, maintenance and repair

12.1 Safety



WARNING

Danger of crushing, shearing, cutting, being caught or drawn in, winding and knocks through:

- unintentional lowering of the implement raised using the tractor's three-point hydraulic system.
- unintentional lowering of raised, unsecured implement parts.
- Unintentional start-up and rolling of the tractor-implement combination.

Secure the tractor and the implement against unintentional start-up and rolling before working on the implement.



WARNING

Risk of crushing, shearing, cutting, being caught and/or drawn in, or impact through unprotected danger points.

- Mount protective equipment, which you removed when cleaning, maintaining and repairing the implement.
- Replace defective protective equipment with new equipment.



Danger

Carry out cleaning, maintenance or repair work (unless otherwise specified) only after the following conditions are fulfilled:

- The implement is completely lowered.
- The tractor parking brake is applied.
- Switched off the tractor PTO shaft.
- The tractor engine is switched off.
- The ignition key is removed.



CAUTION

Avoid coming into contact with hot components and transmission fluids.

Wear protective gloves.

12.2 Cleaning the machine



- Pay particular attention to the brake, air and hydraulic hose lines.
- Never treat brake, air and hydraulic hose lines with fuel, benzene, petroleum or mineral oils.
- After cleaning, grease the implement, in particular after cleaning with a high pressure cleaner/steam jet or liposoluble agents.
- Observe the legal regulations for handing and disposing of cleaning agents.

Cleaning with a high-pressure cleaner/steam cleaner



What should be observed when cleaning with a high-pressure cleaner/steam cleaner:

- Do not clean any electrical components.
- Do not clean any chromed components.
- Never aim the cleaning jet from the cleaning nozzle of the high pressure cleaner/steam jet directly on lubrication points, bearings, rating plate, warning signs, and stickers.
- Always maintain a minimum nozzle distance of 300 mm between the high pressure cleaner/steam jet cleaning nozzle and the implement.
- The set pressure of the high-pressure cleaner/steam jet must not exceed 120 bar.
- Comply with safety regulations when working with high pressure cleaners.

12.3 Adjustment work

12.3.1 Repositioning the bevel wheels on the WHG/KE Special / Super (specialised workshop)

1. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
2. Remove the universal joint shafts with the universal joint shaft guard.
3. Thoroughly clean the gearbox cover and the drive shaft so that no dirt enters the gearbox housing.
4. Open the gearbox cover (Fig. 157/1).
5. Pull off the axial retaining device (Fig. 157/2).
6. Pull the drive shaft (Fig. 157/3) out of the gearbox housing.
- The bevel wheel (Fig. 157/4) comes away from the drive shaft.
- The second bevel wheel (Fig. 157/5) sits on the pinion shaft. The bevel wheel is not secured axially.
7. Swap the bevel wheels among each other (see section 5.5.2, WHG/KE Special / Super gearbox, Fig. 34).
8. Fit the drive shaft together with the bevel wheel.
9. Secure the bevel wheel axially to the drive shaft.
10. Close the gearbox cover and cover gasket.
11. Check the gearbox for leak points.
12. Check the oil level.
13. Fit the universal joint shafts with the universal joint shaft guard.



Fig. 156

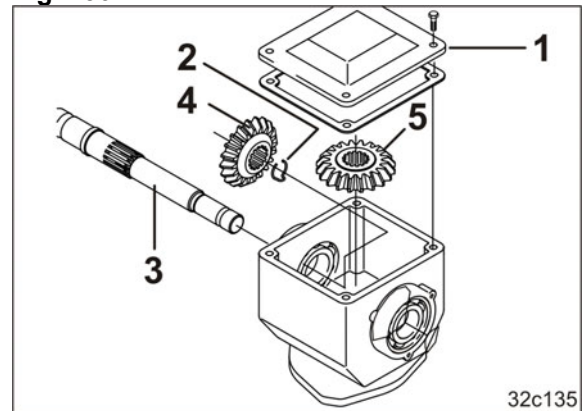


Fig. 157

12.3.2 Repositioning / replacing the gear wheels on the WHG/KX / WHG/KG Special / Super (specialised workshop)



When the gearbox cover is opened, transmission fluid runs out.

To prevent contamination from escaping fluid,

- raise the mounted implement using the tractor's three-point hydraulic system until the implement is inclined about 30° forwards
- park the implement on solid ground and reduce the oil level by draining off the transmission fluid.
Only reuse the collected transmission fluid if it has not been contaminated by dirt particles.



DANGER

Secure the raised soil tillage implement which is attached to the tractor against unintentional lowering by using suitable support elements or a crane.

12.3.2.1 Repositioning/replacing the gear wheels on the WHG/KX

1. Couple the soil tillage implement to the tractor.
2. Uncouple the seed drill.
3. Tilt the implement about 30° forwards using the tractor's three-point hydraulic system.
4. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
5. Secure the raised implement using suitable support elements or a crane.
6. Open the gearbox cover.
7. Remove the retaining springs (Fig. 158/1).
8. Remove the gear wheels and, using the speed table,
 - o swap them with each other (see section 5.5.3, Gearbox WHG/KX, Fig. 37) or
 - o replace by a different set of gear wheels (see section 5.5.3, Gearbox WHG/KX, Fig. 37)
9. Fit the retaining springs.
10. Close the gearbox cover and cover gasket.
11. Lower the implement.
12. Check the gearbox for leak points.
13. Check the oil level.

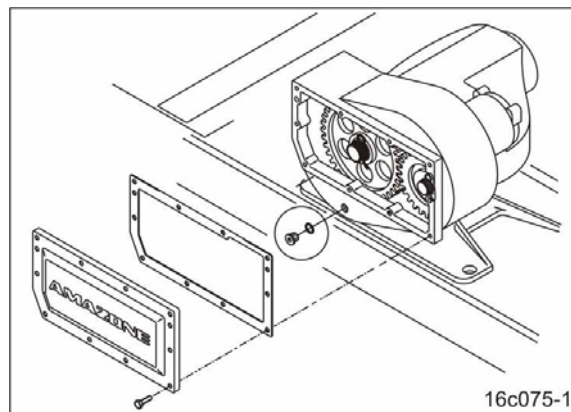


Fig. 158

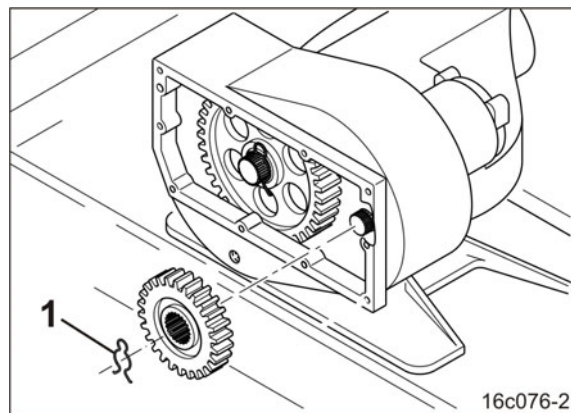


Fig. 159

12.3.2.2 Repositioning / replacing the gear wheels on the WHG/KG Special / Super (specialised workshop)

1. Couple the soil tillage implement to the tractor.
2. Uncouple the seed drill.
3. Tilt the implement about 30° forwards using the tractor's three-point hydraulic system.
4. Switch off the tractor PTO shaft, apply the tractor parking brake, switch the tractor engine off and remove the ignition spanner.
5. Secure the raised implement using suitable support elements or a crane.
6. Loosen the bolts (Fig. 160/1)
7. Open the gearbox cover (Fig. 160/2)
8. Remove the retaining springs (Fig. 161/3)
9. Remove the gear wheels and, using the speed table,
 - o swap them with each other (Fig. 161/4)
 - or
 - o replace by a different set of gear wheels (see section 5.5.4, WHG/KG Special / Super gearbox, Fig. 39)
10. Fit the retaining springs.
11. Close the gearbox cover and cover gasket.
12. Lower the implement.
13. Check the gearbox for leak points.
14. Check the oil level.

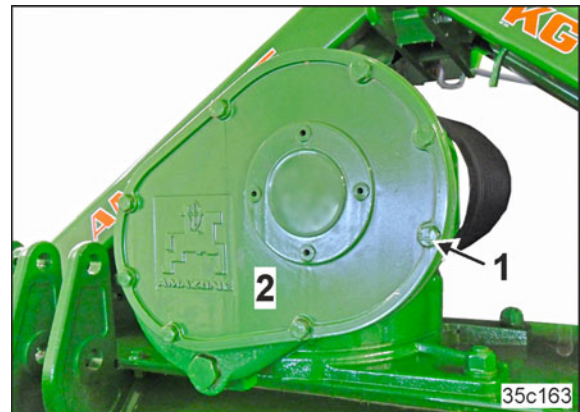


Fig. 160

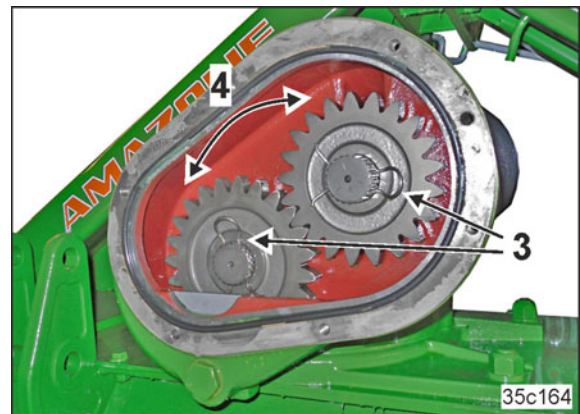


Fig. 161

12.3.3 Replacing the tool tines (specialist workshop)



DANGER

Raise the stand-alone machine using a crane and support it properly.

1. In a specialist workshop, raise the stand-alone machine with a crane and support it properly.
2. Remove the linch pin (Fig. 162/1).
3. Remove the pin (Fig. 162/2) from the tool carrier by striking it in an upwards direction.
4. Replace the tool tines (Fig. 162/3).
5. Fasten the tool tines using the pin and secure it using the linch pin.

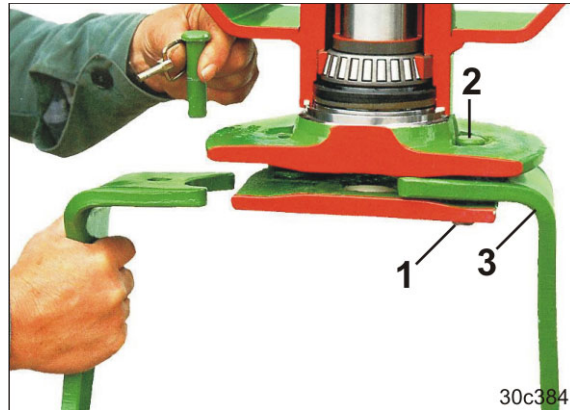


Fig. 162

Direction of rotation of the rotary harrow tines

The implement is equipped with two varieties of tool tines (clockwise/anticlockwise).

Tool tines (1), anticlockwise (see direction of the arrow).

Tool tines (2), clockwise (see direction of the arrow).

Note:

The leftmost tool carrier, viewed in the direction of travel, always rotates clockwise.

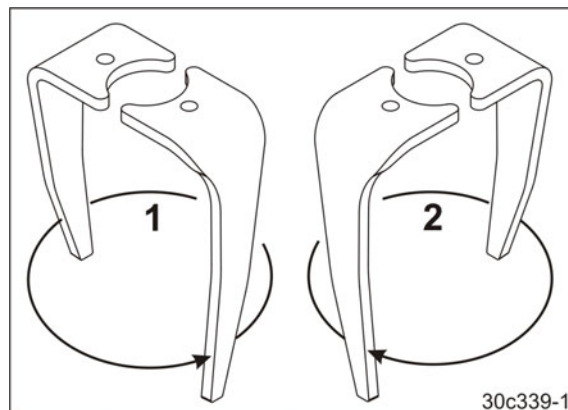


Fig. 163

Direction of rotation of the rotary cultivator tines

The implement is equipped with two varieties of tool tines (clockwise/anticlockwise).

Tool tines (1), clockwise (see direction of the arrow).

Tool tines (2), anticlockwise (see direction of the arrow).

Note:

The leftmost tool carrier, viewed in the direction of travel, always rotates clockwise.

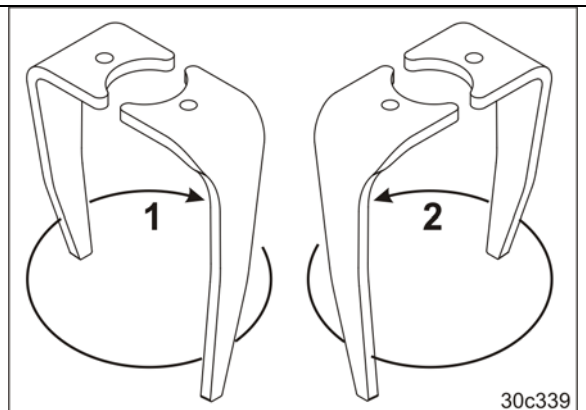


Fig. 164

12.4 Checking the wheel mark eradicators

The tractor wheel mark eradicators are subject to natural wear.

To avoid damage or wear being caused to the tool carriers, the tools may be worn to maximum 50 mm measured from the coulter tip (Fig. 183/1).

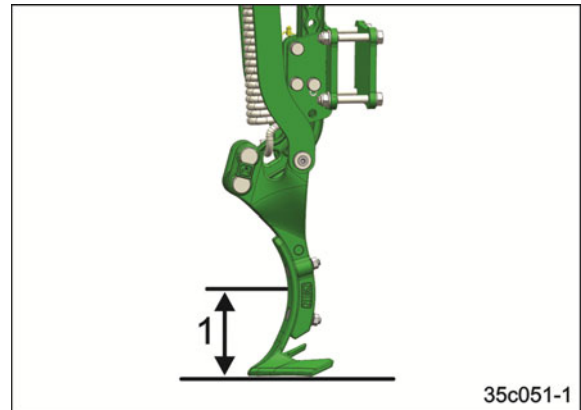


Fig. 165

Replace the coulters in due time:

1. Unscrew the nuts (Fig. 166/2)
2. Replace the wheel mark eradicating coulter tips (Fig. 166/1)
3. Tighten the nuts (Fig. 166/1)

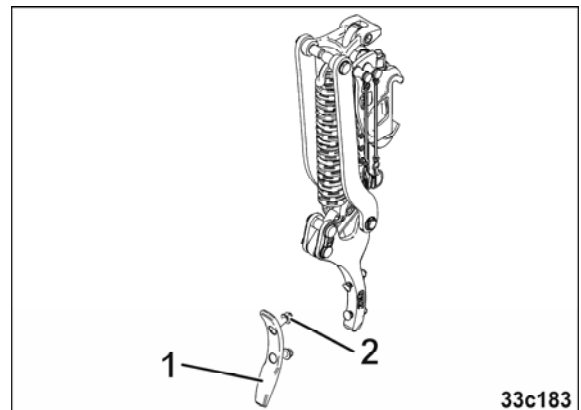


Fig. 166

12.4.1 Changing the coulters (specialist workshop)



CAUTION

Coulters are made of hardened material. If you use a hammer for the mounting/removal procedures, the ends may break off and cause considerable injury.



CAUTION

Take special care when changing coulters. Do not turn the bolts on the square shaft.

Risk of injury from sharp edges.

Cleaning, maintenance and repair

1. Loosen the fastening nuts (Fig. 167/1).
2. Replace the worn coulters or adjust the coulters for the operating conditions.
3. Tighten the fastening nuts (Fig. 167/1).

When changing the coulters, observe:

- Mount the coulters parallel to the tool carrier without a gap.
- After 5 hours of use, check the bolt connection for tight fit.

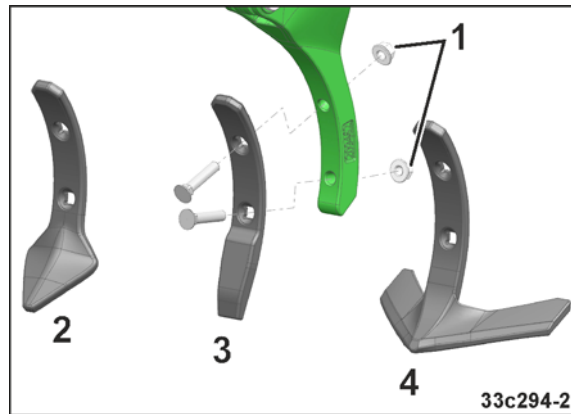


Fig. 167



The pulling force requirement depends in the tools used.

Tool	Pulling force requirement
Wing coulters (Fig. 167/4)	large
Heart-shaped coulters (Fig. 167/2)	↓
Narrow coulters (Fig. 167/3)	Small

Fig. 168

12.4.2 Replacing the tension springs of the overload safety device (workshop work)



CAUTION

The overload safety on the tines consists of tension springs that are under high pretension. It is essential to use appropriate tools to install and remove the tension spring. You must use the suitable device to install and remove the tension springs in all cases.

Otherwise, there is a risk of injury.



Additional information via Customer Service / Dealers.

12.5 Lubrication specifications



Carefully clean the grease nipple and grease gun before lubrication so that no dirt is pressed into the bearings. Press the dirty grease completely into the bearings and replace it with new grease.

The pictogram indicates a lubrication point.

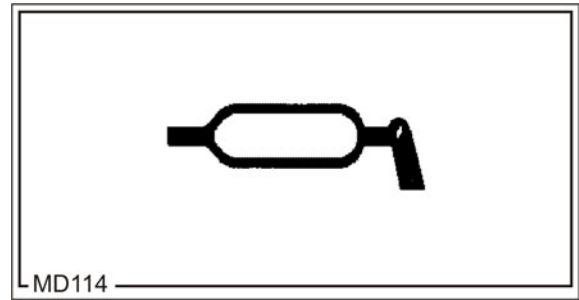


Fig. 169

12.5.1 Lubricants

Use only the lubricants specified in the table or another lithium-saponified multipurpose grease with EP additives.

Company	Lubricant designation
ARAL	Aralub HL2
FINA	Marson L2
ESSO	Beacon 2
SHELL	Retinax A

12.5.2 Greasing points – overview

Lubrication points (see Figure)	Number of grease nipples	Lubrication interval	Note
Fig. 170/1	1	50 h	Lubricate the universal joint shaft, referring to the universal joint manufacturer's maintenance schedule.
Fig. 170/2	1	50 h	Grease the protective tubes and profile tubes.
Fig. 170/3	1	50 h	Greasing the protective tubes prevents them from freezing. Open the profile tubes for lubrication.
Fig. 171/1	2	25 h	Track marker
Fig. 172/1	2	<ul style="list-style-type: none"> every 500 operating hours before an extended idle period 	Side panel
Fig. 173/1	2	<ul style="list-style-type: none"> every 500 operating hours before an extended idle period 	Levelling board
Fig. 174	4	50 h	Side plate, sliding The lynch pins (Fig. 174/1) and covers (Fig. 174/2) are opened for better understanding.
Fig. 175/1 to 6	10	50 h	Lifting frame 2.2
Fig. 176/1 to 6	10	50 h	Lifting frame 3.2

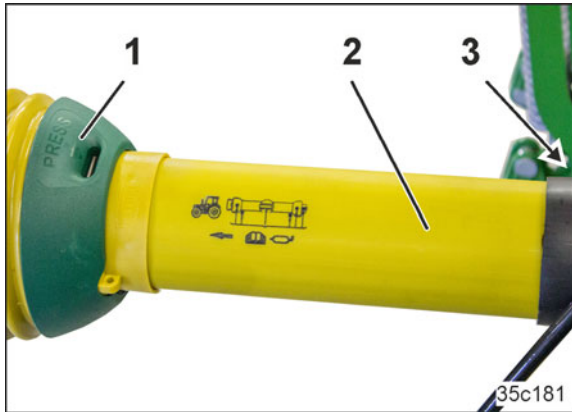


Fig. 170



Fig. 171

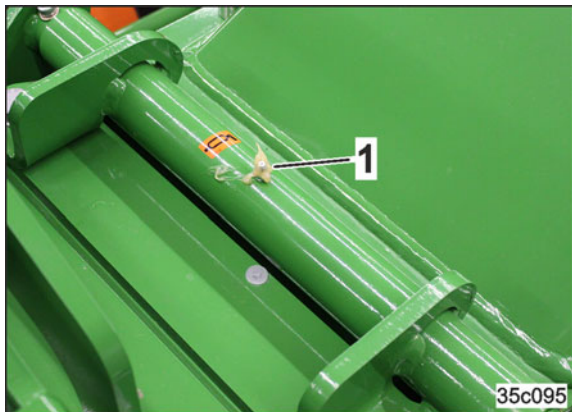


Fig. 172

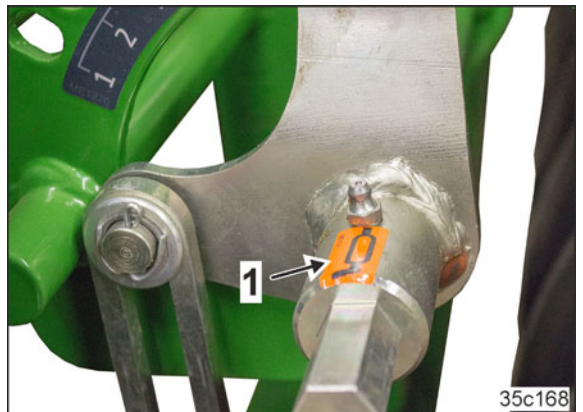


Fig. 173

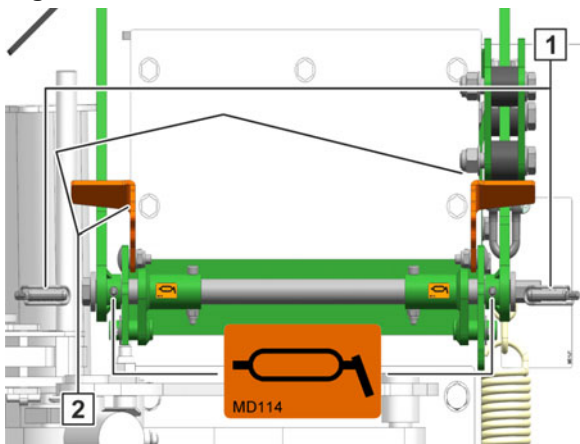


Fig. 174

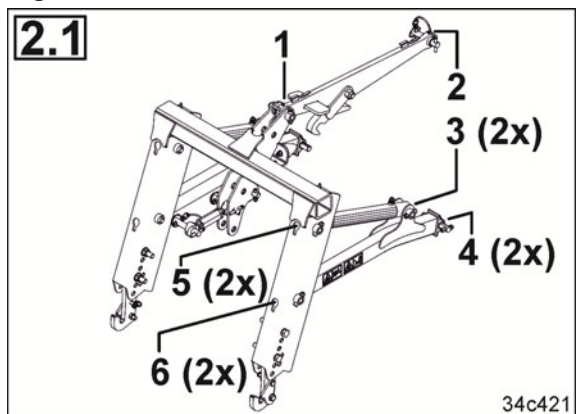


Fig. 175

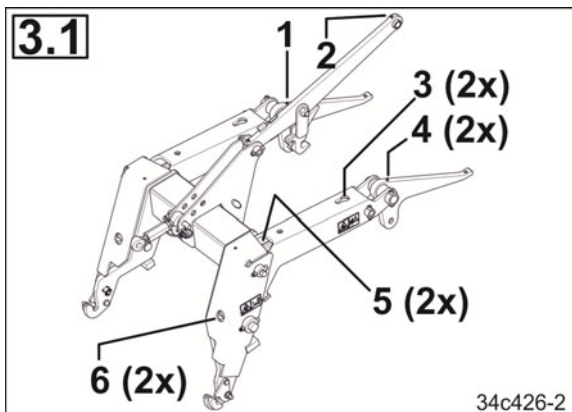


Fig. 176

12.6 Maintenance schedule – overview



Carry out maintenance work when the first interval is reached.

The time intervals, kilometre readings or maintenance intervals specified in any third party documentation supplied shall have priority over the maintenance schedule.

Initial operation	Before initial commissioning	Specialist workshop	Check the hydraulic hose lines. The inspection has to be recorded by the owner/operator.	Section 12.15
			WHG/KE Special / Super gearbox: Check the oil level and ventilation	Section 12.7
			Gearbox WHG/KX: Check the oil level and ventilation	Section 12.8
			WHG/KG Special / Super gearbox: Check the oil level and ventilation	Section 12.9
	After the first 10 operating hours	Specialist workshop	Check the hydraulic hose lines. The inspection has to be recorded by the owner/operator.	Section 12.15
			Check all bolted connections for a secure fit.	Section 12.17
	After the first 50 operating hours	Specialist workshop	WHG/KE Special / Super gearbox: Changing transmission fluid	Section 12.7
			Gearbox WHG/KX: Changing transmission fluid	Section 12.8
			WHG/KG Special / Super gearbox: Changing transmission fluid	Section 12.9



<u>Before starting work</u> (daily)		Checking the upper and lower link pins	Section 12.13
		Check: length of the tool tines	
<u>After completion of work</u> (daily)		Cleaning the machine (as required)	Section 12.2
<u>Every week</u> (at least every 50 operating hours)	Specialist workshop	Check the hydraulic hose lines. The inspection has to be recorded by the owner/operator.	Section 12.15
		WHG/KE Special / Super gearbox: Check the oil level and ventilation	Section 12.7
		Gearbox WHG/KX: Check the oil level and ventilation	Section 12.8
		WHG/KG Special / Super gearbox: Check the oil level and ventilation	Section 12.9
		Spur gear trough: Check the oil level	Section 12.10
		Wheel mark eradicator: Check the tool length	Section 12.12
<u>Every 500 operating hours:</u>	Specialist workshop	WHG/KE Special / Super gearbox: Changing transmission fluid	Section 12.7
		Gearbox WHG/KX: Changing transmission fluid	Section 12.8
		WHG/KG Special / Super gearbox: Changing transmission fluid	Section 12.9
<u>every 6 months</u> After the season	Specialist workshop	Checking/cleaning/lubricating the ratchet clutch	Section 12.14
<u>every 6 months</u> Before the season	Specialist workshop	Check the hydraulic hose lines. The inspection has to be recorded by the owner/operator.	Section 12.15

12.7 WHG/KE Special / Super gearbox

12.7.1 Venting

The gearbox is equipped with a vent pipe (Fig. 177/1).
Ventilation must be ensured to prevent the gearbox from developing leaks.

12.7.2 Check the oil level

1. Park the implement on a level surface.
2. Check the oil level with the dipstick.

At the correct fill level, the oil level reaches between the markings on the dipstick.

3. If necessary, top up the transmission fluid through the opening for the dipstick.

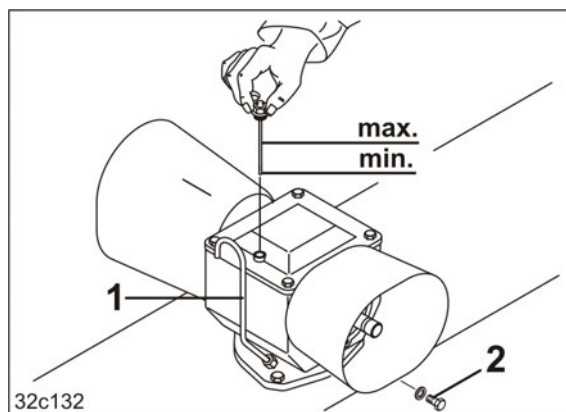


Fig. 177

12.7.3 Changing transmission fluid (specialist workshop)

1. Remove the universal joint shaft.
2. Place a suitable container below the oil drain opening.
3. Unscrew the oil drain screw (Fig. 177/2).
4. Collect the transmission fluid and dispose of it properly.
5. Screw in the oil drain screw.
6. Refill with new transmission fluid (for oil types and fill quantities, see the section "Technical Data").
7. Screw in the dipstick.
8. Fit the universal joint shaft.

12.8 Gearbox WHG/KX

12.8.1 Venting

The dipstick is equipped with a ventilation valve.
Ventilation must be ensured to prevent the gearbox from developing leaks.

12.8.2 Check the oil level

1. Park the implement on a level surface.
2. Check the oil level with the dipstick.

At the correct fill level, the oil level reaches between the markings on the dipstick.

3. If necessary, top up the transmission fluid through the opening for the dipstick.

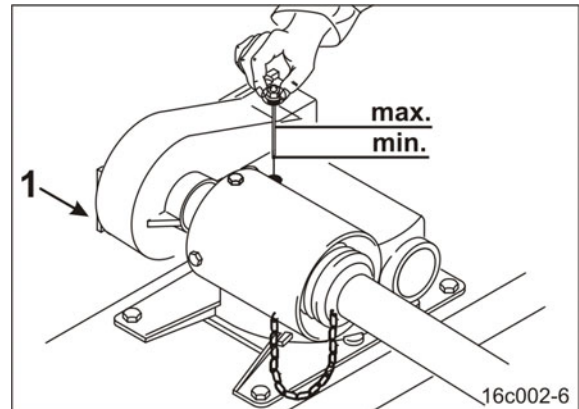


Fig. 178

12.8.3 Changing transmission fluid (specialist workshop)

1. Place a suitable container below the oil drain opening.
2. Unscrew the oil drain screw (Fig. 178/1).
3. Collect the transmission fluid and dispose of it properly.
4. Screw in the oil drain screw.
5. Refill with new transmission fluid (for oil types and fill quantities, see the section "Technical Data").
6. Screw in the dipstick.

12.9 WHG/KG Special / Super gearbox

12.9.1 Venting

The dipstick is equipped with a ventilation valve.
Ventilation must be ensured to prevent the gearbox from developing leaks.

12.9.2 Check the oil level

1. Park the implement on a level surface.
2. Check the oil level with the dipstick.

At the correct fill level, the oil level reaches between the markings on the dipstick.

3. If necessary, top up the transmission fluid through the opening for the dipstick.

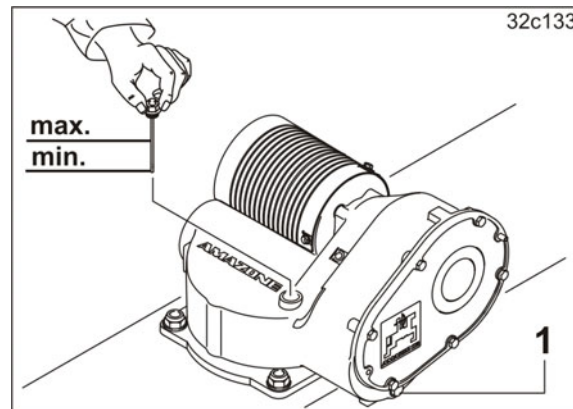


Fig. 179

12.9.3 Changing transmission fluid (specialist workshop)

1. Place a suitable container below the oil drain opening.
2. Unscrew the oil drain screw (Fig. 179/1).
3. Collect the transmission fluid and dispose of it properly.
4. Screw in the oil drain screw.
5. Refill with new transmission fluid (for oil types and fill quantities, see the section "Technical Data").
6. Screw in the dipstick.

12.10 Spur gear trough



No dirt must enter the spur gear trough.



Oil change is not necessary.

12.10.1 Venting

The spur gear trough is equipped with a ventilation pipe (Fig. 180/1). Ventilation must be ensured to prevent the spur gear trough from developing leaks.

12.10.2 Checking the oil level (only KG and KX rotary cultivator)

1. Park the implement on a level surface.
2. Open the cover with the ventilation pipe (Fig. 180/1).

The spur gears in the spur gear trough must be halfway covered with transmission fluid.

3. If necessary, top up the transmission fluid.

For oil type and fill quantity, see the section "Technical Data".



Fig. 180

12.10.3 Checking the oil level (only KE rotary harrow)

1. Park the implement on a level surface.
2. Screw off the protective cap (Fig. 181/1).
3. Open the plug seals (Fig. 181/2).

The spur gears in the spur gear trough must be halfway covered with transmission fluid.

4. If necessary, top up the transmission fluid.

For oil type and fill quantity, see the section "Technical Data".

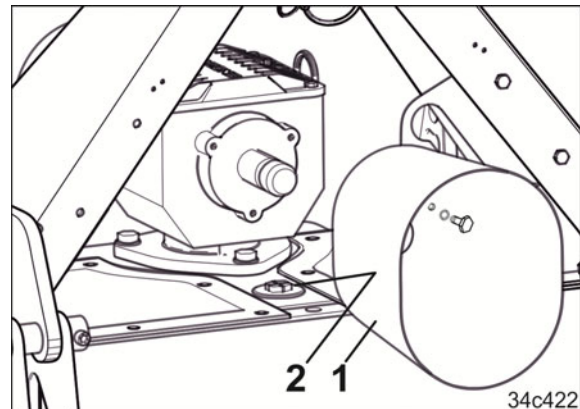


Fig. 181

12.11 Changing the oil filter in the cooling kit (specialist workshop)

1. Remove the oil filter cartridge:
2. Unscrew the bolts (Fig. 182/1).
3. Carefully remove the oil filter cartridge (Fig. 182/2), collect any escaping oil.
4. Replace the oil filter in the oil filter cartridge.



Fig. 182

12.12 Checking the wheel mark eradicators

The wheel mark eradicators are subject to natural wear.

To avoid damage or wear being caused to the tool carriers, the tools may be worn to maximum 50 mm measured from the coulter tip (Fig. 183/1).

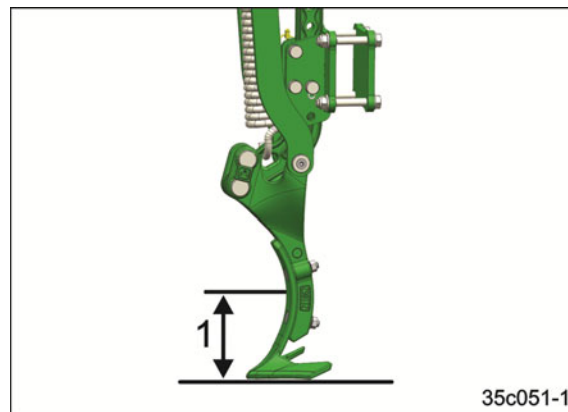


Fig. 183

12.12.1 Changing the coulters (workshop work)



CAUTION

Coulters are made of hardened material. If you use a hammer for the mounting/removal procedures, the ends may break off and cause considerable injury.



CAUTION

Take special care when changing coulters. Do not turn the bolts on the square shaft.

Risk of injury from sharp edges.

1. Loosen the fastening nuts (Fig. 184/1).
2. Replace the worn coulters or adjust the coulters for the operating conditions.
3. Tighten the fastening nuts (Fig. 184/1).

When changing the coulter, observe:

- Mount the coulter parallel to the tool carrier without a gap.
- After 5 hours of use, check the bolt connection for tight fit.

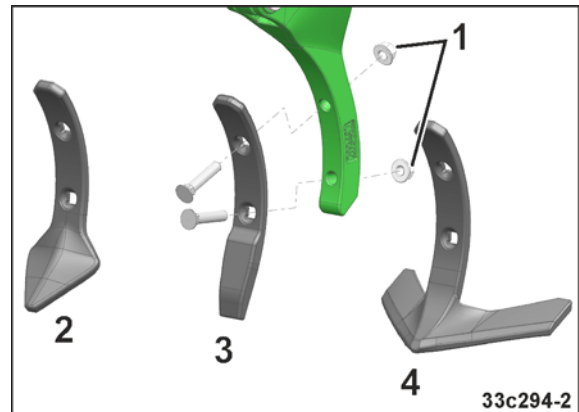


Fig. 184



The pulling force requirement depends in the tools used.

Tool	Pulling force requirement
Wing coulter (Fig. 184/4)	large
Heart-shaped coulter (Fig. 184/2)	↓
Narrow coulter (Fig. 184/3)	Small

Fig. 185

12.12.2 Replacing the tension springs of the overload safety device (workshop work)

**CAUTION**

The overload safety on the tines consists of tension springs that are under high pretension. It is essential to use appropriate tools to install and remove the tension spring. You must use the suitable device to install and remove the tension springs in all cases.

Otherwise, there is a risk of injury.



Additional information via Customer Service / Dealers.

12.13 Checking the upper and lower link pins

Check the upper and lower link pins for visible defects whenever the implement is coupled, and replace if worn.

12.14 Checking/cleaning/lubricating the ratchet clutch (specialist workshop)

When used under normal conditions, the ratchet clutch is maintenance-free.

If the clutch engages frequently, open the ratchet clutch, clean it and lubricate it with special grease (for more information, refer to the maintenance instructions of the universal joint shaft manufacturer).

Use special grease only:

- Agraset 116 or
- Agraset 117.

12.15 Hydraulic system



WARNING

Risk of infection through the high pressure hydraulic fluid of the hydraulic system entering the body.

- Only a specialist workshop may carry out work on the hydraulic system.
- Depressurise the hydraulic system before carrying out work on the hydraulic system.
- When searching for leak points, always use suitable aids.
- Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.

Escaping high pressure fluid (hydraulic fluid) may pass through the skin and ingress into the body, causing serious injuries!

If you are injured by hydraulic fluid, contact a doctor immediately. Risk of infection



- When connecting the hydraulic hose lines to the hydraulic system of the tractor, ensure that the hydraulic system is depressurized on both the tractor side and the trailer.
- Ensure that the hydraulic hose lines are connected correctly.
- Regularly check all the hydraulic hose lines and couplings for damage and impurities.
- Have the hydraulic hose lines checked for proper functioning by a specialist at least once a year.
- Replace the hydraulic hose lines if they are damaged or worn. Use only genuine AMAZONE hydraulic hose lines!
- The hydraulic hose lines should not be used for longer than six years, including any storage time of maximum two years. Even with proper storage and approved use, hoses and hose connections are subject to natural aging, thus limiting the duration of use. However, it may be possible to specify the length of use from experience values, in particular when taking the risk potential into account. In the case of hoses and hose lines made of thermoplastics, other guide values may be decisive.
- Dispose of old oil in compliance with regulations. If you have problems with disposal, contact your oil supplier.
- Keep hydraulic fluid out of the reach of children!
- Ensure that no hydraulic fluid enters the soil or waterways.

12.15.1 Identification of hydraulic hose lines

The valve chest identification provides the following information:

Fig. 186/...

- (1) Manufacturer's marking on the hydraulic hose line (A1HF)
- (2) Date of manufacture of the hydraulic hose line (15/02 = Year / Month = February 2015)
- (3) Maximum permitted operating pressure (210 bar).

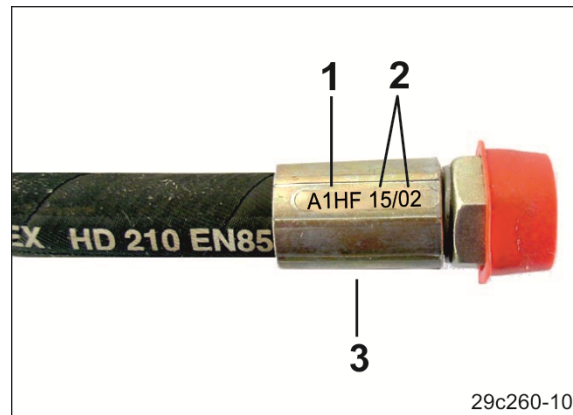


Fig. 186

12.15.2 Maintenance intervals

After the first 10 operating hours, and then every 50 operating hours

1. Check all the components of the hydraulic system for tightness.
2. If necessary, tighten screw unions.

Before each start-up:

1. Check the hydraulic hose lines for visible defects.
2. Repair any areas of chafing on the hydraulic hose lines and pipes.
3. Replace any worn or damaged hydraulic hose lines immediately.

12.15.3 Inspection criteria for hydraulic hose lines



For your own safety, comply with the following inspection criteria!

Replace hydraulic hose lines when finding any of the following inspection criteria during the inspection:

- Damage to the outer layer up to the ply (e.g. scouring points, cuts, cracks).
- Brittleness of the outer layer (crack formation of the hose material).
- Deformations which do not match the natural shape of the hose. Both in a depressurized and pressurised state or when bent (e.g. layer separation, bubble formation, pinching, bends).
- Leak points.
- Damage or deformation of the hose assembly (sealing function restricted); minor surface damage is not a reason for replacement.
- Movement of the hose out of the valve chest.
- Corrosion of valve chest, reducing the function and strength rating.
- Installation requirements not complied with.
- Life span of 6 years has been exceeded.

The date of manufacture of the hydraulic hose line on the valve chest plus six years is decisive. If the date of manufacture on the assembly is "2015", then the hose should not be used after February 2021. For more information, see "Identification of hydraulic hose lines".

12.15.4 Installing and removing hydraulic hose lines



When installing or removing hydraulic hose lines, be sure to observe the following instructions:

- Use only genuine AMAZONE hydraulic hose lines!
- Ensure cleanliness.
- As a matter of principle, you must install the hydraulic hose lines such that, in all implement situations,
 - There is no tension, apart from the hose's own weight.
 - There is no possibility of compression for short lengths.
 - Outer mechanical influences on the hydraulic hose lines are avoided.

Use appropriate arrangements and fixing to prevent any scouring of the hoses on components or on each other. If necessary, secure hydraulic hose lines using protective covers. Cover sharp-edged components.

 - the approved bending radii may not be exceeded.
- When connecting a hydraulic hose line to moving parts, the hose length must be appropriate so that the smallest approved bending radius is not undershot over the whole area of movement and/or the hydraulic hose line is not over-tensioned.
- Attach the hydraulic hose lines onto the specified attachment points. There, avoid hose clips, which impair the natural movement and length changes of the hose.
- It is forbidden to paint hydraulic hose lines!

12.16 Hydraulic diagram

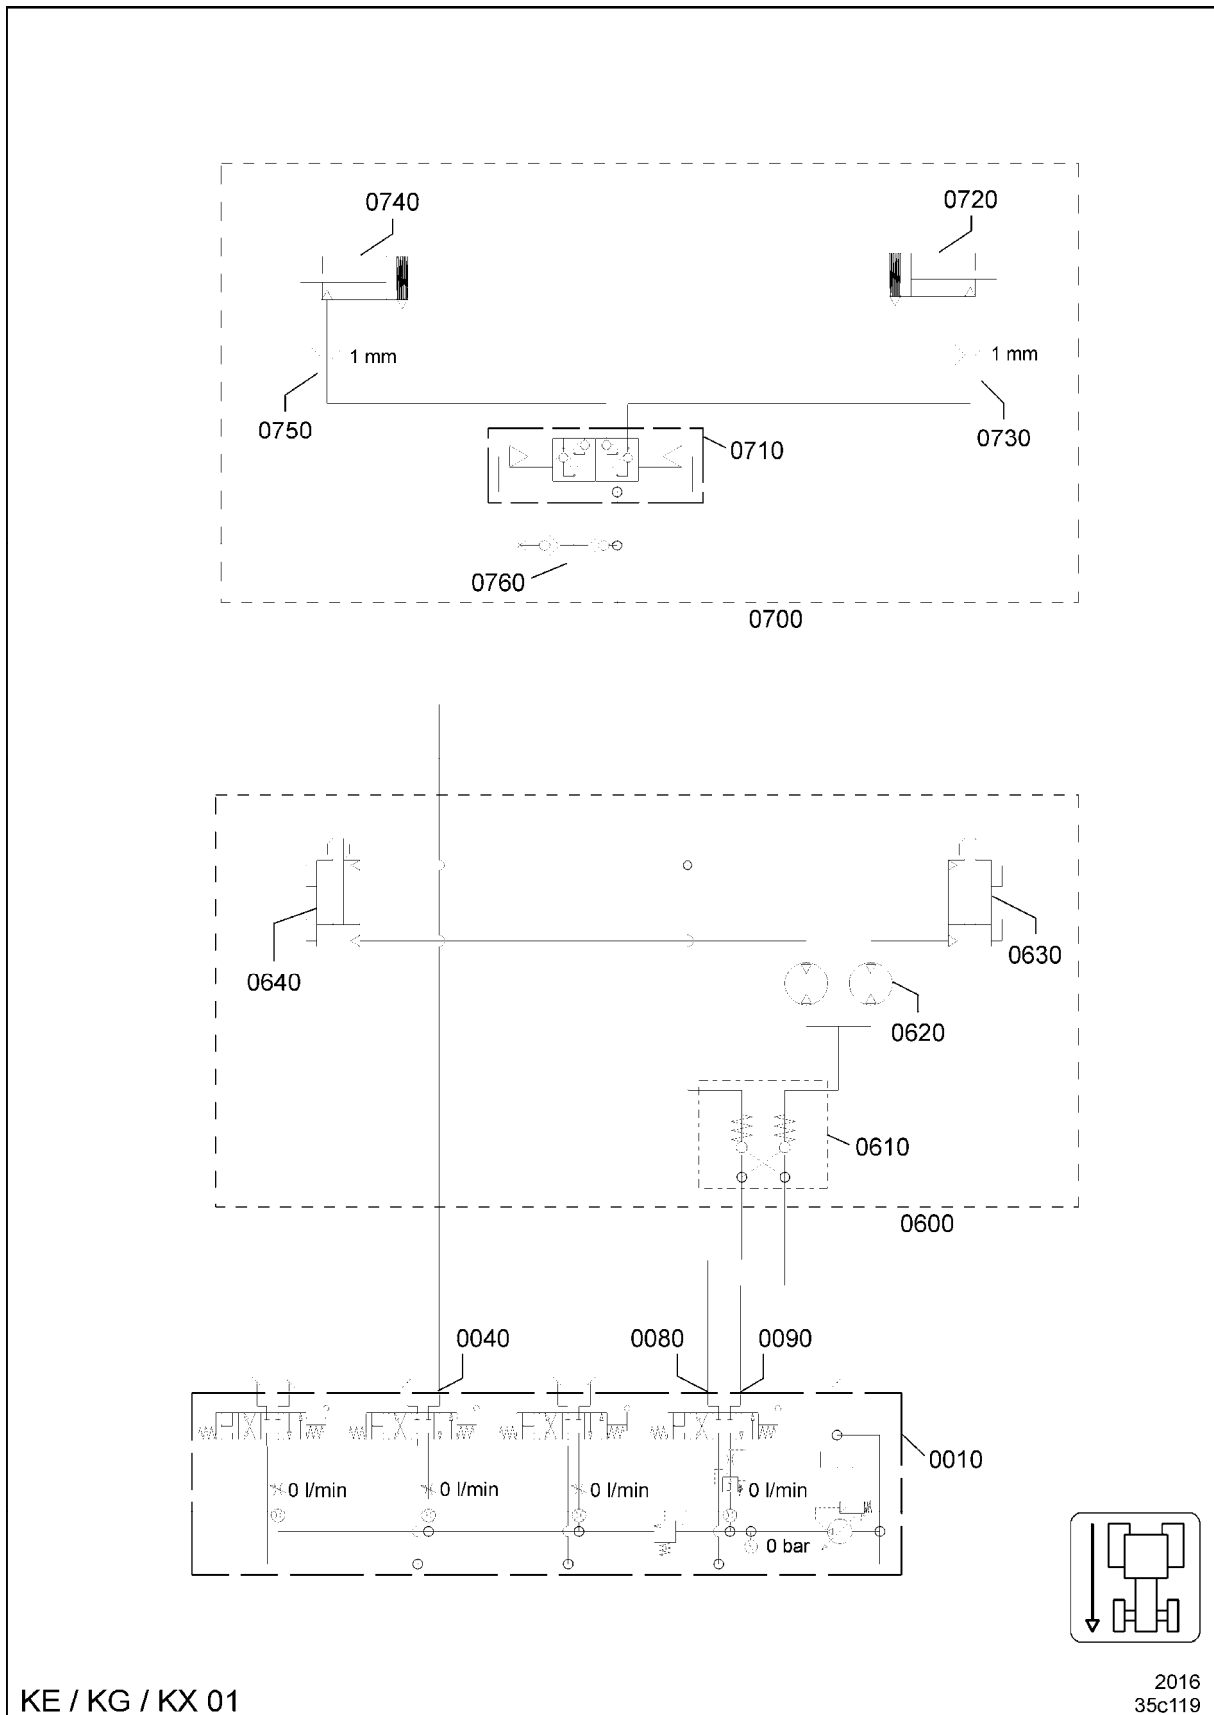


Fig. 187

Fig. 187/...	Designation	Note
0010	Tractor hydraulics	
0040	Handle number 1, yellow	
0080	Handle number 1, beige	
0090	Handle number 2, beige	
0600	hyd. Depth adjustment (not on KE)	Option
0610	Depth adjustment locking block	
0620	Flow divider depth adjustment	
0630	Depth adjustment, left	
0640	Depth adjustment, right	
0700	Track marker	Option
0710	Track marker shuttle valve	
0720	Track marker left	
0730	Throttle, left track marker	
0740	Track marker right	
0750	Throttle, right track marker	
0760	Dust protection cap, yellow / tramline marking	Option

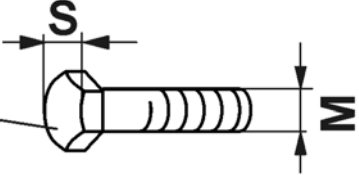
12.17 Bolt tightening torques



Observe the specific data for tightening torques in the maintenance section.





The table shows the permissible maximum values for bolted connections with a friction coefficient of $\mu=0.12$ and does not include any other safety factors. The listed tightening values are to be considered as reference values!

<div>8.8</div> <div>10.9</div> <div>12.9</div>		$\mu=0,12$		
M	S	Nm		
		8.8	10.9	12.9
M 8	13	25	36	42
M 8x1		27	38	41
M 10	16 (17)	48	71	83
M 10x1		52	73	88
M 12	18 (19)	84	123	144
M 12x1,5		90	125	150
M 14	22	133	195	229
M 14x1,5		150	210	250
M 16	24	206	302	354
M 16x1,5		225	315	380
M 18	27	295	421	492
M 18x1,5		325	460	550
M 20	30	415	592	692
M 20x1,5		460	640	770
M 22	32	567	807	945
M 22x1,5		610	860	1050
M 24	36	714	1017	1190
M 24x2		780	1100	1300
M 27	41	1050	1500	1800
M 27x2		1150	1600	1950
M 30	46	1450	2000	2400
M 30x2		1600	2250	2700



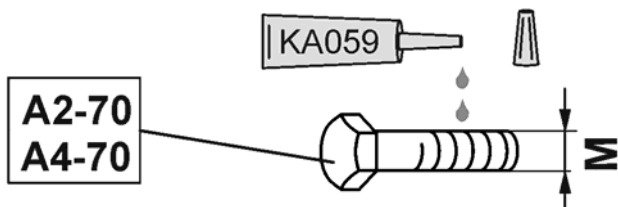
The specified tightening values represent reference values!



M	M4	M5	M6	M8	M10	M12	M14	M16	M18	M20	M22	M24
 Nm	2.3	4.6	7.9	19.3	39	66	106	162	232	326	247	314



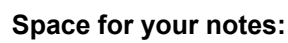13 Notes

[illegible]





AMAZONEN-WERKE

H. DREYER SE & Co. KG

Postfach 51
D-49202 Hasbergen-Gaste
Germany

Tel.: + 49 (0) 5405 501-0
email: amazone@amazone.de
http:// www.amazone.de

