

Operating Manual

AMAZONE

Catch crop seed drill

GreenDrill GD200-E / GD200-H

GreenDrill GD500-H / GD500-D



MG6863
BAH0108-0 03.20

Please read this
operating manual
before initial operation.
Keep it in a safe place for future use!

en





Manufacturer address

AMAZONEN-WERKE H. Dreyer SE & Co. KG

Postfach 51
D-49202 Hasbergen

Tel.: 49 (0) 5405 501-0

E-mail: amazone@amazone.de

Spare Parts Order

Spare parts lists are freely accessible in the spare parts portal at www.amazone.de.

Please send orders to your AMAZONE dealer.

Formalities of the operating manual

Type:----- GreenDrill

Document number:----- MG6863

Compilation date:----- 03.20

© Copyright AMAZONEN-WERKE H. Dreyer SE & Co. KG, 2020

All rights reserved

Duplication, including excerpts, is only permitted with the consent of AMAZONEN-WERKE H. Dreyer SE & Co. KG

| | | |
|----------|---|-----------|
| 1 | User information..... | 7 |
| 2 | General Safety Instructions..... | 8 |
| 2.1 | Obligations and liability | 8 |
| 2.2 | Representation of safety symbols | 10 |
| 2.3 | Organisational measures | 11 |
| 2.4 | Safety and protective equipment..... | 11 |
| 2.5 | Informal safety measures..... | 11 |
| 2.6 | User training | 12 |
| 2.7 | Safety measures in normal operation | 13 |
| 2.8 | Danger from residual energy..... | 13 |
| 2.9 | Maintenance and repair work, fault elimination..... | 13 |
| 2.10 | Design changes..... | 14 |
| 2.10.1 | Spare and wear parts and aids | 14 |
| 2.11 | Cleaning and disposal..... | 14 |
| 2.12 | Workstation of the operator..... | 14 |
| 2.13 | Warning symbols on the implement..... | 15 |
| 2.13.1 | Position of warning symbols..... | 18 |
| 2.14 | Safety information for users | 19 |
| 2.14.1 | General safety instructions and accident prevention instructions..... | 19 |
| 2.14.2 | Hydraulic system..... | 21 |
| 2.14.3 | Electrical system | 22 |
| 2.14.4 | Seed drill in operation | 22 |
| 2.14.5 | Cleaning, maintenance and repair | 23 |
| 3 | Product description | 24 |
| 3.1 | Proper use..... | 25 |
| 3.1.1 | Approved AMAZONE carrying implements..... | 25 |
| 3.2 | Technical data | 26 |
| 3.3 | Rating plate | 26 |
| 3.4 | EC Declaration of Incorporation | 27 |
| 4 | Structure and function..... | 28 |
| 4.1 | Metering | 29 |
| 4.1.1 | Seeding shaft with seed metering wheels..... | 29 |
| 4.1.1.1 | Seeding shaft with coarse seed metering wheels G-G-G | 29 |
| 4.1.1.2 | Seeding shaft with fine seed metering wheels fb-f-fb-fb | 30 |
| 4.1.1.3 | Seeding shaft with Flex 20 seed metering wheels..... | 31 |
| 4.1.1.4 | Seeding shaft with Flex 40 seed metering wheels..... | 31 |
| 4.1.1.5 | Seeding shaft with seed metering wheels fb-efv-efv-fb | 31 |
| 4.1.1.6 | Seed metering wheel table..... | 32 |
| 4.1.2 | Seeding shaft speed..... | 33 |
| 4.1.3 | Scraper..... | 33 |
| 4.1.4 | Calibration test | 34 |
| 4.2 | Agitator shaft | 35 |
| 4.3 | Seeding with Flex seed metering wheels..... | 35 |
| 4.4 | Fan | 36 |
| 4.4.1 | Electric fan drive..... | 36 |
| 4.4.2 | Hydraulic fan drive..... | 37 |
| 4.4.3 | GreenDrill GD500-D without fan drive..... | 38 |
| 4.5 | Road safety bar for the carrying implement..... | 39 |
| 5 | Implement settings before initial operation | 40 |
| 5.1 | Folding and unfolding the ladder of the GreenDrill | 41 |
| 5.1.1 | Unfolding the ladder | 41 |
| 5.1.2 | Folding the ladder..... | 42 |
| 5.2 | Seeding without agitator shaft support..... | 43 |

| | | |
|----------|--|-----------|
| 5.3 | Replacing the seeding shaft..... | 44 |
| 5.4 | Seeding with Flex seed metering wheels | 45 |
| 5.5 | Fill level monitoring | 46 |
| 5.6 | Fill the seed hopper | 46 |
| 5.7 | Preparing the implement for calibration or for emptying the seed hopper..... | 47 |
| 5.8 | Hydraulic fan drive | 48 |
| 5.8.1 | Connecting the hydraulic hose lines to the tractor..... | 48 |
| 5.8.2 | Setting the fan speed on tractors with flow control valve..... | 49 |
| 5.8.3 | Setting the fan speed on tractors without flow control valve..... | 50 |
| 6 | GreenDrill control terminal 5.2 | 51 |
| 6.1 | Control elements..... | 52 |
| 6.2 | Switching the control terminal on/off..... | 53 |
| 6.3 | Main menu | 54 |
| 6.3.1 | During operation - Display without speed sensor | 54 |
| 6.3.2 | During operation - Display with speed sensor | 54 |
| 6.3.3 | During operation – Other displayed values..... | 55 |
| 6.3.4 | During operation - Changing the spread rate | 55 |
| 6.3.5 | Pre-metering | 55 |
| 6.4 | Submenus | 56 |
| 6.5 | Set language | 56 |
| 6.6 | Calibrating the seed rate [kg/ha or grains/m ²] | 57 |
| 6.6.1 | Calibration [kg/ha]..... | 58 |
| 6.6.2 | Calibration [grains/m ²]..... | 60 |
| 6.6.2.1 | Conversion of the seed rate [grains/m ²] in [kg/ha]..... | 62 |
| 6.6.3 | Seed calibration button | 62 |
| 6.7 | Calibrating the distance travelled (pulses/100 m)..... | 63 |
| 6.7.1 | Calibration by driving a calibration distance | 64 |
| 6.7.2 | Calibration by comparing the speedometer | 65 |
| 6.7.3 | Enter the calibration value manually..... | 65 |
| 6.7.4 | Calibration value - Restoring the factory settings (reset)..... | 66 |
| 6.8 | Hectare counter | 67 |
| 6.8.1 | Display of the areas / deleting part areas | 67 |
| 6.9 | Operating hours counter | 68 |
| 6.10 | Adjusting the fan speed (electric fan drive)..... | 68 |
| 6.11 | Adjusting the fan speed (hydraulic fan drive)..... | 69 |
| 6.11.1 | Setting the min/max fan speed (hydraulic fan drive) | 69 |
| 6.12 | Operating voltage..... | 70 |
| 6.13 | Calling up data on control terminal 5.2 without implement connection | 70 |
| 6.14 | Starting work at the beginning of the field..... | 71 |
| 6.15 | Turning at end of the field | 72 |
| 6.16 | Emptying the seed hopper | 73 |
| 6.16.1 | Emptying the seed hopper through the menu controls..... | 73 |
| 6.16.2 | Emptying the seed hopper with the calibration button..... | 73 |
| 6.17 | Error messages..... | 74 |
| 6.18 | Installations and connections – Control terminal 5.2 | 80 |
| 6.18.1 | Installation of the control terminal 5.2 | 80 |
| 6.18.2 | Implement cable connection | 80 |
| 6.18.3 | Power cable connection..... | 81 |
| 6.18.3.1 | Tractor with standard socket (3-pin) | 81 |
| 6.18.3.2 | Tractor without standard socket (3-pin) | 81 |
| 6.18.4 | Signal sources | 82 |
| 6.18.4.1 | Tractor signal socket (7-pin) | 82 |
| 6.18.4.2 | Working position sensor..... | 83 |
| 6.18.4.3 | Measuring the forward speed with the radar device..... | 84 |
| 6.18.4.4 | Measuring the forward speed with the GPS device..... | 85 |

| | | |
|----------|---|-----------|
| 7 | Basic settings by your AMAZONE service partner | 86 |
| 7.1 | Opening the "Basic setting" program | 86 |
| 7.1.1 | Fan drive | 87 |
| 7.1.2 | Seeding shaft signal tone | 87 |
| 7.1.3 | Implement wheel sensor | 87 |
| 7.1.4 | Tractor or guide wheel sensor | 87 |
| 7.1.5 | Signal sources | 88 |
| 7.1.6 | Acoustic warning signal | 90 |
| 7.1.7 | Seeding shaft gearbox motor | 90 |
| 7.1.8 | Fan sensor (hydraulically driven fan) | 91 |
| 7.1.9 | Calibrat. button | 91 |
| 7.1.10 | Systems of units | 92 |
| 7.1.11 | Factory settings | 92 |
| 8 | Cleaning, maintenance and repairs | 93 |
| 8.1 | First operation | 94 |
| 8.2 | Cleaning | 94 |
| 9 | Seeding tables | 95 |
| 9.1 | Calculating the seed rate [kg/ha in kg/min.] | 95 |
| 9.1.1 | Required fan equipment on the implement | 95 |

1 User information

The User information section provides information concerning the operating manual.

This operating manual is valid for all versions of the implement.

Figures serve as a reference and are to be understood as representations of the principle.

All of the equipment is described without indicating it as special equipment. A description may be provided for equipment that is not fitted on the implement or is only available in certain markets. The sales documents provide information on the equipment of your implement or consult your local service partner for more detailed information.

All information in this operating manual corresponds to the state of knowledge at the time of publication. Due to ongoing development of the implement, deviations are possible between the implement and the information in this operating manual. No claims can be made based on differences in the specifications, figures or descriptions.

If you want to sell the implement, ensure that the operating manual is supplied with the implement.

The operating manual

- describes the operation and maintenance of the implement
- provides important information on safe and efficient handling of the implement
- is an integral part of the implement and should always be kept with the implement or the towing vehicle
- must be kept in a safe place for future use.

Activities to be carried out by the user are presented as numbered instructions. Always observe the sequence of the instructions. The reaction to instructions is given by an arrow. Example:

1. Instruction 1
→ Reaction of the implement to handling instruction 1
2. Instruction 2

Listings without a mandatory sequence are presented as a listing with bullets.

- Example:
- Point 1
 - Point 2

All the directions specified in the operating manual are always viewed in the direction of travel.



2 General Safety Instructions

This section contains supplementary information on the safety advice in the operating manual to ensure safe operation of the implement.

2.1 Obligations and liability

Comply with the instructions in the operating manual

Knowledge of the basic safety information and safety regulations is a basic requirement for safe handling and fault-free implement operation.

Obligations of the operator

The operator is obliged only to let those people work with/on the implement who

- are aware of the basic workplace safety information and accident prevention regulations.
- have been instructed in working with/on the implement.
- have read and understood this operating manual.

The operator is obliged

- to keep all the warning symbols on the implement in a legible state.
- to replace damaged warning symbols.

If you still have queries, please contact the manufacturer.

Obligations of the user

Before starting work, anyone charged with working with/on the machine is obliged

- to comply with the basic workplace safety instructions and accident prevention regulations.
- to read and understand the section "General safety information" of this operating manual.
- to read the section "Warning symbols and other labels on the implement" in this operating manual and to follow the safety instructions represented by the warning symbols when operating the implement.
- to get to know the implement.
- to read the sections of this operating manual, important for carrying out your work.

If the user discovers that a function is not working properly, then they must eliminate this fault immediately. If this is not the task of the user or if the user does not have the appropriate technical knowledge, they should report this fault to their superior (operator).

Risks in handling the implement

The implement has been constructed to the state-of-the art and the recognised rules of safety. However, operating the implement may cause risks and restrictions

- the health and safety of the user or third persons
- the implement itself
- other property.

Only use the implement

- for the purpose for which it was intended
- in a perfect state of repair.

Eliminate any faults immediately which could impair safety.

Guarantee and liability

Our "General conditions of sales and delivery" are always applicable. These shall be available to the operator, at the latest on conclusion of the contract. Guarantee and liability claims for damage to people or property will be excluded if they can be traced back to one or more of the following causes:

- Improper use of the implement
- Improper installation, commissioning, operation and maintenance of the implement
- Operation of the implement with defective safety equipment or improperly attached or non-functioning safety and protective equipment
- Non-compliance with the instructions in the operating manual regarding commissioning, operation and maintenance
- Unauthorised design changes to the implement.
- Insufficient monitoring of implement parts which are subject to wear
- Improperly executed repairs
- Disasters due to the effects of foreign objects and force majeure.

2.2 Representation of safety symbols

Safety instructions are indicated by the triangular safety symbol and the highlighted signal word. The signal word (DANGER, WARNING, CAUTION) describes the severity of the risk, and carries the following meaning:



DANGER

Indicates an immediate hazard with high risk, which will result in death or serious bodily harm (loss of limbs or long-term harm), if it is not avoided.

If the instructions are not followed, then this will result in immediate death or serious physical injury.



WARNING

Indicates a medium risk, which could result in death or (serious) physical injury if not avoided.

If the instructions are not followed, then this may result in death or serious physical injury.



CAUTION

Indicates a low risk which could cause minor or medium level physical injury or damage to property if not avoided.



IMPORTANT

Indicates an obligation to special behaviour or an activity required for proper implement handling.

Non-compliance with these instructions can cause faults on the implement or disturbance to the environment.



NOTICE

Indicates handling tips and particularly useful information.

These instructions will help you to use all the functions of your implement in the best way possible.

2.3 Organisational measures

The operator must provide the necessary personal protective equipment as per the information provided by the manufacturer of the crop protection agent to be used, such as:

- Safety glasses
- Protective shoes
- Chemical-resistant overalls
- Skin protection agents etc.



The operation manual

- must always be kept at the place at which the implement is operated.
- must always be easily accessible for the user and maintenance personnel.

Check all the available safety equipment regularly.

2.4 Safety and protective equipment

Before starting up the implement each time, all the safety and protection equipment must be properly attached and fully functional. Check all safety and protection equipment regularly.

Faulty safety equipment

Faulty or disassembled safety and protection equipment can lead to dangerous situations.

2.5 Informal safety measures

As well as all the safety information in this operating manual, comply with the general, national regulations pertaining to accident prevention and environmental protection.

When driving on public roads and routes you should comply with the statutory road traffic regulations.

2.6 User training

Only those people who have been trained and instructed may work with/on the implement. The operator must clearly specify the responsibilities of the people charged with operation and maintenance work.

People being trained may only work with/on the implement under the supervision of an experienced person.

| Person \ Job | Person explicitly trained for the activity ¹⁾ | Instructed person ²⁾ | Persons with specialist training (specialist workshop) ³⁾ |
|---------------------------------------|--|---------------------------------|--|
| Loading/Transport | X | X | X |
| Initial operation | — | X | — |
| Set-up, tool installation | — | — | X |
| operation | — | X | — |
| Maintenance | — | — | X |
| Troubleshooting and fault elimination | — | X | X |
| Disposal | X | — | — |

Key: X..permitted —..not permitted

- 1) A person who can assume a specific task and who can carry out this task for an appropriately qualified company.
- 2) Instructed persons are those who have been instructed in their assigned tasks and in the possible risks in the case of improper behaviour, have been trained if necessary, and have been informed about the necessary protective equipment and measures.
- 3) Persons with specialised technical training shall be considered as a specialist. Due to their specialised training and their knowledge of the applicable regulations, they can evaluate the work with which they have been tasked and detect possible dangers.

Comment:

A qualification equivalent to specialist training can be obtained from several years' experience in the relevant field.



Only a specialist workshop may carry out maintenance and repair work on the implement, if such work is additionally marked "Workshop". The personnel of a specialist workshop shall possess the appropriate knowledge and suitable aids (tools, lifting and support equipment) for carrying out the maintenance and repair work on the implement in a way which is both appropriate and safe.

2.7 Safety measures in normal operation

Only operate the implement if all the safety and protection equipment is fully functional.

Check the implement at least once a day for visible damage and check the function of the safety and protection equipment.

2.8 Danger from residual energy

Note that there may be residual mechanical, hydraulic, pneumatic and electrical/electronic energy on the implement.

Use appropriate measures to inform the operator. You can find detailed information in the relevant sections of this operating manual.

2.9 Maintenance and repair work, fault elimination

Carry out prescribed setting, maintenance and inspection work in good time.

Secure all media such as compressed air and the hydraulic system against unintentional start-up.

Carefully fix and secure larger assembly groups to lifting units when carrying out replacement work.

Check all the bolted connections for tightness. On completion of the maintenance work, check the function of the safety and protective devices.

2.10 Design changes

You may make no changes, expansions or modifications to the implement without the authorisation of AMAZONEN-WERKE. This also applies when welding support parts.

Any expansion or conversion work shall require the written approval of AMAZONEN-WERKE. Only use conversion and special equipment parts approved by AMAZONEN-WERKE so that the operating permit, for example, remains valid in accordance with national and international regulations.

Vehicles with an official type approval or with equipment connected to a vehicle with a valid type approval or approval for road transport according to the German road traffic regulations must be in the state specified by the approval.



WARNING

Risk of crushing, cutting, being trapped or drawn in, or impact through the failure of support parts.

It is strictly forbidden to

- drill holes in the frame or on the running gear
- increase the size of existing holes on the frame or the running gear,
- weld on load-bearing parts.

2.10.1 Spare and wear parts and aids

Immediately replace any implement parts which are not in a perfect state.

Use only original AMAZONE spare and wear parts or the parts cleared by AMAZONEN-WERKE so that the operating permit retains its validity in accordance with national and international regulations. If you use wear and spare parts from third parties, there is no guarantee that they have been designed and manufactured in such a way as to meet the requirements placed on them.

AMAZONEN-WERKE shall accept no liability for damage caused by the use of non-approved spare and wear parts or aids.

2.11 Cleaning and disposal

Handle and dispose of any materials used carefully, in particular

- when carrying out work on lubrication systems and equipment, and
- when cleaning using solvents.

2.12 Workstation of the operator

The implement may be operated by only one person sitting in the driver's seat of the tractor.

2.13 Warning symbols on the implement



Always keep all the warning symbols of the implement clean and in a legible state! Replace illegible warning symbols. You can request the warning symbols from your AMAZONE dealer using the order number (e.g., MD 075).

Structure

Warning symbols indicate danger areas on the implement and warn against residual dangers. At these points, there are permanent or unexpected dangers.

A warning symbol consists of two fields.

Field 1

Shows the danger in a triangular safety symbol.

Field 2

Shows instructions for avoiding the danger.



Explanatory text beside the warning symbol

The text beside the warning symbol describes

1. The dangers, e.g.:
Laceration or amputation hazard.
2. The consequence of non-compliance with the risk avoidance instructions, e.g.:
This danger can cause serious injuries to fingers or hands.
3. Instructions for avoiding the risk, e.g.:
Touch machinery parts only when they have come to a complete stop.

MD 076

Risk of hands or arms being caught or drawn into the implement due to moving force transmission parts.

This hazard can cause extremely serious injuries resulting in the loss of limbs.

Never open or remove protective equipment,

- while the tractor engine is running with the universal joint shaft or the hydraulic/electronic system connected.
- if the ground wheel drive is moving.




MD 078

Risk of crushing of fingers / hand by accessible, moving parts of the implement.

This hazard can cause extremely serious injuries resulting in the loss of limbs.

Never reach into the danger area when the tractor engine is running with the universal joint shaft or hydraulic / electronic system connected.

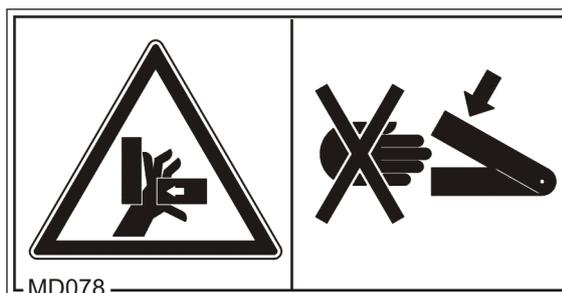


MD 079

Risk due to materials or foreign objects being flung away from or out of the implement when entering or remaining in the danger area of the implement.

These dangers can inflict severe injuries on all parts of the body.

- Stay well clear of the danger area of the implement.
- Ensure that all persons maintain a sufficient safety distance from the danger area of the implement as long as the tractor engine is running.

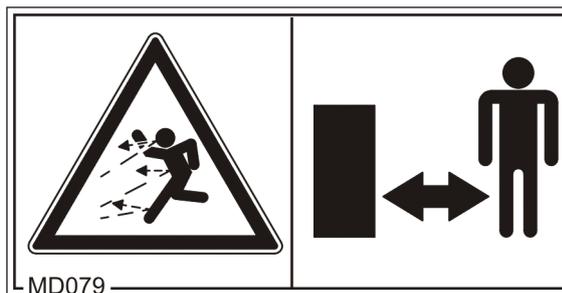

MD 082**Risk of falling when riding the implement on treads or platforms.**


Causes serious, potentially fatal injuries anywhere on the body.

It is forbidden to ride on the implement or climb the implement when it is running. This prohibition also applies to implements with step surfaces or platforms.

Make sure that nobody is riding on the implement.


**MD 095**

Before commissioning the implement read and observe the operating manual and the safety instructions carefully.

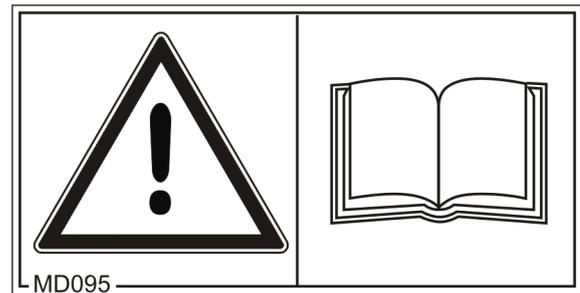**MD 096****Danger from escaping high-pressure hydraulic fluid due to leaking hydraulic hose lines.**

This danger may cause serious injuries, perhaps even resulting in death, if escaping high-pressure hydraulic fluid passes through the skin and into the body.

- Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.
- Read and observe the instructions in the operating manual before carrying out any maintenance or repair work on the hydraulic hose lines.
- If you are injured by hydraulic fluid, contact a doctor immediately.

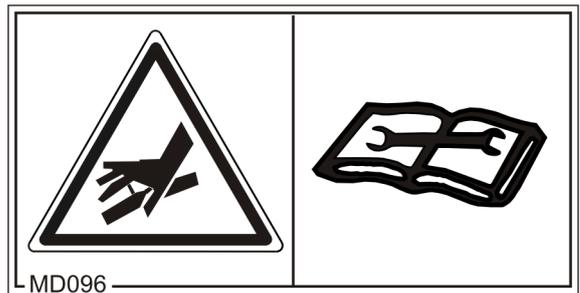

MD 102


Danger from intervention in the implement, e.g. installation, adjusting, troubleshooting, cleaning, maintaining and repairing, due to the tractor and the implement being started unintentionally and rolling away.

These dangers can cause extremely serious and potentially fatal injuries.

- Secure the tractor and the implement against unintentional start-up and rolling away before any intervention in the implement.
- Depending on the type of intervention, read and understand the information in the relevant sections of the operating manual.



2.13.1 Position of warning symbols

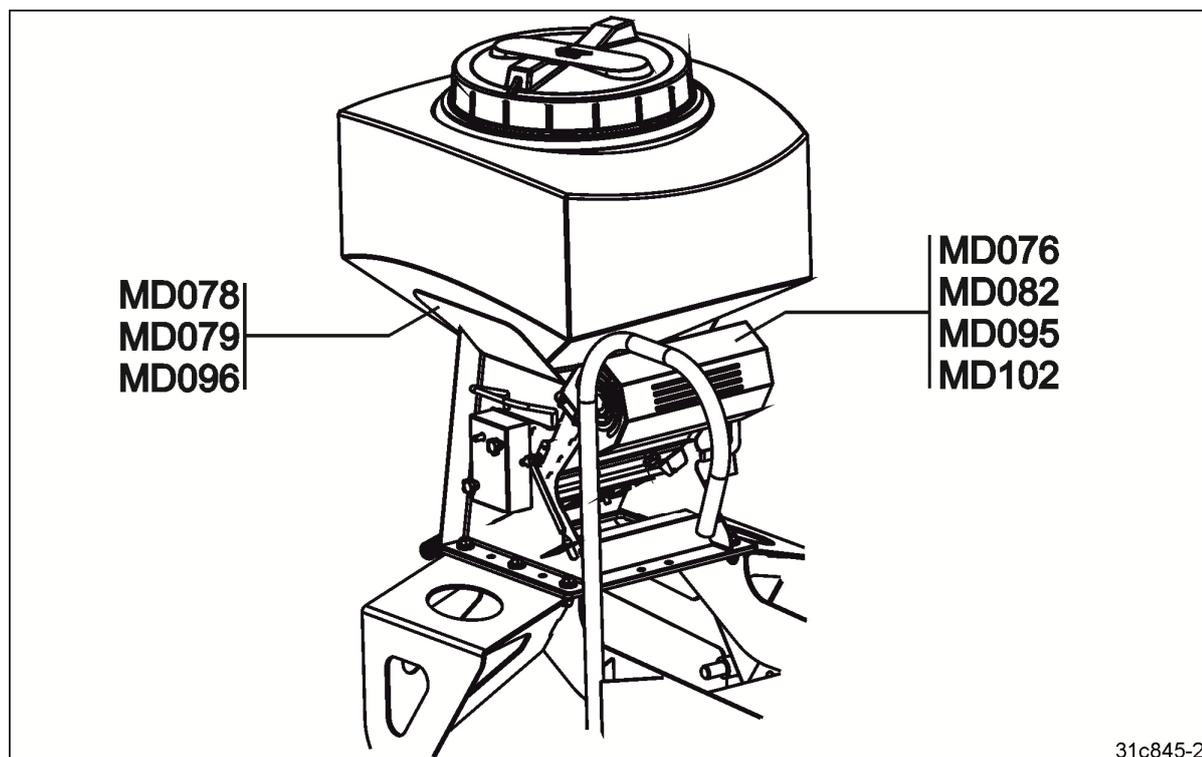

2.14 Safety information for users

Switch off control terminal

- before road transport.
- before adjustment, maintenance and repair work.

Risk of accident due to unintentional starting up of the metering unit or other implement components.

2.14.1 General safety instructions and accident prevention instructions

- In addition to these instructions, also comply with the generally valid national and safety and accident prevention regulations.
- The warning symbols attached on the implement provide important instructions for safe operation of the implement. Compliance with these instructions is essential for your safety.
- Before moving off and starting up the implement, check the immediate area of the implement (children). Ensure that you can see clearly.
- It is forbidden to ride on the implement or use it as a means of transport.
- Drive in such a way that you always have full control over the tractor with the attached machine. In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor and the connected or coupled implement.



General Safety Instructions

Use of the implement

- Before starting work, make sure that you understand all the equipment and control elements of the implement and their functions. It is too late for this when the implement is already in operation.
- Wear tight-fitting clothing. There is an increased risk of loose clothing getting caught or entangled on drive shafts.
- Only put the implement into operation after all protective devices have been attached and are in protective position.
- Comply with the maximum load of the mounted/towed implement and the permissible axle and drawbar loads of the tractor. If necessary, drive only with a partially filled tank.
- It is forbidden to stand in the working area of the implement.
- It is forbidden to stand in the turning and swivel range of the implement.
- There are crushing and shearing hazards on implement parts actuated by external force (e.g. hydraulically).
- Only operate implement parts actuated by external force if bystanders are maintaining an adequate safety distance to the implement.
- Secure the tractor against unintentional start-up and rolling away before you leave the tractor.
For this:
 - Lower the implement onto the ground.
 - Apply the parking brake
 - Switch off the tractor engine.
 - remove the ignition spanner.

2.14.2 Hydraulic system

- The hydraulic system is under high pressure.
- Ensure that the hydraulic hose lines are connected correctly.
- When connecting the hydraulic hose lines, ensure that the hydraulic system is depressurized on both the implement and tractor sides.
- It is forbidden to block the operator controls on the tractor which are used for hydraulic and electrical movements of components, e.g. folding, swivelling and pushing movements. The movement must stop automatically when you release the appropriate control. This does not apply to equipment movements that:
 - are continuous or
 - are automatically locked or
 - require a float position or pressure position due to their function.
- Before working on the hydraulic system
 - lower the implement
 - depressurize the tractor's hydraulic system
 - Switch off the tractor engine.
 - apply the tractor parking brake
 - take out the ignition spanner.
- Have the hydraulic hose lines checked for proper functioning by a specialist at least once a year.
- Replace the hydraulic hose lines if they are damaged or worn. Use only original AMAZONE hydraulic hose lines.
- The hydraulic hose lines should not be used for longer than six years, including any storage time of maximum two years. Even with proper storage and approved use, hoses and hose connections are subject to natural aging, thus limiting the duration of use. However, it may be possible to specify the length of use from experience values, in particular when taking the risk potential into account. In the case of hoses and hose lines made of thermoplastics, other guide values may be decisive.
- Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.
Escaping high-pressure fluid (hydraulic fluid) can penetrate into the body through the skin and cause serious injuries.
If you are injured by hydraulic fluid, contact a doctor immediately. Risk of infection.
- When searching for leaks, use suitable aids to avoid the serious risk of infection.



2.14.3 Electrical system

- When working on the electrical system, always disconnect the battery (negative terminal).
- Only use the prescribed fuses. If fuses are used that are too highly rated, the electrical system will be destroyed – risk of fire.
- Ensure that the battery is connected correctly – first connect the positive terminal and then connect the negative terminal. When disconnecting the battery, disconnect the negative terminal first, followed by the positive terminal.
- Always place the appropriate cover over the positive battery terminal. If there is accidental earth contact, there is a danger of explosion.
- Risk of explosion. Avoid sparking and naked flames in the area of the battery.
- The implement may be equipped with electronic components whose function can be influenced by electromagnetic interference from other devices. Such interference can pose risks to people, if the following safety information is not observed.
 - In the case of retrofitting electrical units and/or components on the implement, with a connection to the on-board power supply, the operator is responsible for checking whether the installation might cause faults on the vehicle electronics or other components.
 - Ensure that the retrofitted electrical and electronic components comply with EMC directive 89/336/EEC in the respectively valid version and carry the CE mark.


2.14.4 Seed drill in operation

- Observe the permissible filling quantities of the seed hopper (seed hopper capacity).
- Only use the ascent and the platform when filling the seed hopper.
It is forbidden to ride on the implement during operation.
- When calibrating, pay attention to the danger points from rotating and oscillating implement parts.
- Do not place any parts in the seed hopper.
- Lock the track marker (construction-dependent) in transport position before road transport.

2.14.5 Cleaning, maintenance and repair

- Only carry out cleaning, maintenance and repair work on the implement when:
 - the control terminal is switched off.
 - the implement plug is disconnected from the tractor
 - the drive is switched off.
 - the tractor engine is at a standstill
 - the ignition spanner has been removed.
- Regularly check the nuts and bolts for a firm seat and retighten them as necessary.
- Secure the raised implement or raised implement parts against unintentional lowering before performing any cleaning, maintenance or repair work on the implement.
- When replacing work tools with blades, use suitable tools and gloves.
- Dispose of oils, greases and filters in the appropriate manner.
- Disconnect the cable to the tractor generator and battery before performing electrical welding work on the tractor and mounted implements.
- Spare parts must at least comply with the specified technical requirements of AMAZONEN-WERKE. This is ensured through the use of genuine AMAZONE spare parts.

3 Product description

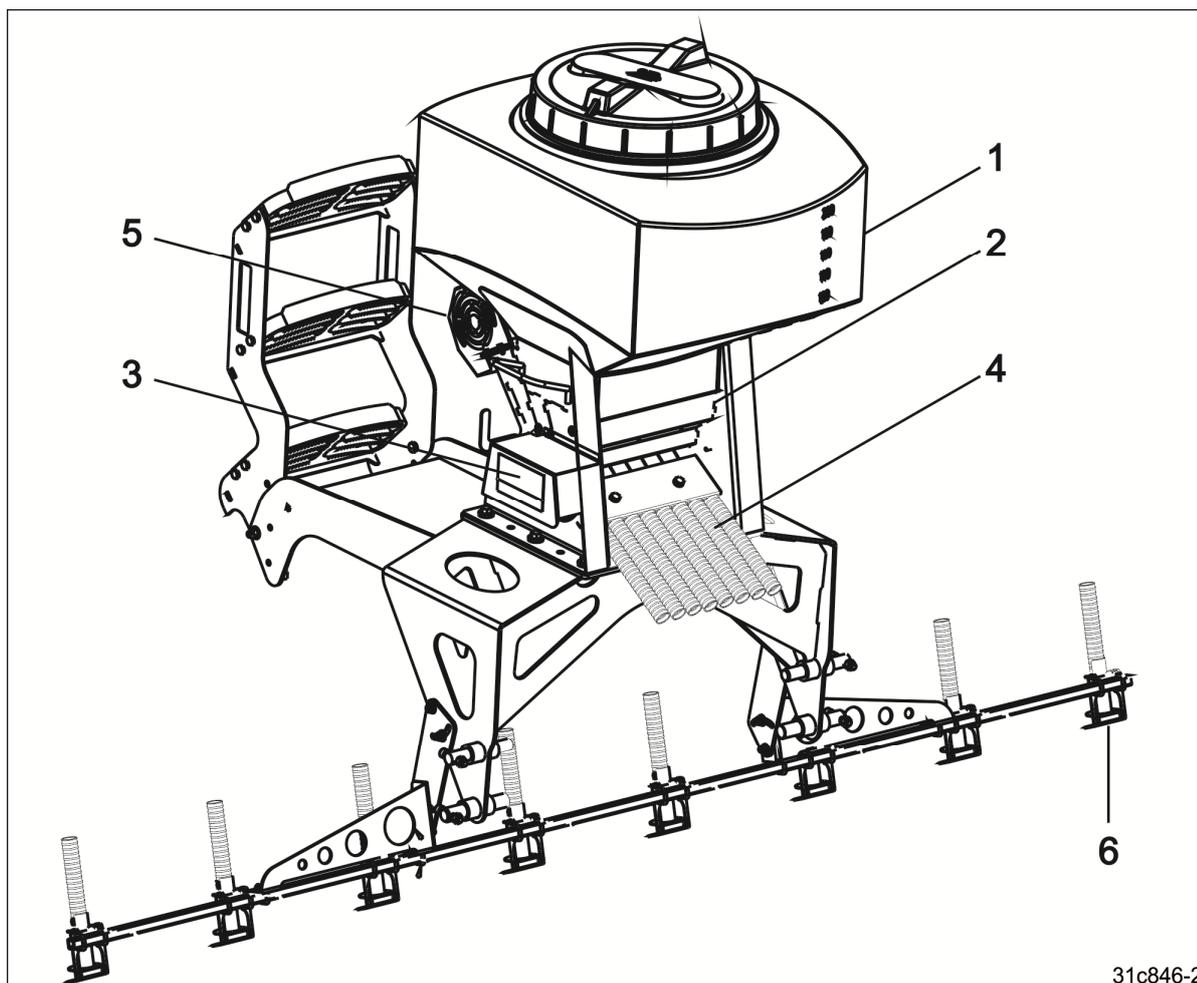

31c846-2

- (1) Seed hopper
- (2) Metering unit with seeding shaft
- (3) Electric motor for seeding shaft drive
- (4) Seed delivery hose
- (5) Fan
- (6) Baffle plate

3.1 Proper use

The GreenDrill catch crop seed drill

- is designed for metering and spreading certain commercially available seeds during agricultural work.
- is mounted on a carrying implement approved by AMAZONE for this purpose.

3.1.1 Approved AMAZONE carrying implements

| GreenDrill | AMAZONE carrying implements | | | | | | | | |
|--------------------|-----------------------------|---------------------|---------------------|----------|----------|----------|----------|----------|----------|
| GD200-E GD200-H | Catros Special | 2503 | 3503 | 4003 | | | | | |
| | | 3003 | | | | | | | |
| GD200-E GD200-H | Catros | 3001 | 3501 | 4001 | | | | | |
| GD200-E GD200-H | | | | 4002-2 | 5002-2 | 6002-2 | | | |
| GD200-H GD500-H | | | | 4002-2TS | 5002-2TS | 6002-2TS | | | |
| GD500-H | | | | | | | 7003-2TX | 8003-2TX | 9003-2TX |
| GD200-E GD200-H | Cenius | 3003 | 3503 | 4003 | | | | | |
| GD200-H GD500-H | | | | 4002-2T | | | | | |
| | | | | 4003-2T | | | | | |
| GD500-H | Certos | | | 4001-2TX | 5001-2TX | 6001-2TX | 7001-2TX | | |
| GD200-E GD200-H | KG/KE | 3000 | 3500 | 4000 | | | | | |
| GD200-E GD200-H | KX | 3000 | | | | | | | |
| GD500-D | Cirrus | 3003 Compac t | 3503 Compac t | 4003 | | | | | |
| | | | | 4003-2 | | 6003-2 | | | |
| GD200-E | Cataya Super | 3000 | | | | | | | |
| GD200-E | D9-60 | | | | | | | | |
| GD200-E | D9 6000-TC | | | | | | | | |

Any use other than those listed above, especially mounting the GreenDrill on implements from other manufacturers or AMAZONE implement that are not listed here, is considered as non-intended.

Mounting the GreenDrill using the assembly parts that are not intended for the respective implement is also considered non-intended use.


AMAZONEN-WERKE is not liable for any damage resulting from non-intended use, the operator bears the sole responsibility.

3.2 Technical data

| Catch crop seed drill | GreenDrill GD200-E | GreenDrill GD200-H | GreenDrill GD500-H | GreenDrill GD500-D |
|---|--|-----------------------|-----------------------|-----------------------------|
| Seed hopper volume [l] | 200 | 200 | 500 | 500 |
| Outlets [number] | 8 | 8 | 8 | 8 |
| Fan drive | Electric | hydraulic | hydraulic | from the carrying implement |
| Metering unit | Metering with electrical metering motor | | | |
| Automatic seed rate control when changing speed | A connection from the control terminal 5.2 to the 7-pin signal socket of the tractor or the radar or GPS device is required. | | | |
| Seed placement | via baffle plate | | | |

3.3 Rating plate

The figure shows the arrangement of the rating plate (1).

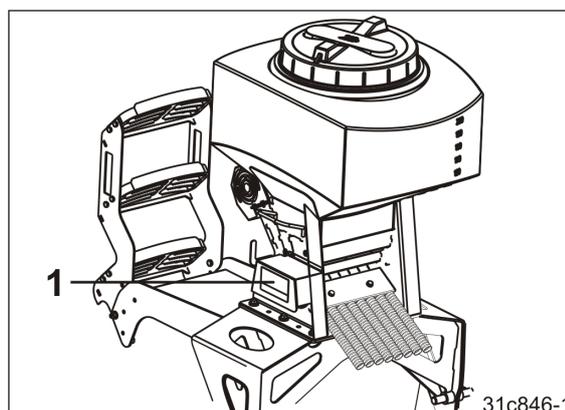


The following information is specified on the rating plate:

- (1) Implement number
- (2) Vehicle identification number
- (3) Product
- (4) Permissible technical implement weight
- (5) Model year
- (6) Year of manufacture




3.4 EC Declaration of Incorporation

AMAZONE delivers the GreenDrill catch crop seed drill (1) together with the mounting kit (2) for the carrying implement. With the delivery of the carrying implement, the GreenDrill is already mounted or is then mounted in a specialist workshop based on the supplied instructions. In this operating manual in the section "Intended use" (see page 25), a list of all carrying implements that are approved for mounting the GreenDrill are listed. The GreenDrill is marked for this use with the CE mark and the declaration of conformity.

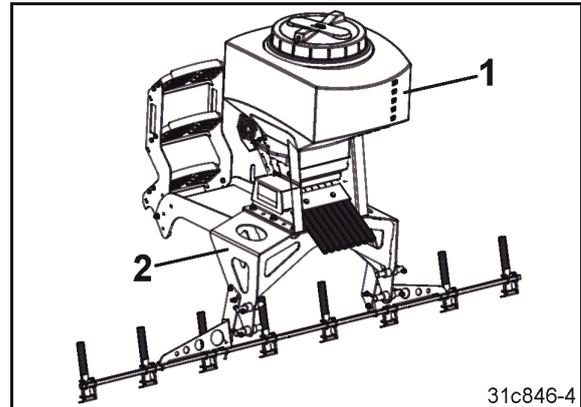

If you have purchased the GreenDrill (1) without an mounting kit, it is considered as an incomplete implement. Without the mounting kit, the GreenDrill is marked with a factory plate (see below) and an EC Declaration of Incorporation is included. The EC Declaration of Incorporation states that the product fulfills the relevant basic safety and health requirements of the EC Directive as well as the requirements of the EMC Directive.

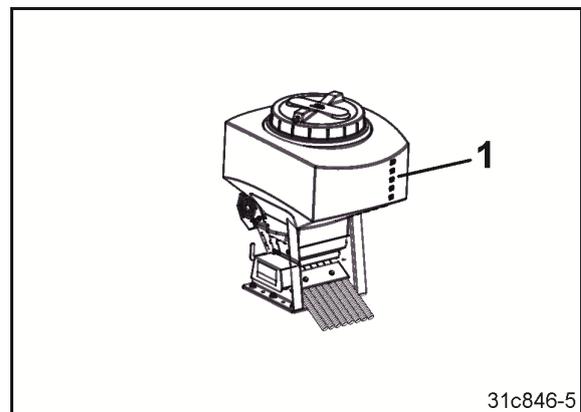

The operator is responsible for the proper mounting of the GreenDrill onto the carrying implement and for compliance with the standards and legal requirements.

The operator must ensure that the GreenDrill is operated without danger. This may include a suitable platform for safe operation of the GreenDrill. The platform must also be easily accessible. This may require the installation of steps.

Any danger for persons due to the mounting of the GreenDrill on the carrying implement must be ruled out in all situations.




NOTE


AMAZONE is not liable for damage caused by faulty mounting and improper operation of the GreenDrill.

The factory plate contains the

- (1) Serial number
- (2) Type
- (3) Factory

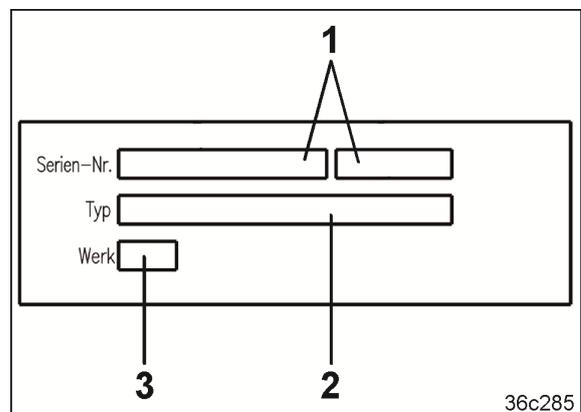

4 Structure and function

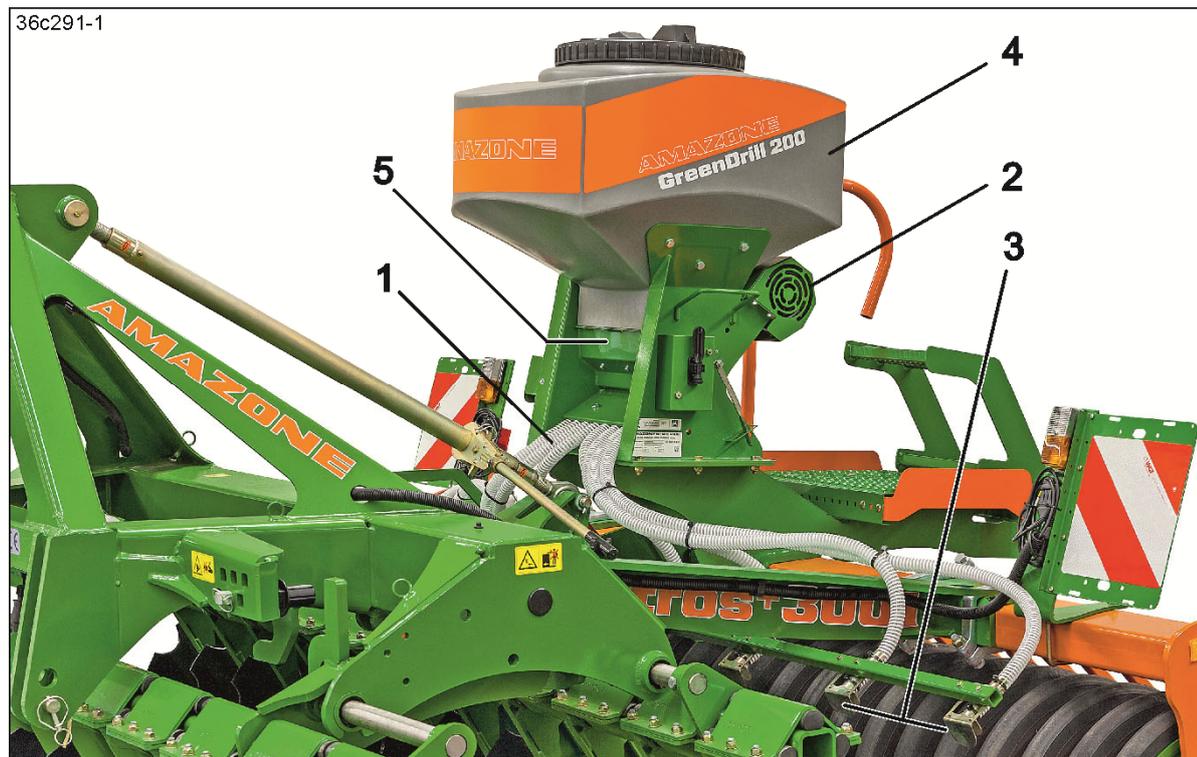

The GreenDrill is used for spreading catch crops and re-seeding grass.

The seed metered by the seed metering wheels is conveyed into the seed hoses (1).

An electrically or hydraulically driven fan (2) produces the air flow to deliver the seed. The GreenDrill GD500-D is fed by the fan of the carrying implement.

The seed is spread using baffle plates (3) in the operating area of the soil tillage implement tools working in the soil.

The seed hopper (4) has a volume of 200 or 500 litres, depending on the version. The seed hopper and metering unit form a sealed pressurised system.

Dosing is carried out by a seeding shaft equipped with seed metering wheels, located in the dosing housing (5). A 12 V electric drive motor drives the seeding shaft.

Control terminal 5.2 has a selection menu, e.g. for assisting with the calibration procedure, and is operated from the driver's seat in the tractor cab.

The control terminal 5.2 must be connected to the 7-pin signal socket of the tractor or the radar or GPS device to display the forward speed, the worked area and the working hours.

The control terminal then shows the forward speed [km/h] and adjusts the seeding shaft speed according to the changing forward speed. The seed rate [kg/ha] remains unchanged even at varying forward speeds.

If it is set correctly, speed differences of 50 % are adjusted up and down. Turning at the end of the field is automatic.


4.1 Metering

4.1.1 Seeding shaft with seed metering wheels

The seed metering wheels are selected based on the seed type. You can find the right seed metering wheel to meter your seed in the seeding tables in the Appendix.

Each seed metering wheel is made up of several smaller units.

Example:
the coarse seed metering wheel G-G-G consists of 3 coarse seed metering wheels G.

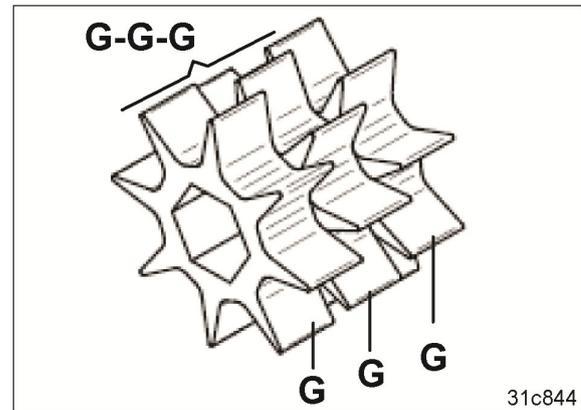


If it is necessary to exchange the seed metering wheels, the seeding shaft is pulled out of the metering unit. The seed metering wheels can be individually exchanged on the seeding shaft. It is more convenient to equip a second seeding shaft with the required seed metering wheels. Then only the seeding shafts need to be exchanged.

4.1.1.1 Seeding shaft with coarse seed metering wheels G-G-G


The seeding shaft (1) with 8 coarse seed metering wheels G-G-G is used for seeds

- with large grain size
- with high spread rates, e.g. grasses and cereals.

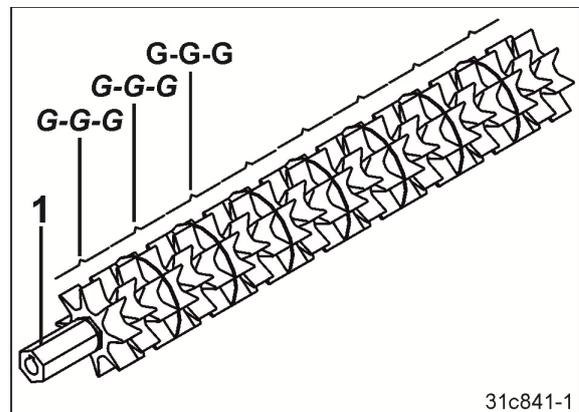

The coarse seed metering wheel G-G-G consists of

- 3 coarse seed metering wheels G.

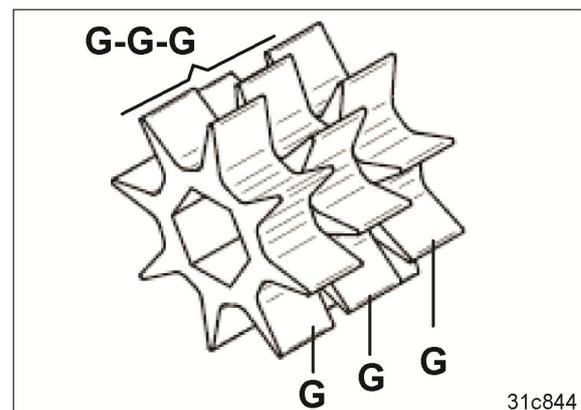


Structure and function

4.1.1.2 Seeding shaft with fine seed metering wheels fb-f-fb-fb


The seeding shaft (1) with 8 fine seed metering wheels fb-f-fb-fb is used for seed

- with small grain size
- with low spread rates, e.g. mustard and buckwheat.

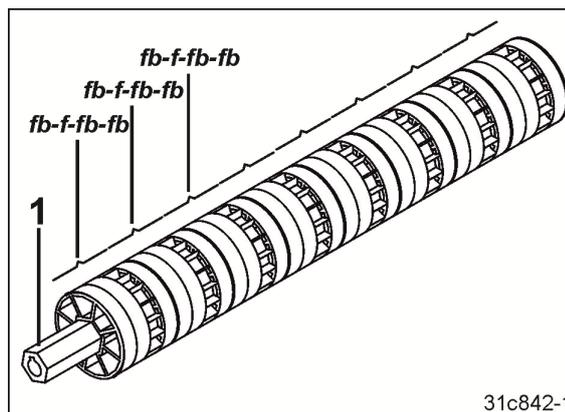

The fine seed metering wheel fb-f-fb-fb consists of

- 1 fine seed metering wheel f
- 3 blind seed metering wheels fb. Blind seed metering wheels do not meter any seed.

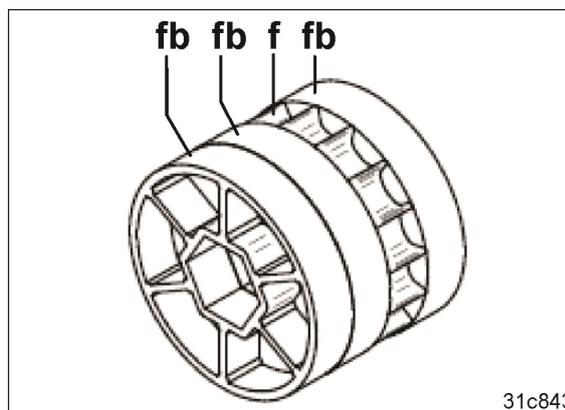


**For error-free delivery,
only spread fine seed up to 12 kg/min,
with the GreenDrill on**

- Catros 7/8/9003-2TX
- Cenius 4/5/6/7003-2TX
- Certos 4/5/6/7001-2TX.

4.1.1.3 Seeding shaft with Flex 20 seed metering wheels

The seeding shaft with 8 Flex 20 seed metering wheels is used for seeds such as

- Peas
- Beans.

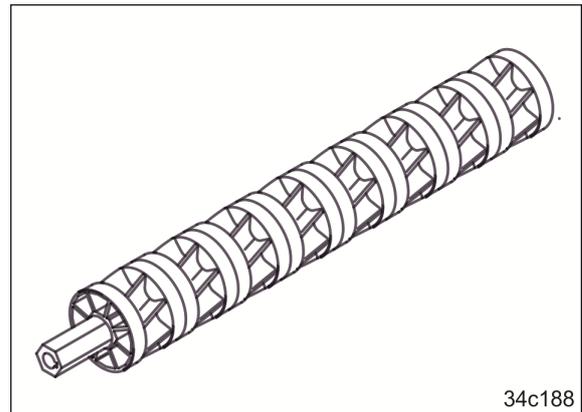


34c188

4.1.1.4 Seeding shaft with Flex 40 seed metering wheels

The seeding shaft with 8 Flex 40 seed metering wheels is used for seeds such as

- Peas
- Beans.

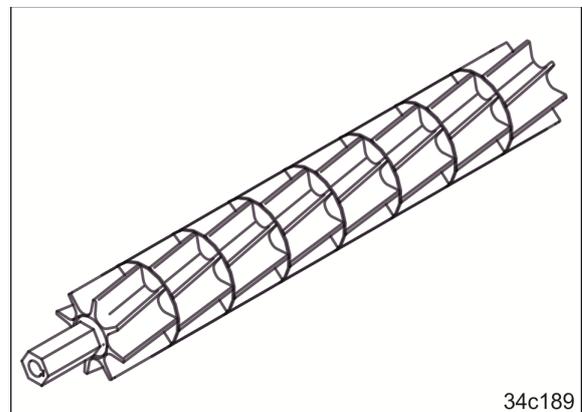


34c189

4.1.1.5 Seeding shaft with seed metering wheels fb-efv-efv-fb






The seeding shaft with 8 seed metering wheels fb-efv-efv-fb is used for seeds such as

- Rapeseed
- Mustard.

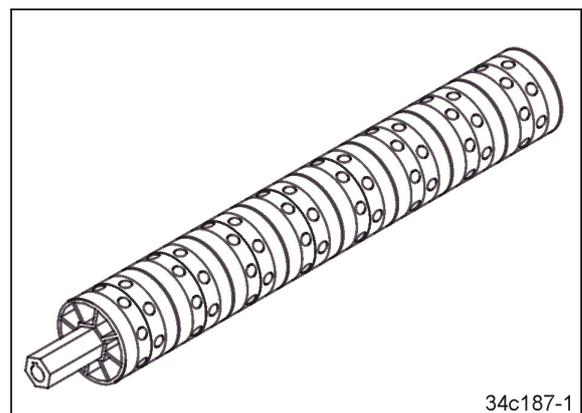

34c187-1

4.1.1.6 Seed metering wheel table

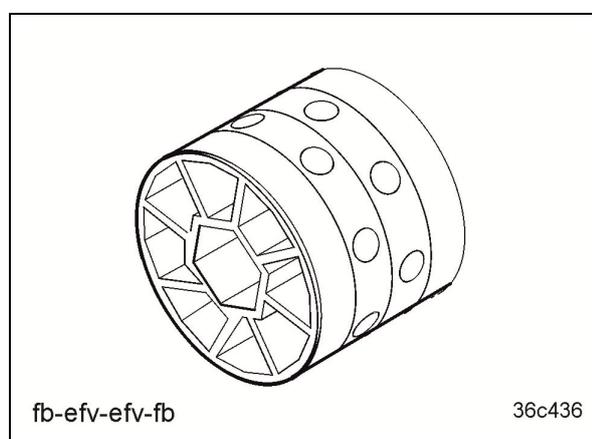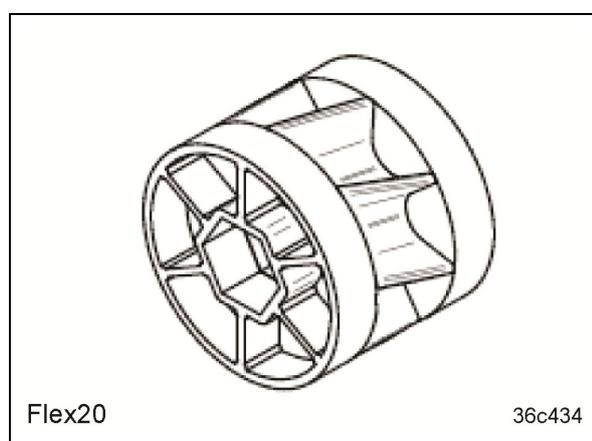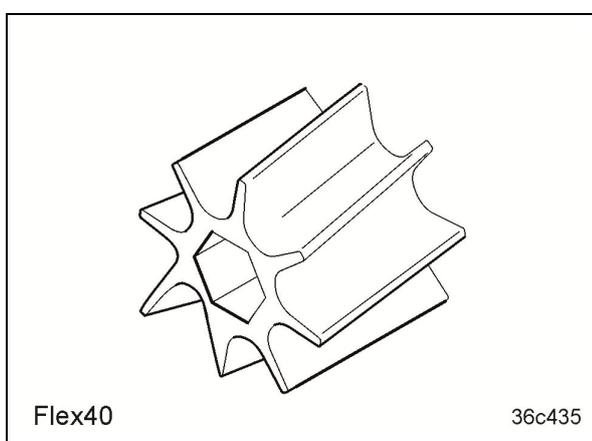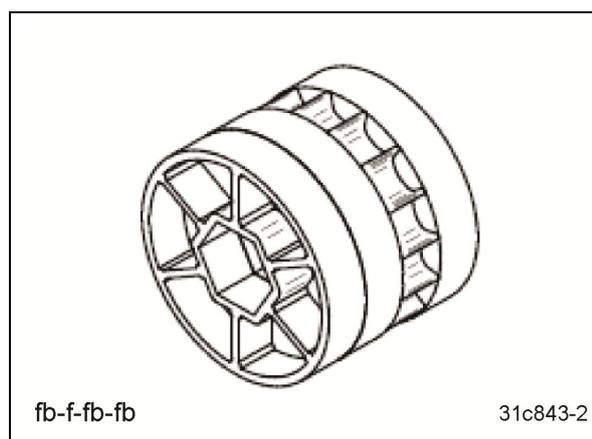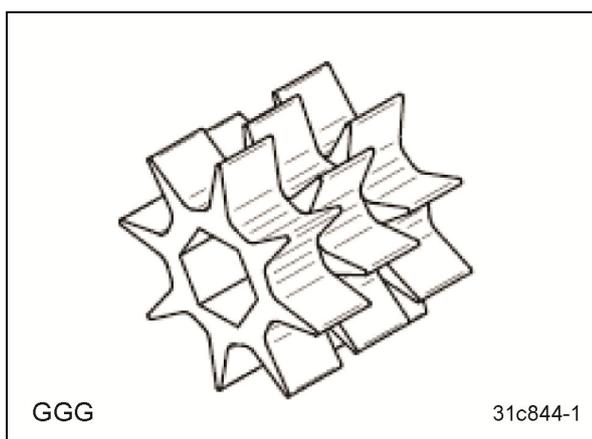

4.1.2 Seeding shaft speed


An electric motor drives the seeding shaft. If the control terminal is connected to the 7-pin tractor signal socket with speed sensor or the implement is equipped with a radar or GPS device, the speed of the seeding shaft is automatically adjusted for the working speed. The seed rate [kg/ha] always remains the same, even at different working speeds.

4.1.3 Scraper

A brush is attached above the seed metering wheels. The scraper can be adjusted using a lever (1) on a scale from +4 to -5.

Brush lever position

- for free-flowing fine seeds, slightly in the minus range.
- for large seeds, slightly in the plus range.

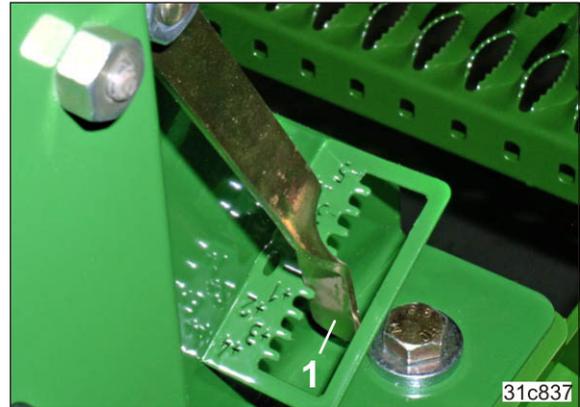

Adjusting the lever allows finer metering of the seed spread rate.

Scale values -1 to -5:

The brush is pressed against the seed metering wheels using the lever. The spread rate is slightly reduced.

Scale values +1 to +4:

The brush is lifted off the seed metering wheels using the lever. The spread rate is slightly increased.

4.1.4 Calibration test

For calibration and when emptying the seed hopper, the seed drops into the collection bucket via the chute (1).




Always perform a calibration test

- during the initial operation
- when changing the sort.
- if the same sort is used, but of a different quality and specific weight.
- after changing the seed metering wheels
- if the seed hopper is emptied faster/slower than expected. The actual spread rate then does not correspond with the spread rate determined by calibration.
- when changing the working speed
(not required when terminal 5.2 is connected to the 7-pin signal socket of the tractor or to the radar or GPS device).

4.2 Agitator shaft


When spreading seeds with spelt and very light seeds, e.g. grasses, the rotating agitator shaft (1) prevents faulty seeding caused by seed blockage in the seed hopper.

With seeds that flow down well, rotation of the agitator shaft is not necessary.

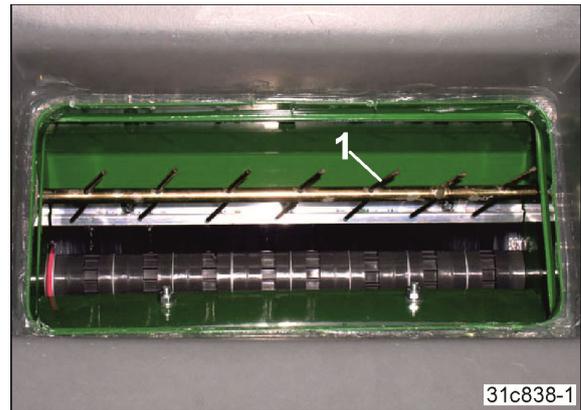


4.3 Seeding with Flex seed metering wheels

For the gentle seeding of large seeds, e.g. peas and beans, the flexible Flex seed metering wheels are used (see section "Seeding tables", page 95).

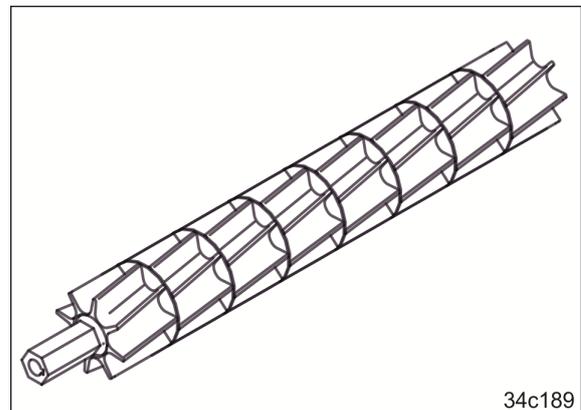

To prevent damage to the Flex seed metering wheels, the air plate (1) must be removed before seeding.

The air plate is attached with 4 Torx screws (2).

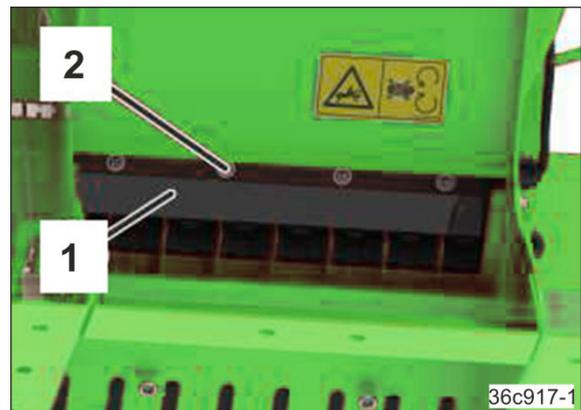

4.4 Fan

The fan generates a flow of air that conveys the metered material to the baffle plates. The air current becomes stronger with increasing fan speed.

A strong flow of air is required for optimal distribution of the seed. If the air flow is too strong, the seed can be damaged on the baffle plates. If the air flow is too weak, there may be blockage in the seed tube hoses.

The fan is driven either by an electric motor or a hydraulic motor.

Read the preliminary fan speed from the table.

The values in the table are reference values and depend on the

- seed (grain size and weight)
- spread rate
- working width
- working speed.

| Working width | Seeding with | |
|------------------------|-----------------------------|---------------------------|
| | coarse seed metering wheels | fine seed metering wheels |
| 3.0 m | 3000-3100 | 1400-2900 |
| 6.0 m | 3400-3500 | 1550-3300 |
| 12.0 m | 4200-4300 | 1650-4000 |
| Fan speed [rpm] | | |

Set the fan speed to the value from the table and check the spread pattern on the field. Optimise the spread pattern by adjusting the fan speed.

The fan speed does not change when the working speed changes. To ensure that the spread pattern does not change during operation, constantly maintain the selected fan speed.

4.4.1 Electric fan drive

If your implement is equipped with the electric fan drive, the control terminal is used to

- switch the electric fan drive on and off, see section "Control elements", page 52 and
- adjust the fan speed, see section "Adjusting the fan speed", page 68.

4.4.2 Hydraulic fan drive


If your implement is equipped with the hydraulic fan drive, the control terminal shows whether the fan is switched on or off. When the fan is switched on, the red control lamp above the  button is illuminated. The  button has no function with the hydraulic fan drive.

The fan speed is

- not displayed if the fan is equipped with a pressure sensor
- is displayed if the fan is equipped with a speed sensor.


The tractor control unit serves to switch the fan on and off. The fan speed is adjusted using the flow control valve of the tractor.

If the tractor does not have a flow control valve, the fan speed is adjusted using the control valve (1) of the GreenDrill.

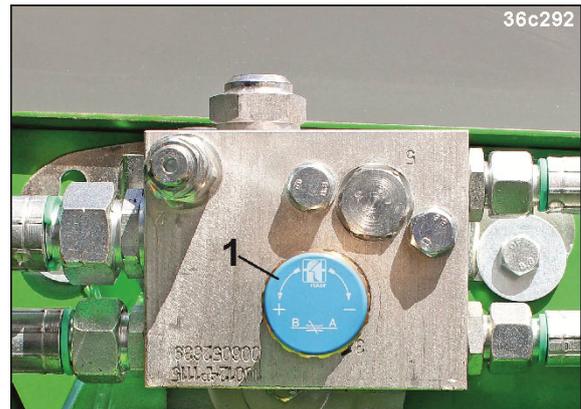

To ensure that the seeding shaft can only be switched on when the fan is running, the switch position of the fan is requested by a pressure sensor (1) or a speed sensor.

This ensures that the seeding shaft cannot be switched on when the fan is not running and prevents blockage in the seed hose lines.

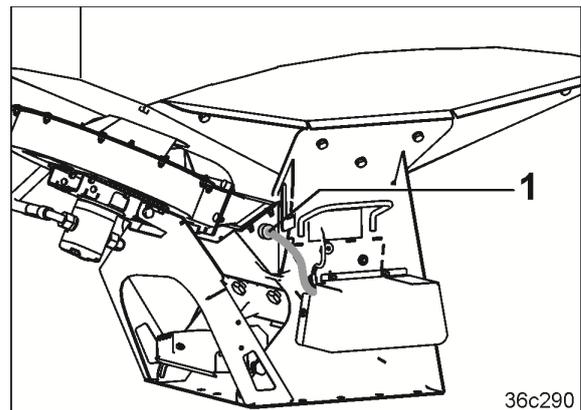

Structure and function

The following maximum values must not be exceeded:

Operating pressure of the hydraulic system: **max. 210 bar**


Oil flow rate (tractor pump output): **max. 80 l/min.**

Higher oil flow rates can exceed the maximum permissible fan hydraulic fluid temperature.

Fan hydraulic fluid temperature: **max. 80°C**

A measurement strip with a scale shows the fan hydraulic fluid temperature via the housing temperature [°C] of the hydraulic motor.

With increasing temperature (from 71°C to 110°C), the scale becomes black.

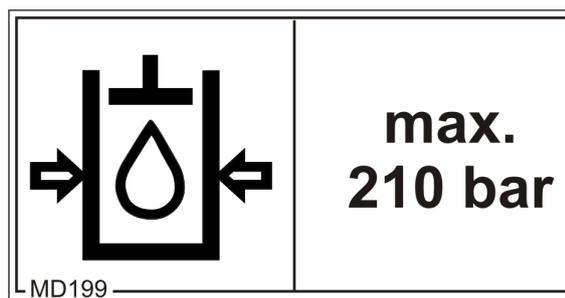

4.4.3 GreenDrill GD500-D without fan drive

The GreenDrill GD500-D is not equipped with a fan. The air current for the GreenDrill GD500-D is produced by the fan of the carrying implement.


The fan speed depends on the carrying implement. Set the fan speed as described in the operating manual for the carrying implement.

4.5 Road safety bar for the carrying implement

With ex-factory deliveries, the brackets for the road safety bar can be mounted differently than described in the operating manual for your carrying implement.

If you attach the GreenDrill subsequently onto the carrying implement based on the assembly instructions, it may be necessary to reposition the brackets for the road safety bar.

The displaced parking position of the road safety bar (1) on the rigid implements Cenius and Catros with mounted GreenDrill is shown.

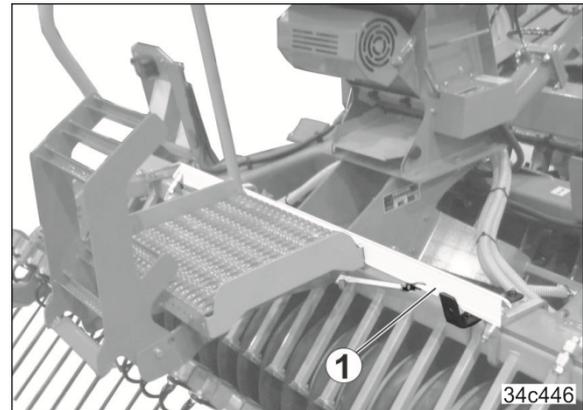

5 Implement settings before initial operation



DANGER

Danger of crushing, shearing, cutting, being caught or drawn in, winding and knocks through:

- **unintentional lowering of the implement raised using the tractor's three-point hydraulic system.**
- **unintentional lowering of raised, unsecured implement parts.**
- **unintentional start-up and rolling away of the tractor-implement combination.**

Before working on the implement

- unfold the combination (if necessary)
- switch off the components of the implement
- wait until the implement comes to a standstill
- position the combination on a firm, horizontal surface
- switch off the control terminal.
Risk of accident due to unintentional activation of the metering unit or other implement components caused by radar pulses.
- Apply the tractor parking brake, switch the tractor engine off and remove the ignition key.
- Secure the tractor and implement against unintentional start-up and rolling away.
- Never crawl under a raised, unsecured implement.
- Mount protective equipment, which you removed when cleaning, maintaining and repairing the implement.
- Replace defective protective equipment with new equipment.



DANGER

Risk of crushing, cutting, being trapped or drawn in, or impact through inadequate roadworthiness and operational safety.

Before starting up the machine and tractor, always check their roadworthiness and operational safety.



DANGER

Dressing dust is toxic and must not be inhaled or come into contact with the body.

When filling and emptying the seed hopper, when calibrating, and when removing dressing dust, e.g. with compressed air, wear a protective suit, face mask, safety goggles and gloves.

**WARNING**

When using the machine, observe the safety instructions

- in this operating manual
- in the operating manual of the carrying implement.

**CAUTION**

Never open the seed hopper cover or metering unit cover with the fan running. Seed escapes uncontrollably.

The seed hopper and metering units form a sealed pressurised system.



Leaks in the sealed system can change the spread rate.

5.1 Folding and unfolding the ladder of the GreenDrill

To fill and adjust the GreenDrill, use the loading board that is equipped as a standard on the carrying implement.

If the GreenDrill cannot be reached using the loading board of the carrying implement, the GreenDrill is equipped with its own loading board with a ladder. This section provides general instructions that should be observed when folding the ladder.


5.1.1 Unfolding the ladder



The ladder should only be unfolded when filling the hopper and adjusting the GreenDrill.


To prevent collisions, the ladder should always be folded up when it is not in use, e.g. during operation and before road transport.

1. Move the carrying implement into working position.
2. Apply the tractor parking brake, switch the tractor engine off and remove the ignition key.
3. Unlock the ladder (1) and unfold.

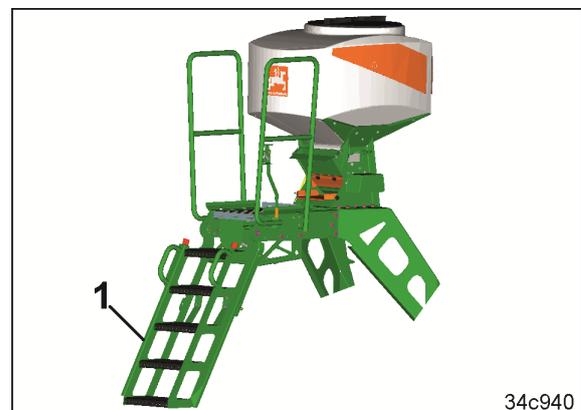


Implement settings before initial operation

- 3.1 Hold the ladder and pull on the lever (1).
This releases a latch (2) that represents the mechanical transport locking mechanism.
- 3.2 Unfold the ladder.

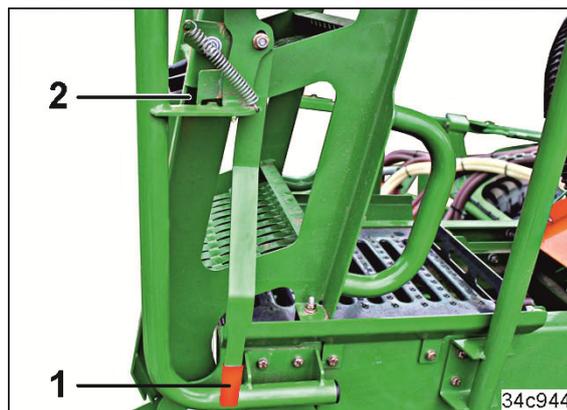

5.1.2 Folding the ladder

1. Fold in the ladder (1).
Ensure that the ladder engages in the mechanical transport locking mechanism.

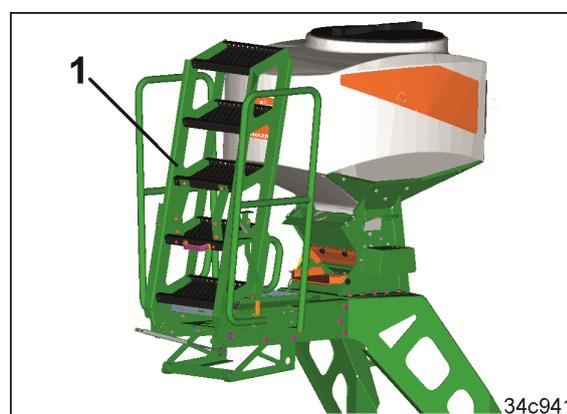

DANGER

A latch (1) represents the mechanical transport locking mechanism for the ladder.

Check the latch (1) for proper seating after folding in the ladder.




5.2 Seeding without agitator shaft support

1. Switch off the control terminal.




The agitator shaft (1) should be running when using seeds that

- tend towards bridge formation.
- are very light, e.g. grass.

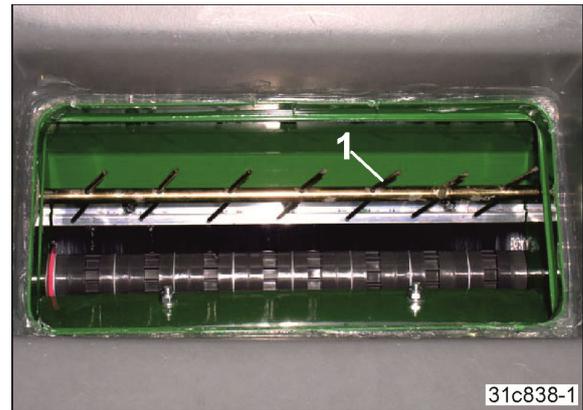


2. Remove the protective cover (1).

- 2.1 Loosen and remove the 2 hexagonal nuts (2) with the socket wrench (3).

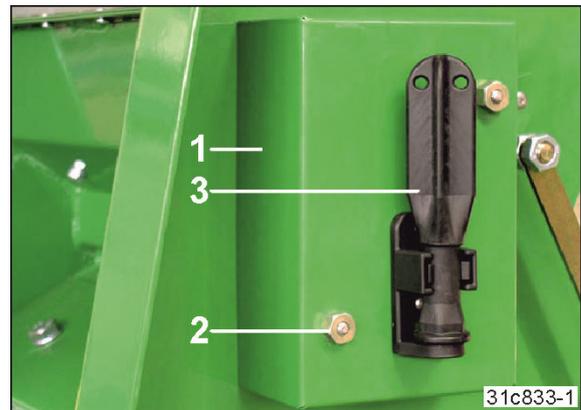


3. Remove the round belt (1).
The agitator shaft is driven by the seeding shaft via the round belt.
4. Install the protective cover.

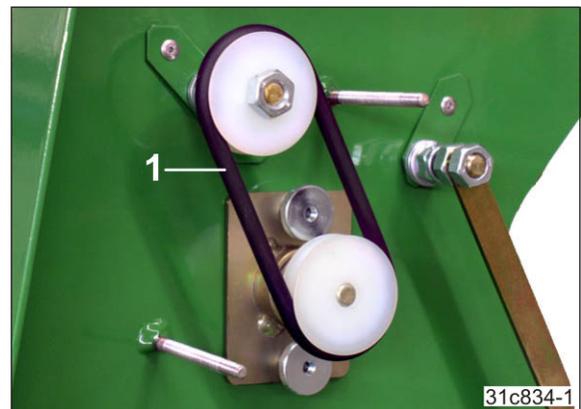


5.3 Replacing the seeding shaft

1. Switch off the control terminal.
2. Empty the seed hopper.
3. Remove the protective cover (1).
 - 3.1 Loosen and remove the 2 hexagonal nuts (2) with the socket wrench (3).

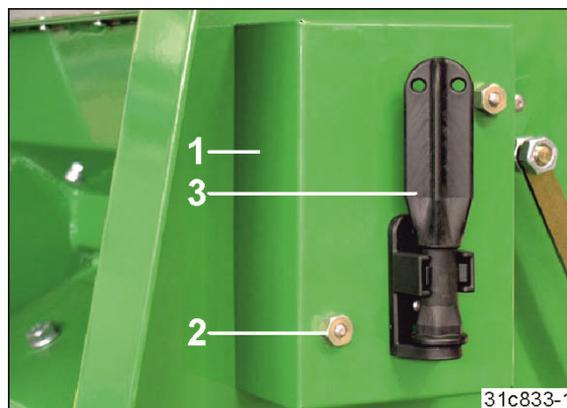

4. Remove the round belt (1).
5. Release the knurled nuts (2).

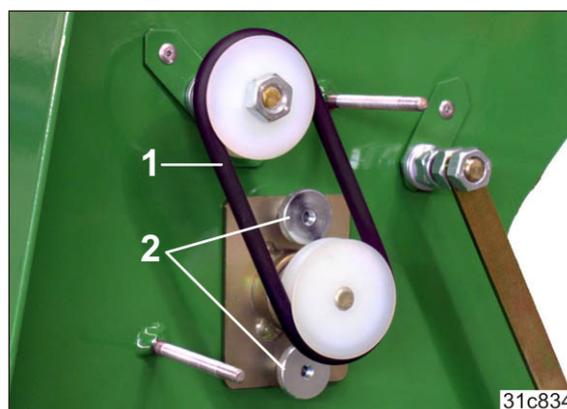


6. Remove the cover and pull out the seeding shaft (1).
7. Refer to the seeding table for the required seed metering wheels (see section 9, page 95).

The seeding shaft is installed in the reverse sequence.




The existing seeding shaft can be reinstalled after converting the seed metering wheels. It is more convenient to install a second seeding shaft that is already equipped with the required seed metering wheels.

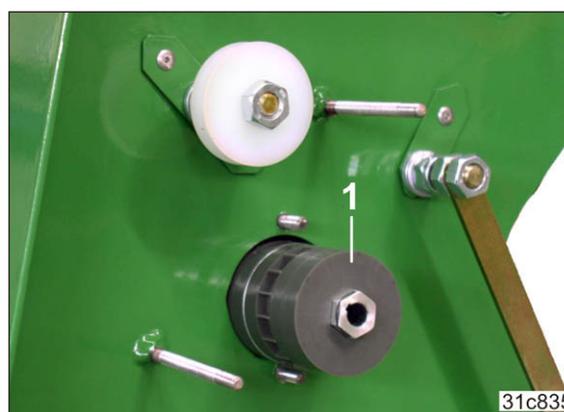


5.4 Seeding with Flex seed metering wheels

For the gentle seeding of large seeds, e.g. peas and beans, the flexible Flex seed metering wheels are used (see section "Seeding tables", page 95).

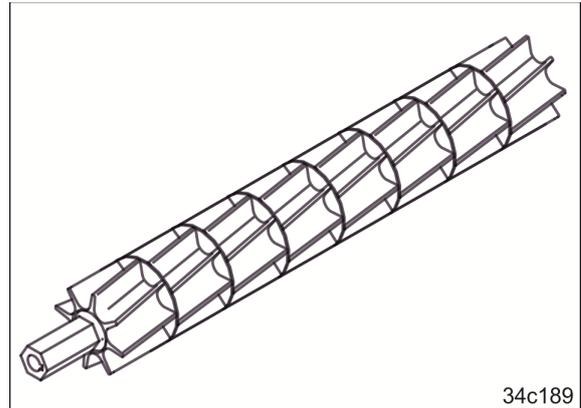

The air plate must be removed for seeding with Flex seed metering wheels:

1. Remove the chute (1).
 - 1.1 Loosen the 2 hexagonal bolts (2) with the socket spanner.
The spanner is inserted in a holder on the protective cover (see section 5.3, page 44).
2. Loosen the 4 Torx screws M6x12 (1) and remove the air plate (2).

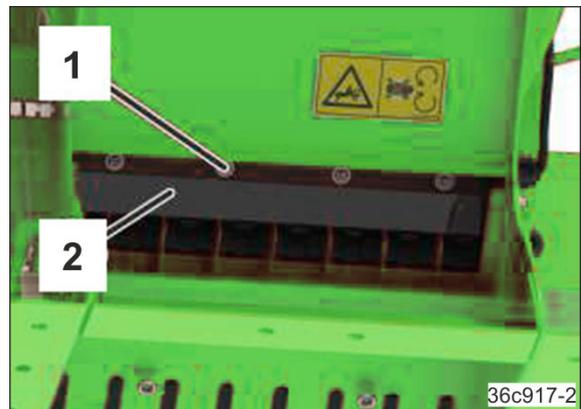

5.5 Fill level monitoring

A low level sensor (1) monitors the seed level in the seed hopper.

If the seed level reaches the low level sensor, an acoustic signal is emitted. At the same time, the control terminal displays a warning message. This warning message is intended to remind the tractor driver to refill the seeds in due time.

The height of the low level sensor is adjustable when the seed hopper is empty.

The intensity of the sensor can be changed with the small sensor bolt (2).



The fastening height of the low level sensor depends on the filled material.

Cereals and legumes:

attach the sensor in the upper area.


Fine seeds (e.g., rapeseed):

Fasten the sensor in the lower area.

5.6 Fill the seed hopper

The seed hopper cover (1) has a threaded seal.

1. Switch off the control terminal.
2. Open the seed hopper cover and slowly fill the seed hopper. Do not exceed the nominal volume and the permissible total weight.
3. Screw on the seed hopper cover so that the seed hopper is closed air-tight.

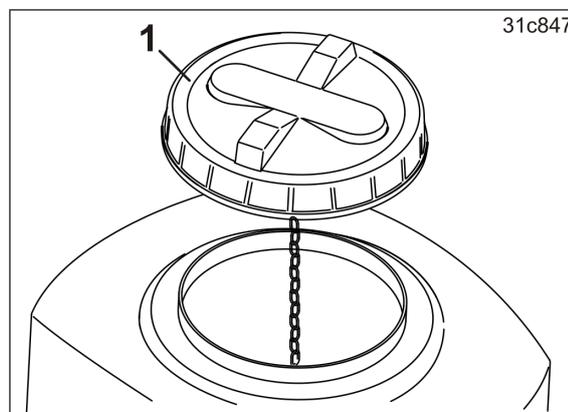

5.7 Preparing the implement for calibration or for emptying the seed hopper

4. Put the chute (1) into calibration position.
 - 4.1 Loosen the 2 hexagonal bolts (2) with the socket spanner. The spanner is inserted in a holder on the protective cover (see section 5.3, page 44).



- 4.2 The chute (1) must be
 - o swivelled by 180° and
 - o fastened on the implement.
 - 4.4 Put a bucket under the chute or fasten the seed collection bag on the chute.



5. Perform the calibration as described, see section 6.6, page 57.
6. Empty the seed hopper as described, see section 6.16, page 73.
7. The chute is reassembled in the reverse sequence.

5.8 Hydraulic fan drive

Before you adjust the fan speed, check the program settings, see


- section 7.1.1, page 87
- section 7.1.7, page 90
- section 7.1.8, page 91

5.8.1 Connecting the hydraulic hose lines to the tractor

The GreenDrill is equipped with a hydraulic control block with control valve (1).


The following are connected to the hydraulic control block

- 2 hydraulic lines to the fan hydraulic motor and

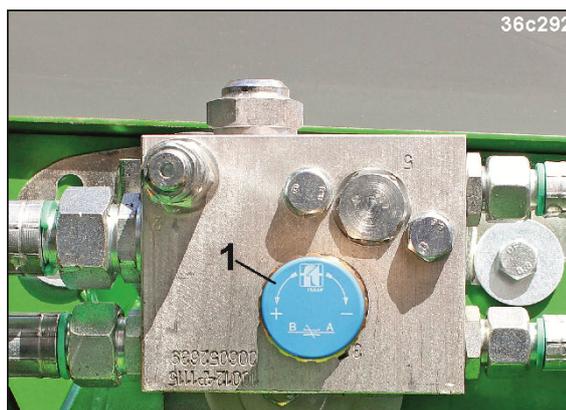


- 2 hydraulic hose lines to the tractor.

The hydraulic hose lines are labelled with P (red) and T (yellow).

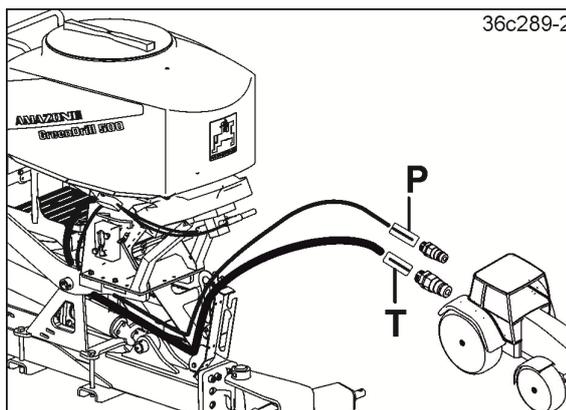

Check whether the return flow line (1) marked in yellow has a sealing plug (2).

Remove the sealing plug (2) and attach the separately supplied coupling sleeves (3) on the return flow line.

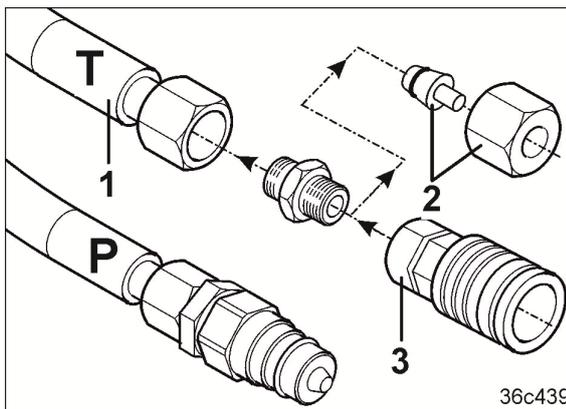


Connect the hydraulic hose lines to the tractor hydraulic system as follows:

| | |
|--|--|
| Pressure line with the label P (red) | Connection to a single-acting tractor control unit with priority. |
| Return flow line with the label T (yellow) | Connection to an unpressurised tractor connection with direct access to the hydraulic fluid tank. The capacity of the tractor's oil tank should be at least twice the oil flow rate. High oil flow rates in conjunction with small oil tanks encourage rapid heating of the hydraulic fluid. The pressure in the oil return flow may not exceed 10 bar. Do not connect the return line to a tractor control unit to prevent the back pressure from exceeding 10 bar. |
| Important | Connection to the tractor: First connect the return line, and then the pressure line. Uncoupling from the tractor: First disconnect the pressure line, and then the return line. |

5.8.2 Setting the fan speed on tractors with flow control valve

1. Close the flow control valve of the tractor.
2. Turn the control valve (1) of the GreenDrill counter clockwise (+) and open it completely.
3. Run the tractor engine up to operating speed.
4. Set the fan to the required fan speed.
 - 4.1 Use the flow control valve of the tractor to slowly increase the oil quantity.
 - 4.2 Check the spread pattern on the field.
 - 4.3 Optimise the spread pattern by adjusting the fan speed.

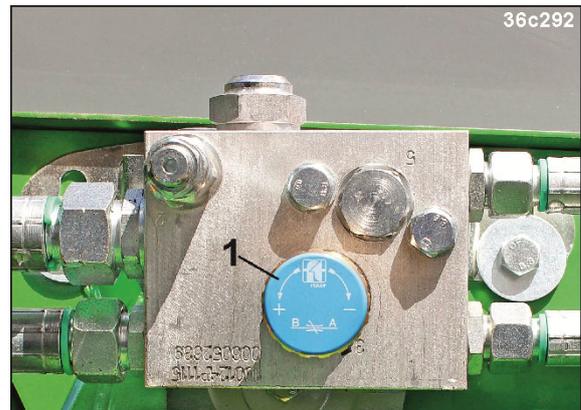


5.8.3 Setting the fan speed on tractors without flow control valve



Close the control valve (1) of the hydraulic control block before actuating the tractor control unit to prevent damage when the fan over-revs.

1. Close the control valve (1) of the GreenDrill.
 - 1.1 Turn the control valve (1) of the GreenDrill clockwise (-) up to the stop.
2. Run the tractor engine up to operating speed.
3. Apply pressure on the control block with the control valve (1).
 - 3.1 Actuate the tractor control unit.

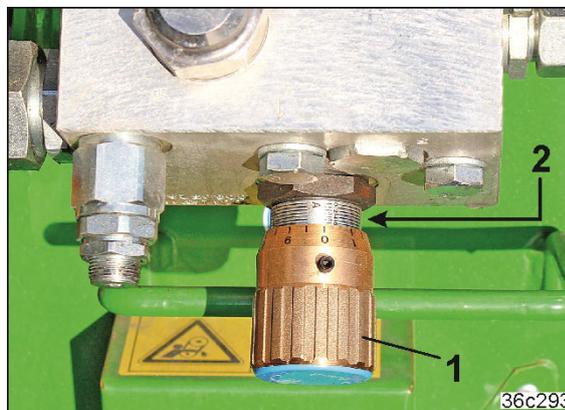

4. Set the fan to the required fan speed.
 - 4.1. The scale value (2) can be found in the following table.

| Working width | 3.0 m | 6.0 m | 12.0 m | |
|---------------|-------|-------|--------|-------------|
| Scale value | 3 | 4 | max. | Normal seed |
| | 2 | 3 | 4 | Fine seed |

- 4.2. Set the scale value (2) on the control valve (1).
- 4.2 Check the spread pattern on the field.
- 4.3 Optimise the spread pattern by adjusting the fan speed.

6 GreenDrill control terminal 5.2



- (1) GreenDrill control terminal 5.2
- (2) Holder for the control terminal
- (3) Power cable for 3-pin tractor standard socket (12-volt)




- (1) Socket (3-pin) for power supply
- (2) Signal socket (6-pin) for the implement cable
The implement cable connects the control terminal with the GreenDrill.
- (3) 30 A fuse
- (4) Signal socket (12-pin) for connection
 - o to the 7-pin tractor signal socket or
 - o to a splitter (see e.g. section "6.18.4.3", page 84).



When not in use, protect the plug of the implement cable from moisture.
Use the protective cap.

6.1 Control elements

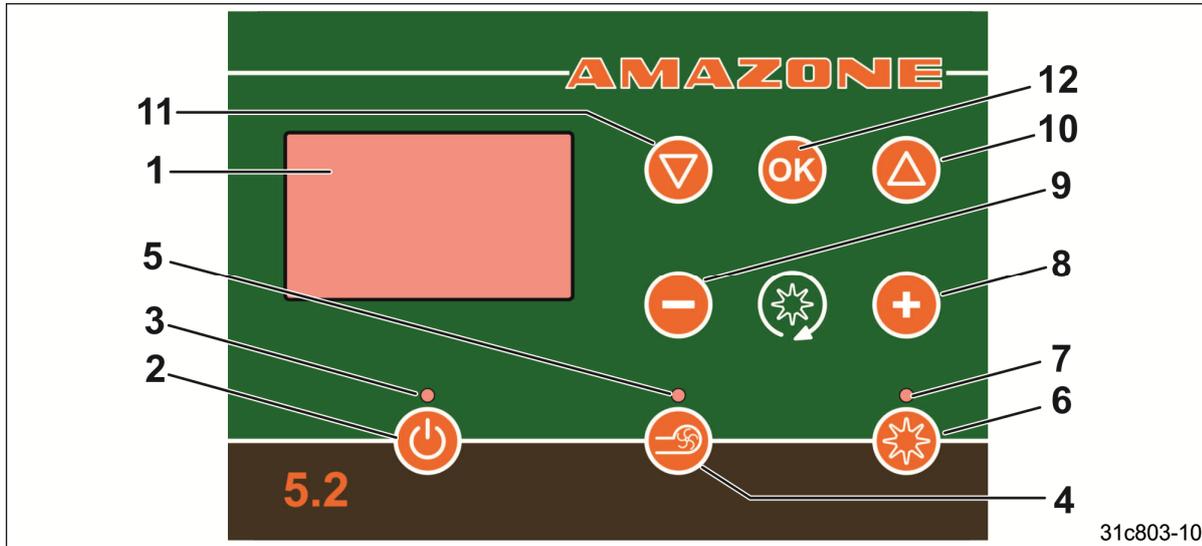

- | | |
|--|---|
| (1) Graphic display | (6) Switch seeding shaft on/off |
| (2) On/Off button | (7) The control lamp is illuminated when the seeding shaft is running |
| (3) The control lamp is illuminated when the control terminal is switched on | (8) Increase seeding shaft speed |
| (4) Switch the electric fan drive on and off. | (9) Decrease seeding shaft speed |
| The button is without function with the hydraulic fan drive. | (10) Cursor key (moves up in the menu) |
| (5) The control lamp is illuminated when the fan is switched on. | (11) Cursor key (moves down in the menu) |
| | (12) Button for confirming the selection |

6.2 Switching the control terminal on/off

Switching on the control terminal

1. Instruct any people in the area to stand at a minimum distance of 10 m from the implement.
2. Press the  button.
 - The control lamp above the button is illuminated
 - The control terminal is switched on
 - The terminal type and the software version appear on the display.
 - The display switches to the main menu.




The control terminal is switched off after 1.5 hours if no button has been pressed in this time and the seeding shaft is switched off.

Switching off the control terminal



When work is completed, first switch off the seeding shaft, then the fan, and finally the control terminal.

1. Press the  button.
 - Brief display before switching off the control terminal
 - The control lamp above the button is turned off
 - The control terminal is switched off.
2. Pull the power cable plug for the control terminal out of the socket.

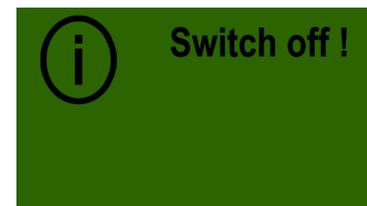

After switching off the control terminal, pull the power cable plug out for the control terminal out of the socket.

6.3 Main menu

6.3.1 During operation - Display without speed sensor

Line 1 in the main menu shows

the seeding shaft speed [%] set during calibration.

Line 2 in the main menu shows

the forward speed [km/h] set for calibration.

The seeding shaft speed is not adjusted for changing forward speeds. Always maintain the indicated forward speed [km/h] during operation.



6.3.2 During operation - Display with speed sensor

Line 1 in the Main menu shows the seeding shaft speed [%]

Setpoint 50 %

Actual value 25 %

Line 2 in the main menu shows the forward speed [km/h]

Setpoint 20 km/h

Actual value 10 km/h



| Display | Setpoint | Actual value |
|-------------------------|--|--|
| Seeding shaft speed [%] | The target seeding shaft speed is calculated during the calibration test | The actual seeding shaft speed is calculated according to the forward speed and is shown in the main menu. |
| Forward speed [km/h] | The target forward speed is set in the "Calibration" submenu | The actual forward speed [km/h] is measured using the speed sensor and is shown in the main menu. |



The current seeding shaft speed should not undercut the 10% displayed value to prevent deviations in the spread rate.

6.3.3 During operation – Other displayed values

During operation, the following values are displayed:

- Seeding shaft speed [%]
- Forward speed [km/h]
- Seed rate [kg/ha]
- Fan speed [rpm]

| | | |
|-------|--------|------|
| SW % | 50 / | 25.0 |
| km/h | 20.0 / | 10.0 |
| kg/ha | | 20.0 |
| Speed | | 2000 |

Note:

The speed is only displayed with a hydraulically driven fan with speed sensor.

6.3.4 During operation - Changing the spread rate

In the main menu, the seeding shaft speed and therefore the spread rate can be changed in 1 %-increments during operation.

The spread rate is

- increased by pressing the  button.
- reduced by pressing the  button.

| | | |
|-------|--------|------|
| SW % | 61 / | 50.3 |
| km/h | 10.0 / | 8.3 |
| kg/ha | +10% | 13.2 |

6.3.5 Pre-metering

If the seeding shaft rotates before beginning the field pass or when standing still on the field, press and hold the  button. The fan starts running and after a few seconds, the seeding shaft begins to rotate at the speed determined during calibration.

As soon as the button is released, the seeding shaft speed is adapted to the forward speed.

If the control terminal is connected to the 7-pin signal socket on the tractor or if the working position sensor is active, the carrying implement must be in working position.

6.4 Submenus



The implement-specific data has already been programmed by your AMAZONE service partner, see section Basic settings by your AMAZONE service partner, page 86.

With the   buttons, the following submenus can be called up from the main menu:

1. Language
2. Calibration (seed rate) [kg/ha or grains/m²]
3. Calibration (distance travelled) [pulses/100m]
4. Hectare counter
5. Operating hours counter
6. Adjusting the fan speed (electric fan drive)
7. Adjusting the fan speed (hydraulic fan drive)
8. Operating voltage
9. Emptying the seed hopper.



If no button is pressed, the display switches to the Main menu after approx. 60 seconds.

6.5 Set language

1. Call up the submenu using the   buttons.
2. Confirm the selection with the  button.
3. Select the desired language with the   buttons.
4. Confirm the selection with the  button.
5. Back to the main menu with the   buttons.



6.6 Calibrating the seed rate [kg/ha or grains/m²]



The seed calibration can be terminated at any time by pressing the  button or  button.

The fan cannot be switched on during calibration.

1. Prepare the implement for the calibration test (see section 5.7, page 47).
2. Check that the correct seed metering wheels have been fitted.
3. Fill the seed hopper.
4. Adjust the brush for the seed type (see section 4.1.3, page 33).
5. Call up the "Calibration" submenu using the   buttons.
6. Confirm the selection with the  button.
7. Select the display with the   buttons.
8. Confirm the selection with the  button.
9. Select the display with the   buttons.
10. Confirm the selection with the  button.
11. Enter the working width with the   buttons (e.g., 3.7 m).
12. Confirm the entry with the  button.
13. Select the display with the   buttons.
14. Confirm the selection with the  button.
15. Enter the forward speed with the   buttons (e.g. 12.5 km/h).
16. Confirm the entry with the  button.
17. Select the desired calibration test with the   buttons
 - o calibration [kg/ha] or
 - o calibration [grains/m²].

Calibration test

Settings

Working width ?

3.7 m

Tractor-speed ?


12.5 km/h

Calibration via

kg/ha

6.6.1 Calibration [kg/ha]

1. Make all of the entries shown in section 6.6, page 57.
2. Select the display with the   buttons.
3. Confirm the selection with the  button.
4. Enter the desired spread rate with the   buttons (e.g. 103.5 kg/ha).
5. Confirm the entry with the  button.
6. Select the display with the   buttons.
7. Confirm the selection with the  button.
8. Using the   buttons, set the time ¹/₂ during which the seeding shaft will rotate during calibration (e.g. 0.5 min).
9. Confirm the entry with the  button.

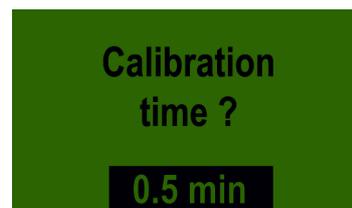


- 1) Calibrate for 0.5 minutes
for seeds such as wheat, barley, peas and high spread rates

Calibrate for 1.0 minute
for all seed types (standard)

Calibrate for 2.0 minutes
for fine seeds, e.g. rapeseed and phacelia.

- 2) The "Calibration duration" menu item does not appear when
- o the GreenDrill has a calibration button (see section 6.6.3, page 62) and
 - o the menu item "Calibration button available" (see section 7.1.9, page 91) is answered with "YES".

10. Select the display with the   buttons.
11. Confirm the selection with the  button.

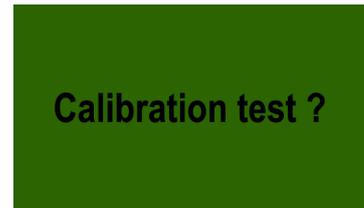

The calibration starts.

- The seeding shaft begins to rotate (without fan).
- The seeding shaft stops automatically after the set time has elapsed.
- During calibration, keep the calibration button (if available) pressed. The seeding shaft stops after the button is released.

Do not select a shorter duration for the calibration than specified (see instructions for point 8).



12. Weigh the collected seed.

13. Select the display with the   buttons.
14. Confirm the selection with the  button.



15. Enter the weight [kg] of the collected seed on the control terminal using the   buttons (e.g. 3.25 kg).

16. Confirm the entry with the  button.

- The required seeding shaft speed is calculated automatically.

The theoretical seeding shaft speed is calculated from the initial data (working width and forward speed). If the calibrated seeding shaft speed deviates by more than 3%,

- the adjacent display appears.
- repeat the calibration.





Display after correctly terminated calibration test.

If no button is pressed, the display switches to the Main menu after approx. 5 seconds (see page 54).




6.6.2 Calibration [grains/m²]

1. Make all of the entries shown in section 6.6, page 57.
2. Select the display with the   buttons.
3. Confirm the selection with the  button.
4. Enter the desired spread rate (e.g. 100 grains/m²) with the   buttons.
5. Confirm the entry with the  button.
6. Select the display with the   buttons.
7. Confirm the selection with the  button.
8. Enter the 1000-grain weight with the   buttons (e.g. 30 g).
9. Confirm the entry with the  button.
10. Select the display with the   buttons.
11. Confirm the selection with the  button.
12. Enter the germination capacity of the seed with the   buttons (e.g. 95 %).
13. Confirm the entry with the  button.

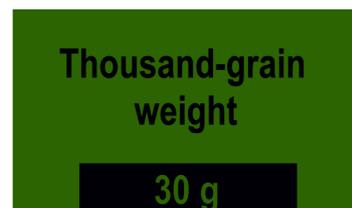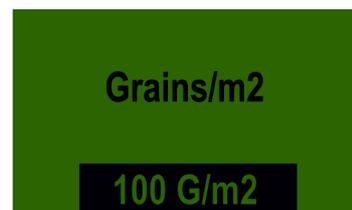

14. Select the display with the   buttons.
15. Confirm the selection with the  button.
16. Using the   buttons, set the time 1)²⁾ during which the seeding shaft will rotate for calibration (e.g. 0.5 min).
17. Confirm the entry with the  button.

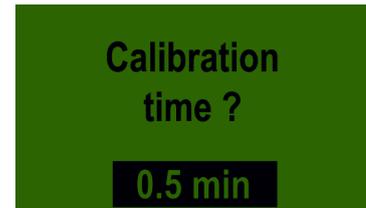


- 1) Calibrate for 0.5 minutes
for seeds such as wheat, barley, peas and high spread rates

Calibrate for 1.0 minute
for all seed types (standard)

Calibrate for 2.0 minutes
for fine seeds, e.g. rapeseed and phacelia.

- 2) The "Calibration duration" menu item does not appear when
- o the GreenDrill has a calibration button (see section 6.6.3, page 62) and
 - o the menu item "Calibration button available" (see section 7.1.9, page 91) is answered with "YES".


18. Select the display with the   buttons.
19. Confirm the selection with the  button.

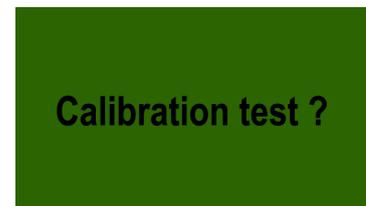

The calibration starts.


- The seeding shaft begins to rotate (without fan).
- The seeding shaft stops automatically after the set time has elapsed.
- Keep the calibration button (if available) pressed for the duration of the calibration test. The seeding shaft stops after the button is released.

Do not select a shorter duration for the calibration than specified (see instructions for point 16).

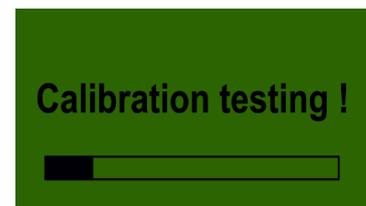

GreenDrill control terminal 5.2

20. Weigh the collected seed.
21. Select the display with the   buttons.
22. Confirm the selection with the  button.
23. Enter the weight [kg] of the collected seed on the control terminal using the   buttons (e.g. 3.25 kg).
24. Confirm the entry with the  button.
 - The required seeding shaft speed is calculated automatically.

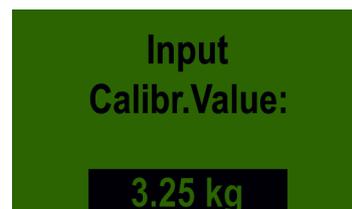


The theoretical seeding shaft speed is calculated from the initial data (working width and forward speed). If the calibrated seeding shaft speed deviates by more than 3%,

- the adjacent display appears.
- the calibration must be repeated.



Display after correctly terminated calibration test

If no button is pressed, the display switches to the Main menu after approx. 5 seconds. (see page 54).

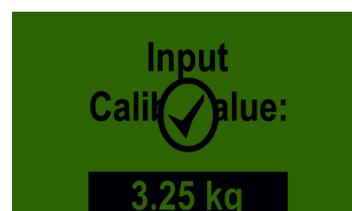

6.6.2.1 Conversion of the seed rate [grains/m²] in [kg/ha]

$$\text{Seed rate [kg/ha]} = \frac{\text{TGW [g]} \times \text{grains/m}^2}{\text{Germination capacity [\%]}}$$

6.6.3 Seed calibration button

The calibration button (1) serves for starting the seed calibration test and for emptying the seed hopper.

The seeding shaft starts rotating when the calibration button is pressed. The seeding shaft rotates as long as the calibration button is pressed.

During the seed calibration test, the running time of the seeding shaft is automatically included in the calculation.

The calibration button is attached to the implement with magnets.



6.7 Calibrating the distance travelled (pulses/100 m)

The calculation requires the "pulses/100 m" calibration value

- the travel speed [km/h].
- the worked area [ha] (hectare counter).
- the seeding shaft speed.

If the calibration value is not known, it must be determined by means of a "Pulses per 100 m" calibration run. The calibration value must be determined under operating conditions on the field.

If


- If the "Pulses per 100 m" calibration value is known, it can be entered manually.
- If the system has a GPS device, the "Pulses per 100 m" calibration value is not required.

Determine the calibration value

- before initial use.
- when changing from heavy to light soil and vice versa.
On different soils, the calibration value (pulses/100 m) can change due to
 - slippage of the measuring or drive wheel
 - a change in the number of pulses from the radar device.
- if there are differences between the indicated and actual forward speed.
- if there are differences between the measured and actual worked area.

6.7.1 Calibration by driving a calibration distance

1. On the field, measure out a calibration distance of exactly 100 m.
Mark the start and end point of the calibration distance.
2. Drive the tractor to the starting position and put the carrying implement into working position.

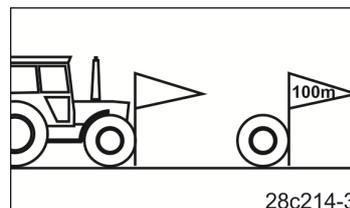

3. Select the display with the   buttons.
4. Confirm the selection with the  button.




5. Confirm the display with the  button.



6. Actuate the  button and drive exactly the calibration distance.




7. Stop after exactly 100 m and press the  button.

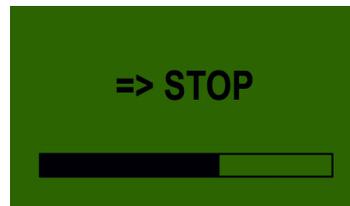


→ Display when the calibration is complete

If no button is pressed, the display switches to the Main menu after approx. 5 seconds.

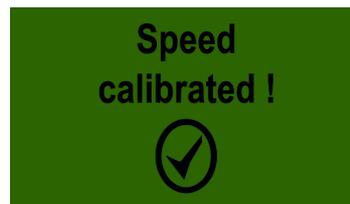



6.7.2 Calibration by comparing the speedometer

1. Select the display with the   buttons.
2. Confirm the selection with the  button.
3. Select the display with the   buttons.
4. Confirm the display with the  button.
5. Start the tractor for the calibration run.
During the calibration run, compare the speeds shown on the display with those on the tractor's speedometer.
Correct the value using the    buttons, until both values are the same.

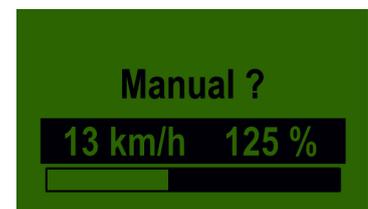

6.7.3 Enter the calibration value manually

1. Select the display with the   buttons.
2. Confirm the selection with the  button.
3. Select the display with the   buttons.
4. Confirm the display with the  button.
5. If known, enter the calibration value with the   buttons, e.g., "13000" for 13000 [pulses/100 m].

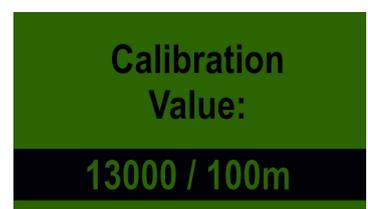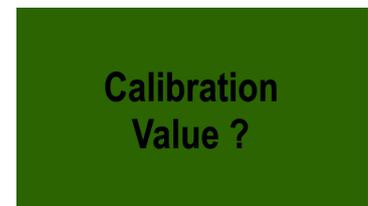


6.7.4 Calibration value - Restoring the factory settings (reset)

1. Select the display with the   buttons.
2. Confirm the selection with the  button.




3. Select the display with the   buttons.
4. Confirm the display with the  button.
→ The factory settings for the calibration value has been restored.

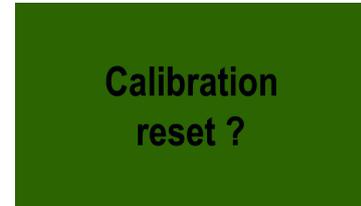

Display after completed reset

If no button is pressed, the display switches to the Main menu after approx. 5 seconds.

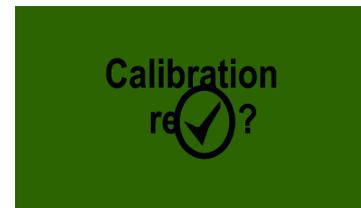

6.8 Hectare counter

Area calculation


- is carried out using the "actual" forward speed values.

The control terminal must be connected

- to the 7-pin tractor signal socket (see section 6.18.4.1, page 82) or
 - to the radar device (see section 6.18.4.3, page 84) or
 - to the GPS device (see section 6.18.4.4, page 85).
- begins as soon as the seeding shaft starts rotating and the tractor starts moving.

6.8.1 Display of the areas / deleting part areas

1. Select the display with the   buttons.
2. Confirm the selection with the  button.
The following are displayed
 - the total area [ha]
 - the part area [ha]
3. Press the  button for 5 seconds to set the part area to zero.
The total area cannot be reset.

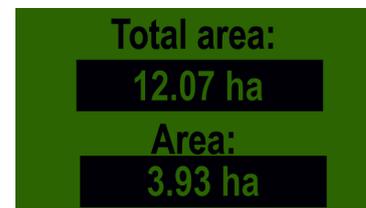

6.9 Operating hours counter


The operating hours counter shows the run time of the seeding shaft.

1. Select the display with the   buttons.
2. Confirm the selection with the  button.
The following are displayed
 - the total hours [h]
 - the daily hours [h]
3. Press the  button for 5 seconds to set the daily hours to zero.
The total hours cannot be reset.



6.10 Adjusting the fan speed (electric fan drive)

1. Select the display with the   buttons.
2. Confirm the selection with the  button.
3. Select the display with the   buttons.
4. Confirm the selection with the  button.
5. Enter the desired fan speed with the   buttons (e.g., 100 %).
6. Confirm the entry with the  button.

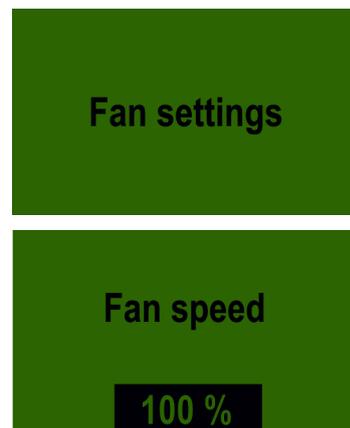

If no button is pressed, the display switches to the Main menu after approx. 5 seconds.



The fan speed of the electrically driven fan can also be adjusted during operation.

6.11 Adjusting the fan speed (hydraulic fan drive)

The section "Hydraulic fan drive", page 48, describes the adjustment of the fan speed.

6.11.1 Setting the min/max fan speed (hydraulic fan drive)

If the fan has a speed sensor, you can set the following parameters:

1. Select the display with the   buttons.
2. Confirm the selection with the  button.

Change the parameters using the   buttons.

- Entry of the pulse number "2" for GreenDrill GD200
- Minimum fan speed
- Maximum fan speed.



Undercutting the minimum fan speed

The seeding shaft is switched off when the minimum fan speed is not reached. An error message appears on the control terminal.

The seeding shaft can be switched on again after pressing the  button and when the speed rises above the minimum fan speed.


Exceeding the maximum fan speed

An error message appears on the control terminal when the maximum fan speed is exceeded. The seeding shaft is not switched off.

When the maximum fan speed is exceeded, throttle the fan speed to prevent damage.

6.12 Operating voltage

1. Select the display with the   buttons.
2. Confirm the selection with the  button.

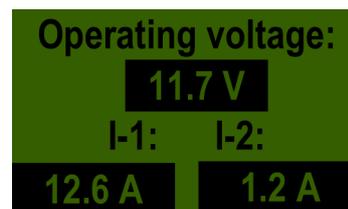

Display:

- [V] Operating voltage [volt]
- I-1 Shows the current consumption [amps] of the electrically driven fan motor.
- I-2 Shows the current consumption [amps] of the seeding shaft motor.

If there are strong fluctuations in the operating voltage during operation, there may be errors in the seeding rate.

6.13 Calling up data on control terminal 5.2 without implement connection

The data on control terminal 5.2 can be called up without connecting the implement to the control terminal.

The error message "Seeding shaft not connected" appears after switching on the control terminal. The error message can be temporarily suppressed by pressing the  button for 15 seconds. Afterwards, the operating hours and the worked area, for example, can be called up.

Intermittently appearing error messages can be suppressed by briefly pressing the  button.

6.14 Starting work at the beginning of the field



Do not switch off the fan during use.

Before starting work

1. Close the seed hopper cover.
2. Check if the deflector plates have the same distance.
3. Check that the seed delivery hoses drop downwards along the entire length.

Work commencement

1. Instruct any people in the area to stand at a minimum distance of 10 m from the implement.
2. Start the tractor.
3. Press the  button.
 - The green control lamp above the button is illuminated.
 - The control terminal is switched on
 - The two-part display shows
 - the implement version
 - and then the seeding shaft speed [speed in %].
4. Press the  button.
 - The red control lamp above the button is flashing
 - The fan begins to rotate
 - When the fan nominal speed is reached, the control lamp stops flashing and is constantly illuminated.
5. Press the  button.
 - The green control lamp above the button is illuminated.
 - The seeding shaft rotates at the nominal speed.
 - The seed is metered.



To prevent blockage in the seed tube lines, the seeding shaft can only be switched on when the fan is running.

The speeds of the seeding shaft and fan do not change with changing working speeds.

6.15 Turning at end of the field

Turning with position signal (working/transport position)

The turning procedure takes place automatically when the implement receives the following signals:

- The implement is in working position
- The implement is in transport position.

To do so, the implement must

- be connected to the tractor socket (7-pin) or
- have a working position sensor.

When turning, the seeding shaft is automatically switched off as soon as the implement is in transport position. After turning, the seeding shaft is automatically switched on again as soon as the implement is in working position. The fan is not switched off during the whole procedure.

Turning without position signal (working/transport position)

Turning without position signal (working/transport position):

1. Press the  button.
 - The green control lamp above the button is turned off
 - The seeding shaft stops
 - The fan continues to run.
2. Lift the carrying implement, turn, and move back to working position.
3. Start driving and press the  button.
 - The green control lamp above the button is illuminated.
 - The seeding shaft rotates at the nominal speed.
 - The seed is metered.

6.16 Emptying the seed hopper

The seed hopper can be emptied through the menu controls or with the calibration button.

6.16.1 Emptying the seed hopper through the menu controls

1. Prepare the implement for emptying the seed hopper (see section 5.7, page 47).
2. Select the display with the   buttons.
3. Confirm the selection with the  button.
 - The seeding shaft motor is rotating at maximum speed. The fan cannot be switched on.
4. Press the  button as soon as the seed hopper is empty and the seed metering wheels no longer convey seed.
 - The seeding shaft stops
 - The display switches to the main menu.



The seeding shaft drive can be switched off at any time by pressing the  button.

6.16.2 Emptying the seed hopper with the calibration button

The calibration button must be signed in (see section 7.1.9, page 91).

1. Prepare the implement for emptying the seed hopper (see section 5.7, page 47).
2. Press the calibration button (1).
 - The seeding shaft motor is rotating at maximum speed. The fan cannot be switched on.
3. Keep pressing the calibration button until the seed hopper is empty and the seed metering wheels no longer convey seed.



6.17 Error messages

| Fault message | Description | Remedy |
|--|---|---|
|  <p>Internal VCC (5V) not OK !</p> | <p>Control voltage is too low</p> | <p>Contact the service partner</p> |
|  <p>Operating voltage low !</p> | <p>Operating voltage (at least 10 volt) undercut, see section "6.12", page 70</p> | <ul style="list-style-type: none"> • Minimise the consumers • Check the battery • Check the alternator • Check wiring |
|  <p>Operating voltage not OK !</p> | <p>Operating voltage (at least 10 volt) undercut, or large voltage fluctuation, see section 6.12, page 70</p> | <ul style="list-style-type: none"> • Minimise the consumers • Check the battery • Check the alternator • Check wiring |
|  <p>Operating voltage high !</p> | <p>Operating voltage too high, see section 6.12, page 70</p> | <p>Check the alternator</p> |
|  <p>Hopper almost empty</p> | <p>Low level sensor alarm</p> | <p>Refill seed</p> |

| Fault message | Description | Remedy |
|---|--|--|
|  <p>Calibration Value too high !</p> | <p>Calibration value "pulses per 100 m" is too high</p> | <p>Repeat the calibration, (see section 6.7, page 63)</p> |
|  <p>Calibration Value too low !</p> | <p>The calibration distance is too short "pulses/100 m"</p> | <p>Repeat the calibration, (see section 6.7, page 63)</p> |
|  <p>Sowing shaft speed too low!</p> | <p>Seeding shaft speed is too low. Display during seed calibration</p> | <p>Use seed metering wheels with a smaller volume or seeding shaft with fewer seed metering wheels</p> |
|  <p>Sowing shaft speed too high!</p> | <p>Seeding shaft speed is too high Display during seed calibration</p> | <p>Use seed metering wheels with a larger volume or seeding shaft with more seed metering wheels</p> |
|  <p>Calibration time too short!</p> | <p>Calibration time is too short Display when using the calibration button</p> | <p>Press and hold the calibration button for at least 30 seconds during calibration</p> |

| Fault message | Description | Remedy |
|---|--|---|
|  Tractor speed too high ! | Forward speed too high | <ul style="list-style-type: none"> • Compare the displayed speed with the actual driven speed • Reduce the forward speed or • Use larger seed metering wheels |
|  Tractor speed too low ! | The forward speed is too low | <ul style="list-style-type: none"> • Compare the displayed speed with the actual driven speed • Increase the forward speed or • Use smaller seed metering wheels |
|  Motor overloaded (Sowing shaft) ! | The seeding shaft is not rotating | Switch off control terminal. Check whether any foreign objects are hindering the rotation of the seeding shaft or agitator shaft. |
|  No motor rotation speed (Sowing shaft) ! | The seeding shaft motor <ul style="list-style-type: none"> • is connected • is not overloaded • is not rotating | Switch off control terminal. Contact the service partner. |
|  Motor not connected (Sowing shaft) ! | The seeding shaft motor is not wired correctly | Check the cables and plug connections to the seeding shaft motor |

| Fault message | Description | Remedy |
|---|--|---|
|  | Fan with hydraulic drive and pressure sensor <ul style="list-style-type: none"> • is not rotating • Control lamp without function. | Back pressure in the return flow is too high (see section 5.8.1, page 48). |
|  | The fan is not rotating | Switch off control terminal. Check if <ul style="list-style-type: none"> • foreign objects are hindering the rotation of the fan • the chute is installed wrong (see section 5.7, page 47) |
|  | Fan motor with electric drive <ul style="list-style-type: none"> • is connected • is not overloaded • is not rotating. | Switch off control terminal. Contact the service partner. |
|  | The fan motor with electric drive is not wired correctly | Check the cables and plug connections to the fan motor. |

| Fault | Possible fault elimination |
|---|--|
| Seeding shaft rotates in transport position | <ul style="list-style-type: none"> • Change the lifting unit signal (see section "Entry of the working position sensor signal source", page 90) |
| Seeding shaft does not rotate in working position | <ul style="list-style-type: none"> • Switch on the seeding shaft and start driving • Check the speed signal • Change the lifting unit signal (see section "Entry of the working position sensor signal source", page 90) |
| Low level sensor without alarm message | <ul style="list-style-type: none"> • Check the plug and cable • Change the intensity of the sensor (see section 5.5, page 46). |
| Low level sensor with continuous alarm | <ul style="list-style-type: none"> • Realign the low level sensor • Change the intensity of the sensor (see section 5.5, page 46) |
| Speed signal is missing | <ul style="list-style-type: none"> • Check the settings for the speed sensor (see section 7, page 86) • Check the labels and connections of the splitter • Test whether the speed signal is received on the control terminal, if the speed sensor is not connected to the splitter but rather to the control terminal. If signals are received, replace the defective splitter. |
| Lifting unit signal is missing | <ul style="list-style-type: none"> • Check whether the sensor and magnets are opposite to each other in the end position • Check the sensor settings (see section 7, page 86) • Check the connections and labels on the splitter • Test whether the lifting unit signals are received on the control terminal, if the lifting unit signal sensor is not connected to the splitter but rather to the control terminal. If signals are received, replace the defective splitter. |
| The control terminal cannot be switched on | <ul style="list-style-type: none"> • Check the plug and power cable • Check the fuse • Check the battery • Check the connections of the battery cable (if equipped) (see section 6.18.3.2, page 81). |
| The control terminal is switched off when the fan or seeding shaft motor is switched on | <ul style="list-style-type: none"> • Check the battery voltage • Check the contacts <ul style="list-style-type: none"> ○ Power cable plug ○ Implement cable plug |



| | |
|---|--|
| <p>Continuous or occasional forward speed display: 0.0 km/h</p> | <p>The speed signal is not being detected</p> <p>Set the signal in section 7.1.3 to NO, if all of the settings in the following sections are set to AUTO:</p> <p>section 7.1.3, section 7.1.4 and section 7.1.5 (see "Entry of the radar sensor signal source" and "Entry of the working position sensor signal source")</p> |
| <p>The spread rate (kg/ha or grains/m²) is not displayed</p> | <p>Calibrate the seed (see section 6.6, page 57)</p> |
| <p>The GreenDrill is spreading too much or too little seed</p> | <ul style="list-style-type: none">• Correct the speed• Calibrate the speed sensor (see section 6.7, page 63).<ul style="list-style-type: none">◦ Not required with GPS device.• Check the hectare counter (see section 6.8, page 67)• Calibrate the seed (see section 6.6, page 57)• Lifting unit sensor not correctly set switches over during operation• Only hydr. fan: Reduce the fan speed |
| <p>The pressure in the oil return flow may is greater than 10 bar</p> | <ul style="list-style-type: none">• Check the return flow of the hydraulic hose line on the tractor (see section "Connecting the hydraulic hose lines to the tractor", page 48)• Use a larger return flow line• Use a larger hydraulic coupling• Use a new return line filter |

6.18 Installations and connections – Control terminal 5.2

6.18.1 Installation of the control terminal 5.2

Fasten the bracket (1) in the tractor cab with 2 bolts.

Bend the bracket so as to provide optimum reading of the display.

Insert the control terminal on the bracket in the tractor cab.



6.18.2 Implement cable connection

The implement cable connects the control terminal with the GreenDrill.

Connect the implement cable to the 6-pin signal socket (1) of the control terminal.



Store the spare cable in the cab.
Do not coil up the cable.

6.18.3 Power cable connection

6.18.3.1 Tractor with standard socket (3-pin)

Connect the power cable (1) to control terminal and the 3-pin standard socket in the tractor cab.



Never connect the 12 volt power supply to the cigarette lighter socket.




6.18.3.2 Tractor without standard socket (3-pin)

If the tractor is not equipped with a 3-pin standard socket, have the battery cable retrofitted on your tractor at a specialist workshop. The battery cable has a 3-pin standard socket (A).

Have the 3-pin standard socket (A) of the battery cable routed to the tractor cab.

Connect the cable ends of the battery cable as follows:

| No. | Colour | Connection |
|-----|--------|---------------------------|
| 1 | red | Positive battery terminal |
| 2 | black | Negative battery terminal |
| 3 | red | Ignition plus terminal |

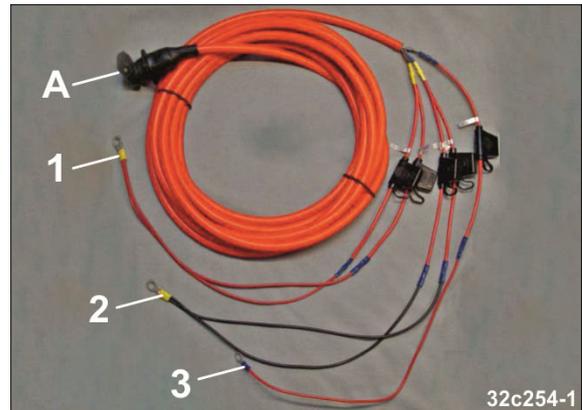

Never run a battery charging device together with the control terminal.

6.18.4 Signal sources

The control terminal shows the forward speed [km/h] and adjusts the seeding shaft speed according to the changing forward speed.

The seed rate [kg/ha] remains unchanged even at varying forward speeds. If it is set correctly, speed differences of 50 % are adjusted up or down.

When the implement is raised, e.g., when turning at the end of the field, the seeding shaft automatically stops rotating. When the implement is lowered to the working position after turning, the seeding shaft starts rotating again.


To display the forward speed [km/h] and adjust the seeding shaft speed, control terminal 5.2 needs the following 3 signals:

- Actual forward speed [km/h]
- The implement is in working position (e.g. lifting gear signal from the tractor)
- The implement is in transport position (e.g. lifting gear signal from the tractor).

The signal sources must be entered in the programming menu (see section "Signal sources", page 88).

6.18.4.1 Tractor signal socket (7-pin)

The signal cable (1) transmits the 3 signals from the 7-pin tractor signal socket to the control terminal.

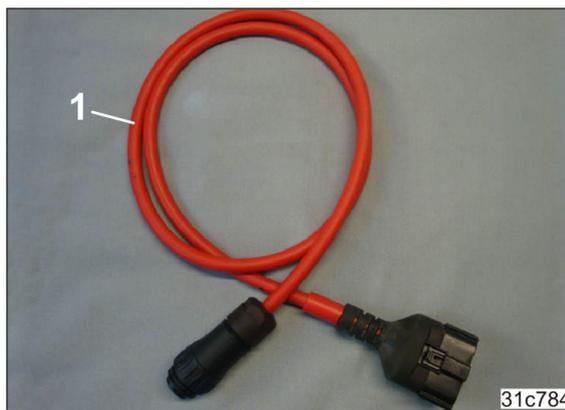

Connect the signal cable to the 12-pin signal socket (1) of the control terminal.



6.18.4.2 Working position sensor

The working position sensor (1) is required when the tractor has a 7-pin signal socket that does not emit a "Working position" signal [see section "Tractor signal socket (7-pin)", page 82].

The working position sensor (1) can be attached on the tractor three-point or on the swivelling running gear of the carrying implement.


The working position sensor transmits the current position of the GreenDrill to the control terminal:

- The implement is in working position
- The implement is in transport position.

Have retroactively purchased special equipment installed by a specialist workshop based on the supplied assembly instructions.

The supplied splitter (A) has 3 connections:

- Connection (1): Control terminal
- Connection (2): 7-pin tractor socket
The connection transmits the forward speed [km/h].
- Connection (3): Working position sensor

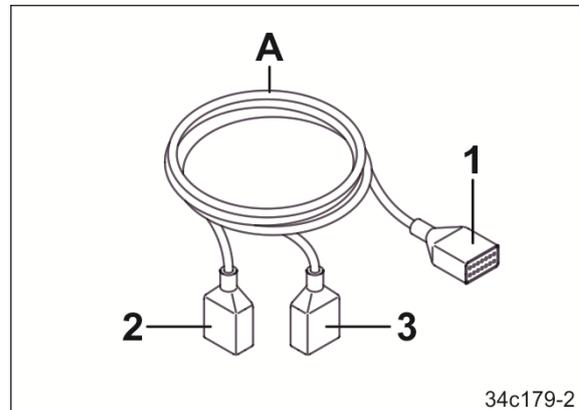

6.18.4.3 Measuring the forward speed with the radar device


If the tractor does not have a 7-pin signal socket, control terminal 5.2 requires

- a working position sensor (see section "Working position sensor", page 83) and
- a radar device or a GPS device (see section "Measuring the forward speed with the GPS device", page 85).

The radar device provides the pulses for the forward speed [km/h].

Have retroactively purchased special equipment installed by a specialist workshop based on the supplied assembly instructions.


Adjust the radar device based on the diagram:

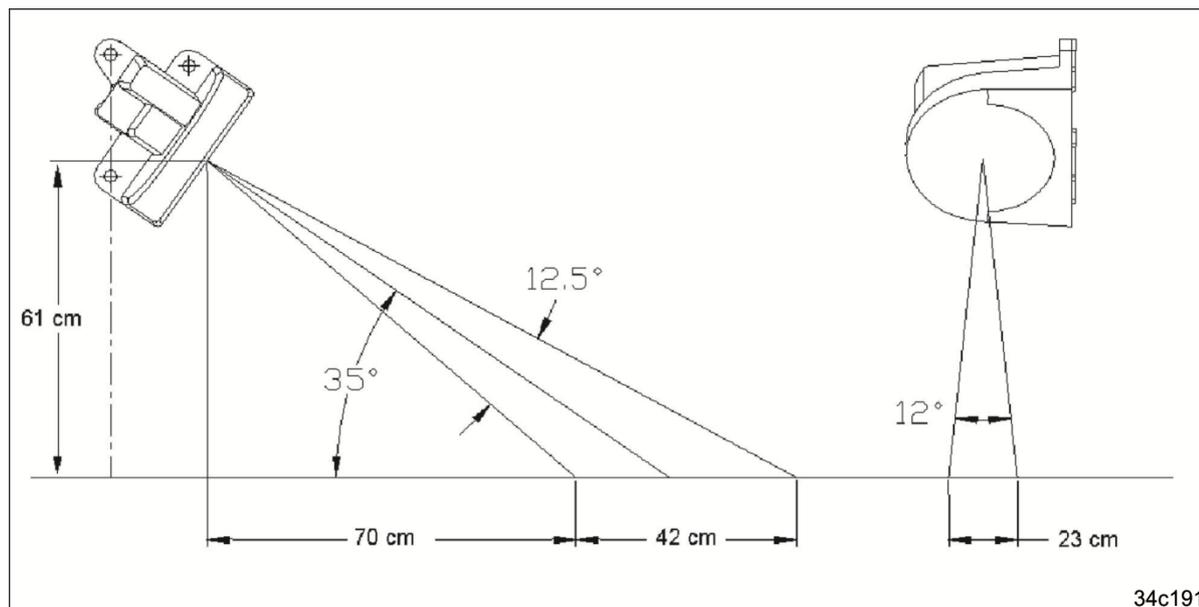


The supplied splitter (A) has 3 connections:

- Connection (1): Control terminal
- Connection (2): Working position sensor
- Connection (3): Radar device

The radar device transmits the measured forward speed [km/h].

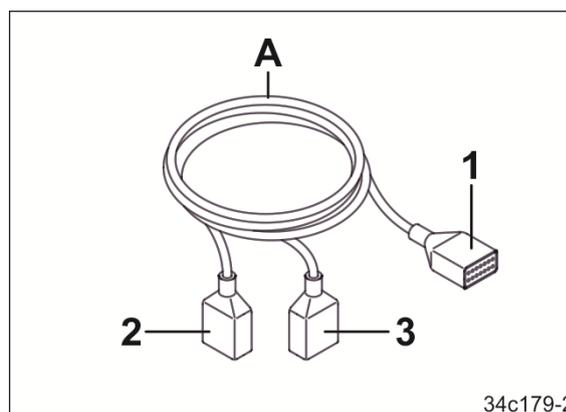

6.18.4.4 Measuring the forward speed with the GPS device

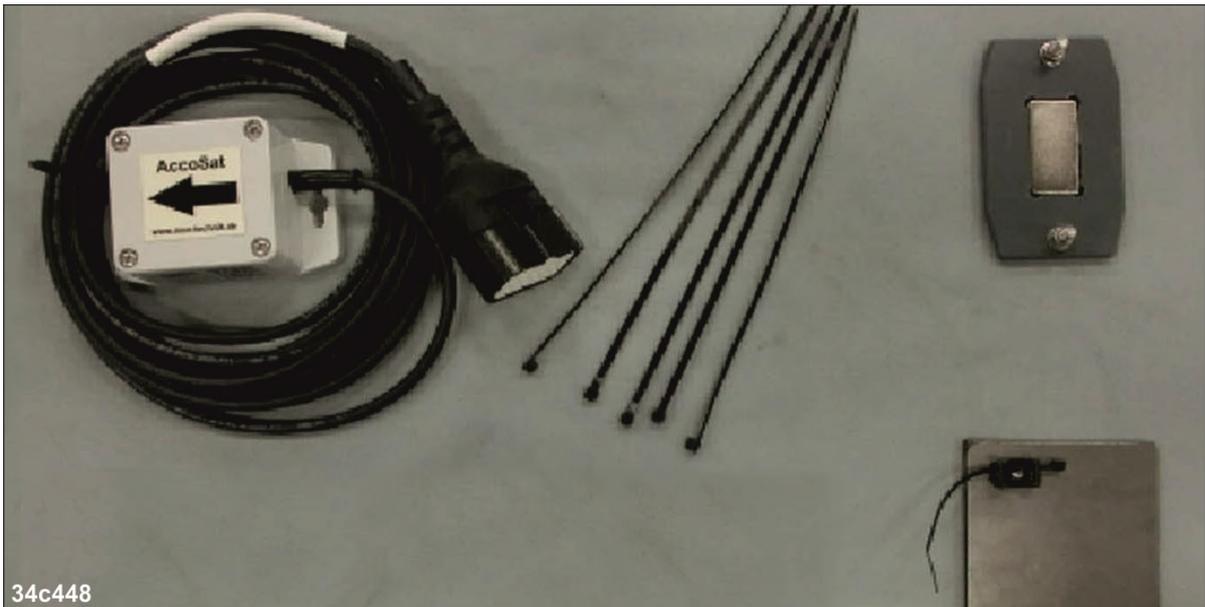

If the tractor does not have a 7-pin signal socket, control terminal 5.2 requires

- a working position sensor (see section "Working position sensor", page 83) and
- a GPS device or a radar device (see section "Measuring the forward speed with the radar device", page 84).


The horizontally mounted GPS device provides the pulses for the forward speed [km/h]. The current forward speed is measured using the combination of a GPS device and a 3D acceleration sensor. Calibration (pulses/100 m, see section 6.7, page 63) is not necessary.

Have retroactively purchased special equipment installed by a specialist workshop based on the supplied assembly instructions.

The supplied splitter (A) has 3 connections:

- Connection (1): Control terminal
- Connection (2): Working position sensor
- Connection (3): GPS device

The GPS device transmits the measured forward speed [km/h].

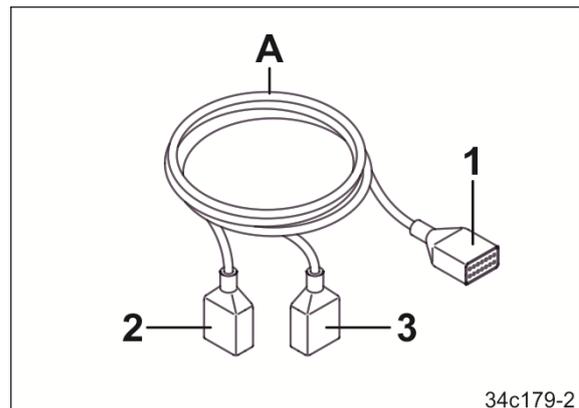

7 Basic settings by your AMAZONE service partner

Many functions of the GreenDrill can be automated when the implement is connected to control terminal 5.2. The functions can only be activated when the implement configuration is programmed on the control terminal.

Have the programming performed by your AMAZONE service partner.



Before making any settings, switch off the fan motor and seeding shaft motor.

7.1 Opening the "Basic setting" program

1. Switch the control terminal off and then back on again (see page 53).
2. When switching on, press and hold the  button and also press and hold the   buttons until the programming menu is opened.

You can navigate in the "Basic setting" program with the following button combinations:

- the   buttons are used to move around in the program
- the   button is used to change the parameters
- the  button is used to confirm the programming
- exit the program by simultaneously pressing the    buttons.



If "AUTO" is selected in the following menus, the system automatically detects transmitting sensors.

7.1.1 Fan drive

Setting with electric fan drive:.....YES

Setting with hydraulic fan drive:.....NO

Change the parameters using the  buttons.

1. Electr. fan present:

YES

7.1.2 Seeding shaft signal tone

An acoustic warning tone is issued when the seeding shaft is switched on and off.

YES or NO

Change the parameters using the  buttons.

2. Signal when sowing shaft is switched on / off

YES

7.1.3 Implement wheel sensor

The forward speed signals come from a sensor on the wheel of the implement on which the GreenDrill is mounted.

YES, NO or AUTO

"AUTO" automatically detects whether work is being performed with or without implement running wheel.

Change the parameters using the  buttons.

3. Ground wheel present:

AUTO

7.1.4 Tractor or guide wheel sensor

The forward speed signals come from the sensor on the tractor wheel or a guide wheel on the implement on which the GreenDrill is mounted.

YES, NO or AUTO

"AUTO" automatically detects whether work is being performed with or without the speed sensor of the tractor.

Change the parameters using the  buttons.

4. Speed sensor on Tractor wheel present:

AUTO

7.1.5 Signal sources

The control terminal 5.2 requires several signals. The signals are provided either by 7-pin tractor signal socket or the signals come from other sources. The source must be named in the control terminal.

Forward speed signal source [km/h]

The following sources can, if equipped, deliver the "Forward speed [km/h]" signal:

- The actual signal
is delivered to PIN 1 of the 7-pin tractor signal socket.
- The theoretical signal
is delivered to PIN 2 of the 7-pin tractor signal socket.
The signal comes from e.g. a gearbox sensor or a different source.

Note: If possible, use the more precise signal from PIN 1.

- The signal comes from a radar device (see page 84) that is connected to the control terminal through a splitter.
- The signal comes from a GPS device (see page 85) that is connected to the control terminal through a splitter.

Working/transport position signal source

The "working/transport position" signals show the position of the GreenDrill:

- Working position or
- Transport position.

The following sources can, if equipped, deliver the signals:

- The signals are delivered by the 7-pin tractor signal socket
- The signals come from a working position sensor (see page 83) that is connected to the control terminal through a splitter.

Entry of the forward speed signal source [km/h]

The control terminal receives the "Actual forward speed [km/h]" signal through one of the 3 connections:

- Connection on the 7-pin tractor signal socket or
- Connection on the radar device or
- Connection on the GPS device

YES, NO or AUTO

"AUTO" automatically detects whether the signal comes from the 7-pin tractor signal socket, from the radar device or the GPS device.

Change the parameters using the  buttons.

The control terminal receives the "Theoretical forward speed [km/h]" signal

YES, NO or AUTO

"AUTO" automatically detects where the theoretical speed signal is coming from.

Change the parameters using the  buttons.

5. DIN-Signal
"actual speed"
present:

AUTO

6. DIN-Signal
"theoretical speed"
present:

AUTO

Entry of the radar sensor signal source

The control terminal receives the "Actual forward speed [km/h]" signal from the radar device.

YES, NO or AUTO

"AUTO" automatically detects whether the radar device is connected.

Change the parameters using the  buttons.

7. Radar sensor
present:

AUTO

Entry of the working position sensor signal source

The control terminal receives the "Working/transport position]" signal from the working position sensor (see section 6.18.4.2, page 83).

YES, NO or AUTO

Change the parameters using the  buttons.

In working position, the working position sensor sends

HI or LO

Change the parameters using the  buttons.

Note:

On some tractors, the lifting unit signal is inverted. Invert the lifting unit signal if the GreenDrill is e.g. seeding in transport position.

8. Lifting unit present:

AUTO

9. Signal level "Lifting unit in operating position":

LO

7.1.6 Acoustic warning signal

In case of an error message during operation,

- an acoustic warning signal is emittedON
- no acoustic warning signal is emittedOFF

Change the parameters using the  buttons.

10. Buzzer:

ON

7.1.7 Seeding shaft gearbox motor

The GreenDrill with 8 outlets has aP8 motor

The GreenDrill with 16 outlets has aP16 motor

Change the parameters using the  buttons.

Note:

GreenDrill GD200 have a P8 motor.

11. Motor sowing shaft:

P8 Motor

7.1.8 Fan sensor (hydraulically driven fan)

The hydraulically driven fan either has

- a pressure sensor (see also section 4.4.2, page 37) or
- a speed sensor.

Change the parameters using the  buttons.

- Pressure (fan with pressure sensor)

- Speed (fan with speed sensor).

12. Fan monitoring equipped
Pressure

12. Fan monitoring equipped
Speed

7.1.9 Calibrat. button

The GreenDrill has a calibration button (see section 6.6.3, page 62).

- Yes
- No

Change the parameters using the  buttons.

13. Calibration button present?
NO

Basic settings by your AMAZONE service partner

7.1.10 Systems of units

Display

- Metric system(m, ha, km/h, kg)
- Anglo-American system(ft, ac, mph, lb)

Change the parameters using the  buttons.

14. Units of measurement:

Metric

7.1.11 Factory settings

- YES.....The factory setting will be restored
- NOThe current settings will be maintained

Change the parameters using the  buttons.

Restore factory settings?

NO

When the factory settings are restored, the following data is maintained:

- the set language
- the total hours
- the total area.



Exit the "Basic setting" program by simultaneously pressing the   buttons.

8 Cleaning, maintenance and repairs



DANGER

Danger of crushing, shearing, cutting, being caught or drawn in, winding and knocks through:

- **unintentional lowering of the implement raised using the tractor's three-point hydraulic system.**
- **unintentional lowering of raised, unsecured implement parts.**
- **unintentional start-up and rolling away of the tractor-implement combination.**

Before working on the implement

- unfold the combination (if necessary)
- switch off the components of the implement
- wait until the implement comes to a standstill
- position the combination on a firm, horizontal surface
- switch off the control terminal.
Risk of accident due to unintentional activation of the metering unit or other implement components caused by radar pulses.
- Apply the tractor parking brake, switch the tractor engine off and remove the ignition key.
- Secure the tractor and implement against unintentional start-up and rolling away.
- Never crawl under a raised, unsecured implement.
- Mount protective equipment, which you removed when cleaning, maintaining and repairing the implement.
- Replace defective protective equipment with new equipment.



Before charging the tractor battery with a charger, remove the cable from the control terminal. Otherwise, voltage peaks can damage the control terminal.

8.1 First operation

Tighten all bolted connections after approx. 20 operating hours, then check these connections every 250 operating hours.

8.2 Cleaning

1. Empty the seed hopper and metering units.
2. Remove the seeding shaft to thoroughly clean the metering unit.
3. Blow out the seed hopper and metering unit with compressed air or dry clean it with a paintbrush.
4. Clean only the outside of the seed hopper with water or a high-pressure cleaner.



DANGER

Dressing dust is toxic and must not be inhaled or come into contact with the body.

When emptying the machine and removing dressing dust, e.g. with compressed air, wear a protective suit, face mask, safety goggles and gloves.



Blow out the seed hopper and the metering units with compressed air. Water may not enter the seed hopper or the metering units.



Empty and clean the metering unit after use.

In metering units that are neither emptied nor cleaned,

- a viscous to solid mass may form there if water enters under the metering roller. The metering roller is braked strongly and deviations may occur between the pre-set and actual seed rates.
- seed residues and fertiliser may swell or germinate in the metering units. As a result, rotation of the metering rollers is blocked and damage can be caused to the drive!



Always observe the following points when using a high pressure cleaner:

- Do not clean any electrical components.
- Always maintain a minimum nozzle distance of 300 mm between the high-pressure nozzle and the implement.
- Observe the safety regulations for working with high pressure cleaners.

9 Seeding tables



The seeding table values are reference values

- that can change due to grain shape, grain size, thousand grain weight, and dressing. The exact seeding shaft speed for the required spread rate is derived from the values of the calibration tests.
- for implements with 8 seed hose lines. If your implement has 6 seed hose lines, the spread rate is reduced accordingly.
- and were determined at brush lever position "0". (see section "Scraper", page 33).

9.1 Calculating the seed rate [kg/ha in kg/min.]

| | | |
|---------------------|---|---|
| Seed rate [kg/min.] | = | $\frac{\text{Seed rate [kg/ha]} \times \text{Speed [km/h]} \times \text{Working width [m]}}{600}$ |
|---------------------|---|---|

Example:

Seed rate:5.0 [kg/ha]
 Forward speed..... 12.0 [km/h]
 Working width.....6.0 [m]

$$\text{Seed rate [kg/min.]} = \frac{5.0 \text{ [kg/ha]} \times 12.0 \text{ [km/h]} \times 6.0 \text{ [m]}}{600}$$

$$\text{Seed rate [kg/min.]} = 0.6 \text{ [kg/min.]}$$

9.1.1 Required fan equipment on the implement

The electrically driven fan of the GreenDrill GD 200-E is suitable for seed rates up to 3.5 [kg/min]. Spread heavier seeds (e.g. beans, peas, wheat and fertiliser) with the hydraulically driven fan of the GD 200-H

| GreenDrill | GD 200-E | GD 200-H |
|---------------------|--------------------|-------------------|
| Seed rate [kg/min.] | up to 3.5 [kg/min] | up to 14 [kg/min] |

Seeding tables

| Perennial rye | Spread rate | |
|-------------------------|-------------|--|
| | kg/min. | |
| Seeding shaft speed [%] | | |
| 2 | 0.46 | |
| 5 | 0.99 | |
| 10 | 1.87 | |
| 15 | 2.74 | |
| 20 | 3.62 | |
| 25 | 4.50 | |
| 30 | 5.33 | |
| 35 | 6.16 | |
| 40 | 6.98 | |
| 45 | 7.81 | |
| 50 | 8.64 | |
| 55 | 9.45 | |
| 60 | 10.27 | |
| 65 | 11.08 | |
| 70 | 11.89 | |
| 75 | 12.71 | |
| 80 | 13.44 | |
| 85 | 14.18 | |
| 90 | 14.92 | |
| 95 | 15.14 | |
| 100 | 18.10 | |
| Seed metering wheel | G-G-G | |

| Barley | Spread rate | |
|-------------------------|-------------|--|
| | kg/min. | |
| Seeding shaft speed [%] | | |
| 2 | 0.54 | |
| 5 | 0.87 | |
| 10 | 1.41 | |
| 15 | 1.96 | |
| 20 | 2.51 | |
| 25 | 3.06 | |
| 30 | 3.61 | |
| 35 | 4.16 | |
| 40 | 4.71 | |
| 45 | 5.26 | |
| 50 | 5.81 | |
| 55 | 6.70 | |
| 60 | 7.59 | |
| 65 | 8.48 | |
| 70 | 9.38 | |
| 75 | 10.27 | |
| 80 | 11.16 | |
| 85 | 12.05 | |
| 90 | 12.95 | |
| 95 | 13.84 | |
| 100 | 14.73 | |
| Seed metering wheel | G-G-G | |

| Wheat | Application rate | | |
|-------------------------|------------------|--------------|---------|
| | kg/min. | kg/min. | kg/min. |
| Seeding shaft speed [%] | | | |
| 2 | 0.52 | 0.34 | 0.48 |
| 5 | 1.18 | 0.58 | 1.03 |
| 10 | 2.30 | 0.99 | 1.95 |
| 15 | 3.41 | 1.39 | 2.68 |
| 20 | 4.52 | 1.79 | 3.78 |
| 25 | 5.64 | 2.19 | 4.69 |
| 30 | 6.70 | 2.59 | 5.61 |
| 35 | 7.76 | 2.99 | 6.52 |
| 40 | 8.82 | 3.39 | 7.44 |
| 45 | 9.88 | 3.79 | 8.35 |
| 50 | 10.94 | 4.19 | 9.27 |
| 55 | 11.21 | 4.59 | 10.19 |
| 60 | 11.48 | 4.99 | 11.10 |
| 65 | 11.76 | 5.40 | 12.02 |
| 70 | 12.03 | 5.80 | 12.93 |
| 75 | 12.30 | 6.20 | 13.85 |
| 80 | 12.57 | 6.60 | 14.76 |
| 85 | 12.84 | 7.00 | 15.68 |
| 90 | 13.12 | 7.40 | 16.59 |
| 95 | 13.93 | 7.80 | 17.51 |
| 100 | 17.75 | 8.34 | 18.42 |
| Seed metering wheel | G-G-G | fb-Flex20-fb | Flex40 |

Seeding tables

| Buckwheat | Spread rate | | |
|-------------------------|-------------|--------------|---------|
| | kg/min. | kg/min. | kg/min. |
| Seeding shaft speed [%] | | | |
| 2 | 0.54 | 0.33 | 0.27 |
| 5 | 0.99 | 0.50 | 0.70 |
| 10 | 1.74 | 0.78 | 1.40 |
| 15 | 2.49 | 1.07 | 2.11 |
| 20 | 3.24 | 1.35 | 2.82 |
| 25 | 3.99 | 1.64 | 3.53 |
| 30 | 4.68 | 1.92 | 4.23 |
| 35 | 5.38 | 2.21 | 4.94 |
| 40 | 6.07 | 2.49 | 5.65 |
| 45 | 6.76 | 2.78 | 6.36 |
| 50 | 7.45 | 3.07 | 7.07 |
| 55 | | 3.35 | 7.77 |
| 60 | | 3.64 | 8.48 |
| 65 | | 3.92 | 9.19 |
| 70 | | 4.21 | 9.90 |
| 75 | | 4.49 | 10.60 |
| 80 | | 4.78 | 11.31 |
| 85 | | 5.06 | 12.02 |
| 90 | | 5.35 | 12.73 |
| 95 | | 5.63 | 13.44 |
| 100 | | 5.92 | 14.14 |
| Seed metering wheel | G-G-G | fb-Flex20-fb | Flex40 |

| Oats | Spread rate | |
|-------------------------|--------------------|---------|
| | kg/min. | kg/min. |
| Seeding shaft speed [%] | kg/min. | kg/min. |
| 2 | 0.01 | 0.15 |
| 5 | 0.02 | 0.46 |
| 10 | 0.04 | 0.98 |
| 15 | 0.06 | 1.50 |
| 20 | 0.07 | 2.02 |
| 25 | 0.09 | 2.54 |
| 30 | 0.12 | 3.03 |
| 35 | 0.14 | 3.52 |
| 40 | 0.17 | 4.01 |
| 45 | 0.19 | 4.50 |
| 50 | 0.22 | 4.99 |
| 55 | 0.23 | 5.42 |
| 60 | 0.24 | 5.85 |
| 65 | 0.25 | 6.29 |
| 70 | 0.26 | 6.72 |
| 75 | 0.27 | 7.15 |
| 80 | 0.27 | 7.58 |
| 85 | 0.27 | 8.02 |
| 90 | 0.27 | 8.45 |
| 95 | 0.28 | 8.73 |
| 100 | 0.31 | 10.23 |
| Seed metering wheel | fb-f-fb-fb | G-G-G |

| Rapeseed | Spread rate | |
|-------------------------|--------------------|---------------|
| | kg/min. | kg/min. |
| Seeding shaft speed [%] | kg/min. | kg/min. |
| 2 | 0.11 | 0.01 |
| 5 | 0.21 | 0.02 |
| 10 | 0.38 | 0.05 |
| 15 | 0.55 | 0.08 |
| 20 | 0.72 | 0.10 |
| 25 | 0.89 | 0.13 |
| 30 | 1.03 | 0.16 |
| 35 | 1.18 | 0.19 |
| 40 | 1.32 | 0.22 |
| 45 | 1.47 | 0.24 |
| 50 | 1.62 | 0.27 |
| 55 | 1.69 | 0.30 |
| 60 | 1.75 | 0.33 |
| 65 | 1.82 | 0.36 |
| 70 | 1.89 | 0.38 |
| 75 | 1.96 | 0.41 |
| 80 | 2.03 | 0.44 |
| 85 | 2.10 | 0.47 |
| 90 | 2.17 | 0.50 |
| 95 | 2.30 | 0.52 |
| 100 | 2.44 | 0.55 |
| Seed metering wheel | fb-f-fb-fb | fb-efv-efv-fb |

Seeding tables

| White mustard | Spread rate | |
|-------------------------|--------------------|--|
| Seeding shaft speed [%] | kg/min. | |
| 2 | 0.04 | |
| 5 | 0.15 | |
| 10 | 0.33 | |
| 15 | 0.50 | |
| 20 | 0.68 | |
| 25 | 0.86 | |
| 30 | 1.00 | |
| 35 | 1.15 | |
| 40 | 1.29 | |
| 45 | 1.43 | |
| 50 | 1.58 | |
| 55 | 1.65 | |
| 60 | 1.72 | |
| 65 | 1.79 | |
| 70 | 1.86 | |
| 75 | 1.93 | |
| 80 | 2.00 | |
| 85 | 2.07 | |
| 90 | 2.14 | |
| 95 | 2.31 | |
| 100 | 2.48 | |
| Seed metering wheel | fb-f-fb-fb | |

| Fodder radish | Spread rate | |
|-------------------------|--------------------|--|
| Seeding shaft speed [%] | kg/min. | |
| 2 | 0.66 | |
| 5 | 1.18 | |
| 10 | 2.05 | |
| 15 | 2.92 | |
| 20 | 3.79 | |
| 25 | 4.66 | |
| 30 | | |
| 35 | | |
| 40 | | |
| 45 | | |
| 50 | | |
| 55 | | |
| 60 | | |
| 65 | | |
| 70 | | |
| 75 | | |
| 80 | | |
| 85 | | |
| 90 | | |
| 95 | | |
| 100 | | |
| Seed metering wheel | G-G-G | |

| Phacelia | Spread rate | |
|---------------------|-------------------------|---------|
| | Seeding shaft speed [%] | kg/min. |
| 2 | 0.14 | |
| 5 | 0.31 | |
| 10 | 0.61 | |
| 15 | 0.90 | |
| 20 | 1.19 | |
| 25 | 1.49 | |
| 30 | 1.52 | |
| 35 | 1.56 | |
| 40 | 1.59 | |
| 45 | 1.63 | |
| 50 | 1.66 | |
| 55 | 1.75 | |
| 60 | 1.85 | |
| 65 | 1.94 | |
| 70 | 2.04 | |
| 75 | 2.13 | |
| 80 | 2.23 | |
| 85 | 2.32 | |
| 90 | 2.42 | |
| 95 | 2.52 | |
| 100 | 2.62 | |
| Seed metering wheel | fb-f-fb-fb | |

| Grass | Spread rate | |
|---------------------|-------------------------|---------|
| | Seeding shaft speed [%] | kg/min. |
| 2 | 0.27 | |
| 5 | 0.61 | |
| 10 | 1.17 | |
| 15 | 1.73 | |
| 20 | 2.30 | |
| 25 | 2.86 | |
| 30 | 3.42 | |
| 35 | 3.98 | |
| 40 | 4.55 | |
| 45 | 5.11 | |
| 50 | 5.67 | |
| 55 | 6.23 | |
| 60 | 6.79 | |
| 65 | 7.36 | |
| 70 | 7.92 | |
| 75 | 8.48 | |
| 80 | 9.05 | |
| 85 | 9.61 | |
| 90 | 10.17 | |
| 95 | 10.73 | |
| 100 | 11.30 | |
| Seed metering wheel | G-G-G | |

Seeding tables

| Lupins | Spread rate | |
|-------------------------|-------------|--|
| | kg/min. | |
| Seeding shaft speed [%] | | |
| 2 | 0.42 | |
| 5 | 1.11 | |
| 10 | 2.26 | |
| 15 | 3.41 | |
| 20 | 4.56 | |
| 25 | 5.71 | |
| 30 | 6.87 | |
| 35 | 8.03 | |
| 40 | 9.19 | |
| 45 | 10.35 | |
| 50 | 11.51 | |
| 55 | 12.48 | |
| 60 | 13.44 | |
| 65 | 14.41 | |
| 70 | 15.37 | |
| 75 | 16.33 | |
| 80 | 17.30 | |
| 85 | 18.26 | |
| 90 | 19.23 | |
| 95 | 21.71 | |
| 100 | 24.20 | |
| Seed metering wheel | G-G-G | |

| Lucerne | Spread rate | |
|-------------------------|-------------|--|
| | kg/min. | |
| Seeding shaft speed [%] | | |
| 2 | 0.10 | |
| 5 | 0.21 | |
| 10 | 0.40 | |
| 15 | 0.60 | |
| 20 | 0.79 | |
| 25 | 0.98 | |
| 30 | 1.15 | |
| 35 | 1.32 | |
| 40 | 1.49 | |
| 45 | 1.65 | |
| 50 | 1.82 | |
| 55 | 1.86 | |
| 60 | 1.90 | |
| 65 | 1.93 | |
| 70 | 1.97 | |
| 75 | 2.01 | |
| 80 | 2.04 | |
| 85 | 2.08 | |
| 90 | 2.12 | |
| 95 | 2.24 | |
| 100 | 2.36 | |
| Seed metering wheel | fb-f-fb-fb | |

| Red clover | Spread rate | |
|---------------------|-------------------------|---------|
| | Seeding shaft speed [%] | kg/min. |
| 2 | 0.04 | |
| 5 | 0.15 | |
| 10 | 0.33 | |
| 15 | 0.51 | |
| 20 | 0.70 | |
| 25 | 0.88 | |
| 30 | 1.06 | |
| 35 | 1.23 | |
| 40 | 1.41 | |
| 45 | 1.58 | |
| 50 | 1.76 | |
| 55 | 1.82 | |
| 60 | 1.87 | |
| 65 | 1.93 | |
| 70 | 1.98 | |
| 75 | 2.04 | |
| 80 | 2.09 | |
| 85 | 2.15 | |
| 90 | 2.20 | |
| 95 | 2.33 | |
| 100 | 2.46 | |
| Seed metering wheel | fb-f-fb-fb | |

| Vetches | Spread rate | |
|---------------------|-------------------------|---------|
| | Seeding shaft speed [%] | kg/min. |
| 2 | 0.76 | |
| 5 | 1.42 | |
| 10 | 2.51 | |
| 15 | 3.61 | |
| 20 | 4.71 | |
| 25 | 5.81 | |
| 30 | | |
| 35 | | |
| 40 | | |
| 45 | | |
| 50 | | |
| 55 | | |
| 60 | | |
| 65 | | |
| 70 | | |
| 75 | | |
| 80 | | |
| 85 | | |
| 90 | | |
| 95 | | |
| 100 | | |
| Seed metering wheel | fb-f-fb-fb | |

Seeding tables

| Peas | Spread rate | |
|-------------------------|--------------|---------|
| | kg/min. | kg/min. |
| Seeding shaft speed [%] | kg/min. | kg/min. |
| 2 | 0.46 | 0.95 |
| 5 | 0.67 | 1.45 |
| 10 | 1.02 | 2.29 |
| 15 | 1.37 | 3.12 |
| 20 | 1.72 | 3.96 |
| 25 | 2.07 | 4.80 |
| 30 | 2.42 | 5.63 |
| 35 | 2.77 | 6.47 |
| 40 | 3.12 | 7.30 |
| 45 | 3.48 | 8.14 |
| 50 | 3.83 | 8.98 |
| 55 | 4.18 | 9.81 |
| 60 | 4.53 | 10.65 |
| 65 | 4.88 | 11.49 |
| 70 | 5.23 | 12.32 |
| 75 | 5.58 | 13.16 |
| 80 | 5.93 | 13.99 |
| 85 | 6.28 | 14.83 |
| 90 | 6.64 | 15.67 |
| 95 | 6.99 | 16.50 |
| 100 | 7.34 | 17.34 |
| Seed metering wheel | fb-Flex20-fb | Flex40 |

| Field (broad) beans | Application rate | |
|-------------------------|------------------|---------|
| | kg/min. | kg/min. |
| Seeding shaft speed [%] | kg/min. | kg/min. |
| 2 | 0.46 | 1.02 |
| 5 | 0.66 | 1.57 |
| 10 | 1.00 | 2.49 |
| 15 | 1.34 | 3.40 |
| 20 | 1.68 | 4.32 |
| 25 | 2.02 | 5.23 |
| 30 | 2.36 | 6.15 |
| 35 | 2.70 | 7.06 |
| 40 | 3.04 | 7.98 |
| 45 | 3.38 | 8.89 |
| 50 | 3.71 | 9.81 |
| 55 | 4.05 | 10.72 |
| 60 | 4.39 | 11.64 |
| 65 | 4.73 | 12.55 |
| 70 | 5.07 | 13.47 |
| 75 | 5.41 | 14.38 |
| 80 | 5.75 | 15.30 |
| 85 | 6.09 | 16.21 |
| 90 | 6.43 | 17.13 |
| 95 | 6.77 | 18.05 |
| 100 | 7.11 | 18.96 |
| Seed metering wheel | fb-Flex20-fb | Flex40 |



AMAZONEN-WERKE

H. DREYER SE & Co. KG

Postfach 51
D-49202 Hasbergen-Gaste
Germany

Tel.: + 49 (0) 5405 501-0
email: amazone@amazone.de
http:// www.amazone.de

