



Translation of the original operating instructions

Rotary cultivator

KG 4002-2

KG 5002-2

KG 6002-2



SmartLearning



Please enter the identification data of the implement. The identification data can be found on the rating plate.

TABLE OF CONTENTS

1	About this operating manual	1	4.5.2	Layout of the warning symbols	26
1.1	Copyright	1	4.5.3	Description of the warning symbols	27
1.2	Diagrams	1	4.6	Threaded cartridge	32
1.2.1	Warnings and signal words	1	4.7	3-point mounting frame	32
1.2.2	Further instructions	2	4.8	Rating plate on the implement	33
1.2.3	Instructions	2	4.9	Universal operating tool	33
1.2.4	Lists	4	4.10	Universal joint shaft locking mechanism	34
1.2.5	Item numbers in figures	4	4.11	Lighting and identification for road travel	34
1.2.6	Direction information	4	4.11.1	Rear lighting and identification for road travel	34
1.3	Other applicable documents	4	4.11.2	Front lighting and identification	35
1.4	Digital operating manual	4	4.11.3	Additional license plate	35
1.5	Your opinion is important	4	4.12	T-Pack tyre packer	36
2	Safety and responsibility	5	4.13	Rollers	36
2.1	Basic safety instructions	5	4.13.1	AMAZONE rollers	36
2.1.1	Safe operating organisation	5	4.13.2	Packer rollers from other manufacturers	37
2.1.2	Knowing and preventing dangers	9	4.14	Oil cooler	37
2.1.3	Safe operation and handling of the machine	11	5	Technical data	38
2.1.4	Safe maintenance and modification	13	5.1	Dimensions	38
2.2	Safety routines	17	5.2	Permissible total weight	38
3	Intended use	19	5.3	Mounting category	38
4	Product description	20	5.4	Working speed	38
4.1	Implement overview	20	5.5	Working depth	39
4.2	Function of the implement	21	5.6	Performance characteristics of the tractor	39
4.3	Special equipment	22	5.7	Noise development data	40
4.4	Protective equipment	23	5.8	Drivable slope inclination	40
4.4.1	Universal joint shaft guard	23	5.9	Lubricants	40
4.4.2	Tool protection	23	5.10	Oils and filling capacities	40
4.4.3	Frame transport lock	24	5.11	Maximum transport speed	42
4.4.4	Roller transport lock	24			
4.5	Warning symbols	25			
4.5.1	Positions of the warning symbols	25			

5.12	Permissible payload	42	6.9.1	Folding in the track marker	71
			6.9.2	Folding the implement	71
			6.9.3	Coupling the transport frame	72
			6.9.4	Transport width with installed potato tines	73
			6.9.5	Telescoping the track marker	74
			6.9.6	Fixing the T-Pack tyre packer	74
6	Preparing the machine	43	7	Using the machine	76
6.1	Calculating the required tractor characteristics	43	7.1	Uncoupling the transport frame	76
6.2	Attaching the backstop profiles for the lower links	46	7.2	Unfolding the implement	77
6.3	Preparing the universal joint shaft	46	7.3	Using the implement	77
6.4	Installing the universal joint shaft on the implement	47	7.4	Checking the set working depth	78
6.5	Using the centre line eradicator	48	7.5	Turning on the headlands	78
6.6	Using the hydraulic top link	48	7.6	Using the track marker	78
6.7	Coupling the implement	49	8	Eliminating faults	79
6.7.1	Driving the tractor towards the implement	49	9	Parking the machine	83
6.7.2	Coupling the 3-point mounting frame	50	9.1	Unfolding the implement	83
6.7.3	Coupling the hydraulic hose lines	50	9.2	Lowering the implement	84
6.7.4	Coupling the power supply	52	9.3	Uncoupling the power supply	84
6.7.5	Coupling the universal joint shaft	52	9.4	Uncoupling the additional fan power supply	85
6.7.6	Coupling the power supply for additional fan	53	9.5	Disconnecting the hydraulic hose lines	85
6.8	Preparing the implement for operation	54	9.6	Uncoupling the universal joint shaft	86
6.8.1	Adjusting the speed of the tines	54	9.7	Uncoupling the 3-point mounting frame	86
6.8.2	Adjusting the section end position	56	10	Repairing the machine	87
6.8.3	Using the centre line eradicator	57	10.1	Maintaining the machine	87
6.8.4	Manual adjustment of the tine working depth	57	10.1.1	Maintenance schedule	87
6.8.5	Hydraulic adjustment of the tine working depth	60	10.1.2	Checking the lower link pins and top link pins	88
6.8.6	Adjusting the working height of the levelling board	61	10.1.3	Checking the hydraulic hose lines	89
6.8.7	Adjusting the working depth of the side guide plates	62	10.1.4	Checking the wheel bolt tightening torque	89
6.8.8	Adjusting the T-Pack tyre packer	63	10.1.5	Checking the tyre inflation pressure	90
6.8.9	Preparing the wheel mark eradicator for operation	64	10.1.6	Checking the tines	90
6.8.10	Preparing the track marker for operation	67			
6.8.11	Adjusting the spring tension of the side guide plates	69			
6.8.12	Adjusting the scraper to the roller	70			
6.9	Preparing the machine for road travel	71			

10.1.7	Replacing the tines	91
10.1.8	Checking the oil level in the manual transmission	92
10.1.9	Checking the oil level in the angular gearbox	92
10.1.10	Checking the oil level in the spur gear trough	93
10.1.11	Changing the oil of the manual transmission	94
10.1.12	Changing the oil of the angular gearbox	95
10.1.13	Replacing the oil filter	96
10.1.14	Checking the wheel mark eradicator coulter	97
10.1.15	Ratchet clutch maintenance	97
10.1.16	Universal joint shaft maintenance	98
10.2	Lubricating the implement	99
10.2.1	Overview of lubrication points	100
10.3	Cleaning the implement	102

11 Disposing of the implement 103

12 Loading the implement 104

12.1	Loading the implement with a crane	104
12.2	Lashing the implement	105

13 Appendix 106

13.1	Bolt tightening torques	106
13.2	Other applicable documents	107

14 Directories 108

14.1	Glossary	108
14.2	Index	109

About this operating manual

1

CMS-T-00000081-H.1

1.1 Copyright

CMS-T-00012308-A.1

Reprinting, translation and reproduction in any form, including excerpts, require the written approval of AMAZONEN-WERKE.

1.2 Diagrams

CMS-T-005676-F.1

1.2.1 Warnings and signal words

CMS-T-00002415-A.1

Warnings are marked with a vertical bar with a triangular safety symbol and the signal word. The signal words *"DANGER"*, *"WARNING"* or *"CAUTION"* describe the severity of the potential danger and have the following meanings:



DANGER

- Indicates a direct threat with high risk for severe physical injury, such as loss of limbs or death.



WARNING

- Indicates a possible threat with moderate risk for severe physical injury or death.



CAUTION

- Indicates a threat with low risk for light or moderately severe physical injuries.

1.2.2 Further instructions

CMS-T-00002416-A.1



IMPORTANT

- Indicates a risk for damage to the implement.



ENVIRONMENTAL INFORMATION

- Indicates a risk for environmental damage.



NOTE

Indicates application tips and instructions for optimal use.

1.2.3 Instructions

CMS-T-00000473-D.1

1.2.3.1 Numbered instructions

CMS-T-005217-B.1

Actions that have to be performed in a specific sequence are represented as numbered instructions. The specified sequence of the actions must be observed.

Example:

1. Instruction 1
2. Instruction 2

1.2.3.2 Instructions and responses

CMS-T-005678-B.1

Reactions to instructions are marked with an arrow.

Example:

1. Instruction 1
 - ➡ Reaction to instruction 1
2. Instruction 2

1.2.3.3 Alternative instructions

CMS-T-00000110-B.1

Alternative instructions are introduced with the word "or".

Example:

1. Instruction 1

or

Alternative instruction

2. Instruction 2

1.2.3.4 Instructions with only one action

CMS-T-005211-C.1

Instructions with only one action are not numbered, but rather shown with a arrow.

Example:

► Instruction

1.2.3.5 Instructions without sequence

CMS-T-005214-C.1

Instructions that do not require a specific sequence are shown as a list with arrows.

Example:


► Instruction

► Instruction

► Instruction

1.2.3.6 Workshop work

CMS-T-00013932-B.1



WORKSHOP WORK

- Identifies maintenance work that must be performed at a workshop that is adequately equipped in terms of agricultural technology, safety and environmental technology by specialist personnel with appropriate training.

1.2.4 Lists

CMS-T-000024-A.1

Lists without an essential order are shown as a list with bullets.

Example:

- Point 1
- Point 2

1.2.5 Item numbers in figures

CMS-T-000023-B.1

A framed number in the text, e.g. a 1, indicates an item number in an adjacent figure.

1.2.6 Direction information

CMS-T-00012309-A.1

Unless otherwise specified, all directions are always seen in the direction of travel.

1.3 Other applicable documents

CMS-T-00000616-B.1

A list of other applicable documents can be found in the Appendix.

1.4 Digital operating manual

CMS-T-00002024-B.1

The digital operating manual and e-learning can be downloaded from the Info Portal on the AMAZONE website.

1.5 Your opinion is important

CMS-T-000059-C.1

Dear reader, our operating manuals are updated regularly. Your suggestions for improvement help us to create ever more user-friendly operating manuals. Please send us your suggestions by post, fax or email.

AMAZONEN-WERKE H. Dreyer SE & Co. KG
Technische Redaktion
Postfach 51
D-49202 Hasbergen

Fax: +49 (0) 5405 501-234
E-Mail: td@amazone.de

Safety and responsibility

2

CMS-T-00004173-F.1

2.1 Basic safety instructions

CMS-T-00004174-F.1

2.1.1 Safe operating organisation

CMS-T-00002302-D.1

2.1.1.1 Personnel qualification

CMS-T-00002306-B.1

2.1.1.1.1 Requirements for persons working with the implement

CMS-T-00002310-B.1

If the implement is used improperly, people can be injured or killed: To prevent accidents due to improper use, every person who works with the implement must meet the following minimum requirements:

- The person is physically and mentally capable of checking the implement.
- The person can safely perform work with the machine within the scope of this operating manual.
- The person understands the functioning of the machine within the scope of their work and can recognise and prevent dangers arising during operation.
- The person has understood the operating manual and can implement the information that is conveyed in the operating manual.
- The person must be familiar with safe driving of vehicles.
- For road travel, the person knows the relevant road traffic regulations and has the prescribed driving permit.

2.1.1.1.2 Qualification levels

CMS-T-00002311-A.1

For working with the machine, the following qualification levels are provided:

- Farmer
- Agricultural helper

As a matter of principle, the activities described in this operating manual can be performed by persons with the qualification level "Agricultural helper".

2.1.1.1.3 Farmer

CMS-T-00002312-A.1

Farmers use agricultural implement to cultivate fields. They decide on the use of an implement for a specific purpose.

Farmers are basically familiar with working with agricultural implements and can instruct agricultural helpers in how to use the implements if necessary. They can perform odd tasks and simple maintenance and repair work on agricultural implements themselves.

Farmers can be e.g.:

- Farmers with higher education or training from a technical college
- Farmers by experience (e.g. inherited farm, comprehensive practical knowledge)
- Contractors who work by order of farmers

Activity example:

- Safety training for agricultural helpers

2.1.1.1.4 Agricultural helpers

CMS-T-00002313-A.1

Agricultural helpers use agricultural implements by order of the farmer. They are instructed on the use of the implement by the farmer, and work independently according to the work assignment from the farmer.

Agricultural helpers can be e.g.:

- Seasonal workers and labourers
- Prospective farmers in training
- Employees of the farmer (e.g. tractor driver)
- Family members of the farmer

Activity examples:

- Driving the machine
- Adjusting the working depth

2.1.1.2 Workplaces and passengers

CMS-T-00002307-B.1

Passengers

Passengers can fall, be run over and severely injured or killed due to machine movements. Ejected objects can hit and injure passengers.

- ▶ Do not let anybody ride on the machine.
- ▶ Do not let anybody climb onto the driving machine.

2.1.1.3 Danger for children

CMS-T-00002308-A.1

Danger for children

Children cannot assess dangerous situations and can behave unpredictably. As a result, children are at a higher risk.

- ▶ Keep children away.
- ▶ *When you drive out or actuate machine movements,*
make sure that there are no children in the danger area.

2.1.1.4 Operational safety

CMS-T-00002309-D.1

2.1.1.4.1 Perfect technical condition

CMS-T-00002314-D.1

Only use properly prepared machines

Without correct preparation according to this operating manual, operational safety of the machine is not ensured. This can result in accidents and serious personal injury or even death.

- ▶ Prepare the machine according to this operating manual.

Danger due to damage to the machine

Damage to the machine can impede the operational safety of the machine and cause accidents. This can result in serious injury or death.

- ▶ *If you suspect or observe damage:*
Secure the tractor and machine.
- ▶ Repair safety-relevant damage immediately.
- ▶ Fix the damage according to this operating manual.
- ▶ *If you are not able to fix the damage according to this operating manual yourself:*
Have the damage repaired by a qualified specialist workshop.

Observe the technical limit values

Non-observance of the technical limits values of the machine can result in accidents and serious personal injury or even death. Moreover, the machine can be damaged. The technical limit values can be found in the Technical Data.

- ▶ Comply with the technical limit values.

2.1.1.4.2 Personal protective equipment

CMS-T-00002316-B.1

Personal protective equipment

Wearing personal protective equipment is an important safety element. Missing or unsuitable personal protective equipment increases the risk of damage to health and personal injury. Personal protective equipment includes: work gloves, safety shoes, protective clothing, breathing protection, hearing protection, face protection, and eye protection

- ▶ Determine the personal protective equipment required for each job and have it ready.
- ▶ Use only protective equipment that is in proper condition and offers effective protection.
- ▶ Adjust the personal protective equipment to the person, e.g. the size.
- ▶ Observe the manufacturer's instructions regarding operating materials, seed, fertiliser, crop protection products, and cleaning agents.

Wear suitable clothing

Loosely worn clothing increases the risk of getting caught or entangled on rotating parts and getting stuck on protruding parts. This can result in serious injury or death.

- ▶ Wear close-fitting, snag-free clothes.
- ▶ Never wear rings, necklaces and other jewellery.
- ▶ *If you have long hair,*
wear a hairnet.

2.1.1.4.3 Warning symbols

CMS-T-00002317-B.1

Keep warning symbols legible

Warning symbols on the machine warn you of risks in danger areas and are an important element of the machine's safety equipment. Missing warning symbols increase the risk of serious and lethal personal injury.

- ▶ Clean dirty warning symbols.
- ▶ Immediately replace any damaged and illegible warning symbols.
- ▶ Put the intended warning symbols on spare parts.

2.1.2 Knowing and preventing dangers

CMS-T-00004917-D.1

2.1.2.1 Safety hazards on the implement

CMS-T-00004919-C.1

Liquids under pressure

Escaping high pressure hydraulic fluid can penetrate into the body through the skin and cause serious personal injuries. A hole the size of a needle can already result in serious personal injuries.

- ▶ *Before you uncouple the hydraulic hose lines or check for damage,*
depressurise the hydraulic system.
- ▶ *If you suspect damage on a pressure system,*
have the pressure system checked by a qualified specialist workshop.
- ▶ Never look for leaks with your bare hands.
- ▶ Keep your body and face away from leaks.
- ▶ *If liquids penetrate the body,*
consult a doctor immediately.

Risk of injury on the universal joint shaft

Persons can be caught, pulled in and severely injured by the universal joint shaft and driven components. If the universal joint shaft is overloaded, the implement can be damaged, parts can be ejected at high speed, and persons can be injured.

- ▶ Maintain sufficient coverage of the profile tube, universal joint shaft guard and PTO shaft protective cap.
- ▶ Maintain the direction of rotation and the permissible speed of the universal joint shaft.
- ▶ *If the universal joint shaft is angled down too strongly:*
Switch off the universal joint shaft drive.
- ▶ *If you do not need the universal joint shaft:*
Switch off the universal joint shaft drive.

Risk of injury on the PTO shaft

Persons can be caught, pulled in and severely injured by the PTO shaft and driven components. If the PTO shaft is overloaded, the implement can be damaged, parts can be ejected at high speed, and persons can be injured.

- ▶ Maintain sufficient coverage of the profile tube, universal joint shaft guard and PTO shaft protective cap.
- ▶ Allow the locks on the PTO shaft to engage.
- ▶ *To secure the universal joint shaft guard against rotating:*
Hook on the safety chains.
- ▶ *To secure the coupled hydraulic pump against rotating:*
Put on the torque support.
- ▶ Maintain the direction of rotation and the permissible speed of the PTO shaft.
- ▶ *To prevent implement damage due to torque peaks:*
Slowly couple the PTO shaft at low tractor engine speed.

Danger due to machine parts still running

When the drives are switched off, machine parts can continue running and cause serious personal injury or death.

- ▶ Before approaching the machine, wait until any machine parts that are still running have come to a stop.
- ▶ Only touch machine parts that are standing still.

2.1.2.2 Danger areas

CMS-T-00004918-B.1

Dangers areas on the machine

The following basic dangers are encountered in the danger areas:

The implement and its work tools move during operation.


Hydraulically raised machine parts can descend unnoticed and slowly.

The tractor and implement can roll away unintentionally.

Materials or foreign objects can be ejected out of or away from the implement.

If the danger area is not observed, it can result in serious personal injury or death.

- ▶ Keep people out of the danger area of the machine.
- ▶ *If people enter the danger area, immediately switch off the engines and drives.*
- ▶ *Before you work in the danger area of the implement, secure the tractor and implement. This also applies for quick checking work.*

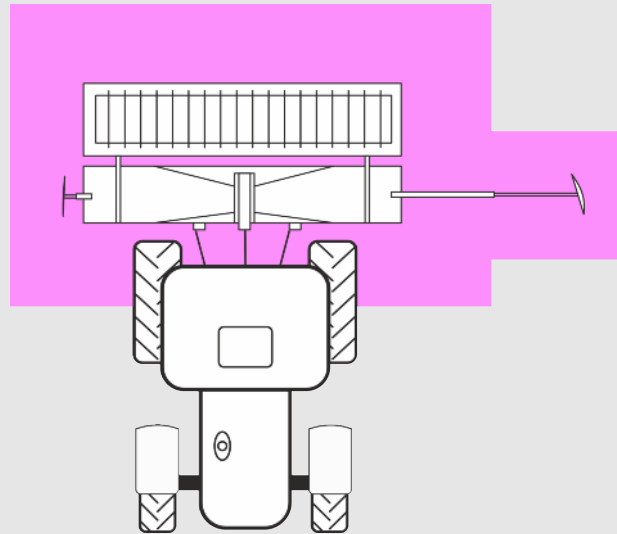

CMS-I-00003509

2.1.3 Safe operation and handling of the machine

CMS-T-00002304-I.1

2.1.3.1 Coupling implements

CMS-T-00002320-D.1

Coupling the implement on the tractor

Incorrectly coupling of the implement to the tractor results in hazards that can cause serious accidents.

There are crushing and shear points in the area of the coupling points between the tractor and the implement.

- ▶ *If you couple or uncouple the implement to or from the tractor, be very careful.*
- ▶ Use only suitable tractors for coupling and transporting the implement.
- ▶ *When the implement is coupled onto the tractor, make sure that the tractor's connecting device meets the implement requirements.*
- ▶ Couple the implement properly to the tractor.

2.1.3.2 Driving safety

CMS-T-00002321-E.1

Risk when driving on roads and fields

Any mounted or towed implement as well as front or rear ballast weights on the tractor influence the driving behaviour and the steering and braking power of the tractor. The driving characteristics also depend on the operating condition, the fill level of the load, and on the ground. If the driver does not take account of changing driving characteristics, he can cause accidents.

- ▶ Always ensure that the tractor's steering and braking systems are operating correctly.
- ▶ *The tractor must provide the required brake lag for the tractor and mounted implement.*
Check the function of the brakes before moving off.
- ▶ *The tractor front axle must always be loaded with at least 20 % of the empty tractor weight to ensure sufficient steering power.*
Use front ballast weights if necessary.
- ▶ Always attach the front or rear ballast weights properly on the specified fixing points.
- ▶ Calculate and observe the permitted payload for the mounted or towed implement.
- ▶ Observe the permissible axle loads and drawbar loads of the tractor.
- ▶ Observe the permissible drawbar load of the hitch device and drawbar.
- ▶ Drive in such a way that you always have full control over the tractor with the mounted or towed implement. In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor, and the influence of the mounted implement.

When driving on roads, risk of accident caused by uncontrolled lateral motions of the implement

- ▶ Lock the tractor lower links for road travel.

Preparing the machine for road travel

If the machine is not properly prepared for road travel, it can result in serious traffic accidents.

- ▶ Check the lighting and identification for road travel for proper function.
- ▶ Remove coarse dirt from the implement.
- ▶ Follow the instructions in the section "Preparing the implement for road travel".

Parking the implement

The parked machine can tip over. People can be crushed and killed.

- ▶ Only park the machine on stable and even ground.
- ▶ *Before you perform setting or maintenance work,*
make sure that the implement is in a stable position. In case of doubt, support the implement.
- ▶ Follow the instructions in the section "*Parking the implement*".

Unsupervised parking

Parked tractors with coupled implements that are insufficiently secured and unsupervised represent danger for people and playing children.

- ▶ *Before you leave the machine,*
shutdown the tractor and the implement.
- ▶ Secure the tractor and machine.

2.1.4 Safe maintenance and modification

CMS-T-00002305-F.1

2.1.4.1 Changes on the implement

CMS-T-00002322-B.1

Only authorised design changes

Design changes and extensions can impede the functioning and operational safety of the machine. This can result in serious injury or death.

- ▶ Have any design changes and extensions performed only by a qualified specialist workshop.
- ▶ *To ensure that the operating permit remains valid in accordance with national and international regulations,*
ensure that the specialist workshop only uses conversion parts, spare parts and special equipment approved by AMAZONE.

2.1.4.2 Work on the machine

CMS-T-00002323-E.1

Only work on the machine when it is at a standstill

If the machine is not standing still, part can move unintentionally or the machine can be set in motion. This can result in serious injury or death.

- ▶ Before performing any work on the machine, shutdown and secure the machine.
- ▶ *To immobilise the machine,*
perform the following tasks.
- ▶ If necessary, secure the machine against rolling away with wheel chocks.
- ▶ Lower lifted loads down to the ground.
- ▶ Relieve the pressure in the hydraulic hose lines.
- ▶ *If you have to work on or under raised loads,*
lower the loads or secure raised machine parts with a hydraulic or mechanical locking device.
- ▶ Switch off all drives.
- ▶ Actuate the parking brake.
- ▶ Particularly on slopes, additionally secure the machine against rolling away with wheel chocks.
- ▶ Remove the ignition key and carry it with you.
- ▶ Remove the key from the battery circuit breaker.
- ▶ Wait until all parts that are still running come to a stop and that hot parts cool down.

Maintenance work

Improper maintenance work, particularly on safety-related components, endangers operational safety. This can result in accidents and serious personal injury or even death. Safety-related components include, for example, hydraulic components, electronic components, frames, springs, trailer coupling, axles and axle suspensions, lines and tanks containing flammable substances.

- ▶ *Before you adjust, maintain or clean the machine,* secure the machine.
- ▶ Repair the machine according to this operating manual.
- ▶ Only perform the work that is described in this operating manual.
- ▶ Have maintenance work that is labelled as "*WORKSHOP WORK*" performed at a workshop that is adequately equipped in terms of agricultural technology, safety and environmental technology by specialist personnel with appropriate training.
- ▶ Never perform welding, drilling, sawing, grinding, and cutting work on the frame, running gear or coupling devices of the implement.
- ▶ Never modify safety-related components.
- ▶ Never drill out existing holes.
- ▶ Perform all maintenance work at the prescribed maintenance intervals.

Raised implement parts

Raised implement parts can descend unintentionally and crush or kill people.

- ▶ Never linger under raised implement parts.
- ▶ *If you have to work on or under raised machine parts,* lower the implement parts or secure the raised implement parts with a mechanical support or hydraulic locking device.

Danger due to welding work

Improper welding work, particularly on or close to safety-related components, endangers the operational safety of the implement. This can result in accidents and serious personal injury or even death. Safety-related components include, for example, hydraulic components and electronic components, frames, springs, coupling devices to the tractor such as the 3-point mounting frame, drawbars, trailer support, trailer coupling, tensioned crosspiece as well as axles and axle suspensions, lines and tanks containing flammable substances.

- ▶ Allow only qualified specialist workshops with suitably approved personnel to perform welding work on safety-related components.
- ▶ Only allow qualified personnel to perform welding work on all other components.
- ▶ *If you have doubts as to whether a component can be welded, ask a qualified specialist workshop.*
- ▶ *Before welding on the implement, uncouple the implement from the tractor.*

2.1.4.3 Operating materials

CMS-T-00002324-C.1

Unsuitable operating materials

Operating materials that do not meet AMAZONE requirements can cause implement damage and accidents.

- ▶ Only use operating material that meet the requirements in the Technical Data.

2.1.4.4 Special equipment and spare parts

CMS-T-00002325-B.1

Special equipment, accessories, and spare parts

Special equipment, accessories, and spare parts that do not meet AMAZONE requirements can impede the operational safety of the implement and cause accidents.

- ▶ Only use original parts or parts that meet AMAZONE requirements.
- ▶ *If you have any questions regarding special equipment, accessories or spare parts, contact your dealer or AMAZONE.*

2.2 Safety routines

CMS-T-00002300-C.1

Securing the tractor and implement

If the tractor and implement are not secured against unintentional starting and rolling away, the tractor and implement can be set in motion in an uncontrolled manner, and can run over, crush and kill people.

- ▶ Lower the raised implement or raised implement parts.
- ▶ Relieve pressure in the hydraulic hose lines by actuating the operating devices.
- ▶ *If you have to stand under the raised implement or components,* secure the raised implement and components against lowering with a mechanical safety support or hydraulic locking device.
- ▶ Switch off the tractor.
- ▶ Apply the tractor's parking brake.
- ▶ Remove the ignition key.

Securing the machine

After uncoupling, the implement has to be secured. If the implement and implement parts are not secured, there is a risk of personal injury due to crushing and cutting.

- ▶ Only park the implement on stable and level ground.
- ▶ *Before you depressurise the hydraulic hose lines and disconnect them from the tractor,* move the implement into working position.
- ▶ Protect people against direct contact with sharp-edged or protruding implement parts.

Make sure that the protective equipment is functional

If protective equipment is missing, damaged or removed, implement parts can cause serious personal injury or even death.

- ▶ Check the implement at least once a day for damage, proper installation, and functioning of the protective equipment.
- ▶ *If you are not sure if the protective equipment is properly installed and functional,* have the protective equipment checked by a qualified specialist workshop.
- ▶ Make sure that the protective devices are properly installed and functional before any work on the implement.
- ▶ Replace damaged protective equipment.

Climbing on and off

Negligent behaviour while climbing on and off can cause people to fall off the ladder. People who climb onto the machine without using the intended access steps can slip, fall, and suffer severe injury.

- ▶ Use only the intended access steps
- ▶ *Dirt as well operating materials can impede walking safety and stability.*
Always keep steps and platforms clean and in proper condition, so that safe stepping and standing is ensured.
- ▶ Never climb onto the machine when it is in motion.
- ▶ Climb up and down facing the machine.
- ▶ When climbing up and down, maintain 3-point contact with the access steps and handrails: always keep two hands and one foot or two feet and one hand on the machine.
- ▶ When climbing up and down, never hold onto the control elements. Accidental actuation of control elements can unintentionally activate potentially dangerous functions.
- ▶ When climbing down, never jump off of the machine.

Intended use

3

CMS-T-00005043-A.1

- The implement is intended solely for professional use for soil tillage on agricultural crop lands according to Good Agricultural Practices.
- The implement is an agricultural machine to be mounted on the 3-point power lift of a tractor that meets the technical requirements.
- The implement is suitable and intended for shallow stubble cultivation or breaking up fallow land, for seedbed preparation and incorporating catch crops or farm manure.
- The soil tillage implement may only be used with the rollers specified in the operating manual.
- When driving on public roads, the implement, depending on the provisions of the applicable road traffic regulations, can be mounted and transported at the rear of a tractor that meets the technical requirements.
- The machine may only be used and maintained by persons who fulfil the requirements. The personnel requirements are described in the section "*Personnel qualification*".
- The operating manual is part of the machine. The machine is solely intended for use in compliance with this operating manual. Uses of the machine that are not described in this operating manual can lead to serious personal injuries or even death and to machine and material damage.
- The applicable accident prevention regulations as well as generally accepted safety-related, occupational health and road traffic regulations must also be observed by the users and the owner.
- Further instructions for intended use in special cases can be requested from AMAZONE.
- Uses other than those specified under the intended use are considered as improper. The manufacturer is not liable for any damage resulting from improper use, solely the operator is responsible.


Product description

4

CMS-T-00003987-H.1


4.1 Implement overview

CMS-T-00003988-E.1

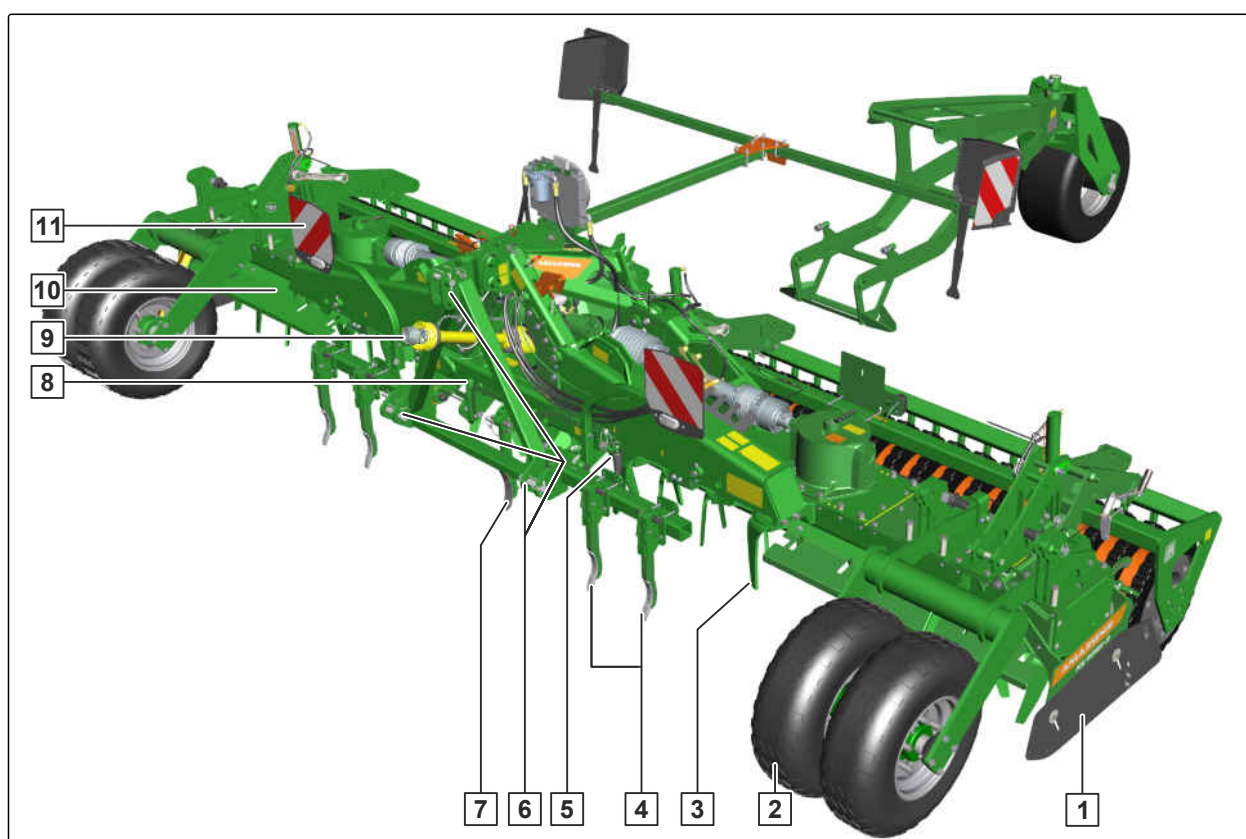

CMS-I-00002928

- | | |
|---|--|
| 1 Side guide plate | 2 T-Pack tyre packer |
| 3 Tines | 4 Wheel mark eradicator |
| 5 Transport frame locking device | 6 3-point extension |
| 7 Centre line eradicator | 8 Rating plate on the implement |
| 9 Universal joint shaft | 10 Front tool protection |
| 11 Lighting and identification for road travel | |

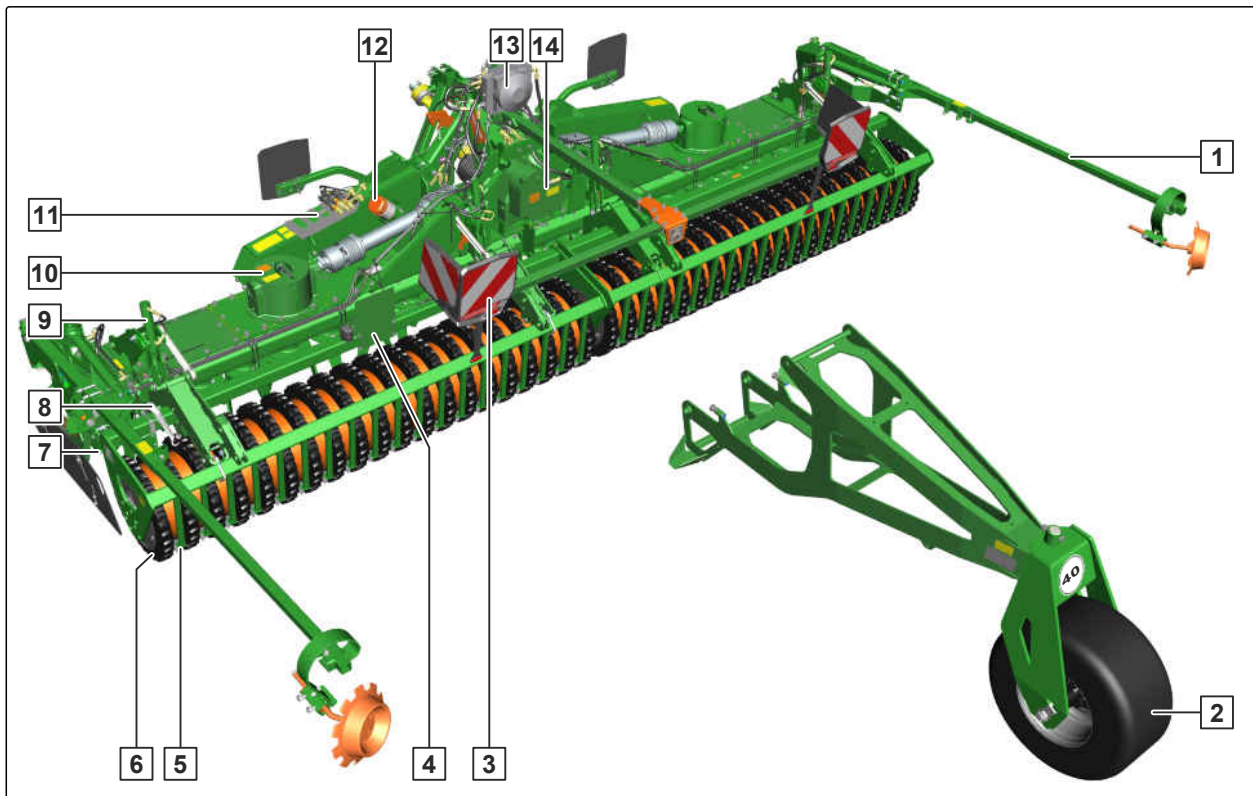

CMS-I-00003629


- | | |
|---|-----------------------------------|
| 1 Track marker | 2 Transport frame |
| 3 Levelling board working depth adjustment | 4 Licence plate holder |
| 5 Scraper | 6 Roller |
| 7 Levelling board working depth adjustment | 8 Universal operating tool |
| 9 Working depth adjustment | 10 Angular gearbox |
| 11 Hose cabinet | 12 Threaded cartridge |
| 13 Oil cooler | 14 Manual transmission |

4.2 Function of the implement

CMS-T-00003989-C.1

The tines **4** break open the soil. Organic residues **5** are intensively incorporated. The levelling board **3** levels the flow of soil between the tool tines and the roller **1**. To crush large clods of soil more effectively, the soil clods are held between the tool tines by the levelling board. The roller reconsolidates the soil and produces the finished seedbed **2**.

For operation as a seeding combination, the soil tillage implement can be combined with a seeding unit or a pack top seed drill.

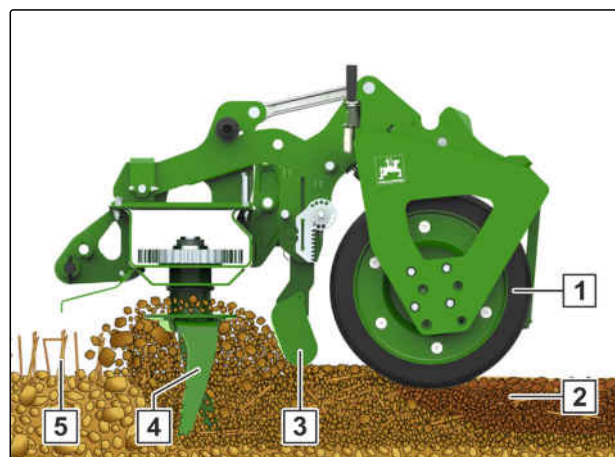


CMS-I-00002954

4 | Product description


Special equipment

On-grip tines avoid smearing horizons and have a segregating effect. As a result, the fine earth **2** is deposited in the lower area of the tilled zone and the coarse soil particles **1** remain at the surface. This protects the seedbed from capping due to rain.

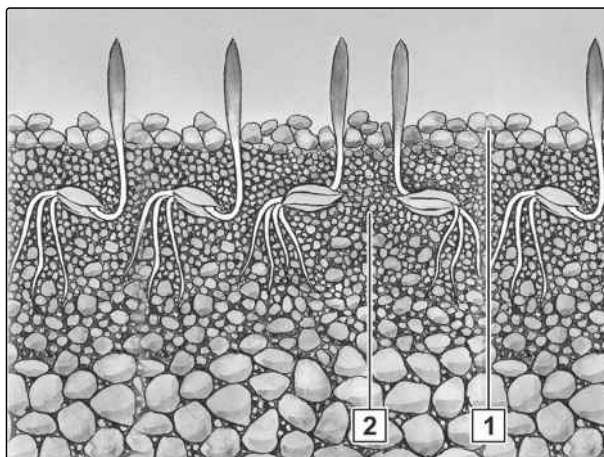

CMS-I-00002947

The tines **2** are fastened to the sockets **1** of the tool carrier. The sockets are shaped in such a way that the tines have a spring action and can deflect on rocks and other obstacles.

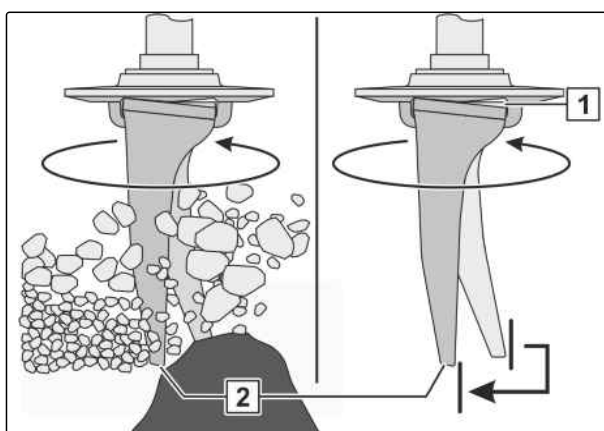

CMS-I-00002948

4.3 Special equipment

CMS-T-00003990-B.1

- Centre line eradicator
- Track marker
- Wheel mark eradicator
- Lighting and identification for road travel
- Oil cooler
- Transport frame
- Hydraulic working depth adjustment


4.4 Protective equipment

CMS-T-00003991-C.1

4.4.1 Universal joint shaft guard

CMS-T-00003992-C.1

As standard, the universal joint shafts are equipped with guard tubes **2** and protective sleeves **1**. Depending on the implement equipment, holding chains or full guard cones fix the guard tubes. This rules out the risk of winding.

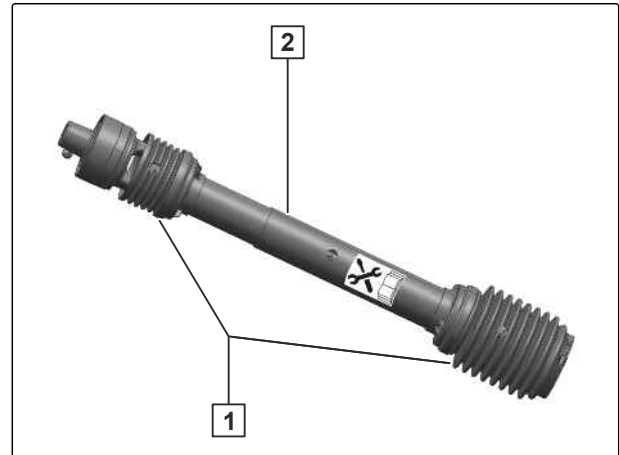


CMS-I-00002930

4.4.2 Tool protection


CMS-T-00003994-B.1

The tool guard prevents sand clods or stones from being thrown up and out of the implement. The tool guard contains side guide plates **1** and protective plates **2**.

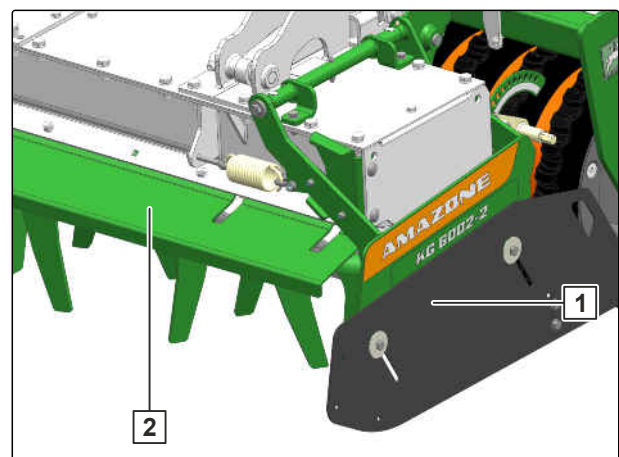

CMS-I-00003296

Towards the rear, the tool guard contains a guard tube **1** and trailing roller **2**.

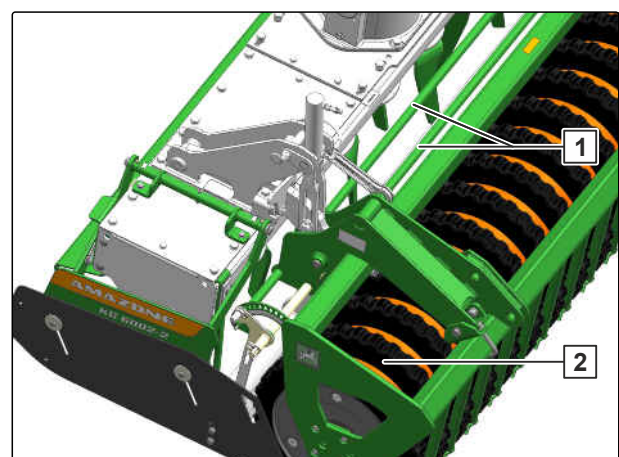


CMS-I-00003297

4.4.3 Frame transport lock

CMS-T-00003993-A.1

The transport lock **1** prevents the folding frame parts from unfolding unintentionally. The transport lock is opened with the pull rope **2**.

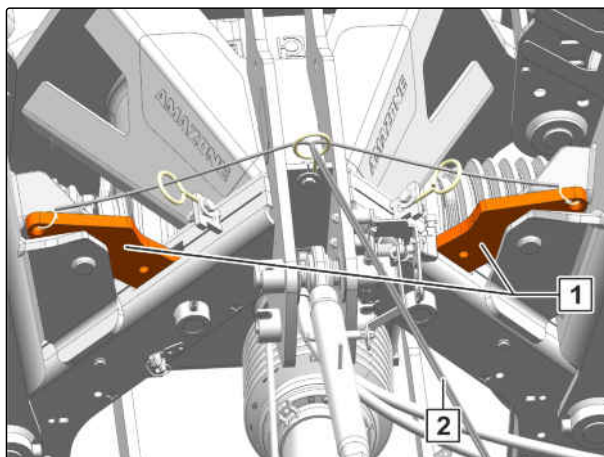


CMS-I-00002934

4.4.4 Roller transport lock


CMS-T-00004541-A.1

The transport lock **1** prevents the outer carrying arms **2** from swinging excessively with the trailing roller in the folded state.

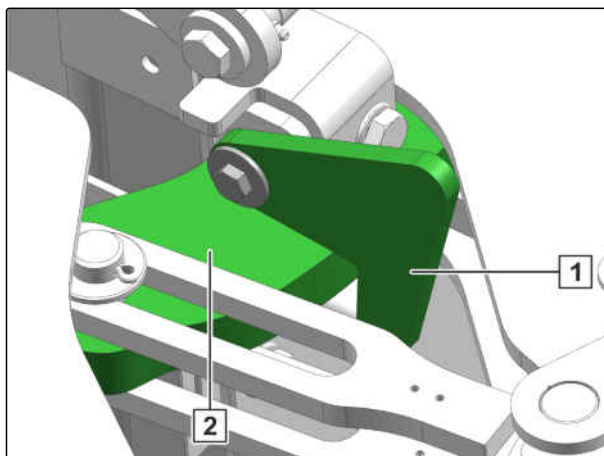

CMS-I-00002932

The transport lock **1** prevents the inner carrying arms **2** from swinging excessively with the trailing roller in the folded state.

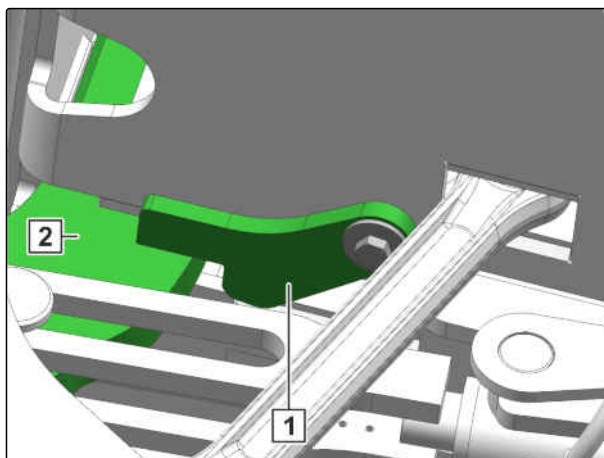


CMS-I-00002933

4.5 Warning symbols


CMS-T-00003995-G.1

4.5.1 Positions of the warning symbols

CMS-T-00003996-E.1

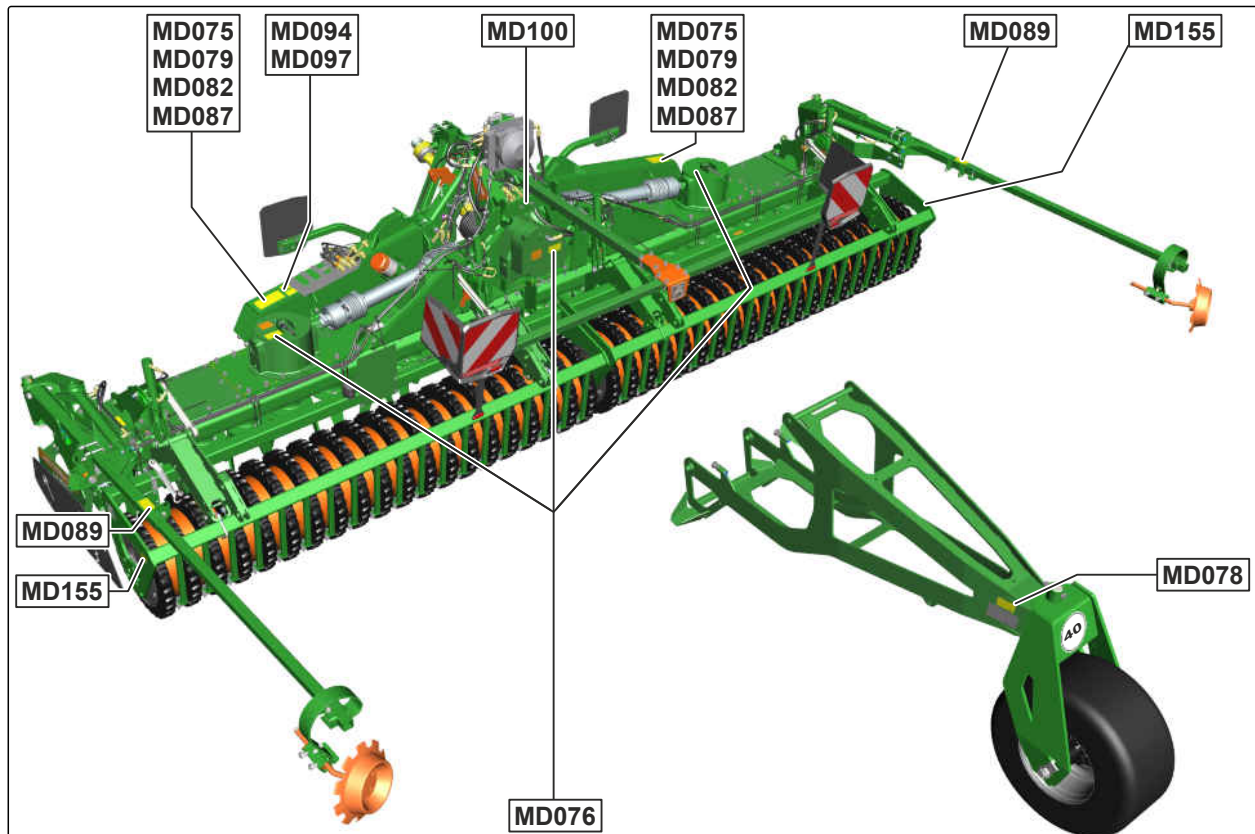

CMS-I-00002937

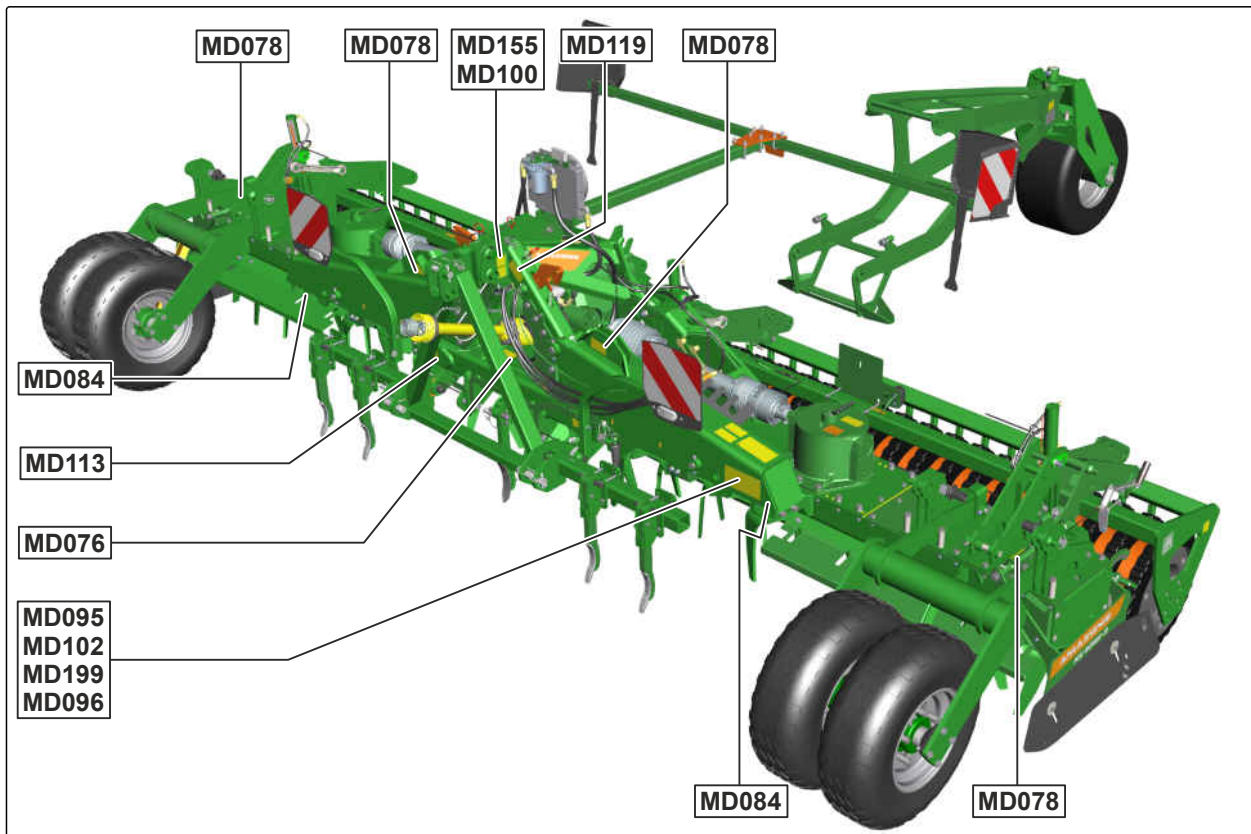

CMS-I-00002938


4.5.2 Layout of the warning symbols

CMS-T-000141-D.1

Warning symbols indicate danger areas on the machine and warn against residual dangers. In these danger areas, there are permanent or unexpected dangers.

A warning symbol consists of two fields:

- Field **1** shows the following:
 - A pictogram depicting the danger area, surrounded by triangular safety symbol
 - The order number
- Field **2** shows a pictogram depicting how to avoid the danger.

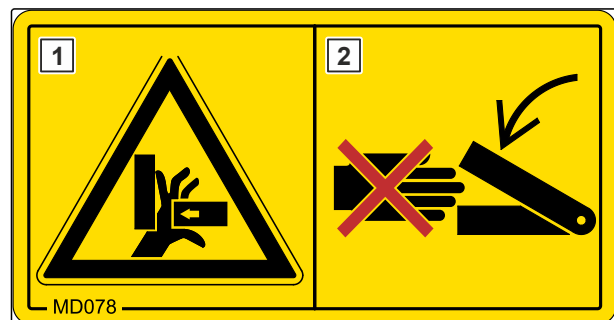

CMS-I-00000416

4.5.3 Description of the warning symbols

CMS-T-00003998-D.1

MD 075

Risk of cuts for fingers, hands, and arms

- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ Wait until all moving parts of the machine are at a standstill before reaching into the danger area.
- ▶ Make sure that there is nobody standing in the danger area.



CMS-I-00000418

MD 076

Risk of being drawn in or caught

- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ *As long as engine of the tractor or machine is running,*
do not remove any protective equipment.
- ▶ Make sure that there is nobody standing in the danger area.




CMS-I-00000419

MD 078

Risk of crushing fingers or hands

- ▶ *As long as the tractor engine or implement motor is running,*
stay away from the danger area.
- ▶ *If you have to move marked parts with your hands,*
pay attention to the crushing areas.
- ▶ Make sure that there is nobody standing in the danger area.

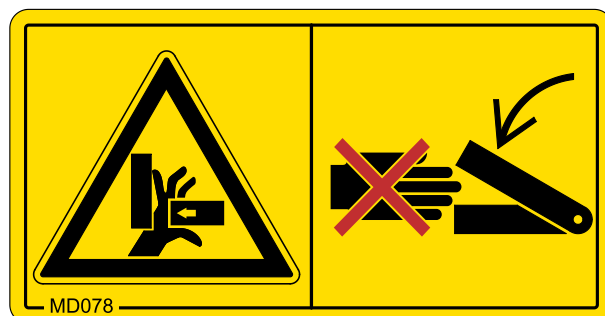


CMS-I-0000074

MD 079

Danger due to ejected material

- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ Make sure that there is nobody standing in the danger area.

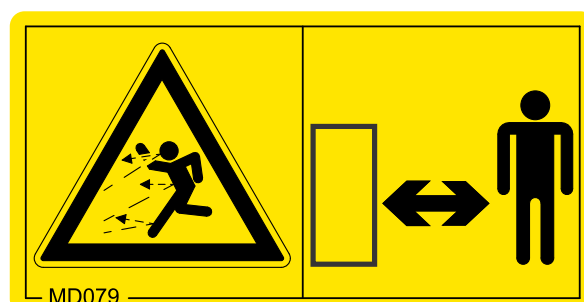


CMS-I-0000076

MD 082

Risk of falling from tread surfaces and platforms

- ▶ Do not let anybody ride on the implement.
- ▶ Do not let anybody climb onto the driving implement.

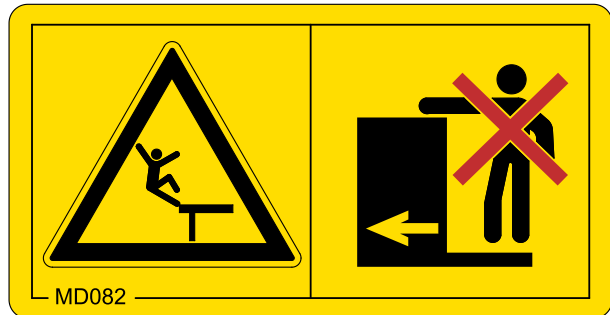

CMS-I-000081

MD 084

Risk of crushing for the whole body from lowering implement parts

- ▶ Make sure that there is nobody standing in the danger area.




CMS-I-000454

MD 087

Danger due to cutting and moving machine parts

- ▶ *As long as engine of the tractor or machine is running,* stay away from the danger area.
- ▶ Make sure that there is nobody standing in the danger area.

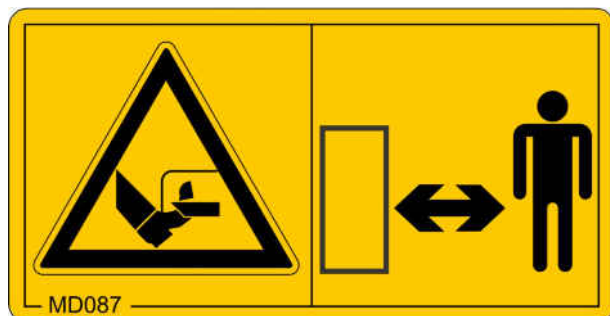


CMS-I-000691

MD094

Danger due to transmission lines

- ▶ Never touch transmission lines with the implement.
- ▶ Maintain an adequately safe distance from electrical transmission lines, especially when folding or unfolding implement parts.
- ▶ Please note that the voltage can flash over when the distance is too small.

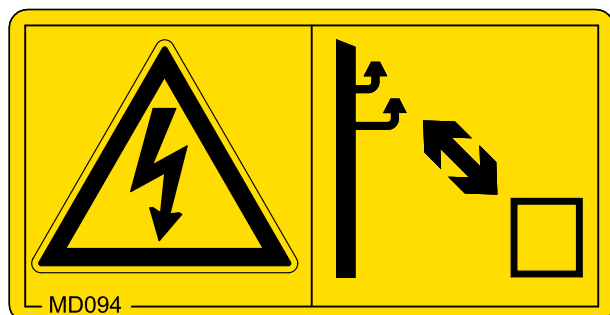

CMS-I-000692

MD095

Risk of accident due to non-compliance with the instructions in this operating manual

- Before your work on or with the implement, read and understand the operating manual.



CMS-I-000138

MD 096

Risk of infection from escaping hydraulic fluid under high pressure

- Never look for leaks in hydraulic hose lines using your hand or fingers.
- Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.
- *If you are injured by hydraulic oil, consult a doctor immediately.*



CMS-I-000216

MD 097

Risk of crushing between the tractor and the implement

- *Before you actuate the tractor hydraulic system, instruct persons away from the area between the tractor and the implement.*
- Actuate the tractor hydraulic system only from the designated work station.




CMS-I-000139

MD 100

Risk of accidents due to improperly attached lifting gear

- Only attach the lifting gear at the marked positions.

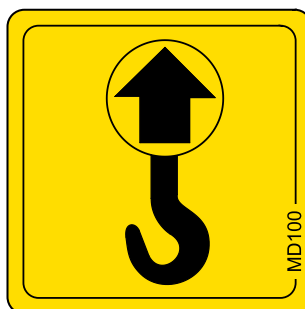

CMS-I-000089

MD 102

Risk due to unintentional starting and rolling away of the machine

- Before performing any work, secure the implement against unintentional starting and rolling away.




CMS-I-00002253

MD104

Risk of crushing due to swivelling parts of the implement

- *As long as the tractor engine is running,* maintain an adequate safety distance from swivelling implement parts.
- Make sure that there is nobody standing close to swivelling parts.

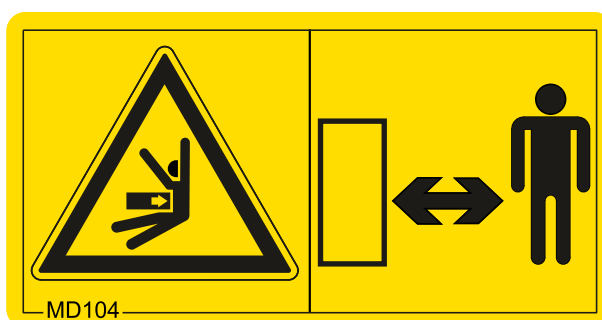


CMS-I-00003312

MD113

Risk of accident due to non-compliance with the instructions in this operating manual

- *Before performing work on or with the implement,*
read and understand the maintenance instructions in the operating manual.

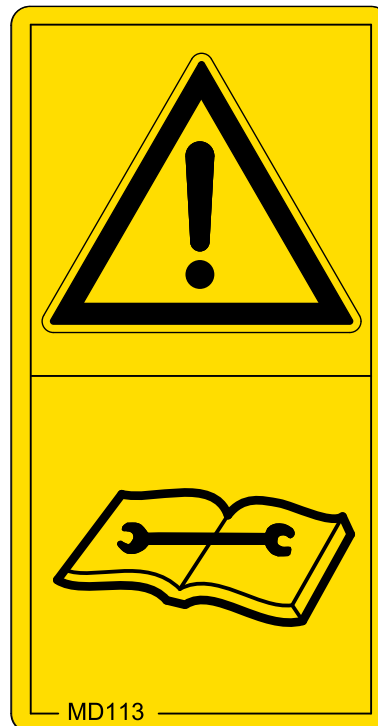


CMS-I-00003655

MD119

Risk of implement damage due to excessively high drive speeds and incorrect direction of rotation of the drive shaft

- Comply with the maximum drive speed and direction of rotation of the drive shaft on the implement side, as shown on the pictogram.

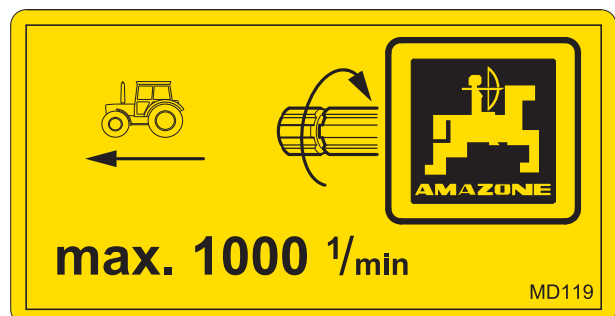


CMS-I-00003656

MD 155

Risk of accident and machine damage during transport due to improperly secured machine

- Only attach the lashing belts at the marked lashing positions for transporting the machine.

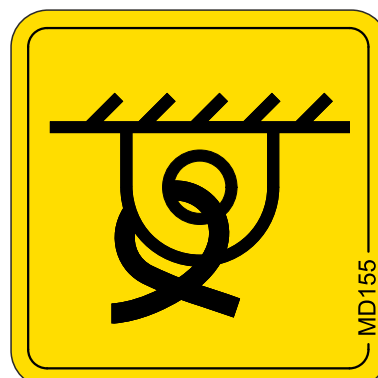

CMS-I-00000450

MD 199

Risk of accident if the hydraulic system pressure is too high

- Only couple the implement to tractors with a maximum tractor hydraulic pressure of 210 bar.



CMS-I-00000486

4.6 Threaded cartridge

CMS-T-00001776-E.1

The threaded cartridge contains the following items:

- Documents
- Aids




CMS-I-00002306

4.7 3-point mounting frame

CMS-T-00004004-A.1

- 1 Category 3 lower link mounting
- 2 Spacer discs for the ball sleeves
- 3 Category 3 top link mounting
- 4 Additional Category 3 top link mounting

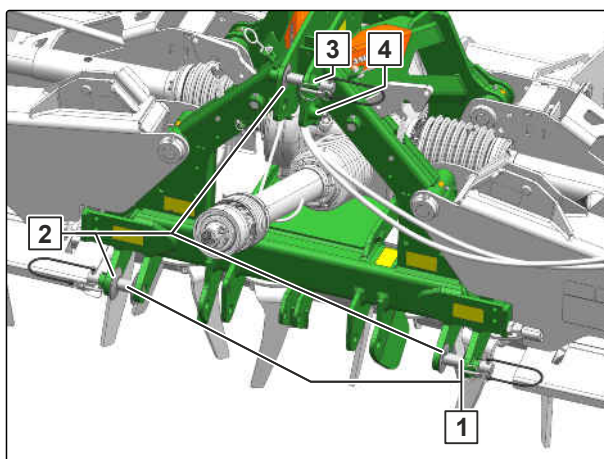

CMS-I-00002943

The 3-point mounting frame is used to couple the implement onto the tractor. The 3-point mounting frame can be adjusted to the 3-power power lift with spacer discs.

4.8 Rating plate on the implement

CMS-T-00004505-G.1

- 1 Implement number
- 2 Vehicle ID number
- 3 Product
- 4 Permissible technical implement weight
- 5 Model year
- 6 Year of manufacture




CMS-I-00004294

4.9 Universal operating tool

CMS-T-00001735-C.1

Setting work on the implement is performed with the universal operating tool **1**. The universal operating tool is parked in a holder on the implement frame.

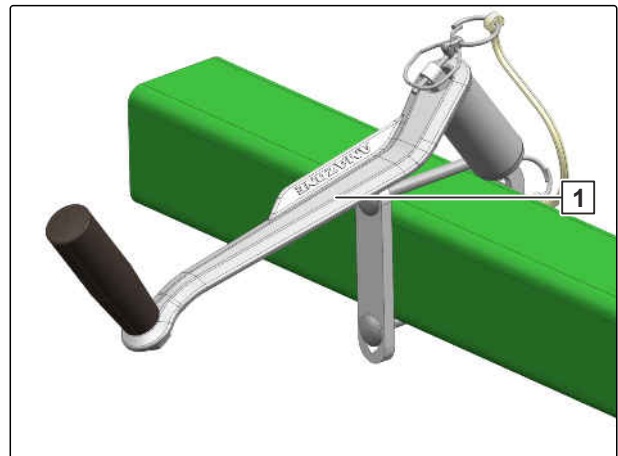


CMS-I-00001082

4.10 Universal joint shaft locking mechanism

CMS-T-00005052-A.1

If the tool carriers encounter an obstacle, the tool carriers can be blocked.

Depending on the implement equipment, the ratchet clutches **1** or shear bolts on the universal joint shafts prevent damage to the gearboxes.

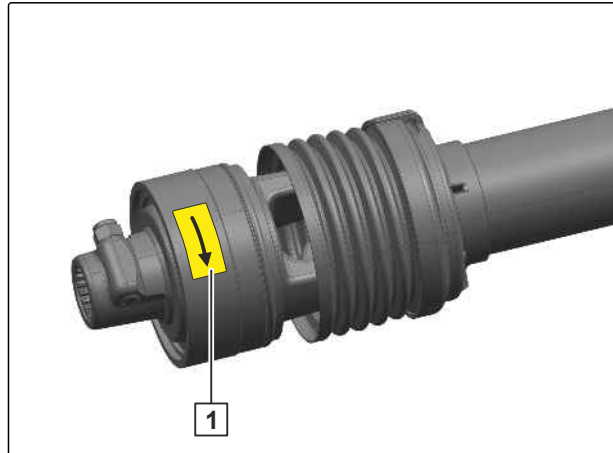

CMS-I-00003044


4.11 Lighting and identification for road travel

CMS-T-00009982-B.1

4.11.1 Rear lighting and identification for road travel

CMS-T-00001498-F.1

- 1** Warning signs
- 2** Reflector, red
- 3** Rear lights, brake lights, and turn indicators
- 4** Reflector, yellow

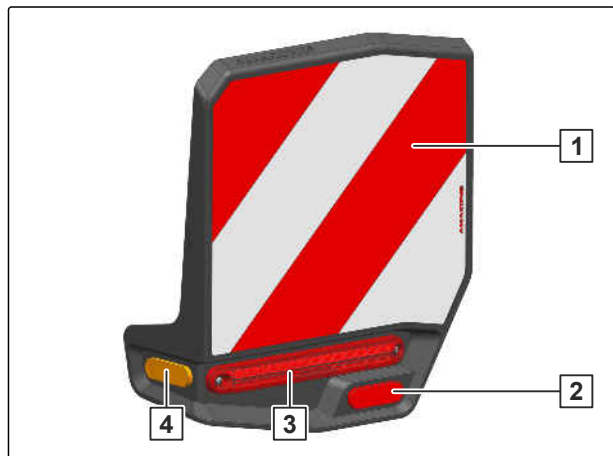

CMS-I-00004545




NOTE

The lighting and identification for road travel can vary depending on the national regulations.

4.11.2 Front lighting and identification

- 1 Warning signs
- 2 Reflector, white
- 3 Side marker lights

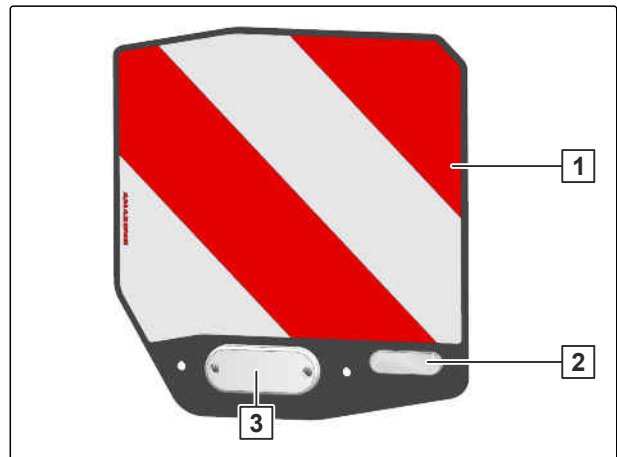


NOTE

The lighting and identification for road travel can vary depending on the national regulations.

4.11.3 Additional license plate


- 1 Licence plate lighting
- 2 Licence plate holder

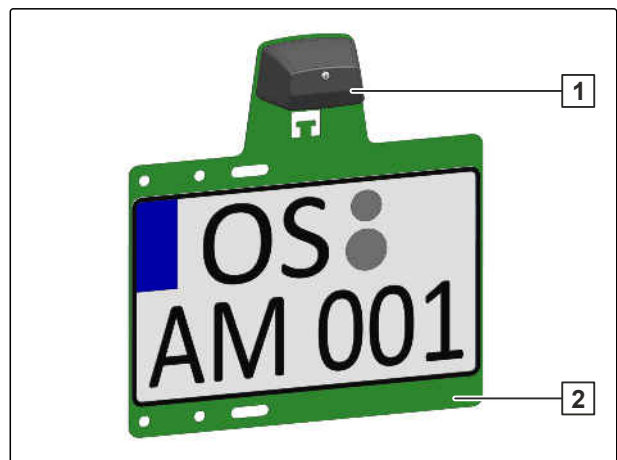

4.12 T-Pack tyre packer

CMS-T-00010407-A.1

The T-Pack tyre packer breaks up clods and clumps, and levels out the soil. At the same time, the packer tyres reconsolidate the soil.

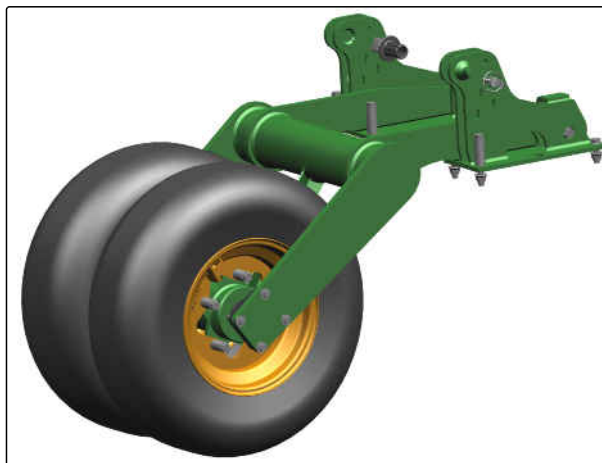

CMS-I-00007110

4.13 Rollers

CMS-T-00010408-A.1

4.13.1 AMAZONE rollers

CMS-T-00008887-B.1

Rollers are used to maintain the working depth, to reconsolidate the soil, and to protect against the rotating tools of the soil tillage implement.



NOTE

In combination with the Avant seeding unit, the soil tillage implement may only be used with a 2-tube roller frame.

Roller	Working width			Roller frame
	4 m	5 m	6 m	
Cage roller	2x SW 2000-520	2x SW 2500-520	2x PW 3000-520	1-tube roller frame
Tooth packer roller	2x PW 2000-500	2x PW 2500-500	2x PW 3000-500	
Trapeze ring roller	-	-	2x TRW 3000-500	
Wedge ring roller	-	-	2x KW 3000-520	
Tooth packer roller	2x PW 2000-600	2x PW 2500-600	2x PW 3000-600	2-tube roller frame
Trapeze ring roller	-	-	2x TRW 3000-500	
	2x TRW 2000-600	2x TRW 2500-600	2x TRW 3000-600	
Wedge ring roller	2x KW 2000-580	2x KW 2500-580	2x KW 3000-580	
Wedge ring roller with matrix tyres	-	-	2x KWM 3000-600	

4.13.2 Packer rollers from other manufacturers

CMS-T-00010409-A.1


The AMAZONE roller product range is supplemented with rollers from third-party suppliers.

Packer rollers from other manufacturers	Working width 4 m	Working width 5 m	Working width 6 m	Roller frame
Güttler Simplex prismatic roller with spheroidal graphite iron rings	-	2x 2500-SX-45 SG	2x 3000-SX-45 SG	1-tube roller frame
Güttler Simplex prismatic roller with synthetic ultra rings	-	2x 2500-SX-45 SU	2x 3000-SX-45 SU	
	-	2x 2500-SX-50 SU	2x 3000-SX-50 SU	2-tube roller frame
	-	2x 2500-SX-56 SU	2x 3000-SX-56 SU	

4.14 Oil cooler

CMS-T-00004053-C.1

The oil cooler **2** cools the gear oil. The gear oil flows through an oil filter **4**. The fan **1** behind the oil cooler is connected to the tractor socket. Every 20 minutes, the fan changes its direction of rotation for 40 seconds. The air current eliminates any dirt from the cooler fins. The oil pump **3** is driven by the gearbox.

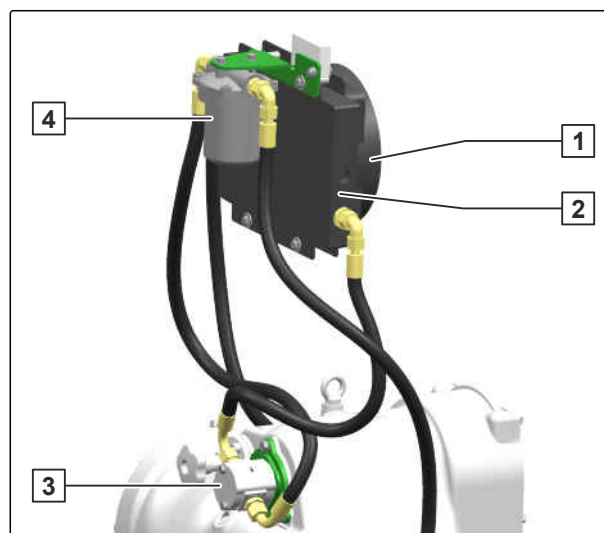

CMS-I-00002962

Technical data

5

CMS-T-00004082-F.1

5.1 Dimensions

CMS-T-00004085-C.1

Dimensions	KG 4002-2	KG 5002-2	KG 6002-2
Transport width	3 m		
Transport width with potato tines	3.1 m		
Transport height	2.6 m	3.1 m	3.6 m
Total length	1.95 m		
Total length with track marker	3.68 m		
Working width	4.1 m	5.1 m	6.1 m
Centre of gravity distance with roller	65 cm		

5.2 Permissible total weight

CMS-T-00006278-B.1

KG 4002-2	KG 5002-2	KG 6002-2
3,900 kg	5,850 kg	6,590 kg

5.3 Mounting category

CMS-T-00004086-B.1

Solo operation	Seeding combination
Category 3/4N	Category 4N

5.4 Working speed

CMS-T-00004087-B.1

4-12 km/h

5.5 Working depth

CMS-T-00004091-B.1

Tool tines	Length of the tool tines	Maximum working depth
Trailing tine set	33 cm	20 cm
On-grip Special tine set		
On-grip Super tine set		
On-grip Special HD tine set		
Potato tine set	40 cm	30 cm

5.6 Performance characteristics of the tractor

CMS-T-00004090-C.1

Operation	Engine rating		
	KG 4002-2	KG 5002-2	KG 6002-2
Solo operation	From 88 kW / 120 hp to 265 kW / 360 hp	From 110 kW / 150 hp to 265 kW / 360 hp	From 132 kW / 180 hp to 265 kW / 360 hp
Seeding combination	From 88 kW / 120 hp to 265 kW / 360 hp	From 110 kW / 150 hp to 265 kW / 360 hp	From 132 kW / 180 hp to 265 kW / 360 hp

Electrical system	
Battery voltage	12 V
Lighting socket	7-pin, in accordance with ISO 1724
In combination with oil cooler: Socket for additional fan	3-pin, in accordance with DIN9680

Hydraulic system	
Maximum operating pressure	210 bar
Tractor pump output	Depending on the implement equipment 30 l/min at 180 bar
Implement hydraulic oil	HLP68 DIN51524 The hydraulic oil is suitable for the combined hydraulic oil circuits of all standard tractor manufacturers.
Control units	Depending on the implement equipment: 3x double-acting
Pressure-free return flow	Do not exceed a back pressure of 5 bar.
Universal joint shaft	
Speed	540/750/1000 rpm
Direction of rotation	Clockwise

5.7 Noise development data



CMS-T-00004666-A.1



The workplace-related emission sound pressure level is lower than 72 dB(A), measured in operating condition at the ear of the tractor driver with the cab closed.

The emission sound pressure level is primarily dependent on the vehicle used.

5.8 Drivable slope inclination

CMS-T-00002297-E.1

Across the slope		
On left in direction of travel	15 %	
On right in direction of travel	15 %	

Up the slope and down the slope		
Up the slope	15 %	
Down the slope	15 %	

5.9 Lubricants

CMS-T-00002396-B.1

Manufacturer	Lubricant
ARAL	Aralub HL2
FINA	Marson L2
ESSO	Beacon 2
SHELL	Retinax A

5.10 Oils and filling capacities

CMS-T-00004158-C.1



NOTE

Specifications for the manual transmission and the angular gearboxes:

Manufacturer	Gear oil
Mobil	Factory filling: Glygoyle 30 SNR 130563
	Glygoyle HE 220
ARAL	DEGOL GS 220
BP	Enersyn SG-XP 220
Castrol	Alphasyn PG 220
	Optiflex A 220
	Tribol 800/220
Fuchs	RENOLIN PG 220
Fuchs Lubritech	GEARMASTER PGP 220
Klüber	Klübersynth GH 6-220
OMV	OMV gear PG 220

Gearbox	Fill quantity
Manual transmission	Without oil cooler:
	10.8 l
	With oil cooler:
	12.3 l
Angular gearbox	6 l



NOTE

Specifications for the spur gear trough:

Oils that comply with the standard CLP/CKC 460
DIN 51517 Part 3 / ISO 12925 can be topped up
or used to replace the existing oil in the spur gear
trough.

The following table contains several gear oil types
that comply with the standard.

Manufacturer	Gear oil
Wintershall	Factory filling:
	ERSOLAN 460
Agip	Blasia 460
ARAL	Degol BG 460
Autol	Precis GEP 460

Manufacturer	Gear oil
Avia	Avilub RSX 460
BP	Energol GR-XP 460
Castrol	Alpha SP 460
DEA	Falcon CLP 460
ESSO	Spartan EP 460
FINA	Giran 460
Fuchs	Renep Compound 110
Mobil	Mobilgear 600 XP 460
Shell	Omala 460
OMV	OMV Gear HST 460

Implement type	Filling quantity for each spur gear trough
KG 4002-2	18 l
KG 5002-2	21 l
KG 6002-2	25 l

5.11 Maximum transport speed

CMS-T-00009156-B.1

40 km/h

5.12 Permissible payload

CMS-T-00011018-D.1

Permissible payload for operation
Permissible payload $G_Z - G_L =$ _____ kg

- G_Z : Permissible technical implement weight according to the rating plate [kg]
- G_L : Determined tare weight [kg]


Preparing the machine

6

CMS-T-00004039-G.1

6.1 Calculating the required tractor characteristics

CMS-T-00000063-F.1

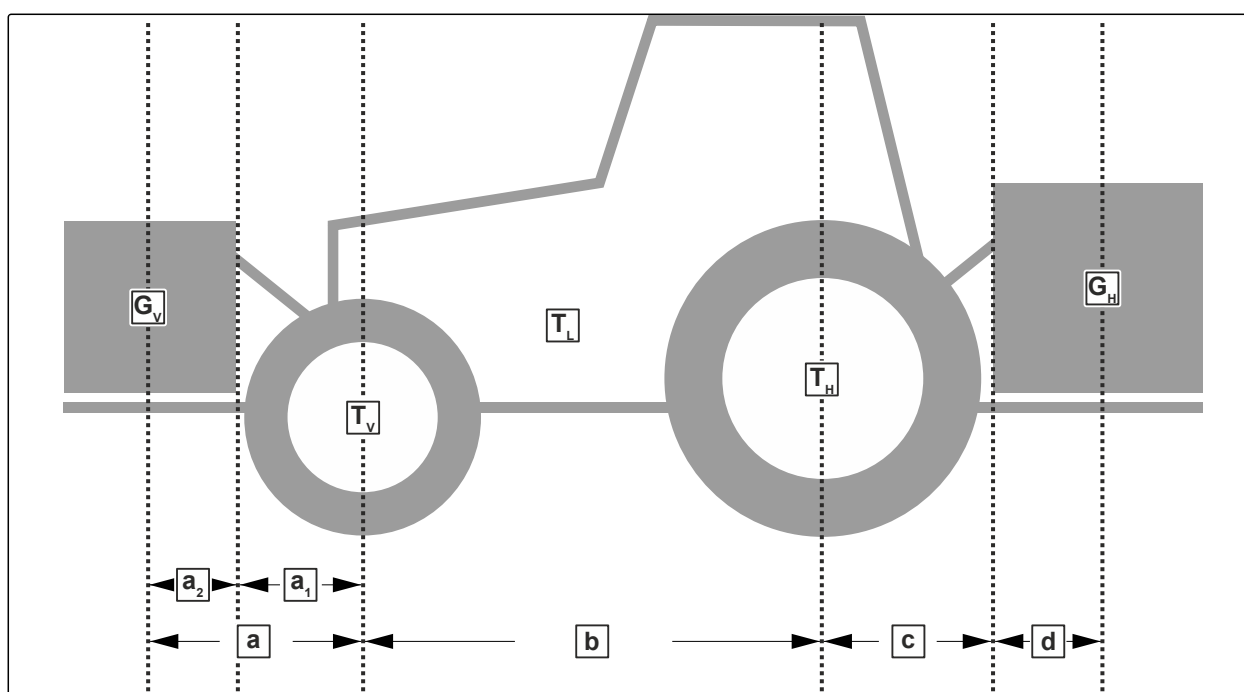

CMS-I-00000581

Designation	Unit	Description	Calculated values
T_L	kg	Tractor empty weight	
T_V	kg	Front axle load of the operational tractor without mounted implement or ballast weights	
T_H	kg	Rear axle load of the operational tractor without mounted implement or ballast weights	
G_V	kg	Total weight of front-mounted implement or front ballast	
G_H	kg	Permissible total weight of rear-mounted implement or rear ballast	
a	m	Distance between the centre of gravity of the front-mounted implement or the front ballast and the centre of the front axle	

6 | Preparing the machine

Calculating the required tractor characteristics

Designation	Unit	Description	Calculated values
a_1	m	Distance between the centre of the front axle and the centre of the lower link connection	
a_2	m	Centre of gravity distance: Distance between the centre of gravity of the front-mounted implement or the front ballast and the centre of the lower link connection	
b	m	Wheelbase	
c	m	Distance between the centre of the rear axle and the centre of the lower link connection	
d	m	Centre of gravity distance: Distance between the centre of the lower link coupling point and centre of gravity of the rear-mounted implement or rear ballast.	

1. Calculate the minimum front ballasting.

$$G_{Vmin} = \frac{G_H \cdot (c + d) - T_V \cdot b + 0,2 \cdot T_L \cdot b}{a + b}$$

$$G_{Vmin} = \underline{\hspace{2cm}}$$

$$G_{Vmin} = \underline{\hspace{2cm}}$$

CMS-I-00000513

2. Calculate the actual front axle load.

$$T_{Vtat} = \frac{G_V \cdot (a + b) + T_V \cdot b - G_H \cdot (c + d)}{b}$$

$$T_{Vtat} = \underline{\hspace{2cm}}$$

$$T_{Vtat} = \underline{\hspace{2cm}}$$

CMS-I-00000516

3. Calculate the actual total weight of the tractor-implement combination.

$$G_{tat} = G_V + T_L + G_H$$

$$G_{tat} =$$

$$G_{tat} =$$

CMS-I-00000515

4. Calculate the actual rear axle load.

$$T_{Htat} = G_{tat} - T_{Vtat}$$

$$T_{Htat} =$$

$$T_{Htat} =$$

CMS-I-00000514

5. Determine the tyre load capacity for two tractor tyres in the manufacturer specifications.
6. Write down the determined values in the following table.



IMPORTANT

Danger of accident due to implement damage caused by excessive loads

- Make sure that the calculated loads are smaller or equal to the permissible loads.

	Actual value according to calculation			Permitted value according to tractor operating manual			Tyre load capacity for two tractor tyres	
Minimum front ballasting		kg	≤		kg		-	-
Total weight		kg	≤		kg		-	-
Front axle load		kg	≤		kg	≤		kg
Rear axle load		kg	≤		kg	≤		kg

6.2 Attaching the backstop profiles for the lower links


CMS-T-00004040-C.1

The 3-point mounting frame is adjusted to the catch hooks of the tractor using the spacer discs **2**.



NOTE

The ball sleeves **1** can only be used with Cat. 3 pins **3**.

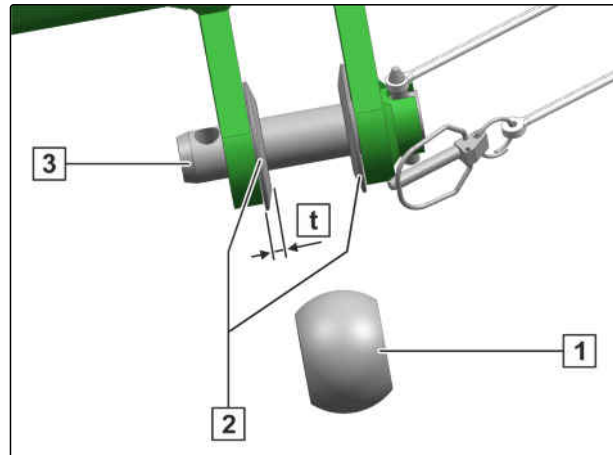

CMS-I-00003055

Lower link catch hook	Spacer discs [mm]
Category 3	t=13.5
Category 4N	t=6.5

Top link catch hook	Spacer discs [mm]
Category 3	t=6.5
Category 4N	Without spacer disc

1. Determine the spacer discs according to the catch hooks on the tractor.
2. Install the ball sleeves and spacer discs.

6.3 Preparing the universal joint shaft

CMS-T-00005128-B.1

1. Have the length of the universal joint shaft adjusted by a specialist workshop.
2. Have the universal joint shaft installed by a specialist workshop.

6.4 Installing the universal joint shaft on the implement


CMS-T-00009981-A.1



IMPORTANT

Damage when the universal joint shaft is too long

- ▶ *To avoid damage to the implement, check the universal joint shaft length every time the tractor is changed.*
- ▶ *If the universal joint shaft is too long, have the universal joint shaft corrected by a qualified specialist workshop.*

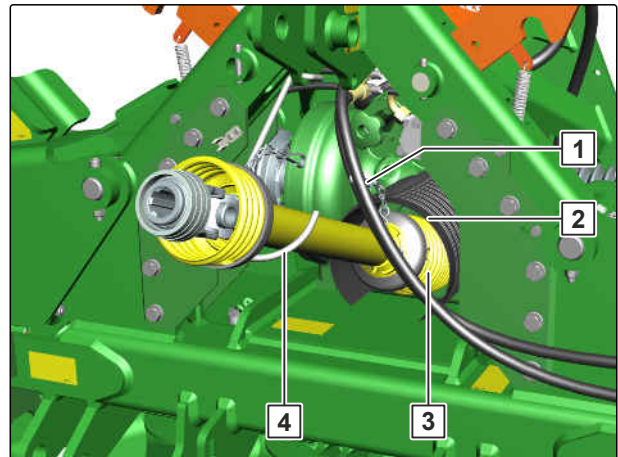

CMS-I-00006784

1. Clean and grease the drive shaft on the implement.
2. Make sure that the universal joint shaft guard is functional.


The tractor symbol on the guard tube identifies the tractor-side of the universal joint shaft. An existing overload clutch or freewheel clutch must be installed on the implement side.

3. Slide the universal joint shaft **3** onto the gearbox output shaft.
4. *To secure the universal joint shaft on the gearbox,*
tighten the locking bolt on the universal joint shaft with the tightening torque prescribed by the universal joint shaft manufacturer.
5. Lift the bracket **4** out of the holder.
6. Swivel the bracket under the universal joint shaft.
7. Put the universal joint shaft in the bracket.
8. Secure the guard tube with the safety chain **1** on the fastening point **2**.

6.5 Using the centre line eradicator

CMS-T-00004047-B.1

The centre line eradicator **1** levels the tillage horizon between the implement sections. This prevents the formation of a centre soil ridge.

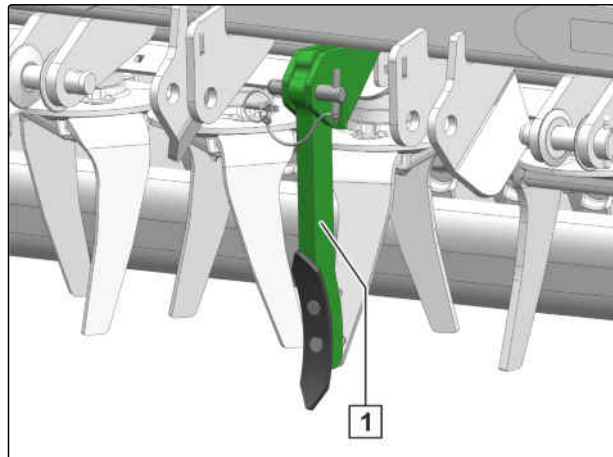


CMS-I-00002944



REQUIREMENTS

- ✓ The implement is not coupled

1. Align the centre line eradicator **4** in the bracket **1**.
2. Secure the centre line eradicator with the pin **2**.
3. Secure the pin with a linch pin **3**.

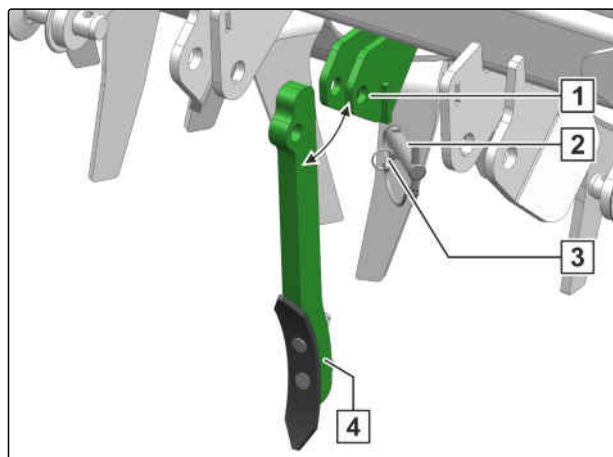


CMS-I-00002977

6.6 Using the hydraulic top link

CMS-T-00004546-B.1


1. *To prepare the hydraulic top link for the float position,*
put the switch **1** in position 1.
 2. *When the lamp **2** lights up,*
put the "beige" tractor control unit in float position.
- ➔ The hydraulic top link is now in float position.

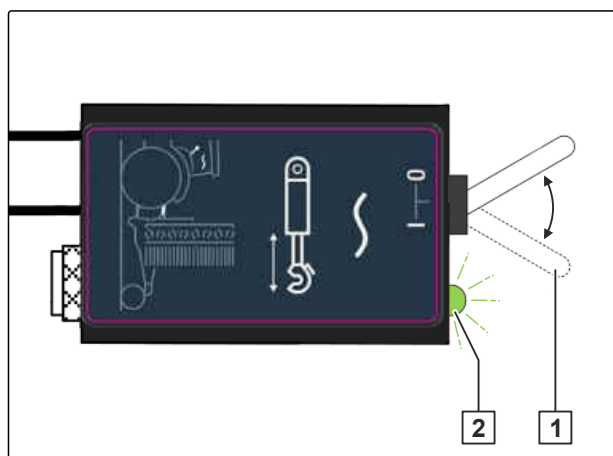

CMS-I-00003249

3. To block the hydraulic top link, put the switch **1** in position 0.
4. When the lamp **2** is no longer lit, put the "beige" tractor control unit in the neutral position.

➔ The hydraulic top link is blocked.

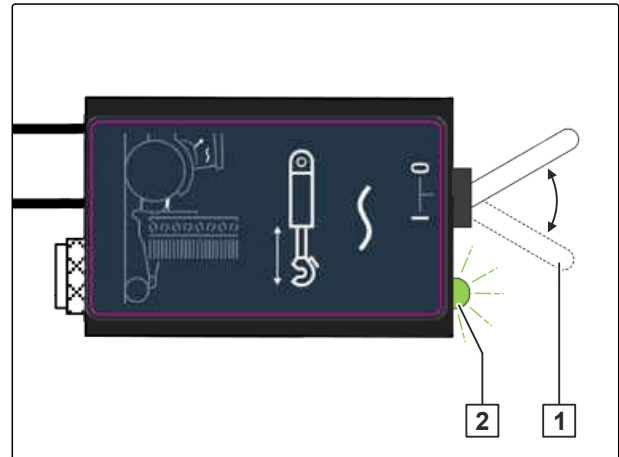

CMS-I-00003249

5. To adjust the length of the hydraulic top link, put the switch **1** in position 0.

➔ The lamp **2** is not lit.

6. To shorten the hydraulic top link, Actuate the "beige 1" tractor control unit.

or

To extend the hydraulic top link,
Actuate the "beige 2" tractor control unit.

7. When the desired length has been set, put the "beige" tractor control unit in the neutral position.

6.7 Coupling the implement


CMS-T-00004041-F.1

6.7.1 Driving the tractor towards the implement

CMS-T-00005794-D.1

Enough space must remain between the tractor and implement so that the supply lines can be coupled without obstructions.


- Drive the tractor towards the implement, leaving a sufficient distance.

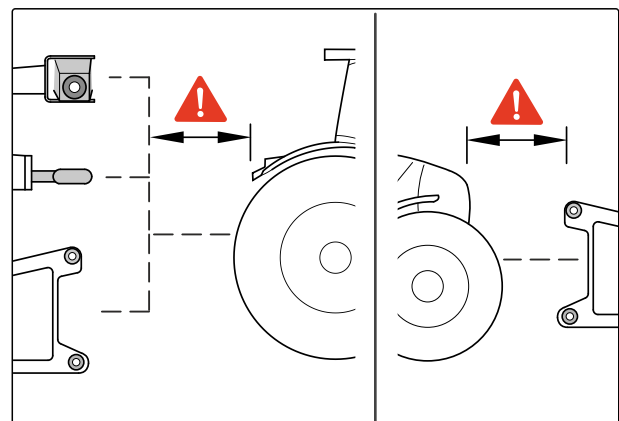

CMS-I-00004045

6.7.2 Coupling the 3-point mounting frame


1. Set the tractor lower links **1** to the same height.
2. Couple the lower links **1** from the tractor seat.
3. Couple the top link **2**.
4. Check whether the top link catch hooks **3** and lower link catch hooks **4** are correctly locked.

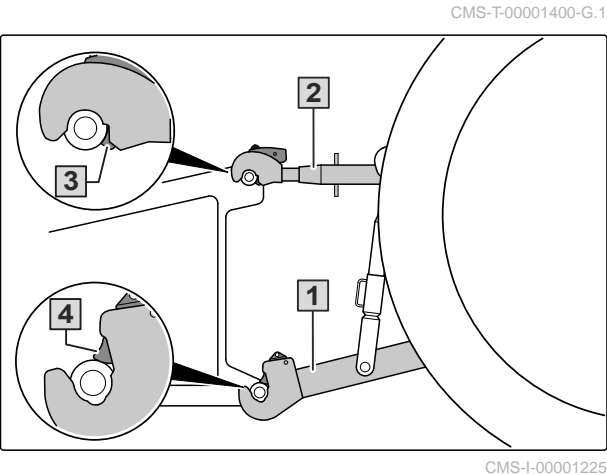

6.7.3 Coupling the hydraulic hose lines



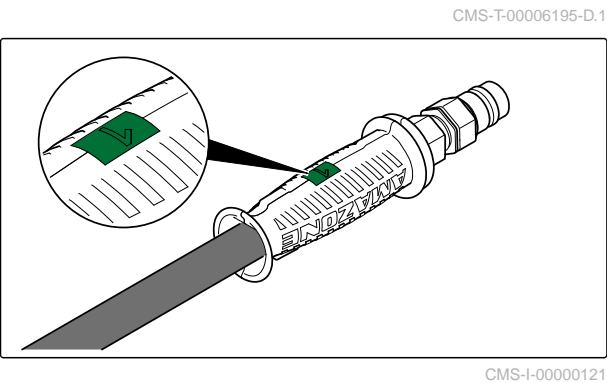


All hydraulic hoses are equipped with handles. The handles have colour markings with a code number or a code letter. The markings are assigned to the respective hydraulic functions of the pressure line of a tractor control unit. Stickers are applied on the implement for the markings, which illustrate the respective hydraulic functions.

The tractor control unit is used with different types of actuation, depending on the hydraulic function:



Type of actuation	Function	Symbol
Latching	Permanent oil circulation	
Momentary	Oil circulation until action is executed	
Floating	Free oil flow in the tractor control unit	

Designation		Function			Tractor control unit	
Green	1		Folding the implement	Unfold	Double-acting	
	2			Fold		
Beige	1		Working depth of the tool tines	Increase	Double-acting	
	2			Reduce		
Yellow	1		Track marker	Unfold	Double-acting	
	2			Fold		

Designation		Function			Tractor control unit	
Blue			Top link	Lengthening	Double-acting	
				Shortening		
Red		Pressure relief through pressureless return flow.				



WARNING

Risk of injury or even death

If the hydraulic hose lines are incorrectly connected, the hydraulic functions may be faulty.

- ▶ When coupling the hydraulic hose lines, observe the coloured markings on the hydraulic plugs.



IMPORTANT

Implement damage due to insufficient hydraulic oil return flow


- ▶ Only use lines of size DN16 or larger for the pressureless hydraulic oil return flow.
- ▶ Select short return paths.
- ▶ Connect the pressureless hydraulic return flow to the intended coupling.
- ▶ *Depending on the implement equipment:* couple the leakage oil line in the intended coupling.
- ▶ Install the supplied coupling sleeve on the pressureless hydraulic oil return.

1. Depressurise the hydraulic system between the tractor and the implement using the tractor control unit.
2. Clean the hydraulic plugs.

6 | Preparing the machine

Coupling the implement


3. Couple the hydraulic hose lines **1** to the hydraulic sockets of the tractor according to the label **2**.
- ➔ The hydraulic plugs lock perceptibly.
4. Route the hydraulic hose lines with sufficient freedom of movement and without chafing points.

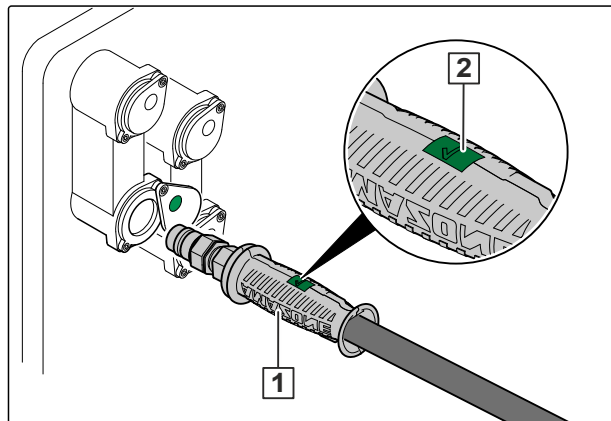

CMS-I-00001045

6.7.4 Coupling the power supply


1. Insert the plug **1** for the power supply.
2. Route the power supply cable with sufficient freedom of movement and without chafing or pinching points.
3. Check the lighting on the implement for proper function.

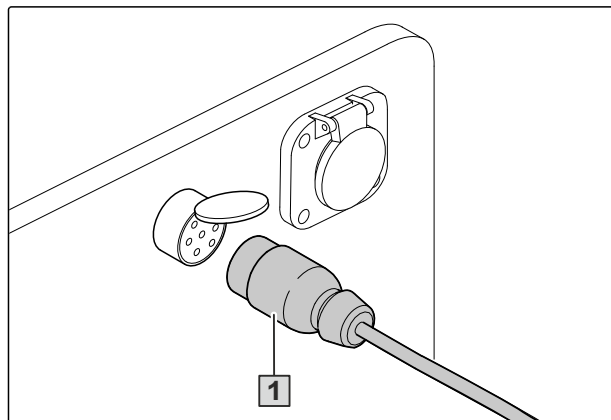

CMS-I-00001048

6.7.5 Coupling the universal joint shaft

1. Pull back the drawing sleeve on the tractor side.
 2. Push the universal joint shaft onto the tractor PTO shaft.
- ➔ The drawing sleeve engages.
3. Swivel the bracket **1** in the parking position.
 4. Secure the bracket.

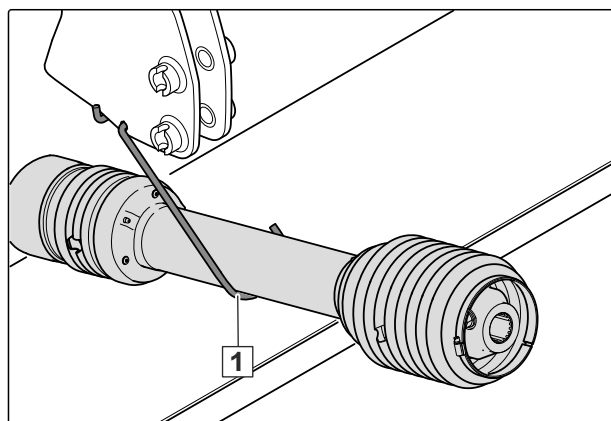

CMS-I-00003520



WARNING Risk of accident due to damaged protective equipment

- *If you are not sure if the protective equipment is properly installed and functional,*
have the protective equipment checked by a specialist workshop.

5. Check the protective equipment.

6.7.6 Coupling the power supply for additional fan

CMS-T-00004164-C.1

1. Insert the plug for the additional fan power supply.
 2. Route the supply cable with sufficient freedom of movement and without chafing or pinching points.
 3. Switch on the 12V socket.
- ➔ As soon as voltage is applied to the 12V socket, the additional fan starts rotating.
 - ➔ Every 20 minutes, the fan changes its direction of rotation for 40 seconds. The air current eliminates any dirt from the cooler fins



CMS-I-00003084

6.8 Preparing the implement for operation

CMS-T-00004042-G.1

6.8.1 Adjusting the speed of the tines

CMS-T-00004144-B.1

6.8.1.1 Changing the gear on the manual transmission

CMS-T-00004143-B.1



REQUIREMENTS

- ✓ The implement is cooled down



NOTE

Set the speed of the universal joint shaft to 1000 rpm. Lower universal joint shaft speeds lead to higher torques at the universal joint shafts. This causes the cam-type clutches to wear more rapidly.

Only use universal joint shaft speeds lower than 1000 rpm under certain conditions.

- Light sandy soils
- Shallow soil tillage

If the cam-type clutch reacts too frequently, immediately increase the universal joint shaft speed to 1000 rpm.

540	750	1000	1	23/24
161	224	299	2	23/24
193	268	357	1	24/23
176	244	326	2	24/23
210	292	389		


Labels 1, 2, 3, and 4 point to specific elements in the diagram: 1 points to the gear ratio column, 2 points to the gear selection lever, 3 points to the universal joint shaft speed column, and 4 points to the gear selection button.

CMS-I-00003272

1. Depending on the set gear ratio **1**, selected universal joint shaft speed **4** and the desired tine speed **3**, determine the desired gear **2**.
2. To engage the first gear,
Push the gear lever into the gearbox housing as far as it will go

or

To engage the second gear,
Pull the gear lever out of the gearbox housing as far as it will go.

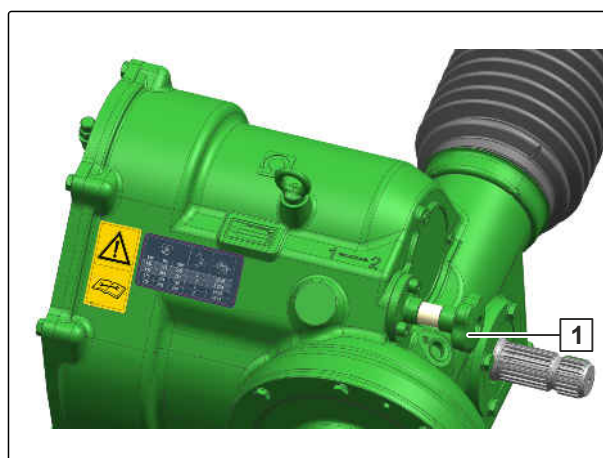

CMS-I-00003032

6.8.1.2 Switching the gear wheels in the manual transmission

CMS-T-00004141-B.1

i NOTE

Set the speed of the universal joint shaft to 1000 rpm. Lower universal joint shaft speeds lead to higher torques at the universal joint shaft. This causes the cam-type clutches to wear more rapidly.

Only use universal joint shaft speeds lower than 1000 rpm under certain conditions.

- Light sandy soils
- Shallow soil tillage

If the cam-type clutch reacts too frequently, immediately increase the universal joint shaft speed to 1000 rpm.

The diagram shows a gear selection panel with a digital display and several buttons. Callout 4 points to the top right section containing gear ratio diagrams. Callout 3 points to the leftmost column of the gear ratio table. Callout 2 points to the middle column of the gear ratio table. Callout 1 points to the rightmost column of the gear ratio table.

540	750	1000		
161	224	299	1	23/24
193	268	357	2	23/24
176	244	326	1	24/23
210	292	389	2	24/23


CMS-I-00003272

1. Depending on the selected gear **2**, selected universal joint shaft speed **4** and the desired tine speed **3**, determine the desired gear ratio **1**.
2. Place the soil tillage implement on a firm, horizontal surface.
3. Slightly tilt the soil tillage implement to the front. Support with suitable aids.
4. Remove the peripheral cover screws **2**.



ENVIRONMENTAL INFORMATION Danger due to escaping oil

- Collect any escaping oil.
- Dispose of cleaning agents for removing oil in an environmentally friendly manner.

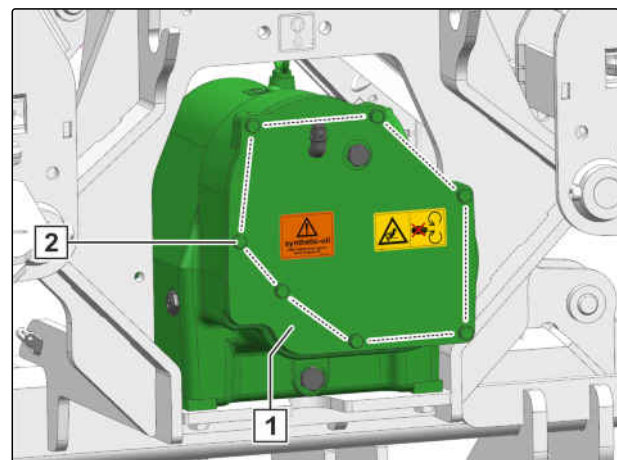


CMS-I-00003025

5. Remove the gearbox cover.

6 | Preparing the machine

Preparing the implement for operation

6. Remove both locking rings **1**.
7. Remove the gear pair **2**.
8. Interchange the gear pair.
9. Install the gear pair.
10. Install the two locking rings.
11. Install the gearbox cover with gasket.
12. *When the gearbox has reached operating temperature, check the gearbox for leaks.*

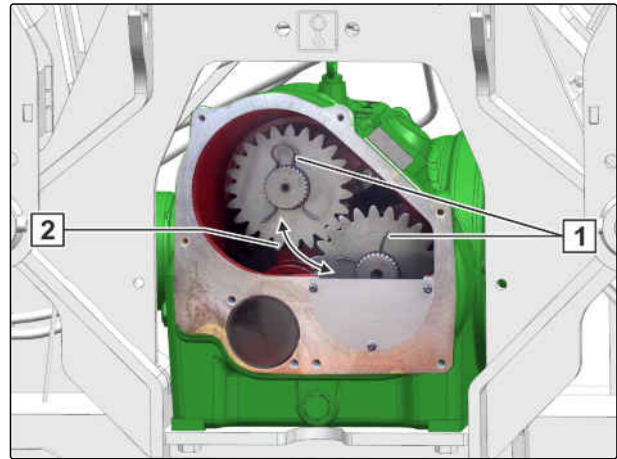


CMS-I-00003026

6.8.2 Adjusting the section end position

The end position of the sections is pre-set so that the implement sections are horizontal during operation. This setting can be adapted to the operating conditions.

1. Raise the implement.
 2. *To engage the transport lock, fold the implement sections.*
 3. Remove the lock nut **1**.
 4. Move the setting screw **2** to the desired position.
 5. Move the second setting screw **4** to the same position.
 6. Unfold the implement sections.
- ➔ The setting screws must touch the contact surface **3** simultaneously.
7. Tighten the lock nut.
 8. Make the same setting for the opposite side of the implement.

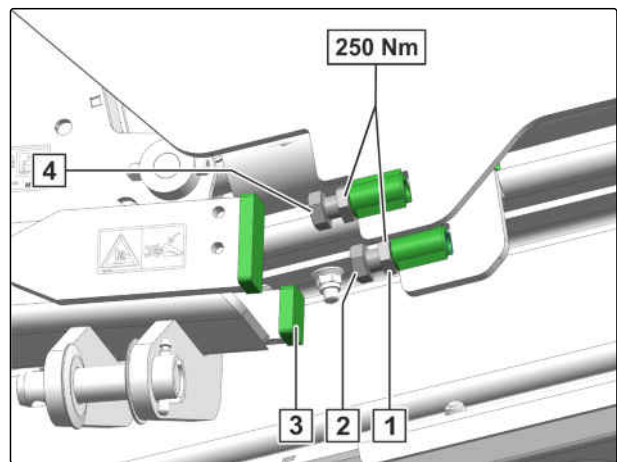


CMS-I-00002989

6.8.3 Using the centre line eradicator

The centre line eradicator **1** levels the tillage horizon between the implement sections. This prevents the formation of a centre soil ridge.

CMS-T-00004047-B.1

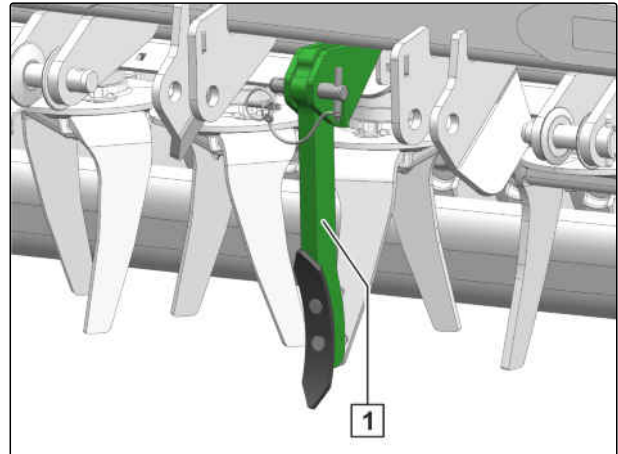


CMS-I-00002944

REQUIREMENTS

- ☑ The implement is not coupled

1. Align the centre line eradicator **4** in the bracket **1**.
2. Secure the centre line eradicator with the pin **2**.
3. Secure the pin with a linch pin **3**.

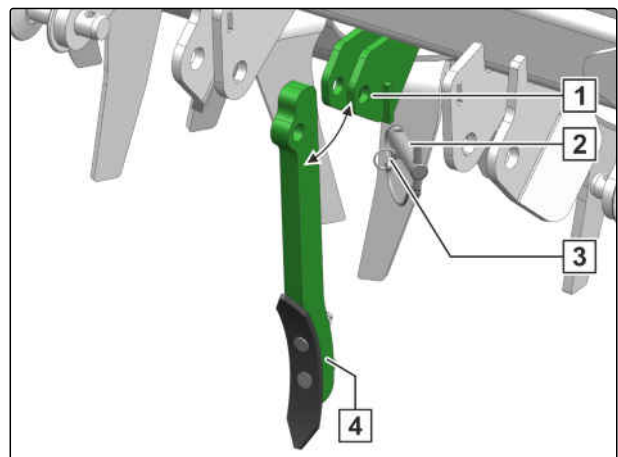


CMS-I-00002977

6.8.4 Manual adjustment of the tine working depth

The soil tillage implement **4** is supported by the carrying arms **2** for the trailing roller **1**. To adjust the working depth, the depth setting pin **3** is inserted in the desired hole.

CMS-T-00004044-D.1

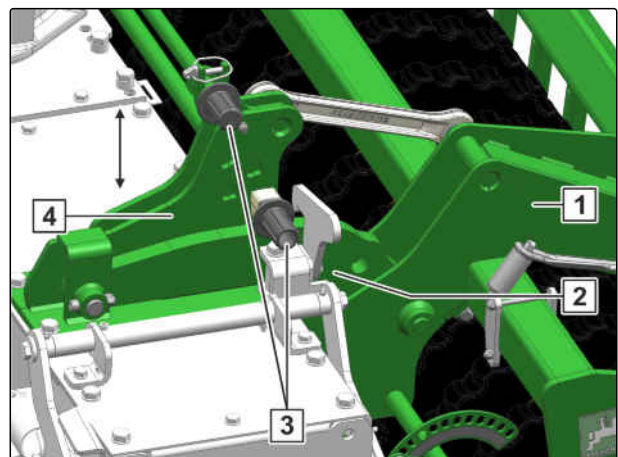


CMS-I-00002941

6 | Preparing the machine

Preparing the implement for operation


The edges of the depth setting pins have different distances **1**. A finer graduation of the working depth is achieved by turning the depth setting pin **3**. The number **2** on the handle provides information on the level.

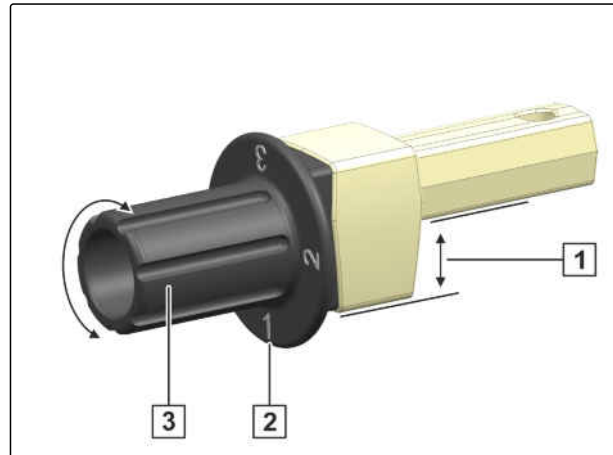

CMS-I-00002963

Level	Working depth
1	Shallow tillage
2	Medium tillage
3	Deep tillage
4	Very deep tillage

Pegging position	Working depth
Higher +	Deep tillage
Lower -	Shallow tillage

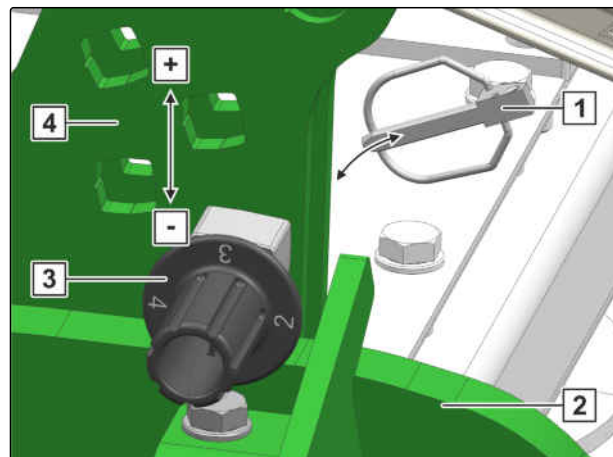


CMS-I-00002975

1. Unfold the implement sections on the field.
2. Raise the implement.
- ➔ The depth setting pins **3** are no longer resting on the carrying arms **2**.
3. Secure the tractor and implement.
4. Remove the linch pin **1**.
5. Insert the depth setting pin in the desired position **4**.
6. Secure the depth setting pin with the linch pin.
7. Make the same setting for the opposite side of the implement.

Make the same setting on the outer bracket.


8. Remove the linch pin **2**.
9. Pull the adjusting rod out of the adjuster segment **3** by the handle **1**.

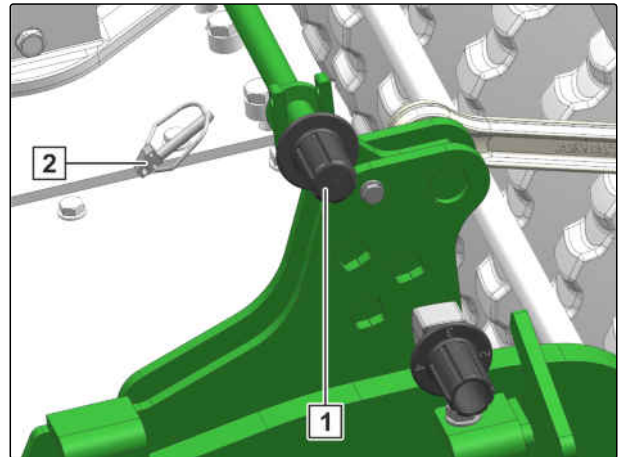

CMS-I-00002967

Pegging position	Working depth
Higher +	Deep tillage
Lower -	Shallow tillage

10. Rest the adjusting rod **1** in the support **2**.
11. Insert the depth setting pin in the desired position.
12. Make the same setting for the opposite side of the implement.
13. *To check the setting,*
Work for approx. 30 m at working speed and then check the work pattern.
14. *To adjust the setting of the levelling board,*
see section "Adjusting the working depth of the levelling board".
15. *To adjust the setting of the side guide plates,*
see section "Adjusting the working depth of the side guide plates".

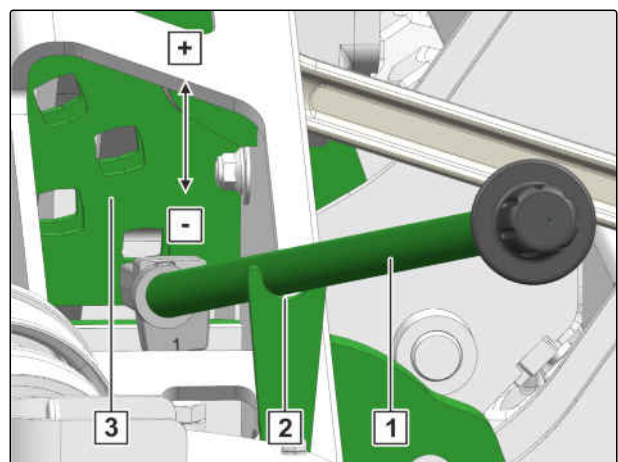


CMS-I-00002966

6.8.5 Hydraulic adjustment of the tine working depth

CMS-T-00004045-D.1

The soil tillage implement **3** is supported by the carrying arms for the trailing roller **4**. The working depth is adjusted hydraulically **1**. The scale **2** shows the set working depth.

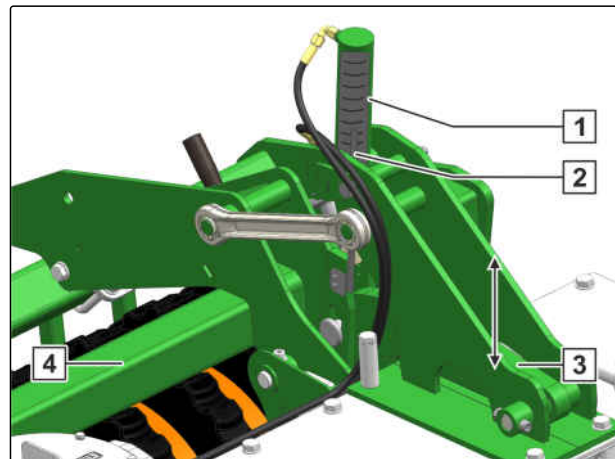

CMS-I-00002942


The working depth is adjusted hydraulically **1**.

Scale	Working depth
Higher +	Deep tillage
Lower -	Shallow tillage

1. For deeper soil tillage, actuate the "blue 1" tractor control unit.

or

For shallower soil tillage, actuate the "blue 2" tractor control unit.

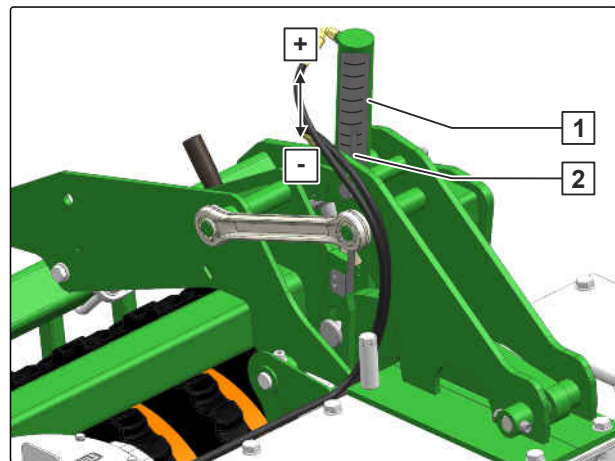


CMS-I-00002969

- ➔ The hydraulic cylinders are supported by the carrying arms.
2. Read the working depth on the scale **2**.
 3. Lock the tractor control unit after making the adjustment.
 4. To check the setting, Work for approx. 30 m at working speed and then check the work pattern.
 5. To adjust the setting of the levelling board, see section "Adjusting the working depth of the levelling board".
 6. To adjust the setting of the side guide plates, see section "Adjusting the working depth of the side guide plates".

6.8.6 Adjusting the working height of the levelling board

CMS-T-00004046-C.1


The levelling board **1** levels the flow of soil between the tines and the roller. To crush large clods of soil more effectively, the soil clods are held between the tines by the levelling board. The levelling board can deflect upwards thanks to the integrated overload safety. The height of the levelling board can be adjusted.

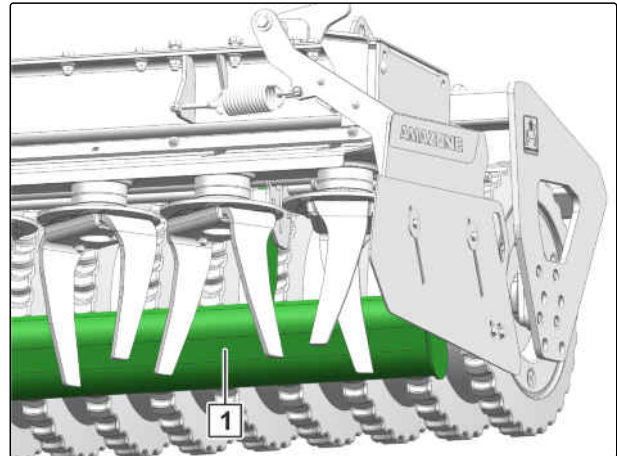

CMS-I-00002945

1. Insert the universal operating tool **2** in the adjustment device **1**.
2. Hold the universal operating tool in position.
3. Release the locking mechanism **4**.

Work application	Working depth
After the plough	<p style="text-align: center;">-</p> <p>The levelling board is pushing up a small ridge of soil.</p>
For mulch seeding	<p style="text-align: center;">+</p> <p>Crop residues must be able to pass under the levelling board.</p>

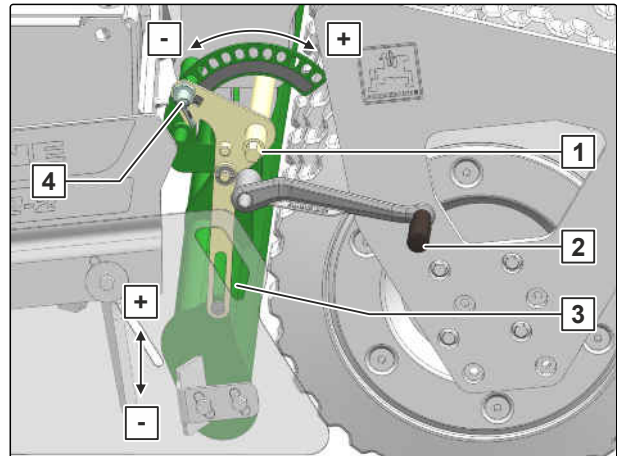

CMS-I-00002976

4. Move the levelling board **3** to the desired position.
- ➔ The locking mechanism must engage.
5. Make the same setting for the opposite side of the implement.
 6. *To check the setting,*
Work for approx. 30 m at working speed and then check the work pattern.


6.8.7 Adjusting the working depth of the side guide plates

CMS-T-00004049-C.1

The side guide plate ensures that the tilled soil is not thrown to the side. The working depth can be adjusted. The soil guiding angle bracket additionally prevents free-flowing soil from escaping.

1. Loosen the bolts **4**.

Work application	Working depth
After the plough	Reduce the working depth - . The side guide plates glide through the soil at a depth of 1 to 2 cm.
For mulch seeding with coarse organic residues	Increase the working depth + . Crop residues can pass underneath the side guide plates. Install the side guide plates higher at the front.

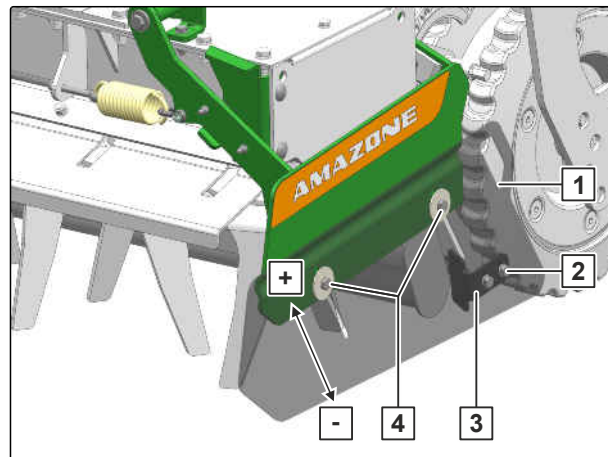

CMS-I-00002979

2. Move the side guide plates to the desired position using the handle **1**.

3. Tighten the bolts **4**.

The soil guiding angle brackets may not work too deep. The soil guiding angle brackets may only level the soil ridge between the side guide plate and the trailing roller.

4. Loosen the bolts **2**.

5. Move the soil guiding angle bracket **3** to the desired position.


6. Tighten the bolts.

7. Make the same setting for the opposite side of the implement.

8. *To check the setting,*
Work for approx. 30 m at working speed and then check the work pattern.

6.8.8 Adjusting the T-Pack tyre packer


The T-Pack tyre packer **2** rests on the carrying arms **1**. To adjust how far the T-Pack tyre packer can deflect upwards, the depth setting pin **3** is inserted in the desired hole.

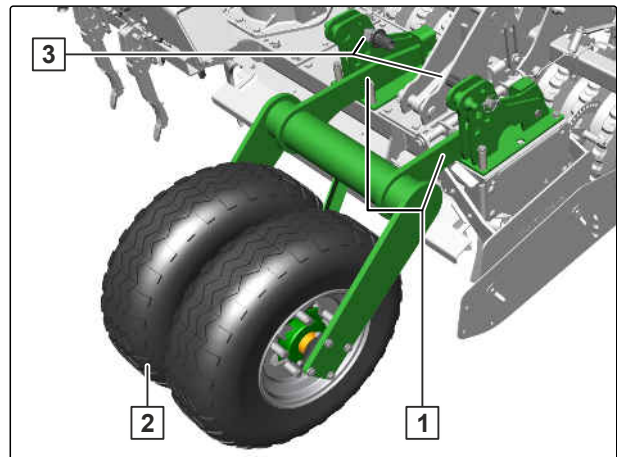

CMS-T-00008709-B.1

CMS-I-00005988

The edges of the depth setting pins have different distances **1**. A finer graduation is achieved by turning the depth setting pin **3**. The number **2** on the handle provides information on the level.

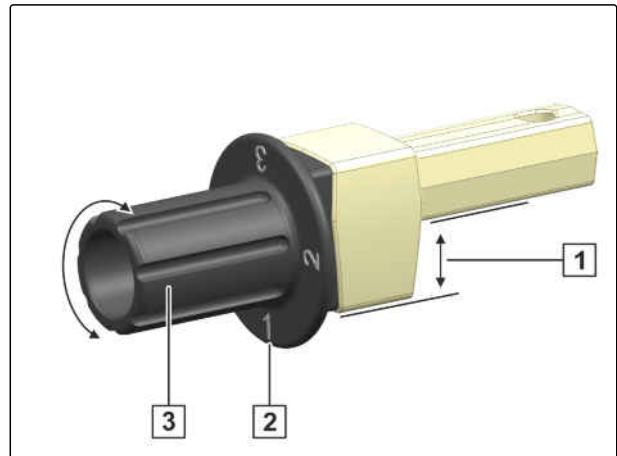


CMS-I-00002963

Level	Swinging range
1	Very small swinging range
2	Small swinging range
3	Medium swinging range
4	Large swinging range

Pegging position	Swinging range
Higher +	Large swinging range
Lower -	Very small swinging range

1. Unfold the implement sections on the field.
 2. Raise the implement.
- ➔ The depth setting pins **3** are no longer resting on the carrying arms **4**.

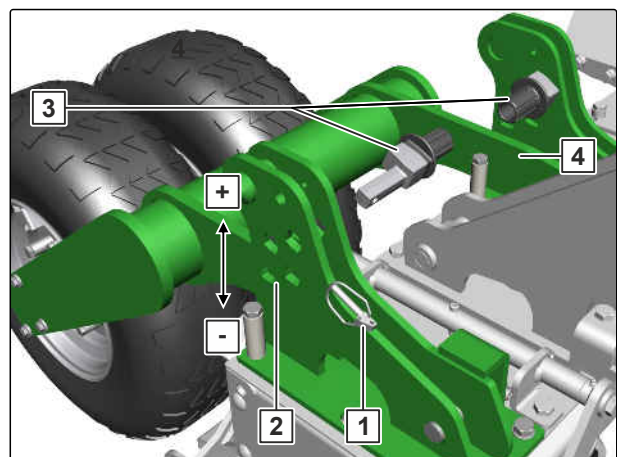

CMS-I-00005990

6 | Preparing the machine

Preparing the implement for operation

3. Secure the tractor and implement.
4. Remove the linch pin **1**.
5. Insert the depth setting pin in the desired position **2**.
6. Secure the depth setting pin with the linch pin.
7. Make the same setting for the opposite side of the implement.
8. *To check the setting,*
Work for approx. 30 m at working speed and then check the work pattern.

6.8.9 Preparing the wheel mark eradicator for operation

CMS-T-00006298-D.1


6.8.9.1 Adjusting the working depth of the rigid wheel mark eradicators

CMS-T-00006300-D.1

1. Raise the implement.
2. Loosen and remove the nut **4**.
3. Remove the shear bolt **2**.
4. Release the linch pin **5**.
5. Remove the locking pin **1**.

The maximum working depth is 150 mm.

6. Move the wheel mark eradicator **3** to the desired position.
7. Secure the wheel mark eradicator with the locking pin.
8. Secure the locking pin with the linch pin.
9. Install the shear bolt.
10. Install the nut and tighten it.
11. *To check the setting:*
Work for approx. 30 m at working speed and then check the work pattern.

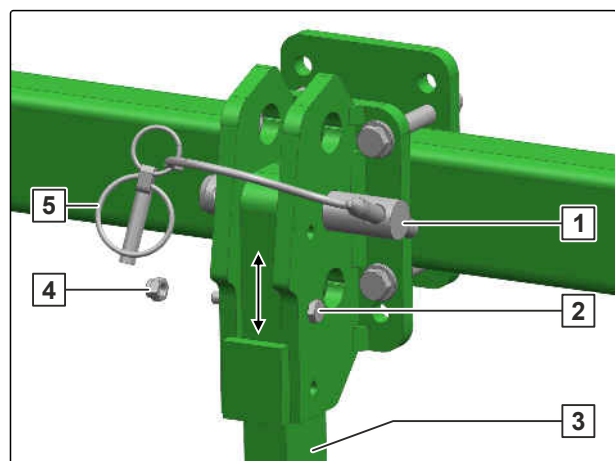

CMS-I-00004508

6.8.9.2 Adjusting the working depth of the spring-suspended wheel mark eradicators

CMS-T-00001486-F.1



IMPORTANT


Increased wear of the wheel mark eradicator bracket

- ▶ *When the overload safety is triggered at short intervals, reduce the working depth.*
- ▶ Change to a wheel mark eradicator coulter that is easy to pull.

1. Raise the implement.
2. Release the linch pin **2**.
3. Hold the wheel mark eradicator by the recessed grip **1**.
4. Remove the locking pin **3**.

The maximum working depth is 150 mm.

5. Move the wheel mark eradicator to the desired position.
6. Secure the wheel mark eradicator with the locking pin.
7. Secure the locking pin with the linch pin.
8. *To check the setting:*
drive for 30 m at working speed and then check the work pattern.

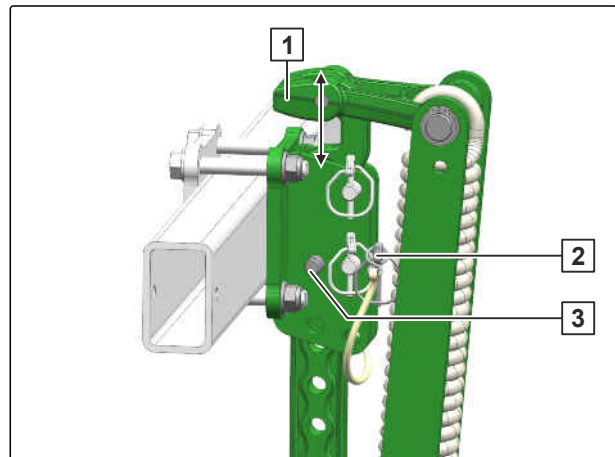

CMS-I-00000942

6.8.9.3 Adjusting the wheel mark eradicator to the track width


CMS-T-00006299-C.1



REQUIREMENTS

- ☑ The implement is raised
- ☑ The tractor and implement are secured

1. Release the clamp connection **1**.
2. Move the wheel mark eradicator bracket **2** to the desired position.
3. Tighten the clamp connection.

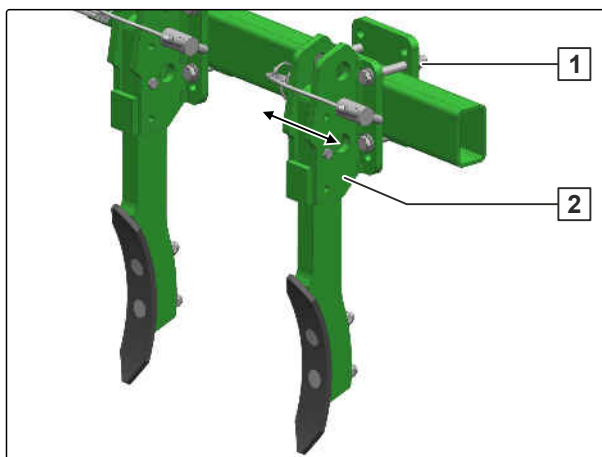


CMS-I-00004506

6.8.9.4 Changing the wheel mark eradicator coulter

CMS-T-00002425-F.1

Different wheel mark eradicator coulters can be installed on the wheel mark eradicator. The choice of the wheel mark eradicator coulter depends on the operating conditions.

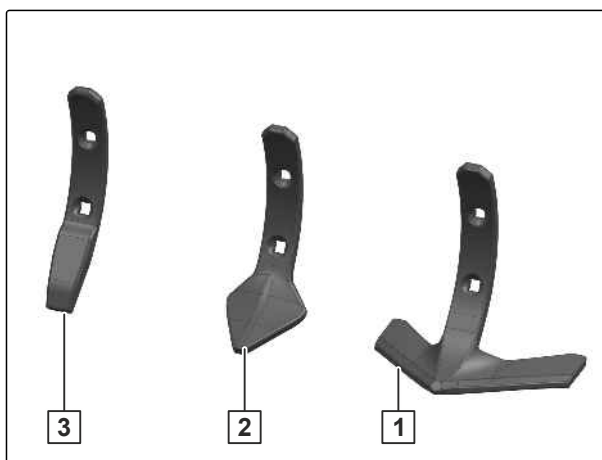

CMS-I-00001967


Number	Wheel mark eradicator coulter	Operating conditions	Pulling force requirement
1	Wing coulter	Shallow loosening and levelling of medium, silty soils	High pulling force requirement
2	Heart-shaped coulter	Medium-depth loosening of various soils	Medium pulling force requirement
3	Narrow coulter	Deep loosening of light soils	Low pulling force requirement



CAUTION

Risk of injury from sharp edges on the coulters and the bolt heads

- ▶ Wear gloves.
- ▶ Pay attention to sharp edges.
- ▶ Do not allow carriage bolts to rotate.

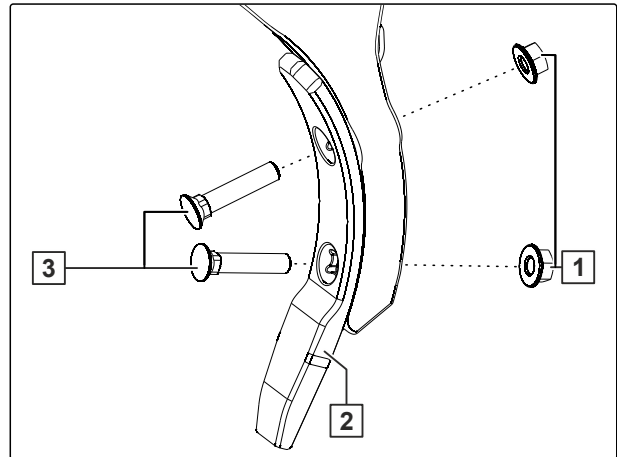

CMS-I-00001080

1. Remove the nuts **1**.
2. Remove the bolts **3**.
3. Install the desired wheel mark eradicator coulter **2** on the tool carrier.
4. Install the bolts.
5. Install the nuts and tighten them.
6. *To check the setting,*
drive for 30 m at working speed and then check the work pattern.

6.8.10 Preparing the track marker for operation


CMS-T-00004052-E.1

6.8.10.1 Unfolding the track markers

CMS-T-00004195-B.1

The hydraulically **3** actuated track markers **2** penetrate into the soil alternately on the right and the left beside the implement. In doing so, the active track marker **1** creates a mark. This mark serves the tractor driver as an orientation aid. Both track markers are raised when turning at the end of the field.

Both track markers must be raised for transporting the implement. The track markers are hydraulically locked.

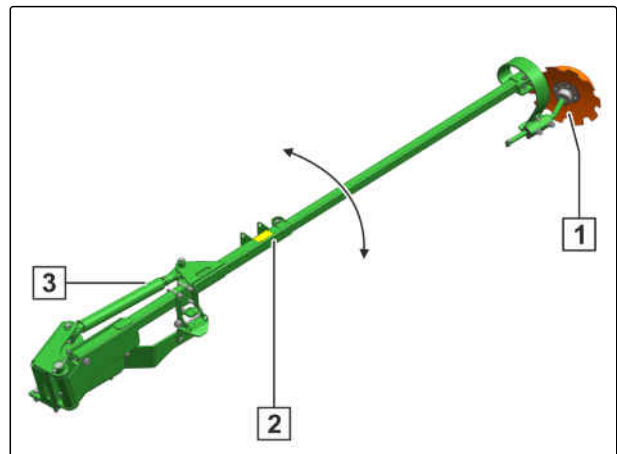

CMS-I-00002951



REQUIREMENTS

- ☑ The implement is unfolded

1. Apply pressure to the "yellow 1" tractor control unit.

➔ The track marker is unfolded.

2. *If the wrong track marker was unfolded,* apply pressure to the "yellow 2" tractor control unit.

➔ The track marker is lifted and the shuttle valve activates the opposite track marker.


3. Apply pressure to the "yellow 1" tractor control unit.

➔ The opposite track marker is unfolded.

6.8.10.2 Adjusting the track marker length


The distance **A** corresponds to the working width of the implement.

CMS-T-00004191-D.1

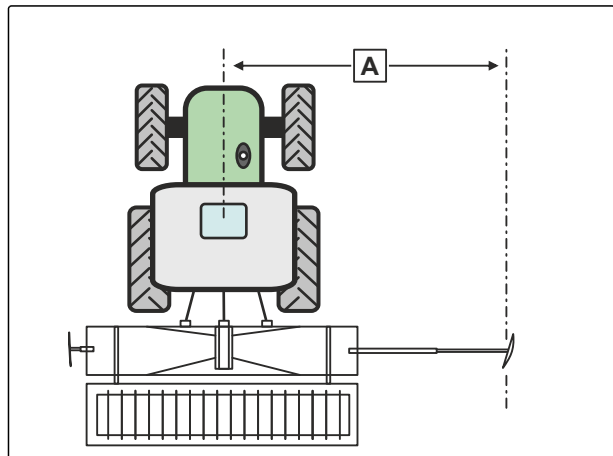

CMS-I-00003078

1. Determine the working width of the implement.
2. Loosen the bolts **2**.
3. Move the track marker disc **1** to the desired position.
4. Tighten the bolts.
5. *If the setting range is not enough:*
Remove the bolt **3**.
6. Move the holder **4** to the desired position.

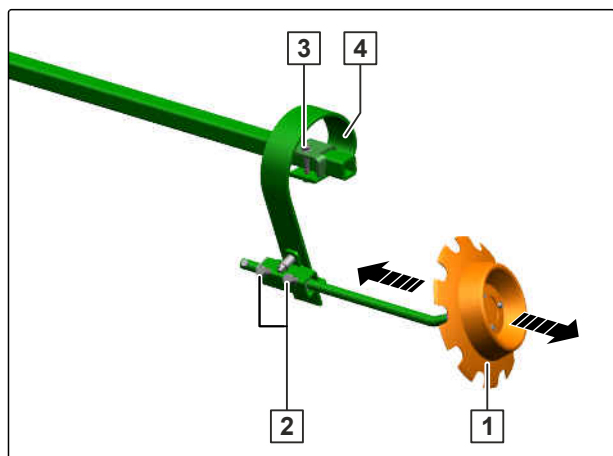

CMS-I-00007972


7. Tighten the bolts.
8. Make the same setting for the opposite side of the implement.
9. *To check the setting:*
drive for 30 m at working speed and then check the work pattern.

6.8.10.3 Adjusting the track marker intensity

1. Loosen the bolts **1**.
2. *On light soils, by turning the track marker axis **2**:*
Reduce the pitch **-**

or

On heavy soils:
Increase the pitch **+**.
3. Tighten the bolts.
4. Make the same setting for the opposite side of the implement.
5. *To check the setting,*
drive for 30 m at working speed and then check the work pattern.

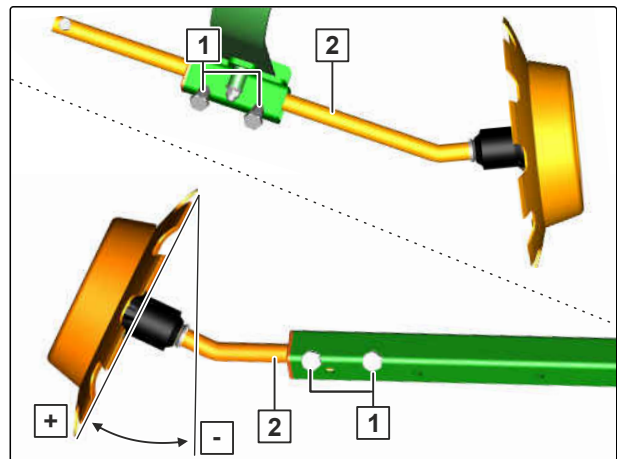

CMS-T-00001726-E.1

CMS-I-00001077

6.8.11 Adjusting the spring tension of the side guide plates

The swivelling side panel deflects upwards on obstacles. The dead weight of the side panel and a tension spring bring the side panel back into working position. The pre-tensioning of the tension spring is adjustable.


CMS-T-00004050-B.1

6 | Preparing the machine

Preparing the implement for operation

The tension of the spring has been adjusted at the factory for light and medium soils.

Work application	Spring tension
After the plough, heavy soils	Increase +
After the plough, light soils	Reduce -
For mulch seeding with coarse organic residues	Reduce - To allow crop residues to pass underneath the side guide plates.

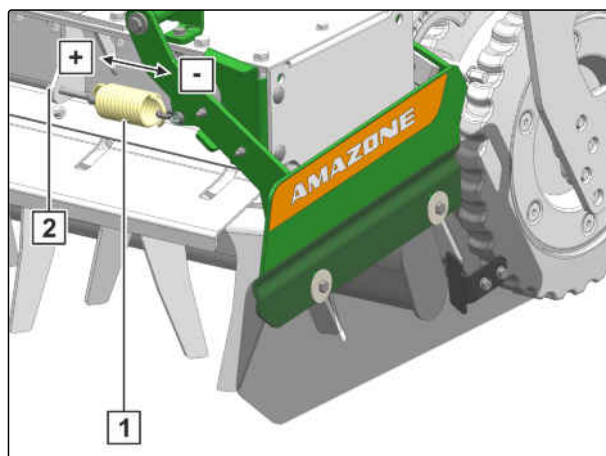

CMS-I-00002978


1. To move the spring tension **1** to the desired position, adjust the pre-tension with the nut **2**.
2. Make the same setting for the opposite side of the implement.

6.8.12 Adjusting the scraper to the roller

The scrapers on the roller are set at the factory. The scrapers can be adapted to the working conditions.

1. Loosen the bolt **1** under the scraper.
2. Move the scraper **2** in the elongated slot.

Roller	Distance between roller element and scraper
Wedge ring roller KW / KWM	10 mm to 15 mm
Tooth packer roller PW	0,5 mm to 4 mm
Trapeze ring roller TRW	0,5 mm to 4 mm

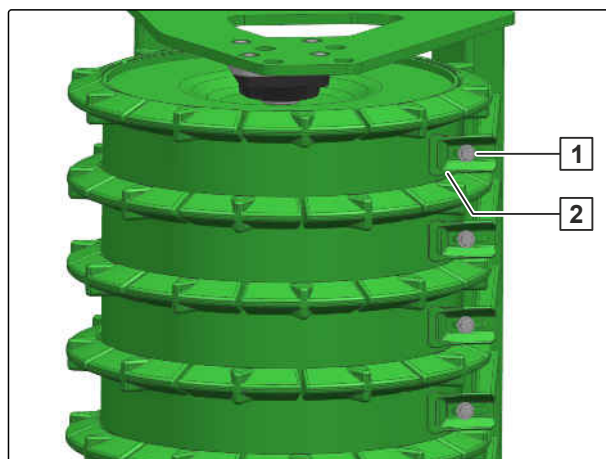

CMS-I-00000933

3. To check the distance, rotate the roller **2**.
4. Tighten the bolt.
5. Make the same setting for all scrapers.

6.9 Preparing the machine for road travel

CMS-T-00004110-E.1

6.9.1 Folding in the track marker

CMS-T-00004051-A.1


REQUIREMENTS

- ☉ The implement is unfolded
- *To fold in the active track marker,*
apply pressure to the "yellow 2" tractor control unit.
- ➔ The track marker is folded in.
- ➔ When the implement is folded, the track markers are hydraulically locked.

6.9.2 Folding the implement

CMS-T-00004109-B.1

1. Raise the implement.
2. *Until the implement sections have reached the end position,*
actuate the "green 2" tractor control unit.
3. *When the transport lock **1** is engaged,*
Release the pull rope and put the tractor control unit to the neutral position.

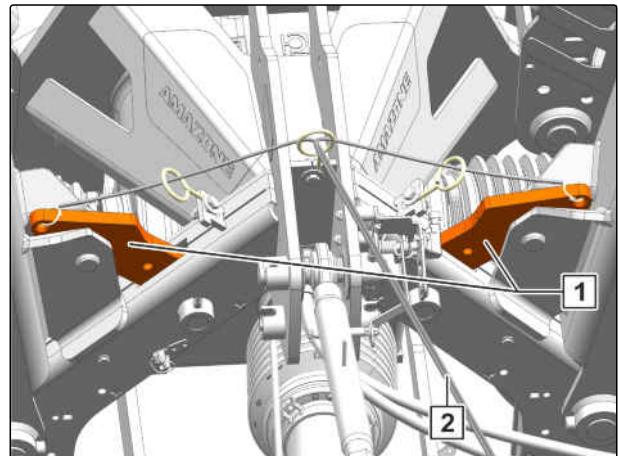


CMS-I-00002993

The roller transport lock **1** secures the carrying arms **2** of the trailing roller in a folded state.

4. Before driving off, check that the roller transport lock is engaged.

or

If the roller transport lock is not engaged,
move the roller outwards until the roller transport lock engages.

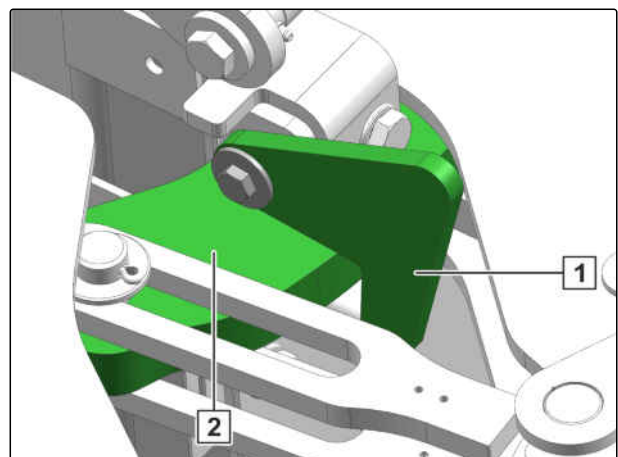


CMS-I-00002932

6.9.3 Coupling the transport frame

CMS-T-00004111-C.1


To reduce the tractor rear axle load, the rotary cultivator is connected to the transport frame.

1. Slowly drive the tractor towards the transport frame **2**.
 2. lower the implement.
- ➔ The catching sockets **3** are at the same height as the transport frame **1**.

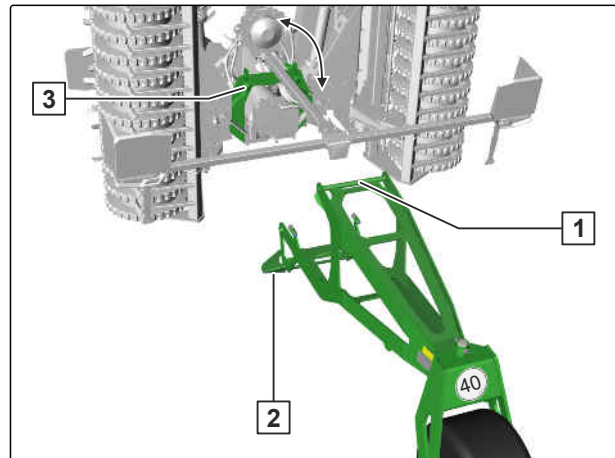


CMS-I-00002984

3. *To shorten the hydraulic top link, see section "Using the hydraulic top link".*
- ➔ The transport frame **2** is picked up with the catching sockets **1**.
4. *To lock the hydraulic top link, see section "Using the hydraulic top link".*
5. Lift the implement with the coupled transport frame.

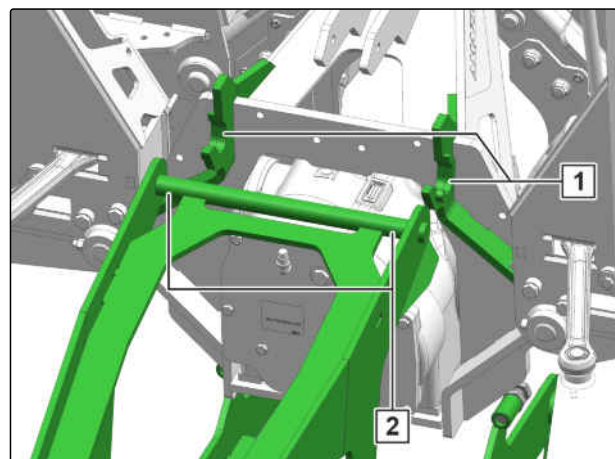

CMS-I-00002994

6. Release the linch pin **1**.
7. Actuate the locking lever **2**.
- ➔ The transport frame **3** is locked.
8. Secure the locking lever with a linch pin.
9. Lower the implement along with the transport frame.
- ➔ The wheels of the transport frame are touching the ground.

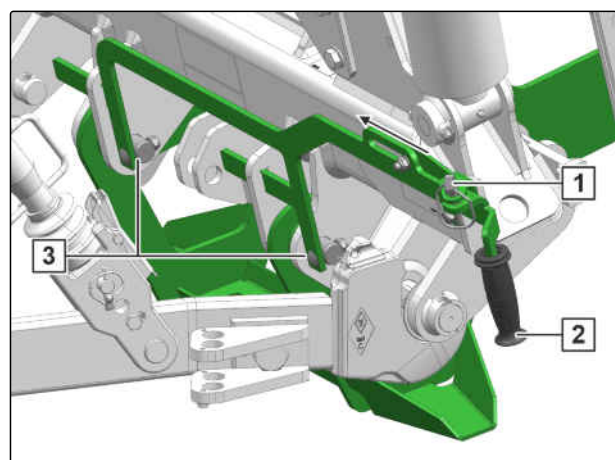

CMS-I-00003046



IMPORTANT The implement with the coupled transport frame may not be driven in the rigid 3-point hitch.

- ▶ Put the hydraulic top link in float position.
- ▶ Pay attention to the path of movement on the hydraulic top link.
- ▶ *To prevent uncontrolled implement movements,*
block the side braces and the height guidance of the tractor lower links.


10. *To move the hydraulic top link into the float position,*
see section "*Using the hydraulic top link*".



NOTE

The transport frame is designed for forwards driving only.

11. *To manoeuvre the implement in reverse gear,*
Raise the implement.

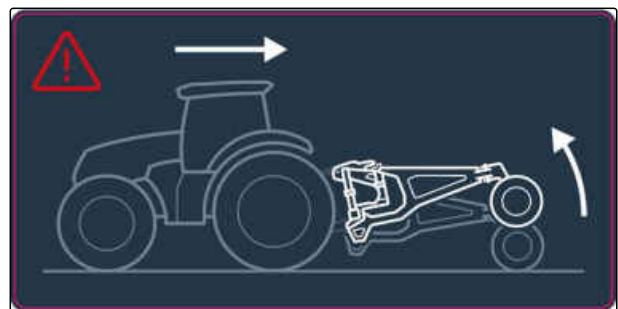

CMS-I-00003254

6.9.4 Transport width with installed potato tines

CMS-T-00004194-A.1

When driving on public streets or roads, the tractor and implement must comply with the national road traffic regulations and the accident prevention regulations.


The vehicle owner and driver are responsible for compliance with the regulations.

- ▶ Observe the transport width when the potato tines are installed.

6.9.5 Telescoping the track marker

CMS-T-00006276-B.1

1. Secure the tractor and implement.
2. Loosen the bolt **1**.
3. To move the track marker disc into transport position,
slide in the telescopic tube **2**.
4. Tighten the bolt.
5. Slide in the opposite track marker.

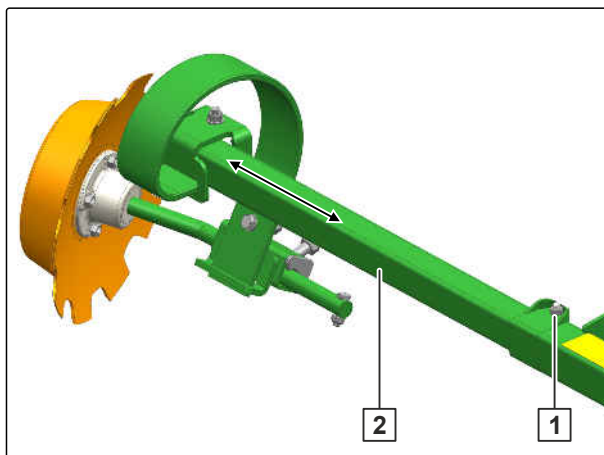

CMS-I-00004495

6.9.6 Fixing the T-Pack tyre packer

CMS-T-00008710-B.1


To prevent swinging of the packer tyres when the implement is folded, they are pegged in the lowest position during transport.

Pegging position	Working depth
Higher +	Shallow tillage
Lower -	Deep tillage

1. Unfold the implement sections on the field.
2. Raise the implement.


➔ The depth setting pins **3** are no longer resting on the carrying arms **4**.

3. Secure the tractor and implement.
4. Remove the linch pin **1**.

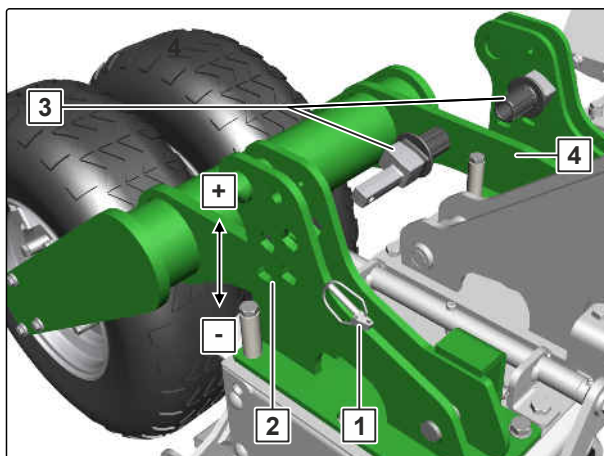

CMS-I-00005990

5. Insert the depth setting pin at the desired position **2**.
6. Secure the depth setting pin with the linch pin.
7. Make the same setting for the opposite side of the implement.

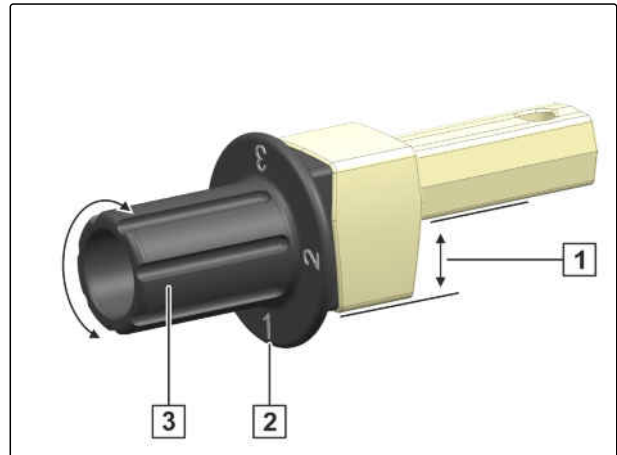

CMS-I-00002963

Using the machine


7

CMS-T-00004513-C.1

7.1 Uncoupling the transport frame

CMS-T-00004089-C.1


1. To lock the hydraulic top link, see section "Using the hydraulic top link".
2. Lift the implement with the coupled transport frame.
3. Release the linch pin **1**.
4. Pull on the locking lever **2**.
- ➔ The locking pins **3** are released.
5. Park the linch pin on the locking lever.

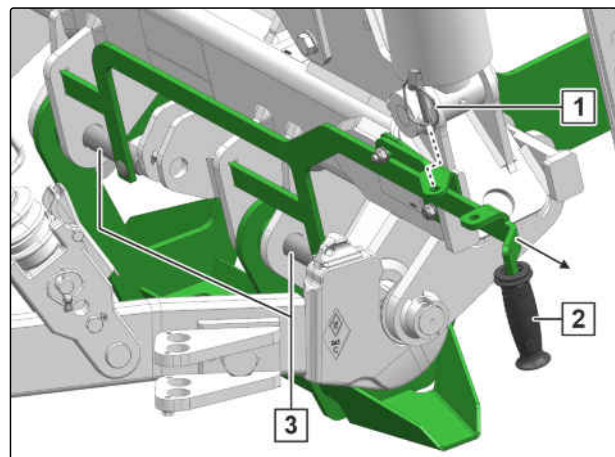

CMS-I-00002985

6. To extend the hydraulic top link, see section "Using the hydraulic top link".
- ➔ The transport wheel **2** is touching the ground.
7. To lock the hydraulic top link, see section "Using the hydraulic top link".

8. lower the implement.
- ➔ The transport frame support **2** is touching the ground.
9. Continue lowering the implement.
- ➔ The catching sockets **3** are released from the transport frame.
10. *To lock the hydraulic top link, see section "Using the hydraulic top link".*
11. Slowly drive the tractor forwards.

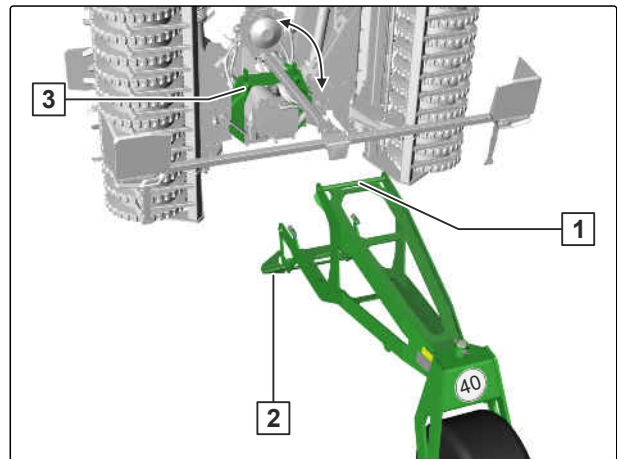

CMS-I-00002984


7.2 Unfolding the implement

CMS-T-00004112-C.1



REQUIREMENTS

- ☉ The transport frame is uncoupled
1. Raise the implement.
 2. actuate the "green 2" tractor control unit.
 - ➔ The transport lock is unloaded.
 3. *Until the implement sections have reached the end position,*
Actuate the pull rope and actuate the "green 1" tractor control unit.
 4. *When the implement sections have reached the end position,*
Release the pull rope and put the tractor control unit into float position.

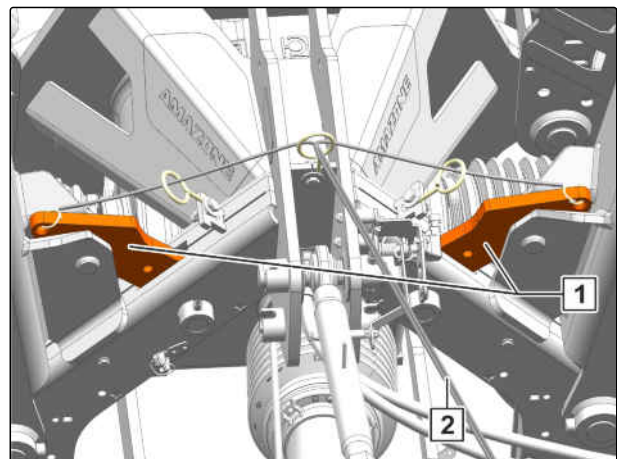

CMS-I-00002993

7.3 Using the implement

CMS-T-00009290-A.1

1. Lower the implement until it is just above the field.

When working with the implement switched on, it must be ensured that the tines touch the soil.

2. Switch on the tractor PTO shaft.

3. Lower the implement on the field.
4. Move the hydraulic system of the 3-point power lift into float position.

7.4 Checking the set working depth

CMS-T-00004568-A.1

If the set working depth is greater than the tine length, the tool carriers are constantly working in the soil horizon.



IMPORTANT

The tool carriers become worn when constantly working in the soil.

- ▶ Replace the tines before they reach the minimum length.
- ▶ *To prevent wear of the tool carriers, check the set working depth after driving a short distance.*

7.5 Turning on the headlands

CMS-T-001728-B.1

1. *To prevent lateral loads when driving in curves on the headlands, raise the soil tillage tools.*
2. *When the direction of the implement matches that of the direction of travel, lower the soil tillage tools.*

7.6 Using the track marker

CMS-T-00004514-A.1

1. *Before the track marker encounters an obstacle, lift out the track marker.*
 2. After passing the obstacle, lower the track marker.
- ➔ Lifting the track marker causes the tramline counter to be advanced.
3. *To correct the position of the tramline counter, actuate the "yellow" tractor control unit several times until the tramline counter detects the correct tramline.*

Eliminating faults

8

CMS-T-00004118-D.1

Errors	Cause	Solutions
The trailing roller rotates stiffly during initial operation.	Production-related paint residues make it difficult for the roller to rotate.	► Pull the roller over firm ground.
Tines stopping during operation	If the tines encounter an obstacle, the tool carriers are blocked.	see page 80
	After the tines have encountered an obstacle, the obstacle is jammed between the tines. The cam-type clutch does not engage automatically.	see page 80
The cam-type clutch is often triggered	Maintenance is required on the cam-type clutch.	see page 81
	Excessive torques on the cam-type clutch.	see page 81
The additional fan on the oil cooler is not rotating	Malfunction of the additional fan regulation.	see page 81
The lighting for road travel has a malfunction.	Lamp or lighting supply line is damaged.	► Replace the lamp. ► Replace the lighting supply line.
It lowers the wrong track marker.	When actuating the tractor control unit, the wrong track marker is lowered.	► Switch the control unit several times.
The wheel mark eradicator collision protection is triggered	The wheel mark eradicator has encountered a solid obstacle. The shear bolt is torn and the wheel mark eradicator folded to the rear.	see page 82

Tines stopping during operation

CMS-T-00004519-B.1

If the tines encounter an obstacle, the tool carriers are blocked.

The tines encountered an obstacle, the tool carriers are blocked:

1. Raise the implement.
2. Reduce the PTO shaft speed to approx. 300 rpm.

➡ The cam-type clutch engages audibly.

3. Re-establish the original PTO shaft speed.
4. Resume working.

After the tines have encountered an obstacle, the obstacle is jammed between the tines. The cam-type clutch does not engage automatically.

An obstacle is jammed between the tines:

1. Raise the implement.
2. Secure the tractor and implement.
3. Wait until the tool carriers come to a stop.
4. Remove the obstacle between the tines.

The cam-type clutch is often triggered

CMS-T-00004122-B.1

Maintenance is required on the cam-type clutch.

Maintenance is required on the cam-type clutch:

1. *If the cam-type clutch **1** is often triggered,* perform maintenance according to the instructions from the universal joint shaft manufacturer

or


contact AMAZONE Customer Service.



NOTE

If maintenance is required, the cam-type clutch must not be mixed up during installation.

The cam-type clutches are installed correctly when the arrows point opposite to the direction of travel.

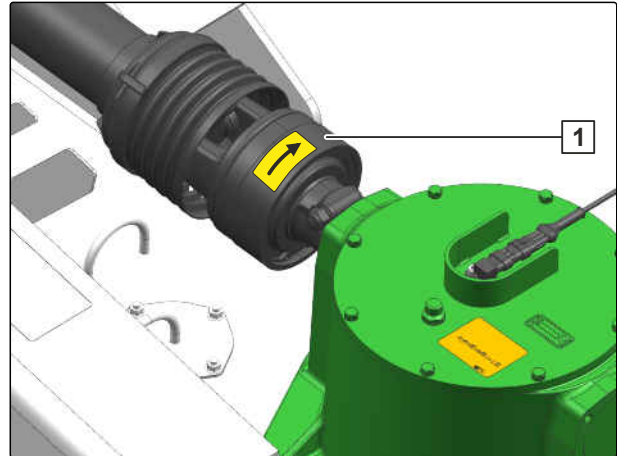

CMS-I-00003266

2. Install the universal joint shafts.

Excessive torques on the cam-type clutch.

Excessive torques on the cam-type clutch:

Universal joint shaft speeds lower than 1000 rpm cause high torques on the cam-type clutch.

- *If the cam-type clutch is often triggered,* set the speed of the universal joint shaft to 1000 rpm.

The additional fan is not rotating

CMS-T-00004172-B.1

1. Disconnect the power supply.
2. Allow the regulator for the additional fan to cool down.

3. Reconnect the power supply.
- ➔ As soon as voltage is applied to the 12V socket, the additional fan starts rotating.
4. *If the additional fan does not rotate,* please contact your AMAZONE customer service.

The wheel mark eradicator collision protection is triggered

CMS-T-00006305-C.1


1. Remove the spare bolts **1** from the track marker bracket.
2. Remove the damaged bolt **3**.
3. Fold the wheel mark eradicator **2** into working position.



NOTE

Only use original bolts as a replacement.

4. Install the spare bolt.
5. Install the nut and tighten it.

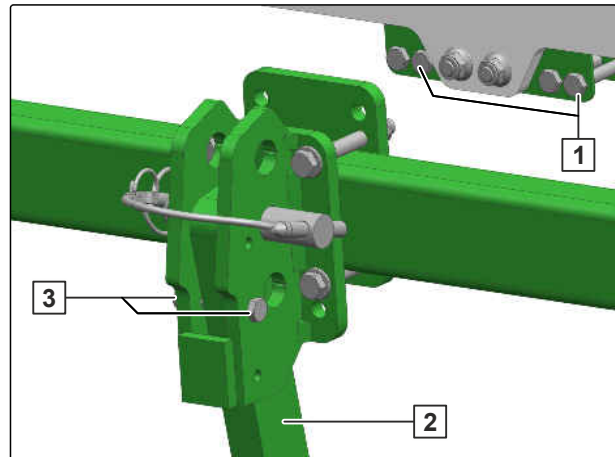

CMS-I-00004507

Parking the machine

9

CMS-T-00004115-D.1


9.1 Unfolding the implement

CMS-T-00004112-C.1



REQUIREMENTS

- ☑ The transport frame is uncoupled
- 1. Raise the implement.
- 2. actuate the "green 2" tractor control unit.
- ➔ The transport lock is unloaded.
- 3. *Until the implement sections have reached the end position,*
Actuate the pull rope and actuate the "green 1" tractor control unit.
- 4. *When the implement sections have reached the end position,*
Release the pull rope and put the tractor control unit into float position.

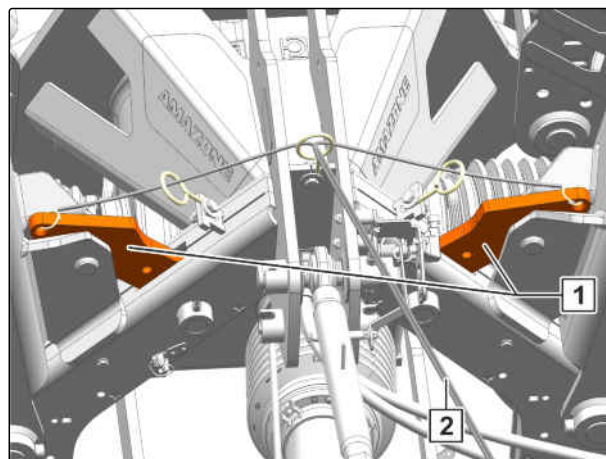

CMS-I-00002993

9.2 Lowering the implement

CMS-T-00004165-A.1



REQUIREMENTS

- ✓ The implement is unfolded



IMPORTANT

The centre line eradicator penetrates deeper into the soil than the tool tines


- ▶ *To prevent damage to the centre line eradicator,*
do not lower the centre line eradicator onto solid ground.
- ▶ The centre line eradicator must penetrate into loose soil.

- ▶ Park the implement sections on a level surface with solid ground.

9.3 Uncoupling the power supply


CMS-T-00001402-H.1

1. Pull out the plug **1** for the power supply.

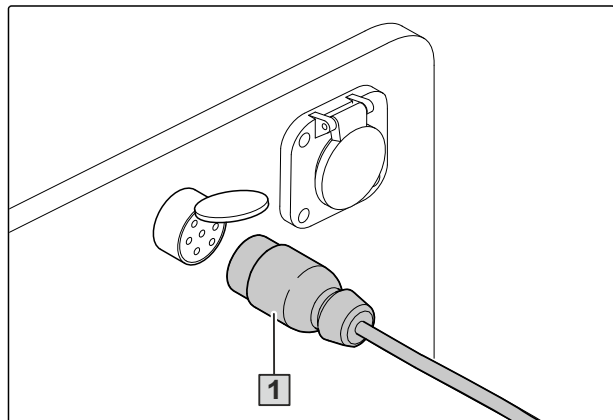

CMS-I-00001048

2. Hang the plugs **1** in the hose cabinet.

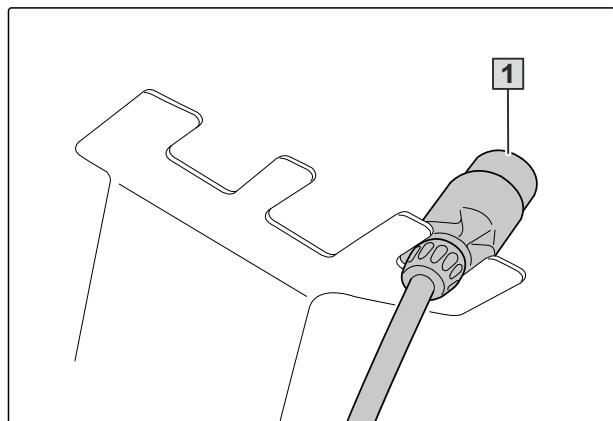

CMS-I-00001248

9.4 Uncoupling the additional fan power supply

CMS-T-00009998-A.1

1. Pull out the plug for the additional fan power supply.
2. Close the protective cap.
3. Place the plug for the power supply in the hose cabinet.




CMS-I-00003084

9.5 Disconnecting the hydraulic hose lines


CMS-T-00000277-F.1

1. Secure the tractor and implement.
2. Put the control lever on the tractor control unit in float position.
3. Disconnect the hydraulic hose lines **1**.
4. Put the dust caps on the hydraulic sockets.

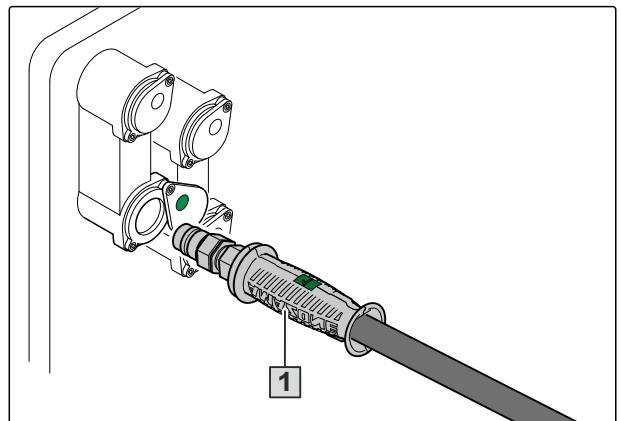

CMS-I-00001065

5. Hang the hydraulic hose lines **1** in the hose cabinet.

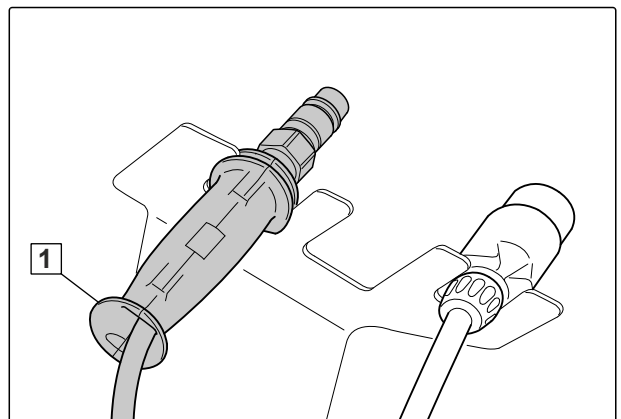


CMS-I-00001250

9.6 Uncoupling the universal joint shaft

CMS-T-00004159-A.1

1. Unlock the bracket.
2. Swivel the bracket **1** out of the parking position.
3. *To release the fastening chain from the tractor, see "Universal joint shaft operating manual".*
4. Release the universal joint shaft from the tractor PTO shaft.
5. Put the universal joint shaft in the bracket.

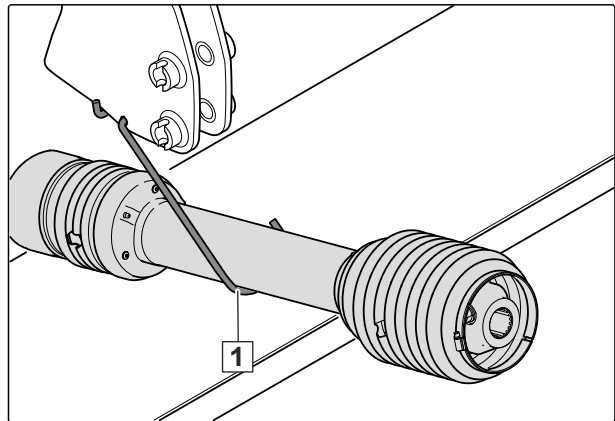


CMS-I-00003520

9.7 Uncoupling the 3-point mounting frame

CMS-T-00001401-C.1

1. Park the implement on a level surface with solid ground.
2. Release the top link **1**.
3. Uncouple the top link **1** from the implement.
4. Release the lower links **2**.
5. Uncouple the lower links **2** from the implement from the tractor seat.

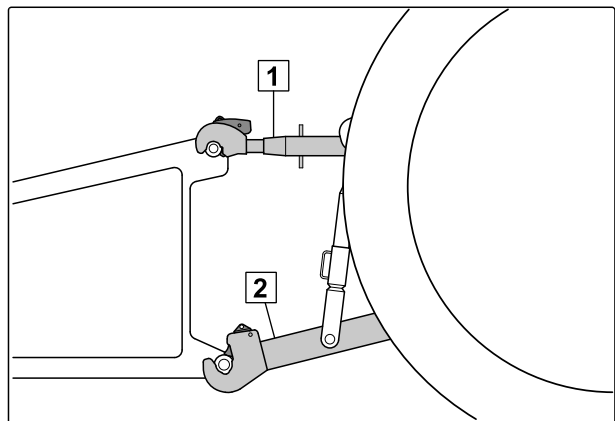

CMS-I-00001249

Repairing the machine

10

CMS-T-00004116-G.1

10.1 Maintaining the machine

CMS-T-00004117-G.1

10.1.1 Maintenance schedule

After initial operation		
Checking the hydraulic hose lines	see page 89	
Checking the wheel bolt tightening torque	see page 89	
Checking the oil level in the manual transmission	see page 92	
Checking the oil level in the angular gearbox	see page 92	
Checking the oil level in the spur gear trough	see page 93	
After the first 50 operating hours		
Changing the oil of the manual transmission	see page 94	
Changing the oil of the angular gearbox	see page 95	
Replacing the oil filter	see page 96	
as required		
Replacing the tines	see page 91	
daily		
Checking the lower link pins and top link pins	see page 88	
Every 6 months		
Ratchet clutch maintenance	see page 97	
Every 50 operating hours		
Checking the tines	see page 90	

Every 500 operating hours		
Changing the oil of the manual transmission	see page 94	
Changing the oil of the angular gearbox	see page 95	
Replacing the oil filter	see page 96	

Every 50 operating hours / weekly		
Checking the hydraulic hose lines	see page 89	
Checking the tyre inflation pressure	see page 90	
Checking the oil level in the manual transmission	see page 92	
Checking the oil level in the angular gearbox	see page 92	
Checking the oil level in the spur gear trough	see page 93	

Every 50 operating hours / as required		
Universal joint shaft maintenance	see page 98	

Every 50 operating hours / Every 3 months		
Checking the wheel mark eradicator coulter	see page 97	

Every 100 operating hours / Every 12 months		
Checking the wheel bolt tightening torque	see page 89	

10.1.2 Checking the lower link pins and top link pins

CMS-T-00002330-J.1



INTERVAL

- daily

Criteria for visual inspection of lower link pins and top link pins:

- Cracks
 - Fractures
 - Permanent deformations
 - Permissible wear: 2 mm
1. Check the lower link pins and top link pins for the listed criteria.
 2. Replace worn pins.

10.1.3 Checking the hydraulic hose lines

CMS-T-00002331-F.1




INTERVAL

- After initial operation
- Every 50 operating hours
or
weekly

1. Check the hydraulic hose lines for damage, such as chafing point, cuts, tears and deformation.
2. Check the hydraulic hose lines for leaks.
3. Retighten loose bolted connections.

Hydraulic hose lines must not be more than 6 years old.

4. Check the manufacturing date **1**.

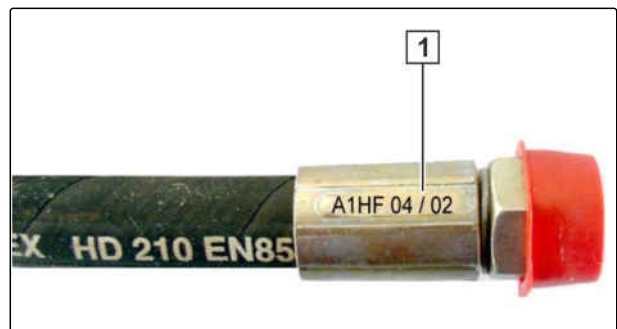

CMS-I-00000532



WORKSHOP WORK

5. Replace worn, damaged or aged hydraulic hose lines.

10.1.4 Checking the wheel bolt tightening torque

CMS-T-00003578-C.1



INTERVAL

- After initial operation
- Every 100 operating hours
or
Every 12 months

Tyres	Tightening torque
Tyres 10/75-15.3-AS	300 Nm

- Check the wheel bolt tightening torque.

10.1.5 Checking the tyre inflation pressure

CMS-T-00004972-D.1



INTERVAL

- Every 50 operating hours
or
weekly

There are stickers attached in the rims of the wheels, which specify the required tyre inflation pressure.

- Check the tyre inflation pressure according to the specifications on the stickers.

10.1.6 Checking the tines


CMS-T-00005050-A.1



INTERVAL

- Every 50 operating hours

1. Determine the length of the tines.
2. *If the minimum length of the tines is undercut, replace the tines.*

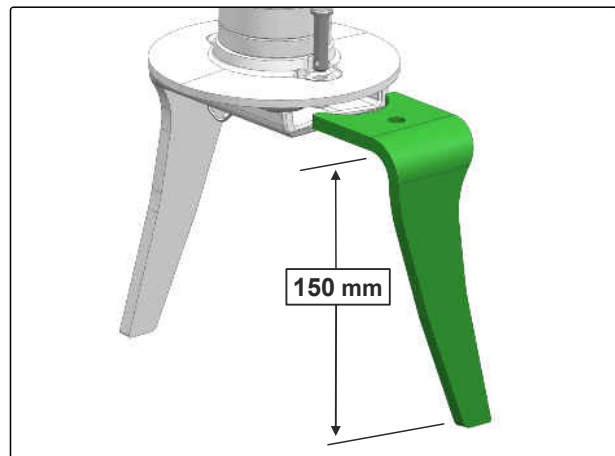

CMS-I-00003613


10.1.7 Replacing the tines

CMS-T-00004140-B.1

INTERVAL

- as required


1. Remove the linch pin **3**.
2. Remove the pin **1** from the tool carrier.
3. Remove the tine **2**.

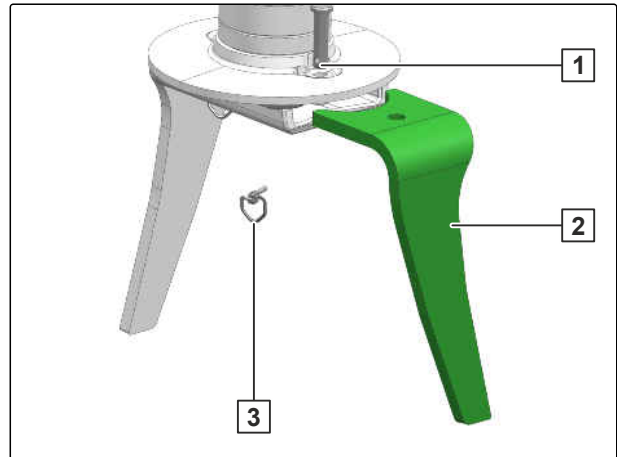

CMS-I-00003035

NOTE

The outer tool carriers **1** always rotate towards the centre of the implement.

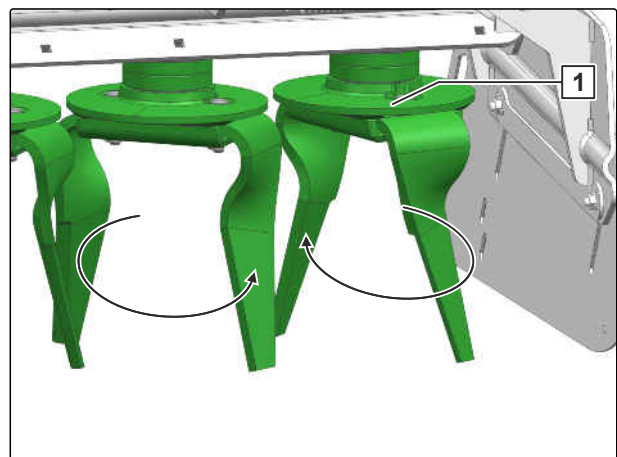

CMS-I-00003470

4. Pay attention to the alignment of the tine.
5. Install the new tine **2**.
6. Fasten the tine with the pin.
7. Secure the tine with the linch pin.

10.1.8 Checking the oil level in the manual transmission


CMS-T-00004133-A.1



INTERVAL

- After initial operation
 - Every 50 operating hours
- or
- weekly

1. Park the implement on a horizontal surface.
2. *If the oil level is not visible in the inspection glass* **2**,
Remove the refill screw **1**.
3. Refill oil according to the specification **3** and the technical data.
4. *If the oil level is visible in the inspection glass*,
install the refill screw with a new sealing ring.

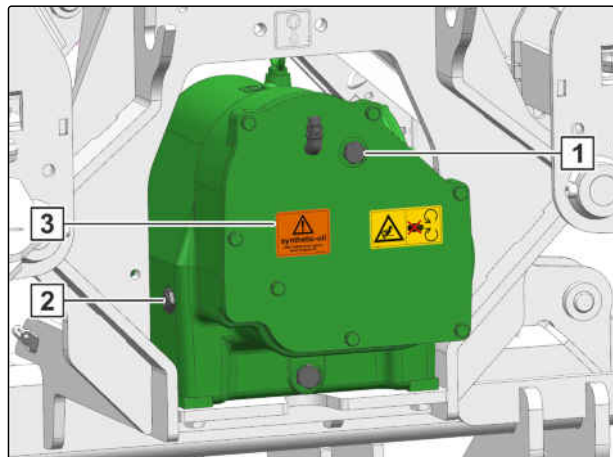

CMS-I-00003043

10.1.9 Checking the oil level in the angular gearbox


CMS-T-00004134-A.1



INTERVAL

- After initial operation
 - Every 50 operating hours
- or
- weekly

1. Park the implement on a horizontal surface.
2. Remove the oil dipstick **1**.
3. Read the oil level from the dipstick.
4. *If the oil level is not between the markings on the dipstick*,
Refill the oil through the opening of the oil dipstick according to the specification **2** and the technical data.
5. *When the oil level is visible between the markings on the dipstick*,
install the oil dipstick with a new sealing ring.
6. install the oil dipstick with a new sealing ring.

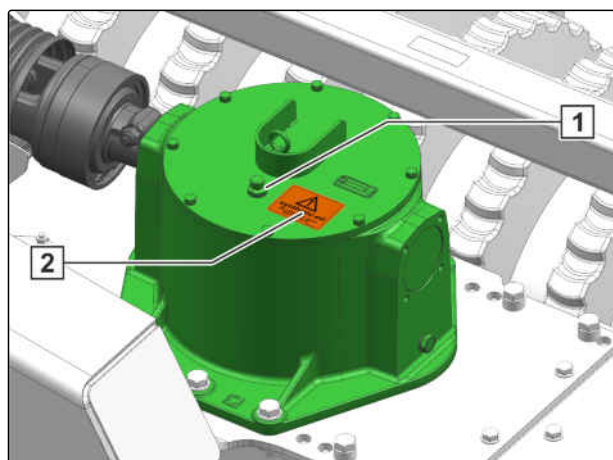

CMS-I-00003040

10.1.10 Checking the oil level in the spur gear trough

CMS-T-00004137-A.1



INTERVAL

- After initial operation
 - Every 50 operating hours
- or
- weekly




IMPORTANT

Damage due to impurities in the spur gear trough

- Clean the implement before performing maintenance.

1. Park the implement on a horizontal surface.
2. Remove the peripheral cover screws **1**.
3. Remove the cover with ventilation pipe **2**.
4. *If the spur gears **3** are not halfway covered with transmission fluid in the spur gear trough, refill oil according to the technical data.*
5. Install the cover with the ventilation pipe.
6. Install the peripheral cover screws.
7. Check the second spur gear trough.

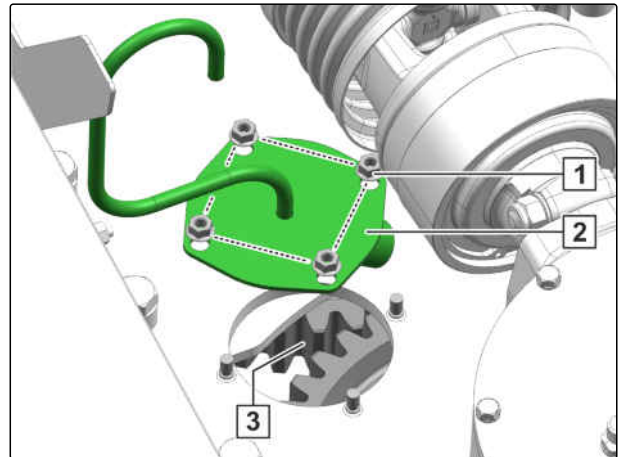

CMS-I-00003087



NOTE

There is no need to change the oil in the spur gear trough.

10.1.11 Changing the oil of the manual transmission

CMS-T-00004135-B.1



INTERVAL

- After the first 50 operating hours
- Every 500 operating hours


1. Place a suitable container below the oil drain opening.
2. Remove the refill screw **1**.
3. Remove the oil drain plug **2**.



ENVIRONMENTAL INFORMATION Danger due to escaping oil

- ▶ Collect any escaping oil.
- ▶ Dispose of cleaning agents for removing oil in an environmentally friendly manner.

4. Clean the chip catching magnets on the oil drain plug.
5. Install the oil drain plug with a new sealing ring.
6. Refill oil according to the specification **3** and the technical data.
7. install the refill screw with a new sealing ring.

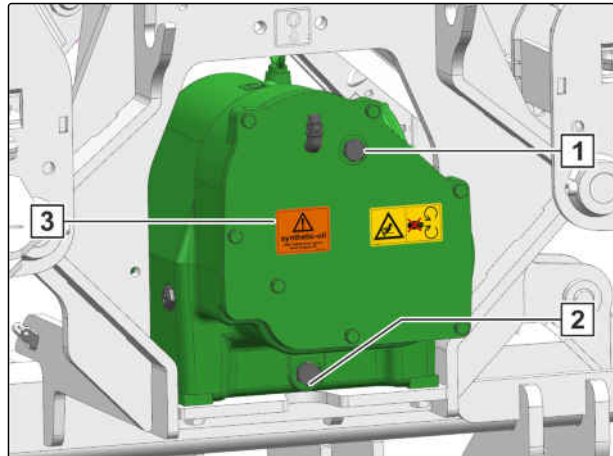

CMS-I-00003039

10.1.12 Changing the oil of the angular gearbox

CMS-T-00004136-B.1



INTERVAL


- After the first 50 operating hours
- Every 500 operating hours

1. Place a suitable container below the oil drain opening.
2. Remove the oil dipstick **3**.
3. Remove the oil drain plug **1**.



ENVIRONMENTAL INFORMATION Danger due to escaping oil

- ▶ Collect any escaping oil.
- ▶ Dispose of cleaning agents for removing oil in an environmentally friendly manner.

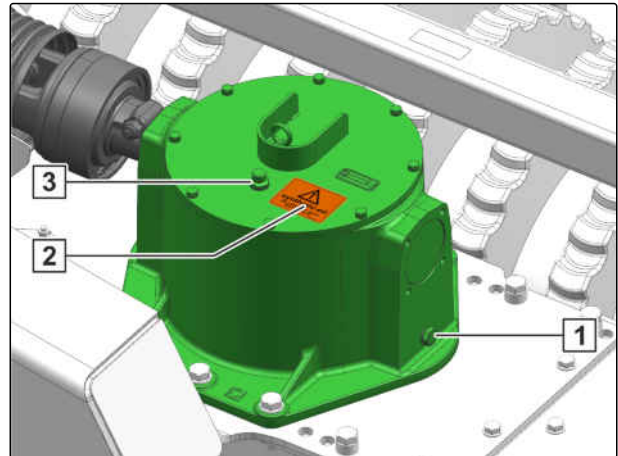

CMS-I-00003041

4. Clean the chip catching magnets on the oil drain plug.
5. Install the oil drain plug with a new sealing ring.
6. Refill oil according to the specification **2** and the technical data.
7. install the oil dipstick with a new sealing ring.

10.1.13 Replacing the oil filter



INTERVAL

- After the first 50 operating hours
- Every 500 operating hours


1. Remove the bolts **4**.
2. Carefully remove the oil filter cartridge **1**.



ENVIRONMENTAL INFORMATION Danger due to escaping oil

- ▶ Collect any escaping oil.
- ▶ Dispose of cleaning agents for removing oil in an environmentally friendly manner.

3. Replace the oil filter in the oil filter cartridge.
4. Fill the oil filter cartridge up to the top edge with an oil in accordance with the technical data.
5. Lightly lubricate the new sealing ring on the oil filter cartridge.
6. Install the sealing ring on the oil filter cartridge.
7. Install the oil filter cartridge.
8. Tighten the bolts.
9. *To check the oil level, see "Checking the oil level in the manual transmission".*

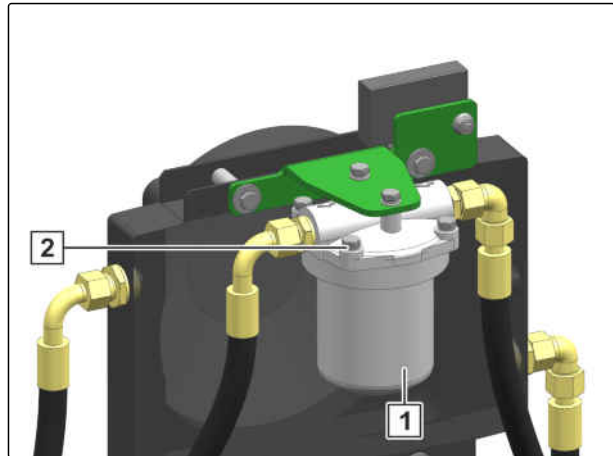

CMS-I-00003038

10.1.14 Checking the wheel mark eradicator coulter

CMS-T-00002497-E.1



INTERVAL


- Every 50 operating hours
or
Every 3 months



IMPORTANT

The tool carriers become worn when constantly working in the soil.

- ▶ When the wear limit of the wheel mark eradicator coulter has been exceeded, the tool carriers constantly work in the soil horizon.
Replace the coulter when the wear limit has been reached.

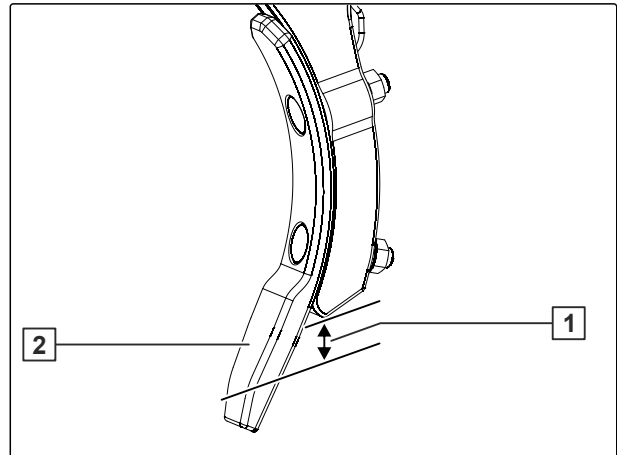

CMS-I-00001081

1. If the distance **1** between the coulter tip and the tool carrier is less than 15 mm, replace the wheel mark eradicator coulter **2**.
2. To replace the wheel mark eradicator coulter, See section "Changing the wheel mark eradicator coulter".


10.1.15 Ratchet clutch maintenance

CMS-T-00004584-A.1



INTERVAL

- Every 6 months
- ▶ Perform maintenance on the ratchet clutches **1** according to the instructions from the universal joint shaft manufacturer

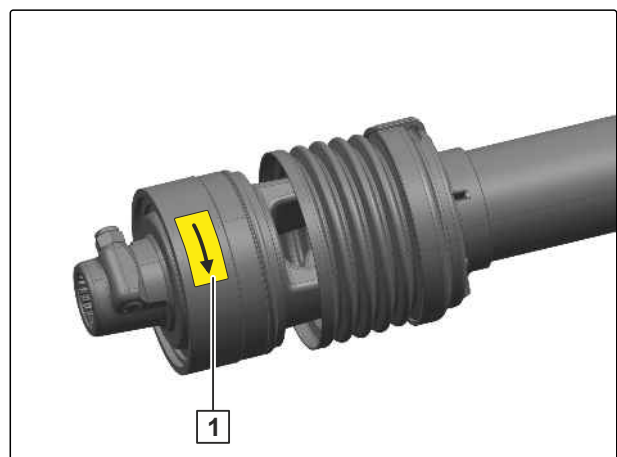

CMS-I-00003044

10.1.16 Universal joint shaft maintenance

CMS-T-00004585-A.1



INTERVAL

- Every 50 operating hours
or
as required

- Perform maintenance on the universal joint shaft according to the instructions from the universal joint shaft manufacturer

10.2 Lubricating the implement

CMS-T-00004120-D.1



IMPORTANT

Implement damage due to improper lubrication


- ▶ Grease the implement at the marked lubrication points according to the lubrication schedule.
- ▶ *To ensure that dirt is not pressed into the lubrication points,* thoroughly clean the grease nipples and the grease gun.
- ▶ Only grease the implement with the lubricants listed in the technical data.
- ▶ Press the dirty grease completely out of the bearings.



CMS-I-00002270


10.2.1 Overview of lubrication points

CMS-T-00004121-C.1

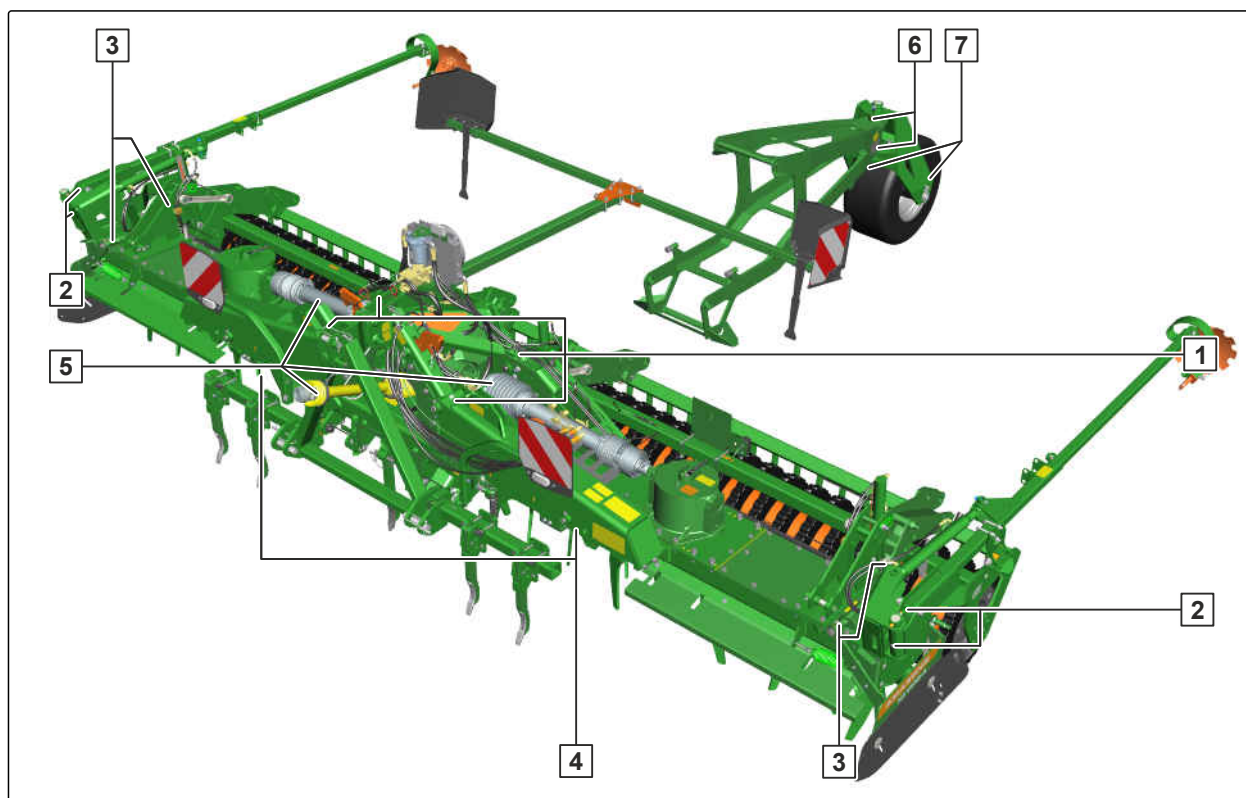


CMS-I-00003009


Every 50 operating hours / Every 6 months

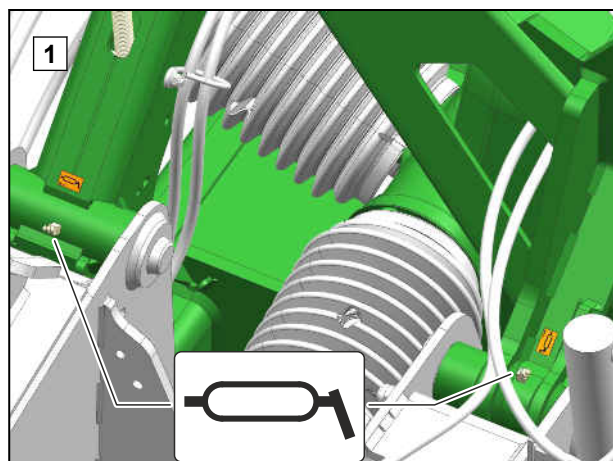


CMS-I-00003003

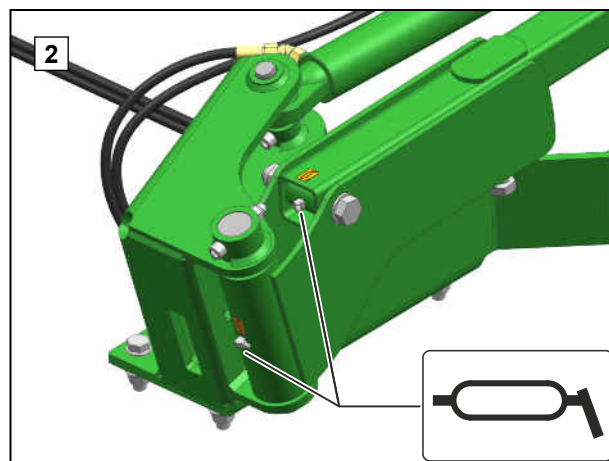


CMS-I-00003004

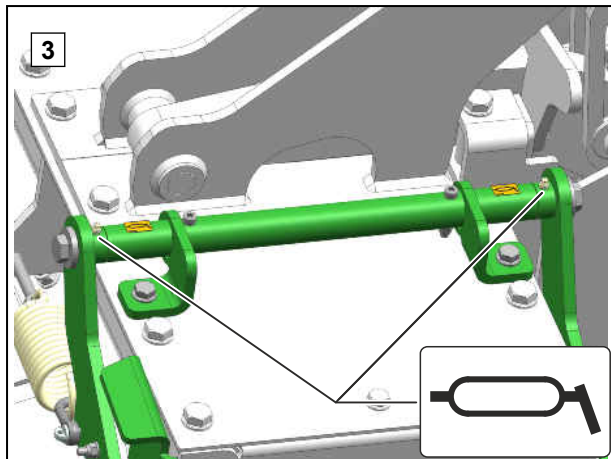

CMS-I-00003005

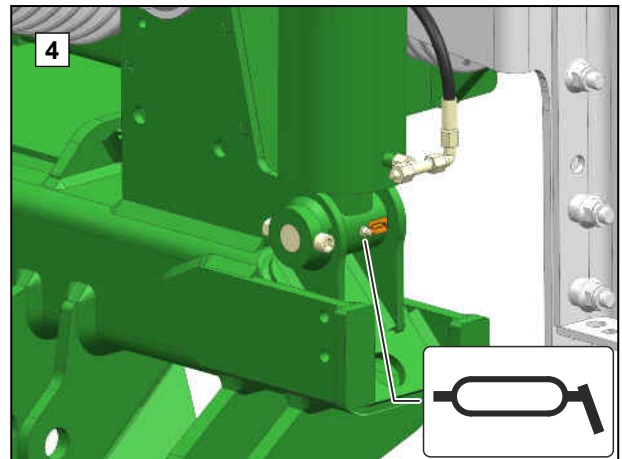


CMS-I-00003002

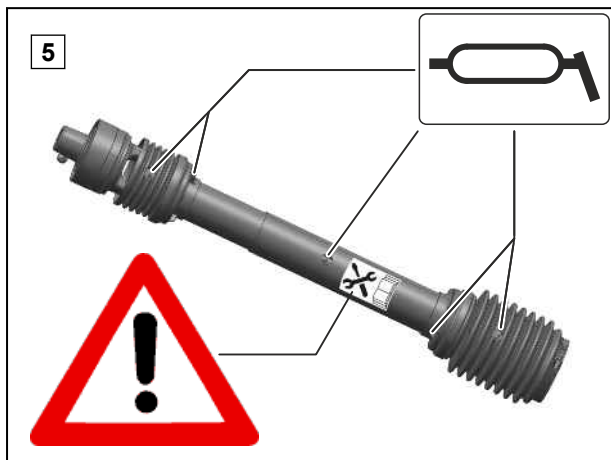


CMS-I-00003006

Every 100 operating hours / Every 6 months

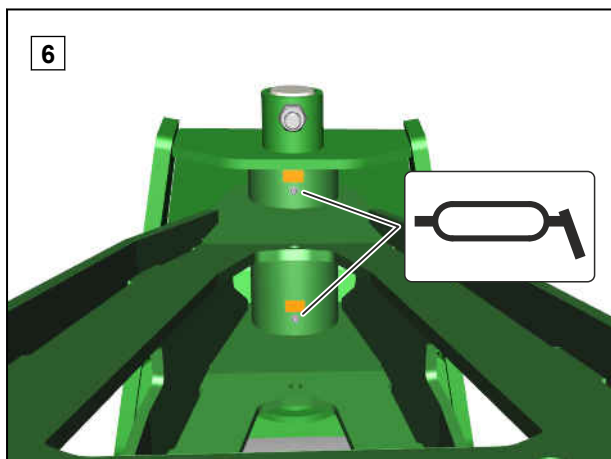

CMS-I-00003007

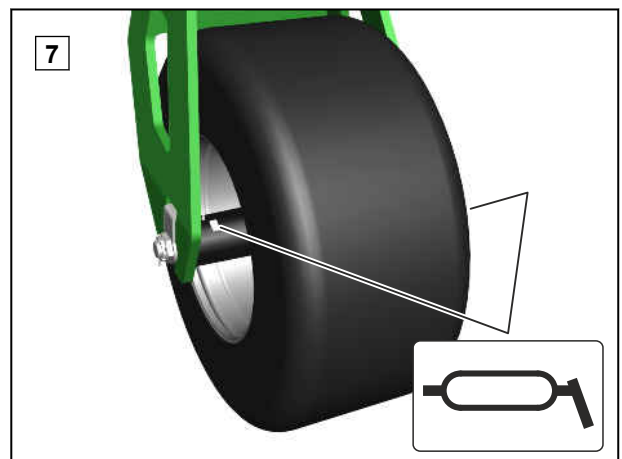

CMS-I-00006005

10.3 Cleaning the implement

CMS-T-00000593-F.1



IMPORTANT

Risk of machine damage due to cleaning jet of the high-pressure nozzle

- ▶ Never direct the cleaning jet of the high-pressure cleaner or hot water high-pressure cleaner onto the marked components.
- ▶ Never aim the cleaning jet of high-pressure cleaners or hot water high-pressure cleaners on electrical or electronic components.
- ▶ Never aim the cleaning jet of the high pressure cleaner directly on lubrication points, bearings, rating plates, warning signs, and stickers.
- ▶ Always maintain a minimum distance of 30 cm between the high-pressure nozzle and the implement.
- ▶ Do not exceed a water pressure of 120 bar.



CMS-I-00002692

- ▶ Clean the machine with a high-pressure cleaner or a hot water high-pressure cleaner.

Disposing of the implement

11

CMS-T-00010906-B.1




ENVIRONMENTAL INFORMATION

Environmental damage due to improper disposal

- ▶ Observe the regulations of the local authorities.
- ▶ Observe the symbols on the implement regarding disposal.
- ▶ Observe the following instructions.

1. Components with this symbol should not be disposed of with household waste.

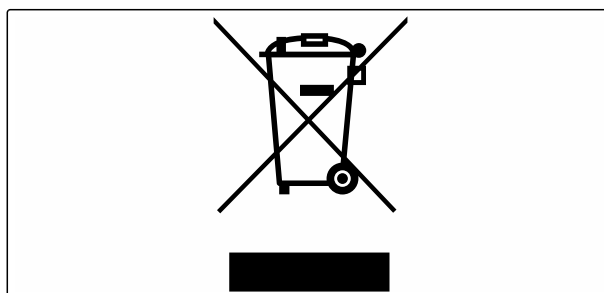

CMS-I-00007999

2. Return batteries to the distributor

or

Dispose of batteries at a collection point.

3. Put recyclable materials in the recycling.
4. Treat operating materials like hazardous waste.



WORKSHOP WORK

5. Dispose of the coolant.

Loading the implement


12

CMS-T-00004151-C.1

12.1 Loading the implement with a crane

CMS-T-00004154-C.1

The implement has 3 lashing points for slings for lifting.

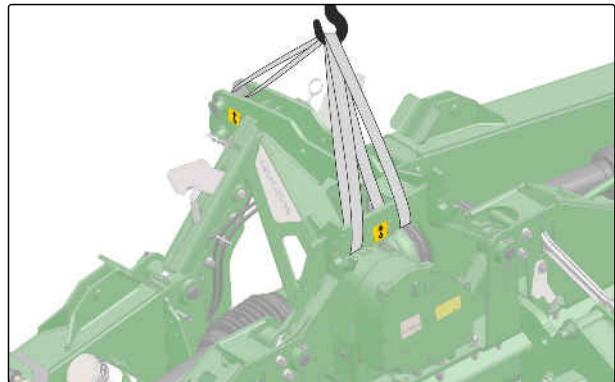

CMS-I-00003268



WARNING

Risk of accidents due to improperly attached slings for lifting

If the slings are not attached at the marked lashing points, the implement can be damaged during lifting and endanger safety.

- Only attach the slings for lifting at the marked lashing points.



CMS-I-00003269



REQUIREMENTS

- ☑ The implement is unfolded

1. Attach the slings for lifting on the intended lashing points.
2. Slowly lift the implement.

12.2 Lashing the implement

CMS-T-00006656-B.1

The implement has 3 lashing points **1** for lashing straps.




WARNING

Risk of accidents due to improperly attached lashing straps

If the lashing straps are not attached at the marked lashing points, the implement can be damaged during lashing and endanger safety.

- ▶ Attach the lashing straps only at the marked lashing points.

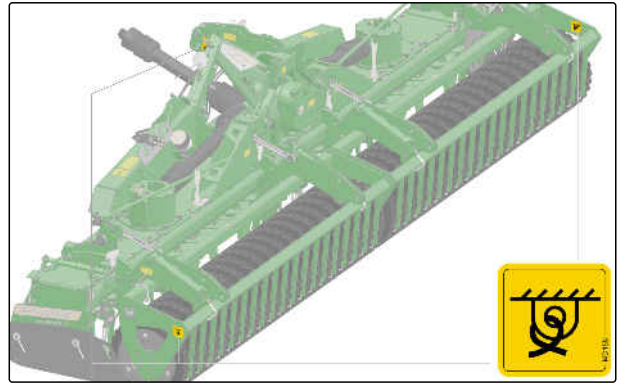

CMS-I-00003251



REQUIREMENTS

- ☑ The implement is unfolded
1. Put the implement on the transport vehicle.
 2. Attach the lashing straps at the marked points.
 3. Lash down the implement in compliance with the national regulations for load securing.


Appendix

13

CMS-T-00004152-C.1

13.1 Bolt tightening torques

CMS-T-00000373-E.1

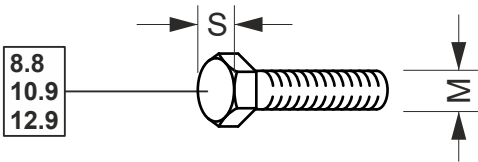


CMS-I-000260

i NOTE

Unless specified otherwise, the bolt tightening torques listed in the table apply.

M	S	Strength classes		
		8.8	10.9	12.9
M8	13 mm	25 Nm	35 Nm	41 Nm
M8x1		27 Nm	38 Nm	41 Nm
M10	16(17) mm	49 Nm	69 Nm	83 Nm
M10x1		52 Nm	73 Nm	88 Nm
M12	18(19) mm	86 Nm	120 Nm	145 Nm
M12x1.5		90 Nm	125 Nm	150 Nm
M14	22 mm	135 Nm	190 Nm	230 Nm
M 14x1.5		150 Nm	210 Nm	250 Nm
M16	24 mm	210 Nm	300 Nm	355 Nm
M16x1.5		225 Nm	315 Nm	380 Nm
M18	27 mm	290 Nm	405 Nm	485 Nm
M18x1.5		325 Nm	460 Nm	550 Nm
M20	30 mm	410 Nm	580 Nm	690 Nm
M20x1.5		460 Nm	640 Nm	770 Nm

M	S	Strength classes		
		8.8	10.9	12.9
M22	32 mm	550 Nm	780 Nm	930 Nm
M22x1.5		610 Nm	860 Nm	1,050 Nm
M24	36 mm	710 Nm	1,000 Nm	1,200 Nm
M24x2		780 Nm	1,100 Nm	1,300 Nm
M27	41 mm	1,050 Nm	1,500 Nm	1,800 Nm
M27x2		1,150 Nm	1,600 Nm	1,950 Nm
M30	46 mm	1,450 Nm	2,000 Nm	2,400 Nm
M30x2		1,600 Nm	2,250 Nm	2,700 Nm

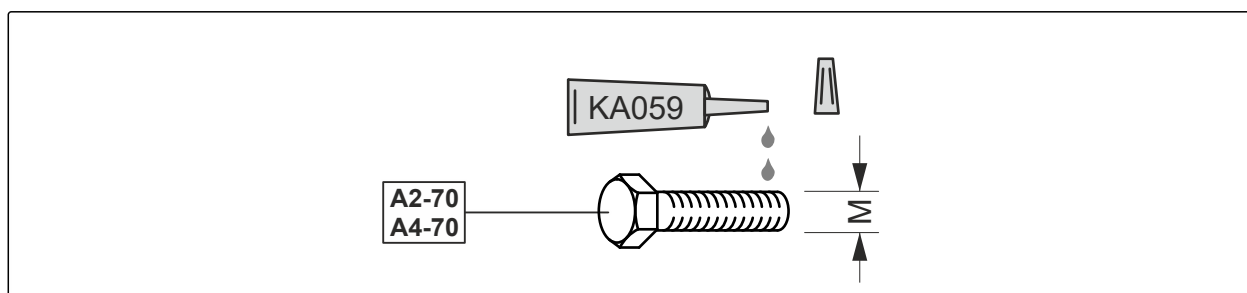

CMS-I-00000065

M	Tightening torque	M	Tightening torque
M4	2.4 Nm	M14	112 Nm
M5	4.9 Nm	M16	174 Nm
M6	8.4 Nm	M18	242 Nm
M8	20.4 Nm	M20	342 Nm
M10	40.7 Nm	M22	470 Nm
M12	70.5 Nm	M24	589 Nm

13.2 Other applicable documents

CMS-T-00004153-A.1

- Tractor operating manual
- Universal joint shaft operating manual

Directories

14

14.1 Glossary

CMS-T-00000513-B.1

M

Machine

Mounted implements are accessory parts of the tractor. However, mounted implements are always referred to as the implement in this operating manual.

O

Operating materials

Operating materials serve to ensure operational readiness. Operating materials include e.g. cleaning agents and lubricants such as lubricating oil, greases or cleaners.

T

Tractor

In this operating manual, the designation tractor is always used, even for other agricultural tractor units. Implements are mounted on the tractor or towed by the tractor.

14.2 Index

3		Checking the oil level	
		<i>Angular gearbox</i>	92
		<i>Manual transmission</i>	92
		<i>Spur gear trough</i>	93
3-point mounting frame	32	Checking the set working depth	78
<i>coupling</i>	50	cleaning	
<i>uncoupling</i>	86	<i>Implement</i>	102
A		Contact data	
Additional fan power supply		<i>Technical editing</i>	4
<i>coupling</i>	53	D	
<i>uncoupling</i>	85	Digital operating manual	4
Additional license plate	35	Dimensions	38
Address		Documents	32
<i>Technical editing</i>	4	E	
Adjusting the section end position	56	Eliminating faults	79
Adjusting the speed of the tines		F	
<i>Changing the gear on the manual transmission</i>	54	Folding	71
<i>Switching the gear wheels in the manual transmission</i>	55	Folding in the track marker	67, 71
Adjusting the spring tension of the side guide plates	69	Frame transport lock	24
Adjust the working depth		Front axle load	
<i>Adjusting the working depth of the side guide plates</i>	62	<i>calculation</i>	43
<i>Adjusting the working height of the levelling board</i>	61	Front ballasting	
<i>Hydraulic adjustment of the tine working depth</i>	60	<i>calculation</i>	43
<i>Manual adjustment of the tine working depth</i>	57	Front lighting	35
Aids	32	Function of the implement	21
B		H	
Backstop profiles for lower links		Headlands	78
<i>attachment</i>	46	Hydraulic hose lines	
Bolt tightening torques	106	<i>checking</i>	89
C		<i>coupling</i>	50
Changing the oil		<i>uncoupling</i>	85
<i>Angular gearbox</i>	95	Hydraulic system	
<i>Manual transmission</i>	94	<i>coupling</i>	50
<i>Oils and filling capacities</i>	40		
checking			
<i>Hydraulic hose lines</i>	89		
<i>Lower link pin</i>	88		
<i>Top link pin</i>	88		

I		P	
Implement		Parking the machine	
<i>folding</i>	71	<i>Lowering the implement</i>	84
<i>unfolding</i>	77, 83	<i>Uncoupling the universal joint shaft</i>	86
Implement overview	20	Payload	
Intended use	19	<i>calculation</i>	42
L		Performance characteristics of the tractor	39
Lighting and identification for road travel		Permissible total weight	38
<i>Description</i>	34	Power supply	
Lighting and identification		<i>coupling</i>	52
<i>front</i>	35	<i>uncoupling</i>	84
Loading		Preparing the implement for operation	
<i>lashing</i>	105	<i>Adjusting the speed of the tines</i>	54
<i>with a crane</i>	104	<i>Using the centre line eradicator</i>	48, 57
Loads		Preparing the machine for road travel	
<i>calculation</i>	43	<i>Transport width with installed potato tines</i>	73
Lowering the implement	84	Preparing the machine	
Lower link pin		<i>Adjusting the universal joint shaft</i>	46
<i>checking</i>	88	<i>Preparing the universal joint shaft</i>	46
Lubricants	40	<i>Using the hydraulic top link</i>	48
M		Preparing the side guide plates for operation	
Maintenance		<i>Adjusting the spring tension of the side guide plates</i>	69
<i>Changing the oil of the angular gearbox</i>	95	Product description	
<i>Changing the oil of the manual transmission</i>	94	<i>3-point mounting frame</i>	32
<i>Checking the oil level in the angular gearbox</i>	92	<i>Additional license plate</i>	35
<i>Checking the oil level in the manual transmission</i>	92	<i>Special equipment</i>	22
<i>Checking the oil level in the spur gear trough</i>	93	<i>Universal joint shaft locking mechanism</i>	34
<i>Checking the tines</i>	90	Protective equipment	
<i>Ratchet clutch maintenance</i>	97, 98	<i>Frame transport lock</i>	24
<i>Replacing the oil filter</i>	96	<i>Roller transport lock</i>	24
<i>Replacing the tines</i>	91	<i>Universal joint shaft guard</i>	23
Mounting category	38	R	
N		Ratchet clutch	34
Noise development data	40	Rating plate on the implement	
O		<i>Description</i>	33
Oil cooler		Rear axle load	
<i>Description</i>	37	<i>calculation</i>	43
Operation	77	Replacing the oil filter	96
		Roller	
		<i>Adjusting the scraper</i>	70
		Roller transport lock	24

S			
Scraper		Unfolding	77, 83
<i>adjusting</i>	70	Universal joint shaft guard	23
Special equipment	22	Universal joint shaft	
		<i>coupling</i>	52
		<i>installing</i>	47
		<i>Ratchet clutch maintenance</i>	97
		<i>Universal joint shaft maintenance</i>	98
T			
Technical data		Universal operating tool	
<i>drivable slope inclination</i>	40	<i>Description</i>	33
<i>Lubricants</i>	40	Using the centre line eradicator	48, 57
<i>Maximum transport speed</i>	42	Using the hydraulic top link	48
<i>Mounting category</i>	38	Using the machine	
<i>Noise development data</i>	40	<i>Checking the set working depth</i>	78
<i>Oils and filling capacities</i>	40	<i>Using the track marker</i>	78
Threaded cartridge		Using the track marker	78
<i>Description</i>	32		
Tightening torque			
<i>Wheel bolts</i>	89		
Tine			
<i>checking</i>	90		
<i>replacing</i>	91		
Tool protection	23		
Top link pin			
<i>checking</i>	88		
Total weight			
<i>calculation</i>	43		
T-Pack tyre packer	36		
<i>adjustment</i>	63		
<i>fixing</i>	74		
Track marker			
<i>Adjusting the track marker intensity</i>	69		
<i>Adjusting the track marker length</i>	68		
<i>telescoping</i>	74		
Tractor			
<i>Calculating the required tractor characteristics</i>	43		
Transport frame			
<i>coupling</i>	72		
<i>uncoupling</i>	76		
Transport speed	42		
Transport width with installed potato tines	73		
Tyre load capacity			
<i>calculation</i>	43		
U			
Uncoupling the universal joint shaft	86		



AMAZONE

AMAZONEN-WERKE

H. DREYER SE & Co. KG

Postfach 51

49202 Hasbergen-Gaste

Germany

+49 (0) 5405 501-0

amazone@amazone.de

www.amazone.de