



Original operating manual

Rotary harrow

KE 6002-2



SmartLearning



AMAZONE
 AMAZONEN-WERKE H. DREYER SE & Co. KG
 Am Amazonenwerk 9-13 D-49205 Hasbergen

Maschinen-Nr. 

Fahrzeug-Ident-Nr.

Produkt

zul. technisches Maschinengewicht kg Modelljahr




Baujahr
 année de fabrication
 year of construction
 Год изготовления





TABLE OF CONTENTS

1	About this operating manual	1	4.7	3-point mounting frame	31
1.1	Diagrams	1	4.8	Rating plate on the implement	31
1.1.1	Warnings and signal words	1	4.9	Universal operating tool	32
1.1.2	Further instructions	1	4.10	Universal joint shaft locking mechanism	32
1.1.3	Instructions	2	4.11	Lighting and identification for road travel	33
1.1.4	Lists	3	4.11.1	Rear lighting and identification for road travel	33
1.1.5	Item numbers in figures	3	4.11.2	Front lighting and identification	33
1.2	Other applicable documents	4	4.11.3	Additional license plate	34
1.3	Your opinion is important	4	4.12	Rollers	34
2	Safety and responsibility	5	4.12.1	AMAZONE rollers	34
2.1	Basic safety instructions	5	4.12.2	Packer rollers from other manufacturers	34
2.1.1	Safe operating organisation	5	5	Technical data	36
2.1.2	Knowing and preventing dangers	9	5.1	Dimensions	36
2.1.3	Safe operation and handling of the machine	11	5.2	Permissible total weight	36
2.1.4	Safe maintenance and modification	13	5.3	Mounting category	36
2.2	Safety routines	17	5.4	Working speed	36
3	Intended use	19	5.5	Working depth	37
4	Product description	20	5.6	Performance characteristics of the tractor	37
4.1	Implement overview	20	5.7	Noise development data	37
4.2	Function of the implement	21	5.8	Drivable slope inclination	38
4.3	Special equipment	22	5.9	Lubricants	38
4.4	Protective equipment	22	5.10	Oils and filling capacities	38
4.4.1	Universal joint shaft guard	22	6	Preparing the machine	40
4.4.2	Tool protection	23	6.1	Calculating the required tractor characteristics	40
4.4.3	Frame transport lock	23	6.2	Attaching the backstop profiles for the lower links	43
4.4.4	Roller transport lock	24	6.3	Preparing the universal joint shaft	43
4.5	Warning symbols	24	6.4	Installing the universal joint shaft on the implement	44
4.5.1	Positions of the warning symbols	24	6.5	Coupling the implement	45
4.5.2	Layout of the warning symbols	25			
4.5.3	Description of the warning symbols	25			
4.6	Threaded cartridge	31			

TABLE OF CONTENTS

6.5.1	Coupling the 3-point mounting frame	45	9.6	Uncoupling the 3-point mounting frame	63
6.5.2	Coupling the hydraulic hose lines	45			
6.5.3	Coupling the power supply	47			
6.5.4	Coupling the universal joint shaft	47	10 Repairing the machine	64	
6.5.5	Calculating the permissible payload	48			
6.6	Preparing the implement for operation	48	10.1 Maintaining the machine	64	
6.6.1	Manual adjustment of the tine working depth	48	10.1.1	Maintenance schedule	64
6.6.2	Adjusting the working height of the levelling board	50	10.1.2	Checking the top link pin and lower link pin	65
6.6.3	Adjusting the working depth of the side guide plates	51	10.1.3	Checking the hydraulic hose lines	65
6.6.4	Adjusting the spring tension of the side guide plates	52	10.1.4	Checking the tines	66
6.6.5	Adjusting the speed of the tines	53	10.1.5	Replacing the tines	67
6.6.6	Using the centre line eradicator	54	10.1.6	Checking the oil level in the interchangeable wheel gear	68
6.6.7	Adjusting the section end position	55	10.1.7	Checking the oil level in the centre gearbox	69
6.6.8	Adjusting the scraper to the roller	55	10.1.8	Checking the oil level in the spur gear trough	70
6.7	Preparing the machine for road travel	56	10.1.9	Replacing the oil in the interchangeable wheel gear	71
6.7.1	Folding the implement	56	10.1.10	Replacing the oil in the centre gearbox	71
			10.1.11	Ratchet clutch maintenance	73
			10.1.12	Universal joint shaft maintenance	73
7	Using the machine	57	10.2 Lubricating the implement	74	
7.1	Unfolding the implement	57	10.2.1	Overview of lubrication points	75
7.2	Using the implement	57	10.3 Cleaning the implement	76	
7.3	Checking the set working depth	58			
7.4	Turning on the headlands	58	11 Loading the machine	77	
			11.1	Lifting the implement	77
8	Eliminating faults	59	11.2	Lashing the implement	78
9	Parking the machine	61	12 Appendix	79	
9.1	Unfolding the implement	61	12.1	Bolt tightening torques	79
9.2	Lowering the implement	61	12.2	Other applicable documents	80
9.3	Uncoupling the power supply	62			
9.4	Disconnecting the hydraulic hose lines	62	13 Directories	81	
9.5	Uncoupling the universal joint shaft	63	13.1	Glossary	81
			13.2	Index	82

About this operating manual

1

CMS-T-00000081-D.1

1.1 Diagrams

CMS-T-005676-C.1

1.1.1 Warnings and signal words

CMS-T-00002415-A.1

Warnings are marked with a vertical bar with a triangular safety symbol and the signal word. The signal words *"DANGER"*, *"WARNING"* or *"CAUTION"* describe the severity of the potential danger and have the following meanings:



DANGER

- Indicates a direct threat with high risk for severe physical injury, such as loss of limbs or death.



WARNING

- Indicates a possible threat with moderate risk for severe physical injury or death.



CAUTION

- Indicates a threat with low risk for light or moderately severe physical injuries.

1.1.2 Further instructions

CMS-T-00002416-A.1



IMPORTANT

- Indicates a risk for damage to the implement.



ENVIRONMENTAL INFORMATION

- Indicates a risk for environmental damage.



NOTE

Indicates application tips and instructions for optimal use.

1.1.3 Instructions

CMS-T-00000473-B.1

Numbered instructions

CMS-T-005217-B.1

Actions that have to be performed in a specific sequence are represented as numbered instructions. The specified sequence of the actions must be observed.

Example:

1. Instruction 1
2. Instruction 2

1.1.3.1 Instructions and responses

CMS-T-005678-B.1

Reactions to instructions are marked with an arrow.

Example:

1. Instruction 1

➡ Reaction to instruction 1

2. Instruction 2

1.1.3.2 Alternative instructions

CMS-T-00000110-B.1

Alternative instructions are introduced with the word "or".

Example:

1. Instruction 1

or

Alternative instruction

2. Instruction 2

Instructions with only one action

CMS-T-005211-C.1

Instructions with only one action are not numbered, but rather shown with a arrow.

Example:

► Instruction

Instructions without sequence

CMS-T-005214-C.1

Instructions that do not require a specific sequence are shown as a list with arrows.

Example:

► Instruction

► Instruction

► Instruction

1.1.4 Lists

CMS-T-000024-A.1

Lists without an essential order are shown as a list with bullets.

Example:

● Point 1

● Point 2

1.1.5 Item numbers in figures

CMS-T-000023-B.1

A framed number in the text, e.g. a 1, indicates an item number in an adjacent figure.

1.2 Other applicable documents

CMS-T-00000616-B.1

A list of other applicable documents can be found in the Appendix.

1.3 Your opinion is important

CMS-T-000059-C.1

Dear reader, our operating manuals are updated regularly. Your suggestions for improvement help us to create ever more user-friendly operating manuals. Please send us your suggestions by post, fax or email.

AMAZONEN-WERKE H. Dreyer SE & Co. KG
Technische Redaktion
Postfach 51
D-49202 Hasbergen

Fax: +49 (0) 5405 501-234
E-Mail: td@amazone.de

Safety and responsibility

2

CMS-T-00004173-D.1

2.1 Basic safety instructions

CMS-T-00004174-D.1

2.1.1 Safe operating organisation

CMS-T-00002302-C.1

2.1.1.1 Personnel qualification

CMS-T-00002306-A.1

2.1.1.1.1 Requirements for all persons working with the machine

CMS-T-00002310-A.1

If the machine is used improperly, people can be injured or killed. To prevent accidents due to improper use, every person who works with the machine must meet the following minimum requirements:

- The person is physically and mentally capable of controlling the machine.
- The person can safely perform work with the machine within the scope of this operating manual.
- The person understands the functioning of the machine within the scope of their work and can recognise and prevent dangers arising during operation.
- The person has understood the operating manual and can implement the information that is conveyed in the operating manual.
- The person must be familiar with safe driving of vehicles.
- For road travel, the person knows the relevant road traffic regulations and has the prescribed driving permit.

2.1.1.1.2 Qualification levels

CMS-T-00002311-A.1

For working with the machine, the following qualification levels are provided:

- Farmer
- Agricultural helper

As a matter of principle, the activities described in this operating manual can be performed by persons with the qualification level "Agricultural helper".

2.1.1.1.3 Farmer

CMS-T-00002312-A.1

Farmers use agricultural implement to cultivate fields. They decide on the use of an implement for a specific purpose.

Farmers are basically familiar with working with agricultural implements and can instruct agricultural helpers in how to use the implements if necessary. They can perform odd tasks and simple maintenance and repair work on agricultural implements themselves.

Farmers can be e.g.:

- Farmers with higher education or training from a technical college
- Farmers by experience (e.g. inherited farm, comprehensive practical knowledge)
- Contractors who work by order of farmers

Activity example:

- Safety training for agricultural helpers

2.1.1.1.4 Agricultural helpers

CMS-T-00002313-A.1

Agricultural helpers use agricultural implements by order of the farmer. They are instructed on the use of the implement by the farmer, and work independently according to the work assignment from the farmer.

Agricultural helpers can be e.g.:

- Seasonal workers and labourers
- Prospective farmers in training
- Employees of the farmer (e.g. tractor driver)
- Family members of the farmer

Activity examples:

- Driving the machine
- Adjusting the working depth

2.1.1.2 Workplaces and passengers

CMS-T-00002307-B.1

Passengers

Passengers can fall, be run over and severely injured or killed due to machine movements. Ejected objects can hit and injure passengers.

- ▶ Do not let anybody ride on the machine.
- ▶ Do not let anybody climb onto the driving machine.

2.1.1.3 Danger for children

CMS-T-00002308-A.1

Danger for children

Children cannot assess dangerous situations and can behave unpredictably. As a result, children are at a higher risk.

- ▶ Keep children away.
- ▶ *When you drive out or actuate machine movements,*
make sure that there are no children in the danger area.

2.1.1.4 Operational safety

CMS-T-00002309-C.1

2.1.1.4.1 Perfect technical condition

CMS-T-00002314-C.1

Only use properly prepared machines

Without correct preparation according to this operating manual, operational safety of the machine is not ensured. This can result in accidents and serious personal injury or even death.

- ▶ Prepare the machine according to this operating manual.

Danger due to damage to the machine

Damage to the machine can impede the operational safety of the machine and cause accidents. This can result in serious injury or death.

- ▶ *If you suspect or observe damage,*
secure the tractor and implement.
- ▶ Immediately fix any damage that can affect safety.
- ▶ Fix the damage according to this operating manual.
- ▶ Any damage that you cannot fix yourself according to this operating manual must be fixed by a qualified specialist workshop.

Observe the technical limit values

Non-observance of the technical limits values of the machine can result in accidents and serious personal injury or even death. Moreover, the machine can be damaged. The technical limit values can be found in the Technical Data.

- ▶ Comply with the technical limit values.

2.1.1.4.2 Personal protective equipment

CMS-T-00002316-B.1

Personal protective equipment

Wearing personal protective equipment is an important safety element. Missing or unsuitable personal protective equipment increases the risk of damage to health and personal injury. Personal protective equipment includes: work gloves, safety shoes, protective clothing, breathing protection, hearing protection, face protection, and eye protection

- ▶ Determine the personal protective equipment required for each job and have it ready.
- ▶ Use only protective equipment that is in proper condition and offers effective protection.
- ▶ Adjust the personal protective equipment to the person, e.g. the size.
- ▶ Observe the manufacturer's instructions regarding operating materials, seed, fertiliser, crop protection products, and cleaning agents.

Wear suitable clothing

Loosely worn clothing increases the risk of getting caught or entangled on rotating parts and getting stuck on protruding parts. This can result in serious injury or death.

- ▶ Wear close-fitting, snag-free clothes.
- ▶ Never wear rings, necklaces and other jewellery.
- ▶ *If you have long hair,*
wear a hairnet.

2.1.1.4.3 Warning symbols

CMS-T-00002317-B.1

Keep warning symbols legible

Warning symbols on the machine warn you of risks in danger areas and are an important element of the machine's safety equipment. Missing warning symbols increase the risk of serious and lethal personal injury.

- ▶ Clean dirty warning symbols.
- ▶ Immediately replace any damaged and illegible warning symbols.
- ▶ Put the intended warning symbols on spare parts.

2.1.2 Knowing and preventing dangers

CMS-T-00004917-C.1

2.1.2.1 Safety hazards on the machine

CMS-T-00004919-B.1

Liquids under pressure

Escaping high pressure hydraulic fluid can penetrate into the body through the skin and cause serious personal injuries. A hole the size of a needle can already result in serious personal injuries.

- ▶ *Before you uncouple the hydraulic hose lines or check for damage,*
depressurise the hydraulic system.
- ▶ *If you suspect damage on a pressure system,*
have the pressure system checked by a qualified specialist workshop.
- ▶ Never look for leaks with your bare hands.
- ▶ Keep your body and face away from leaks.
- ▶ *If liquids penetrate the body,*
consult a doctor immediately.

Risk of injury on the universal joint shaft

Persons can be caught, pulled in and severely injured by the universal joint shaft and driven components. If the universal joint shaft is angled down too much, the implement can be damaged, parts can be ejected at high speed, and persons can be injured.

- ▶ Maintain sufficient coverage of the profile tube and universal joint shaft guard.
- ▶ Allow the universal joint shaft locks to engage.
- ▶ Secure the universal joint shaft guard against rotating by attaching the chains.
- ▶ *If the universal joint shaft is angled down too much,*
switch off the universal joint shaft.
- ▶ *If you do not need the universal joint shaft,*
switch off the universal joint shaft.

Danger due to machine parts still running

When the drives are switched off, machine parts can continue running and cause serious personal injury or death.

- ▶ Before approaching the machine, wait until any machine parts that are still running have come to a stop.
- ▶ Only touch machine parts that are standing still.

2.1.2.2 Danger areas

CMS-T-00004918-B.1

Dangers areas on the machine

The following basic dangers are encountered in the danger areas:

The implement and its work tools move during operation.


Hydraulically raised machine parts can descend unnoticed and slowly.

The tractor and implement can roll away unintentionally.

Materials or foreign objects can be ejected out of or away from the implement.

If the danger area is not observed, it can result in serious personal injury or death.

- ▶ Keep people out of the danger area of the machine.
- ▶ *If people enter the danger area,* immediately switch off the engines and drives.
- ▶ *Before you work in the danger area of the implement,* secure the tractor and implement. This also applies for quick checking work.

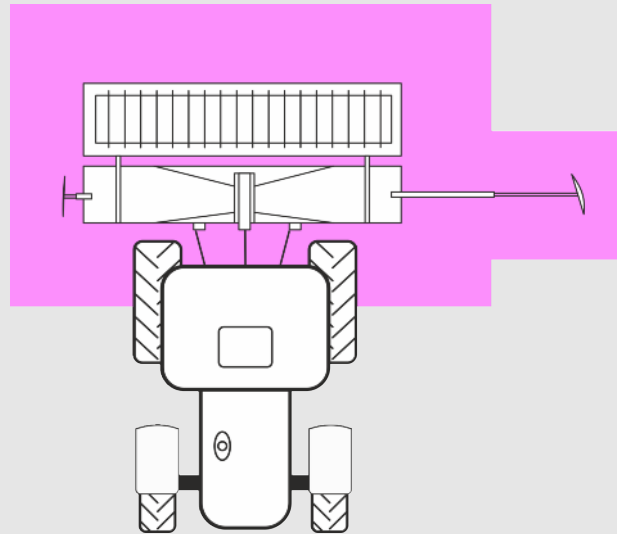

CMS-I-00003509

2.1.3 Safe operation and handling of the machine

CMS-T-00002304-H.1

2.1.3.1 Coupling implements

CMS-T-00002320-D.1

Coupling the implement on the tractor

Incorrectly coupling of the implement to the tractor results in hazards that can cause serious accidents.

There are crushing and shear points in the area of the coupling points between the tractor and the implement.

- ▶ *If you couple or uncouple the implement to or from the tractor,* be very careful.
- ▶ Use only suitable tractors for coupling and transporting the implement.
- ▶ *When the implement is coupled onto the tractor,* make sure that the tractor's connecting device meets the implement requirements.
- ▶ Couple the implement properly to the tractor.

2.1.3.2 Driving safety

CMS-T-00002321-D.1

Risk when driving on roads and fields

Any mounted or towed implement as well as front or rear ballast weights on the tractor influence the driving behaviour and the steering and braking power of the tractor. The driving characteristics also depend on the operating condition, the fill level of the load, and on the ground. If the driver does not take account of changing driving characteristics, he can cause accidents.

- ▶ Always ensure that the tractor's steering and braking systems are operating correctly.
- ▶ *The tractor must provide the required brake lag for the tractor and mounted implement.*
Check the function of the brakes before moving off.
- ▶ *The tractor front axle must always be loaded with at least 20 % of the empty tractor weight to ensure sufficient steering power.*
Use front ballast weights if necessary.
- ▶ Always attach the front or rear ballast weights properly on the specified fixing points.
- ▶ Calculate and observe the payload of the mounted or towed implement.
- ▶ Observe the permissible axle loads and drawbar loads of the tractor.
- ▶ Observe the permissible drawbar load of the hitch device and drawbar.
- ▶ Drive in such a way that you always have full control over the tractor with the mounted or towed implement. In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor, and the influence of the mounted implement.

When driving on roads, risk of accident caused by uncontrolled lateral motions of the implement

- ▶ Lock the tractor lower links for road travel.

Preparing the machine for road travel

If the machine is not properly prepared for road travel, it can result in serious traffic accidents.

- ▶ Check the lighting and identification for road travel for proper function.
- ▶ Remove coarse dirt from the implement.
- ▶ Follow the instructions in the section "Preparing the implement for road travel".

Parking the implement

The parked machine can tip over. People can be crushed and killed.

- ▶ Only park the machine on stable and even ground.
- ▶ *Before you perform setting or maintenance work,*
make sure that the implement is in a stable position. In case of doubt, support the implement.
- ▶ Follow the instructions in the section "*Parking the implement*".

Unsupervised parking

Parked tractors with coupled implements that are insufficiently secured and unsupervised represent danger for people and playing children.

- ▶ *Before you leave the machine,*
shutdown the tractor and the implement.
- ▶ Secure the tractor and machine.

2.1.4 Safe maintenance and modification

CMS-T-00002305-D.1

2.1.4.1 Changes on the implement

CMS-T-00002322-B.1

Only authorised design changes

Design changes and extensions can impede the functioning and operational safety of the machine. This can result in serious injury or death.

- ▶ Have any design changes and extensions performed only by a qualified specialist workshop.
- ▶ *To ensure that the operating permit remains valid in accordance with national and international regulations,*
ensure that the specialist workshop only uses conversion parts, spare parts and special equipment approved by AMAZONE.

2.1.4.2 Work on the machine

CMS-T-00002323-C.1

Only work on the machine when it is at a standstill

If the machine is not standing still, part can move unintentionally or the machine can be set in motion. This can result in serious injury or death.

- ▶ Before performing any work on the machine, shutdown and secure the machine.
- ▶ *To immobilise the machine,*
perform the following tasks
- ▶ If necessary, secure the machine against rolling away with wheel chocks.
- ▶ Lower lifted loads down to the ground.
- ▶ Relieve the pressure in the hydraulic hose lines.
- ▶ *If you have to work on or under raised loads,*
lower the loads or secure raised machine parts with a hydraulic or mechanical locking device.
- ▶ Switch off all drives.
- ▶ Actuate the parking brake.
- ▶ Particularly on slopes, additionally secure the machine against rolling away with wheel chocks.
- ▶ Remove the ignition key and carry it with you.
- ▶ Remove the key from the battery circuit breaker.
- ▶ Wait until all parts that are still running come to a stop and that hot parts cool down.

Maintenance work

Improper maintenance work, particularly on safety-related components, endangers operational safety. This can result in accidents and serious personal injury or even death. Safety-related components include, for example, hydraulic components, electronic components, frames, springs, trailer coupling, axles and axle suspensions, lines and tanks containing flammable substances.

- ▶ *Before you adjust, maintain or clean the machine,* secure the machine.
- ▶ Repair the machine according to this operating manual.
- ▶ Only perform the work that is described in this operating manual.
- ▶ Maintenance work that is not described in this operating manual should only be performed by a qualified specialist workshop.
- ▶ Maintenance work on safety-related components should be performed only by a qualified specialist workshop.
- ▶ Never perform welding, drilling, sawing, grinding, and cutting work on the frame, running gear or coupling devices of the implement.
- ▶ Never modify safety-related components.
- ▶ Never drill out existing holes.
- ▶ Perform all maintenance work at the prescribed maintenance intervals.

Raised implement parts

Raised implement parts can descend unintentionally and crush or kill people.

- ▶ Never linger under raised implement parts.
- ▶ *If you have to work on or under raised machine parts,* lower the implement parts or secure the raised implement parts with a mechanical support or hydraulic locking device.

Danger due to welding work

Improper welding work, particularly on or close to safety-related components, endangers the operational safety of the implement. This can result in accidents and serious personal injury or even death. Safety-related components include, for example, hydraulic components and electronic components, frames, springs, coupling devices to the tractor such as the 3-point mounting frame, drawbars, trailer support, trailer coupling, tensioned crosspiece as well as axles and axle suspensions, lines and tanks containing flammable substances.

- ▶ Allow only qualified specialist workshops with suitably approved personnel to perform welding work on safety-related components.
- ▶ Only allow qualified personnel to perform welding work on all other components.
- ▶ *If you have doubts as to whether a component can be welded, ask a qualified specialist workshop.*
- ▶ *Before welding on the implement, uncouple the implement from the tractor.*

2.1.4.3 Operating materials

CMS-T-00002324-C.1

Unsuitable operating materials

Operating materials that do not meet AMAZONE requirements can cause implement damage and accidents.

- ▶ Only use operating material that meet the requirements in the Technical Data.

2.1.4.4 Special equipment and spare parts

CMS-T-00002325-B.1

Special equipment, accessories, and spare parts

Special equipment, accessories, and spare parts that do not meet AMAZONE requirements can impede the operational safety of the implement and cause accidents.

- ▶ Only use original parts or parts that meet AMAZONE requirements.
- ▶ *If you have any questions regarding special equipment, accessories or spare parts, contact your dealer or AMAZONE.*

2.2 Safety routines

CMS-T-00002300-C.1

Securing the tractor and implement

If the tractor and implement are not secured against unintentional starting and rolling away, the tractor and implement can be set in motion in an uncontrolled manner, and can run over, crush and kill people.

- ▶ Lower the raised implement or raised implement parts.
- ▶ Relieve pressure in the hydraulic hose lines by actuating the operating devices.
- ▶ *If you have to stand under the raised implement or components,* secure the raised implement and components against lowering with a mechanical safety support or hydraulic locking device.
- ▶ Switch off the tractor.
- ▶ Apply the tractor's parking brake.
- ▶ Remove the ignition key.

Securing the machine

After uncoupling, the implement has to be secured. If the implement and implement parts are not secured, there is a risk of personal injury due to crushing and cutting.

- ▶ Only park the implement on stable and level ground.
- ▶ *Before you depressurise the hydraulic hose lines and disconnect them from the tractor,* move the implement into working position.
- ▶ Protect people against direct contact with sharp-edged or protruding implement parts.

Make sure that the protective equipment is functional

If protective equipment is missing, damaged or removed, implement parts can cause serious personal injury or even death.

- ▶ Check the implement at least once a day for damage, proper installation, and functioning of the protective equipment.
- ▶ *If you are not sure if the protective equipment is properly installed and functional,* have the protective equipment checked by a qualified specialist workshop.
- ▶ Make sure that the protective devices are properly installed and functional before any work on the implement.
- ▶ Replace damaged protective equipment.

Climbing on and off

Negligent behaviour while climbing on and off can cause people to fall off the ladder. People who climb onto the machine without using the intended access steps can slip, fall, and suffer severe injury.

- ▶ Use only the intended access steps
- ▶ *Dirt as well operating materials can impede walking safety and stability.*
Always keep steps and platforms clean and in proper condition, so that safe stepping and standing is ensured.
- ▶ Never climb onto the machine when it is in motion.
- ▶ Climb up and down facing the machine.
- ▶ When climbing up and down, maintain 3-point contact with the access steps and handrails: always keep two hands and one foot or two feet and one hand on the machine.
- ▶ When climbing up and down, never hold onto the control elements. Accidental actuation of control elements can unintentionally activate potentially dangerous functions.
- ▶ When climbing down, never jump off of the machine.

Intended use

3

CMS-T-00005043-A.1

- The implement is intended solely for professional use for soil tillage on agricultural crop lands according to Good Agricultural Practices.
- The implement is an agricultural machine to be mounted on the 3-point power lift of a tractor that meets the technical requirements.
- The implement is suitable and intended for shallow stubble cultivation or breaking up fallow land, for seedbed preparation and incorporating catch crops or farm manure.
- The soil tillage implement may only be used with the rollers specified in the operating manual.
- When driving on public roads, the implement, depending on the provisions of the applicable road traffic regulations, can be mounted and transported at the rear of a tractor that meets the technical requirements.
- The machine may only be used and maintained by persons who fulfil the requirements. The personnel requirements are described in the section "*Personnel qualification*".
- The operating manual is part of the machine. The machine is solely intended for use in compliance with this operating manual. Uses of the machine that are not described in this operating manual can lead to serious personal injuries or even death and to machine and material damage.
- The applicable accident prevention regulations as well as generally accepted safety-related, occupational health and road traffic regulations must also be observed by the users and the owner.
- Further instructions for intended use in special cases can be requested from AMAZONE.
- Uses other than those specified under the intended use are considered as improper. The manufacturer is not liable for any damage resulting from improper use, solely the operator is responsible.


Product description

4

CMS-T-00010013-B.1


4.1 Implement overview

CMS-T-00010018-A.1

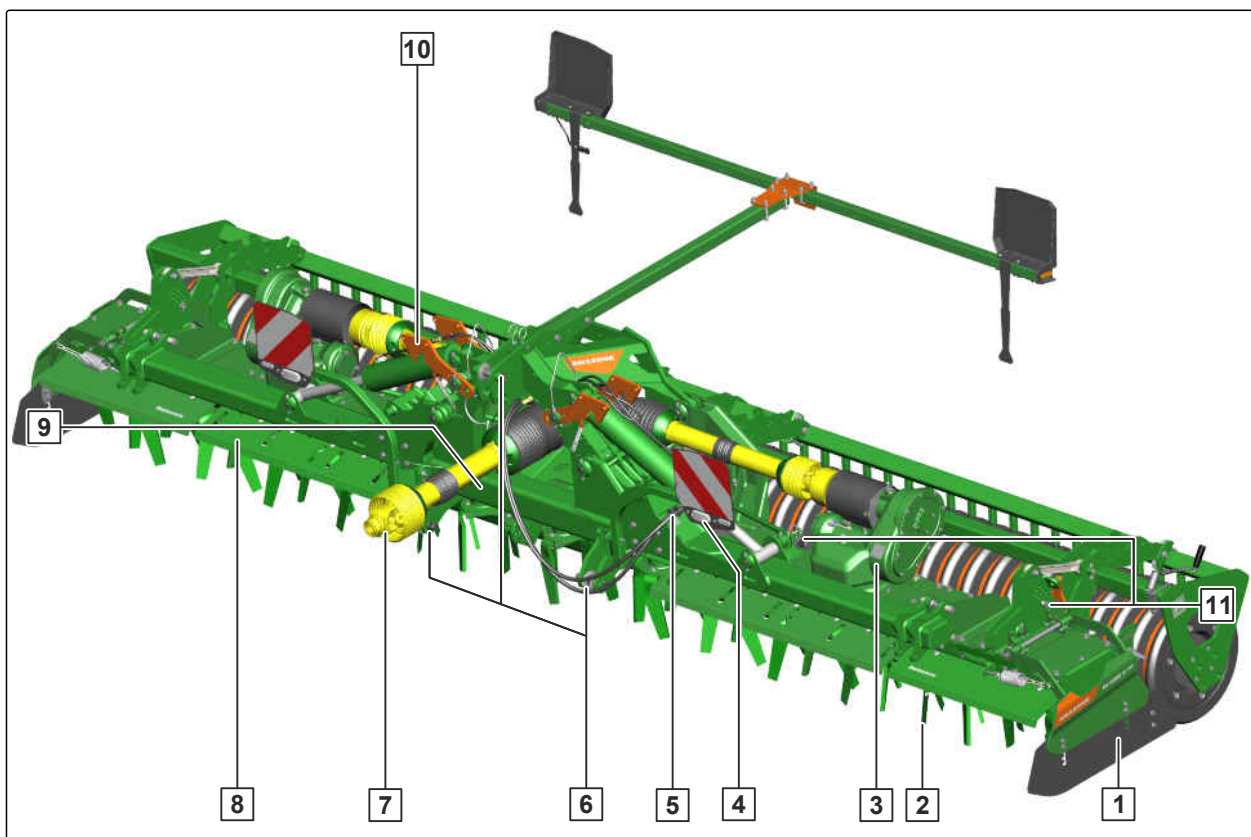

CMS-I-00006818

- | | |
|--|--|
| 1 Side guide plate | 2 Tines |
| 3 Interchangeable wheel gear | 4 Lighting and identification for road travel |
| 5 Hose cabinet | 6 3-point mounting frame |
| 7 Universal joint shaft | 8 Front tool protection |
| 9 Rating plate on the implement | 10 Frame transport lock |
| 11 Working depth adjustment | |

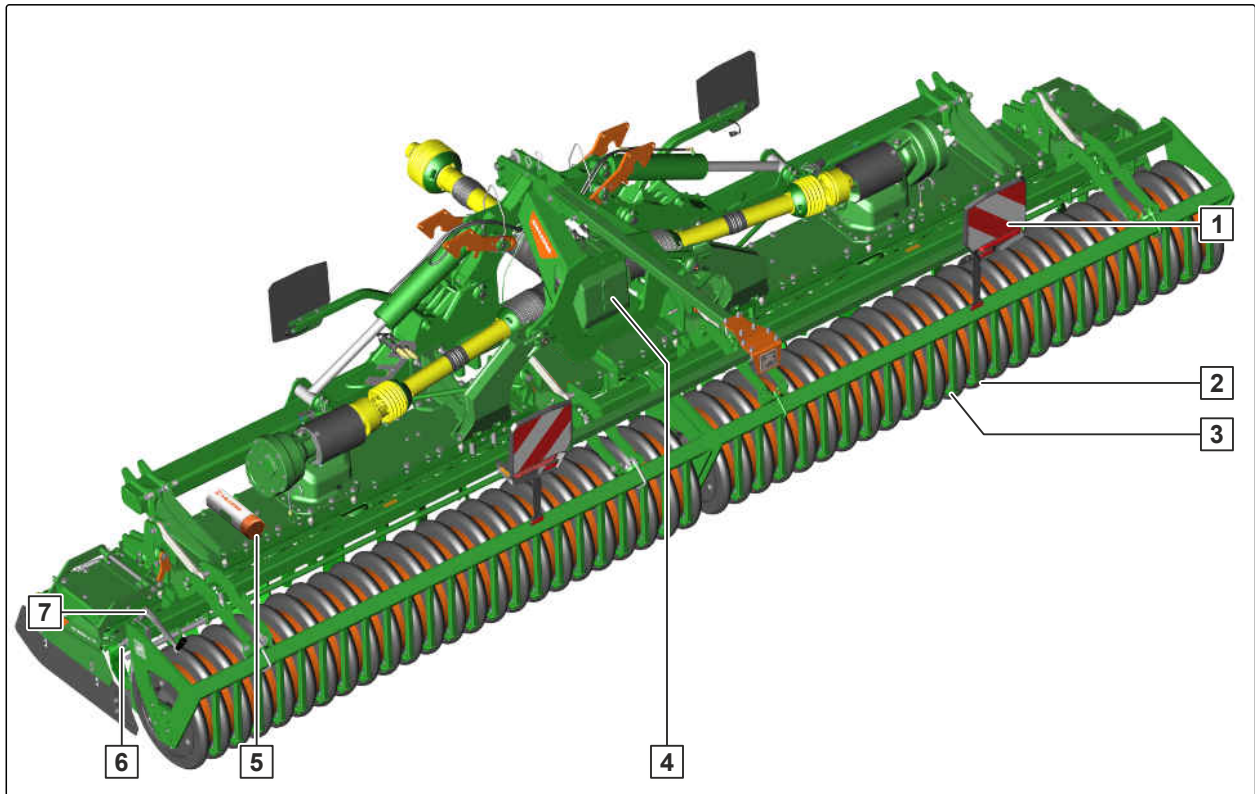


CMS-I-00006817

- | | |
|--|---|
| 1 Lighting and identification for road travel | 2 Scraper |
| 3 Roller | 4 Centre gearbox |
| 5 Threaded cartridge | 6 Levelling board working depth adjustment |
| 7 Universal operating tool | |

4.2 Function of the implement

CMS-T-00004656-C.1

The tines **4** break open the soil. Organic residues **5** are intensively incorporated. The levelling board **3** levels the flow of soil between the tool tines and the roller **1**. To crush large clods of soil more effectively, the soil clods are held between the tool tines by the levelling board. The roller reconsolidates the soil and produces the finished seedbed **2**.

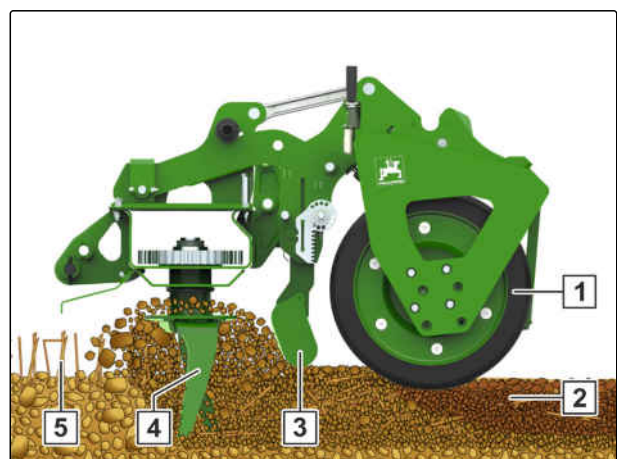


CMS-I-00002954

4 | Product description

Special equipment

The tines **2** are fastened to the sockets **1** of the tool carrier. The sockets are shaped in such a way that the tines have a spring action and can deflect on rocks and other obstacles.

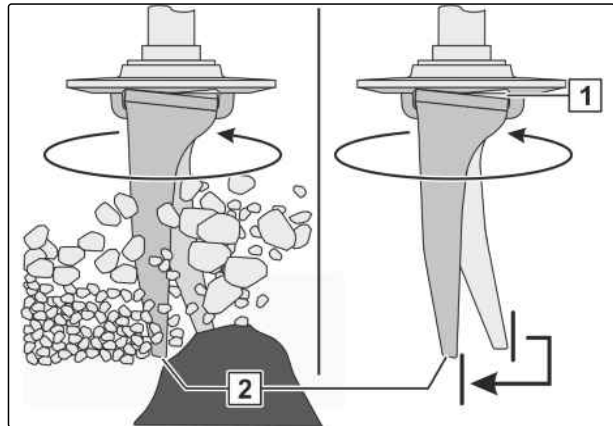

CMS-I-00002948

For operation as a seeding combination, the soil tillage implement can be combined with a pack top seed drill.

4.3 Special equipment

CMS-T-00010139-A.1

- Centre line eradicator
- Lighting and identification for road travel
- Gear wheel change set 31/40 teeth
- Rollers


4.4 Protective equipment

CMS-T-00010014-A.1

4.4.1 Universal joint shaft guard

CMS-T-00003992-C.1


As standard, the universal joint shafts are equipped with guard tubes **2** and protective sleeves **1**. Depending on the implement equipment, holding chains or full guard cones fix the guard tubes. This rules out the risk of winding.

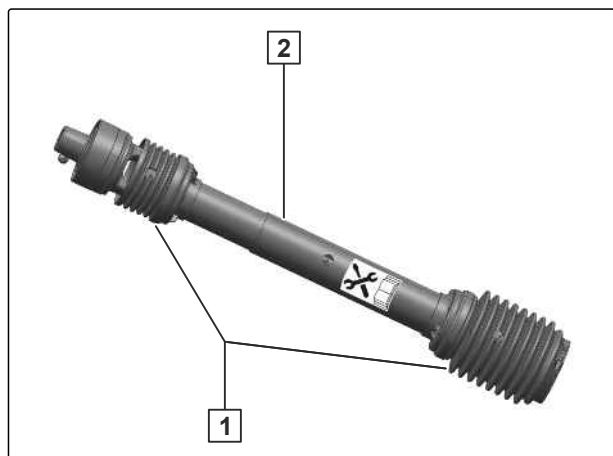

CMS-I-00002930


4.4.2 Tool protection

The tool guard prevents sand clods or stones from being thrown up and out of the implement. The tool guard contains side guide plates **1** and protective plates **2**.

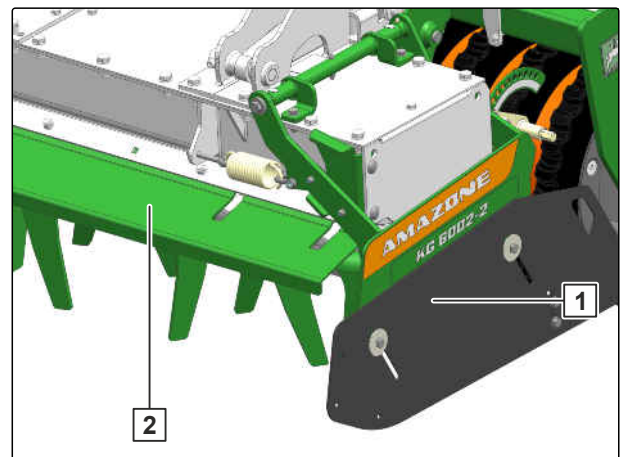

CMS-I-00003296


Towards the rear, the tool guard contains a guard tube **1** and trailing roller **2**.

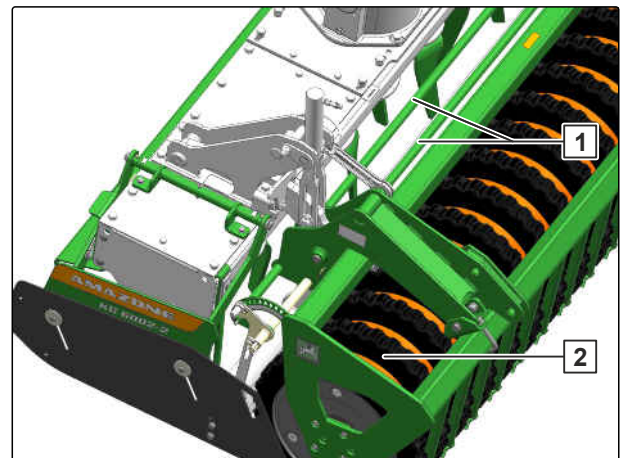

CMS-I-00003297

4.4.3 Frame transport lock


The transport lock **1** prevents the folding frame parts **2** from unfolding unintentionally. The transport lock is opened with a pull rope.

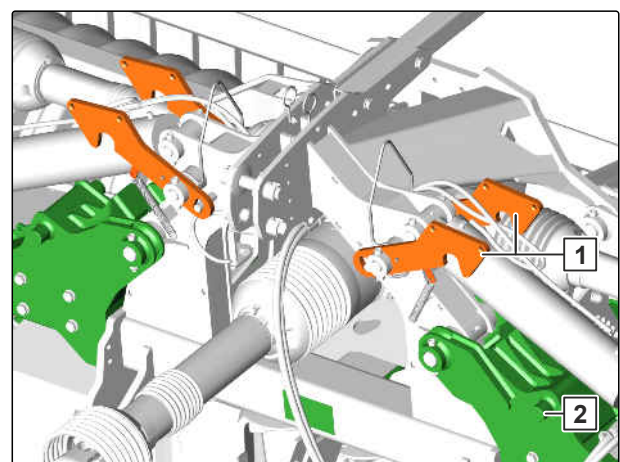

CMS-I-00006827

4.4.4 Roller transport lock

The transport lock **1** prevents the carrying arms **2** from swinging excessively with the trailing roller in the folded state.

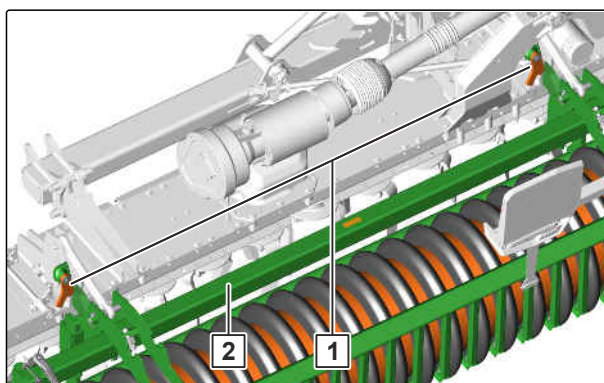


CMS-T-00010016-A.1

CMS-I-00006828

4.5 Warning symbols


CMS-T-00010019-B.1

4.5.1 Positions of the warning symbols

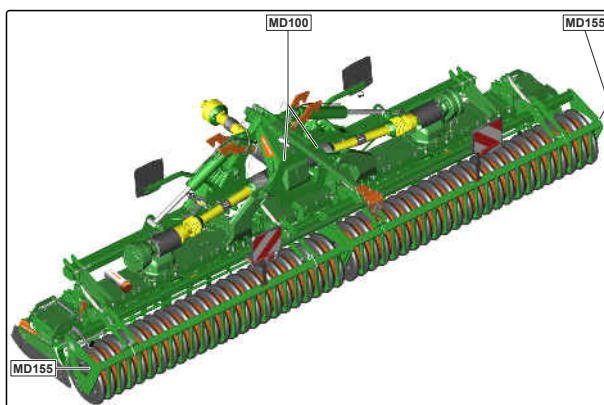

CMS-T-00010020-A.1

CMS-I-00006921

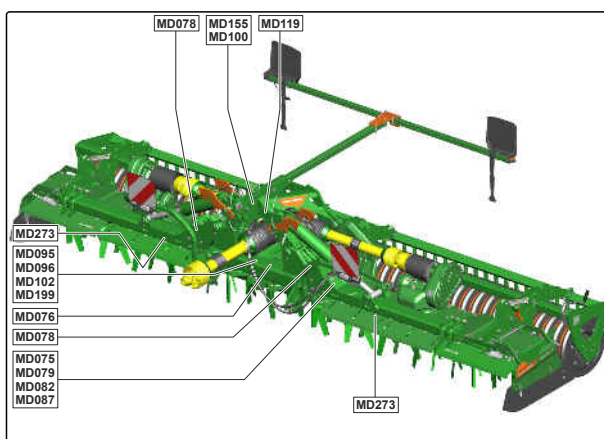


CMS-I-00006920

4.5.2 Layout of the warning symbols

Warning symbols indicate danger areas on the machine and warn against residual dangers. In these danger areas, there are permanent or unexpected dangers.

A warning symbol consists of two fields:

- Field **1** shows the following:
 - A pictogram depicting the danger area, surrounded by triangular safety symbol
 - The order number
- Field **2** shows a pictogram depicting how to avoid the danger.

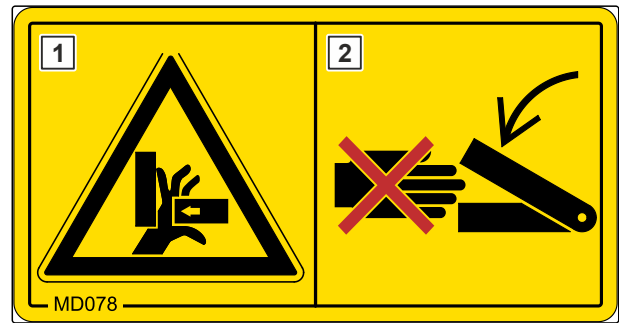

4.5.3 Description of the warning symbols

MD 075

Risk of cuts for fingers, hands, and arms

- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ Wait until all moving parts of the machine are at a standstill before reaching into the danger area.
- ▶ Make sure that there is nobody standing in the danger area.



MD 076

Risk of being drawn in or caught


- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ *As long as engine of the tractor or machine is running,*
do not remove any protective equipment.
- ▶ Make sure that there is nobody standing in the danger area.



MD 078

Risk of crushing fingers or hands

- ▶ *As long as the tractor engine or implement motor is running,*
stay away from the danger area.
- ▶ *If you have to move marked parts with your hands,*
pay attention to the crushing areas.
- ▶ Make sure that there is nobody standing in the danger area.

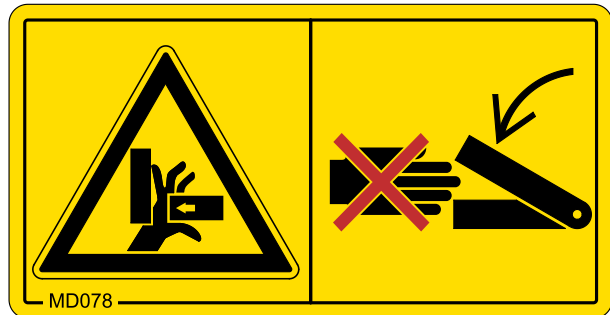


CMS-I-000074

MD 079

Danger due to ejected material

- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ Make sure that there is nobody standing in the danger area.

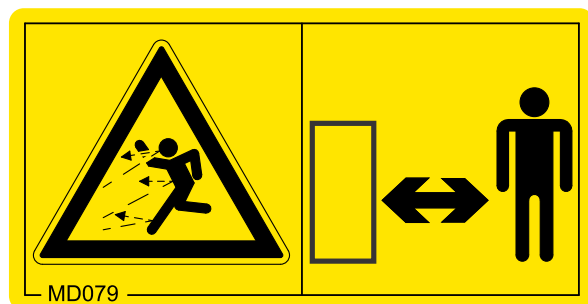


CMS-I-000076

MD 082

Risk of falling from tread surfaces and platforms

- ▶ Do not let anybody ride on the implement.
- ▶ Do not let anybody climb onto the driving implement.

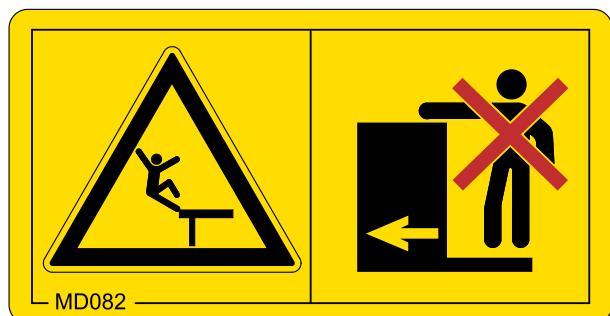

CMS-I-000081

MD 084

Risk of crushing for the whole body from lowering implement parts

- ▶ Make sure that there is nobody standing in the danger area.




CMS-I-000454

MD 087

Danger due to cutting and moving machine parts

- ▶ *As long as engine of the tractor or machine is running,*
stay away from the danger area.
- ▶ Make sure that there is nobody standing in the danger area.

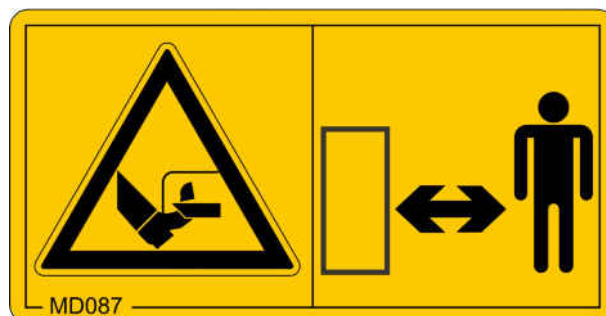


CMS-I-000691

MD094

Danger due to transmission lines

- ▶ Never touch transmission lines with the implement.
- ▶ Maintain an adequately safe distance from electrical transmission lines, especially when folding or unfolding implement parts.
- ▶ Please note that the voltage can flash over when the distance is too small.

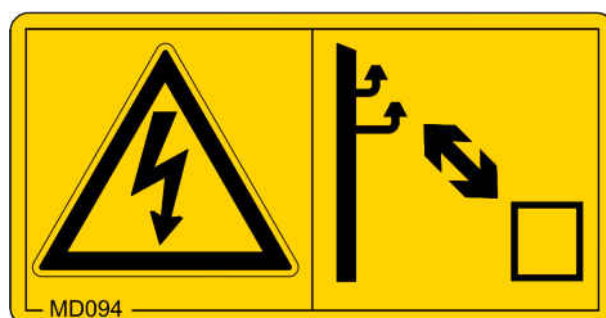

CMS-I-000692

MD095

Risk of accident due to non-compliance with the instructions in this operating manual

- ▶ Before your work on or with the implement, read and understand the operating manual.



CMS-I-000138

MD 096

Risk of infection from escaping hydraulic fluid under high pressure

- ▶ Never look for leaks in hydraulic hose lines using your hand or fingers.
- ▶ Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.
- ▶ *If you are injured by hydraulic oil, consult a doctor immediately.*




CMS-I-000216

MD 097

Risk of crushing between the tractor and the implement

- ▶ *Before you actuate the tractor hydraulic system, instruct persons away from the area between the tractor and the implement.*
- ▶ Actuate the tractor hydraulic system only from the designated work station.

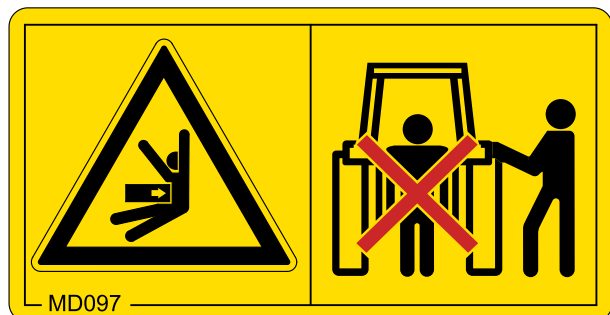


CMS-I-000139

MD 100

Risk of accidents due to improperly attached lifting gear

- ▶ Only attach the lifting gear at the marked positions.

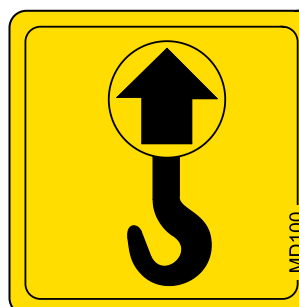

CMS-I-000089

MD 102

Risk due to unintentional starting and rolling away of the machine

- ▶ Before performing any work, secure the implement against unintentional starting and rolling away.




CMS-I-00002253

MD104

Risk of crushing due to swivelling parts of the implement

- ▶ *As long as the tractor engine is running,* maintain an adequate safety distance from swivelling implement parts.
- ▶ Make sure that there is nobody standing close to swivelling parts.

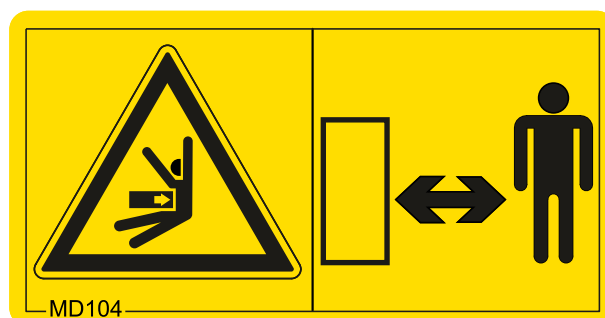

CMS-I-00003312

MD113

Risk of accident due to non-compliance with the instructions in this operating manual

- ▶ *Before performing work on or with the implement,* read and understand the maintenance instructions in the operating manual.




CMS-I-00003655

MD119

Risk of implement damage due to excessively high drive speeds and incorrect direction of rotation of the drive shaft

- Comply with the maximum drive speed and direction of rotation of the drive shaft on the implement side, as shown on the pictogram.

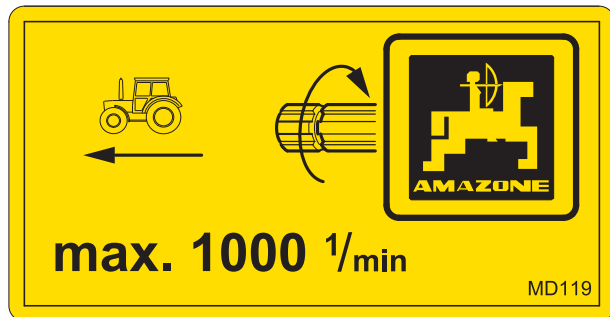


CMS-I-00003656

MD 155

Risk of accident and machine damage during transport due to improperly secured machine

- Only attach the lashing belts at the marked lashing positions for transporting the machine.

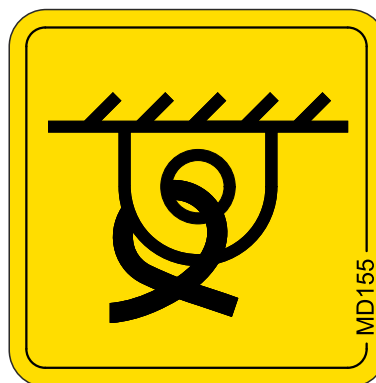

CMS-I-00000450

MD 199

Risk of accident if the hydraulic system pressure is too high

- Only couple the implement to tractors with a maximum tractor hydraulic pressure of 210 bar.



CMS-I-00000486

4.6 Threaded cartridge

CMS-T-00001776-E.1

The threaded cartridge contains the following items:

- Documents
- Aids




CMS-I-00002306

4.7 3-point mounting frame

CMS-T-00010017-A.1

- 1 Category 3 lower link mounting
- 2 Spacer discs for the ball sleeves
- 3 Category 3 top link mounting
- 4 Additional Category 3 top link mounting

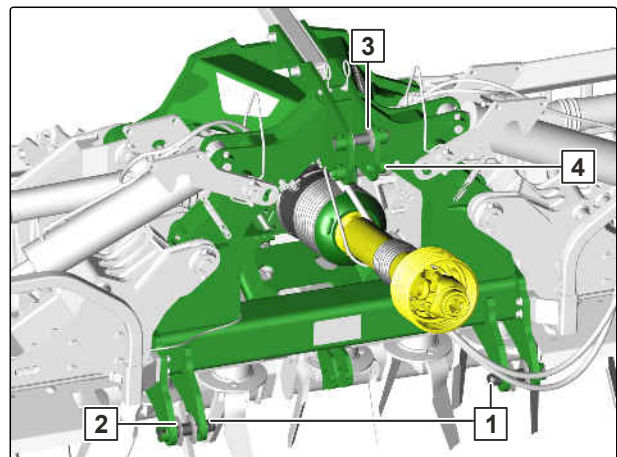

CMS-I-00006825

The 3-point mounting frame is used to couple the implement onto the tractor. The 3-point mounting frame can be adjusted to the 3-power power lift with spacer discs.

4.8 Rating plate on the implement

CMS-T-00004505-G.1

- 1 Implement number
- 2 Vehicle ID number
- 3 Product
- 4 Permissible technical implement weight
- 5 Model year
- 6 Year of manufacture



CMS-I-00004294

4.9 Universal operating tool

CMS-T-00001735-B.1

Setting work on the implement is performed with the universal operating tool **1**. The universal operating tool is parked in a holder on the implement frame.




CMS-I-00001082

4.10 Universal joint shaft locking mechanism

CMS-T-00005052-A.1

If the tool carriers encounter an obstacle, the tool carriers can be blocked.

Depending on the implement equipment, the ratchet clutches **1** or shear bolts on the universal joint shafts prevent damage to the gearboxes.

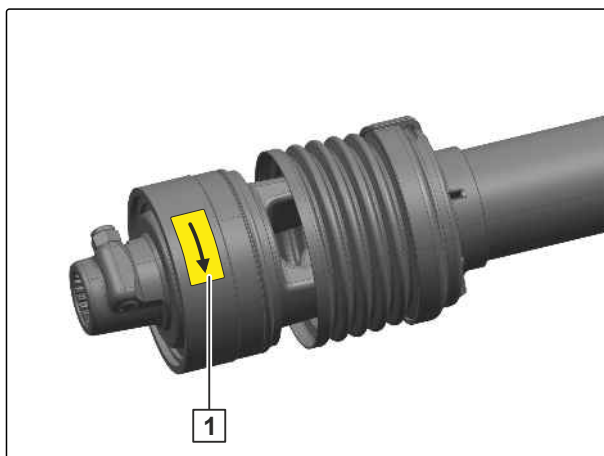

CMS-I-00003044


4.11 Lighting and identification for road travel

CMS-T-00009982-B.1

4.11.1 Rear lighting and identification for road travel

CMS-T-00001498-F.1

- 1 Warning signs
- 2 Reflector, red
- 3 Rear lights, brake lights, and turn indicators
- 4 Reflector, yellow

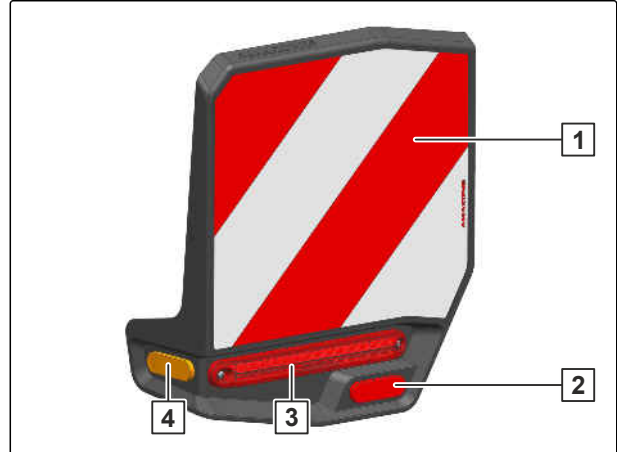

CMS-I-00004545




NOTE

The lighting and identification for road travel can vary depending on the national regulations.

4.11.2 Front lighting and identification

CMS-T-00006393-B.1

- 1 Warning signs
- 2 Reflector, white
- 3 Side marker lights

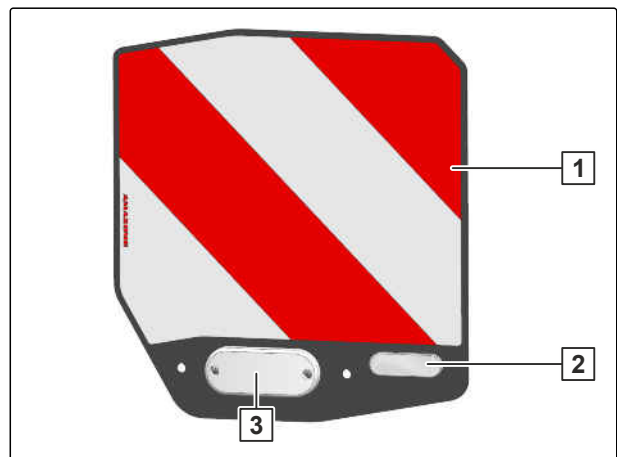

CMS-I-00002940




NOTE

The lighting and identification for road travel can vary depending on the national regulations.

4.11.3 Additional license plate

CMS-T-00003999-C.1

- 1 Licence plate lighting
- 2 Licence plate holder

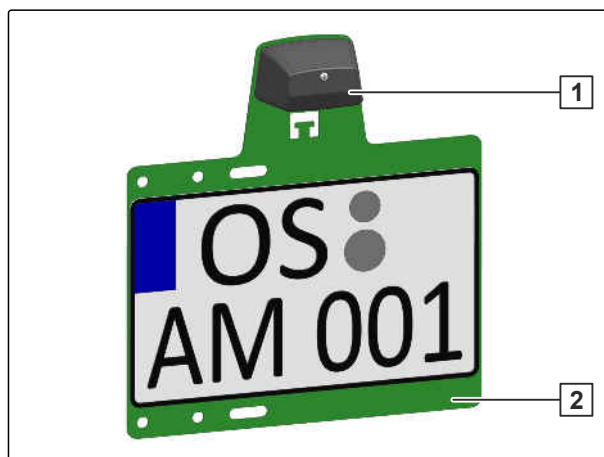

CMS-I-00003163

4.12 Rollers

CMS-T-00010410-A.1

4.12.1 AMAZONE rollers

CMS-T-00010149-A.1

Rollers are used to maintain the working depth, to reconsolidate the soil, and to protect against the rotating tools of the soil tillage implement.



NOTE

In combination with a seed drill, the soil tillage implement may only be used with the rollers specified in the seed drill operating manual.

Roller	Working width	Roller frame
	6 m	
Tooth packer roller	2x PW 3000-600	2-tube roller frame
Wedge ring roller	2x KW 3000-580	
Wedge ring roller with matrix tyres	2x KWM 3000-600	
Trapeze ring roller	2x TRW 3000-500	
	2x TRW 3000-600	

4.12.2 Packer rollers from other manufacturers

CMS-T-00010409-A.1

The AMAZONE roller product range is supplemented with rollers from third-party suppliers.

Packer rollers from other manufacturers	Working width 4 m	Working width 5 m	Working width 6 m	Roller frame
Güttler Simplex prismatic roller with spheroidal graphite iron rings	-	2x 2500-SX-45 SG	2x 3000-SX-45 SG	1-tube roller frame
Güttler Simplex prismatic roller with synthetic ultra rings	-	2x 2500-SX-45 SU	2x 3000-SX-45 SU	
	-	2x 2500-SX-50 SU	2x 3000-SX-50 SU	2-tube roller frame
	-	2x 2500-SX-56 SU	2x 3000-SX-56 SU	

Technical data

5

CMS-T-00010038-A.1

5.1 Dimensions

CMS-T-00010040-A.1

Dimensions	KE 6002-2
Transport width	3000 mm
Transport height	3600 mm
Total length	2200 mm
Working width	6044 mm
Centre of gravity distance with roller	710 mm

5.2 Permissible total weight

CMS-T-00010044-A.1

KE 6002-2
4400 kg

5.3 Mounting category

CMS-T-00010039-A.1

Type	Operation	Mounting category
KE 6002-2	Solo operation	Category 3/4N

5.4 Working speed

CMS-T-00010042-A.1

Type	Working speed
KE 6002-2	4-12 km/h

5.5 Working depth

CMS-T-00004661-B.1

Tines	Length of the tines	Maximum working depth
Trailing tines	29.3 cm	20 cm

5.6 Performance characteristics of the tractor

CMS-T-00010043-A.1

Use as a solo implement	Engine rating
KE 6002-2	Up to 294 kW / 400 HP

Electrical system	
Battery voltage	12 V
Lighting socket	7-pin, in accordance with ISO 1724

Hydraulic system	
Maximum operating pressure	210 bar
Tractor pump output	Depending on the implement equipment, 30 l/min at 180 bar
Implement hydraulic oil	HLP68 DIN51524 The hydraulic oil is suitable for the combined hydraulic oil circuits of all standard tractor manufacturers.
Control units	1x double-acting
Universal joint shaft	
Speed	1000 rpm
Direction of rotation	Clockwise

5.7 Noise development data



CMS-T-00004666-A.1



The workplace-related emission sound pressure level is lower than 72 dB(A), measured in operating condition at the ear of the tractor driver with the cab closed.

The emission sound pressure level is primarily dependent on the vehicle used.

5.8 Drivable slope inclination

CMS-T-00002297-E.1

Across the slope		
On left in direction of travel	15 %	
On right in direction of travel	15 %	

Up the slope and down the slope		
Up the slope	15 %	
Down the slope	15 %	

5.9 Lubricants

CMS-T-00002396-B.1

Manufacturer	Lubricant
ARAL	Aralub HL2
FINA	Marson L2
ESSO	Beacon 2
SHELL	Retinax A

5.10 Oils and filling capacities

CMS-T-00010041-A.1



NOTE

If oil types are mixed, warranty claims cannot be accepted.

- Do not mix oils.
- Fill with new and clean gear oil.



NOTE

Specifications for the centre gearbox and the interchangeable wheel gears:

Gearbox	Factory filling	Fill quantity
Centre gearbox	Mobil SHC 632	Without oil cooler: 7.2 litres
	-	With oil cooler: -
Interchangeable wheel gear	Mobil ISO VG SAE 80W-90 API GL5	5.8 litres



NOTE

Specifications for the spur gear trough:

Oils that comply with the standard CLP/CKC 460 DIN 51517 Part 3 / ISO 12925 can be topped up or used to replace the existing oil in the spur gear trough.

The following table contains several gear oil types that comply with the standard.

Manufacturer	Gear oil
Wintershall	Factory filling:
	ERSOLAN 460
Agip	Blasia 460
ARAL	Degol BG 460
Autol	Precis GEP 460
Avia	Avilub RSX 460
BP	Energol GR-XP 460
Castrol	Alpha SP 460
DEA	Falcon CLP 460
ESSO	Spartan EP 460
FINA	Giran 460
Fuchs	Renep Compound 110
Mobil	Mobilgear 600 XP 460
Shell	Omala 460
OMV	OMV Gear HST 460

Implement type	Filling quantity for each spur gear trough
KE 6002-2	16 litres


Preparing the machine

6

CMS-T-00010027-B.1

6.1 Calculating the required tractor characteristics

CMS-T-00000063-E.1

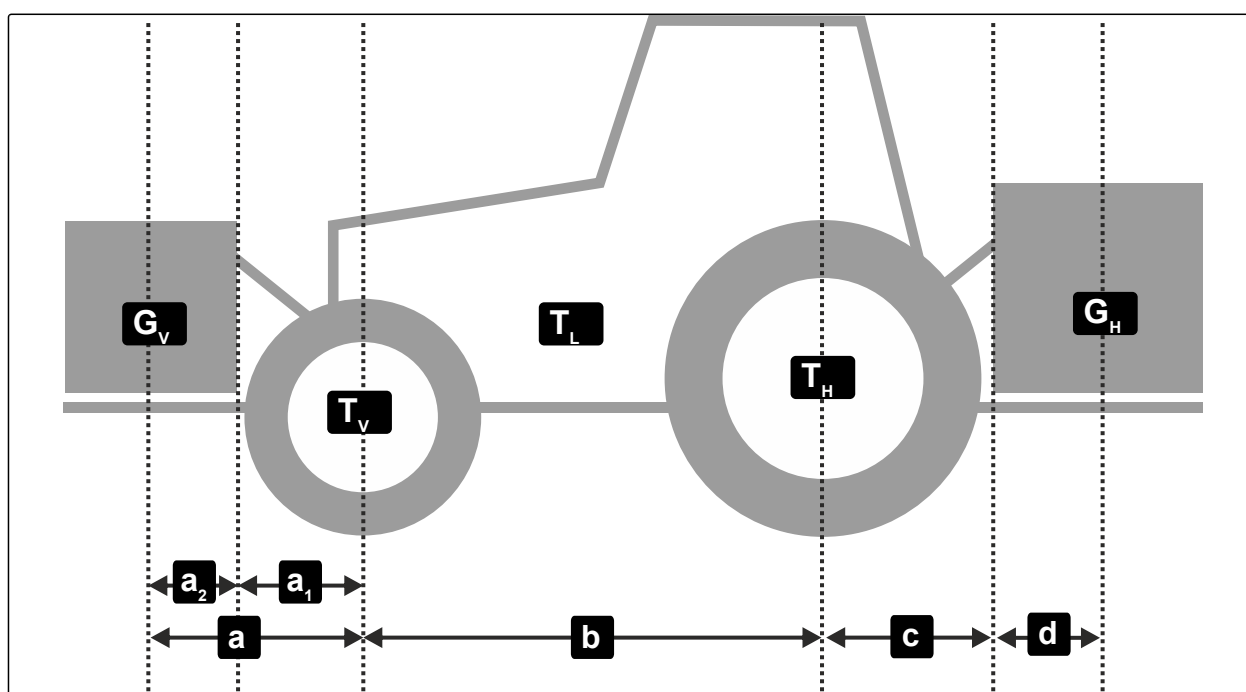

CMS-I-00000581

Designation	Unit	Description	Calculated values
T_L	kg	Tractor empty weight	
T_V	kg	Front axle load of the operational tractor without mounted implement or ballast weights	
T_H	kg	Rear axle load of the operational tractor without mounted implement or ballast weights	
G_V	kg	Total weight of front-mounted implement or front ballast	
G_H	kg	Permissible total weight of rear-mounted implement or rear ballast	
a	m	Distance between the centre of gravity of the front-mounted implement or the front ballast and the centre of the front axle	

Designation	Unit	Description	Calculated values
a_1	m	Distance between the centre of the front axle and the centre of the lower link connection	
a_2	m	Centre of gravity distance: Distance between the centre of gravity of the front-mounted implement or the front ballast and the centre of the lower link connection	
b	m	Wheelbase	
c	m	Distance between the centre of the rear axle and the centre of the lower link connection	
d	m	Centre of gravity distance: Distance between the centre of the lower link coupling point and centre of gravity of the rear-mounted implement or rear ballast.	

1. Calculate the minimum front ballasting.

$$G_{\min} = \frac{G_H \cdot (c + d) - T_V \cdot b + 0,2 \cdot T_L \cdot b}{a + b}$$

$$G_{\min} = \underline{\hspace{100pt}}$$

$$G_{\min} = \underline{\hspace{100pt}}$$

CMS-I-00000513

2. Calculate the actual front axle load.

$$T_{Vtat} = \frac{G_V \cdot (a + b) + T_V \cdot b - G_H \cdot (c + d)}{b}$$

$$T_{Vtat} = \underline{\hspace{100pt}}$$

$$T_{Vtat} = \underline{\hspace{100pt}}$$

CMS-I-00000516

6 | Preparing the machine

Calculating the required tractor characteristics

3. Calculate the actual total weight of the tractor-implement combination.

$$G_{tat} = G_V + T_L + G_H$$

$$G_{tat} =$$

$$G_{tat} =$$

CMS-I-00000515

4. Calculate the actual rear axle load.

$$T_{Htat} = G_{tat} - T_{Vtat}$$

$$T_{Htat} =$$

$$T_{Htat} =$$

CMS-I-00000514

5. Determine the tyre load capacity for two tractor tyres in the manufacturer specifications.
6. Write down the determined values in the following table.



IMPORTANT

Danger of accident due to implement damage caused by excessive loads

- Make sure that the calculated loads are smaller or equal to the permissible loads.

	Actual value according to calculation			Permitted value according to tractor operating manual			Tyre load capacity for two tractor tyres	
Minimum front ballasting		kg	≤		kg		-	-
Total weight		kg	≤		kg		-	-
Front axle load		kg	≤		kg	≤		kg
Rear axle load		kg	≤		kg	≤		kg


6.2 Attaching the backstop profiles for the lower links

CMS-T-00004040-C.1

The 3-point mounting frame is adjusted to the catch hooks of the tractor using the spacer discs **2**.

i NOTE

The ball sleeves **1** can only be used with Cat. 3 pins **3**.

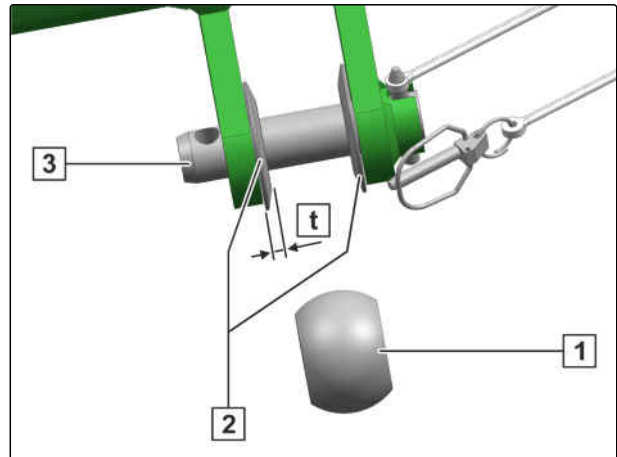

CMS-I-00003055

Lower link catch hook	Spacer discs [mm]
Category 3	t=13.5
Category 4N	t=6.5

Top link catch hook	Spacer discs [mm]
Category 3	t=6.5
Category 4N	Without spacer disc

1. Determine the spacer discs according to the catch hooks on the tractor.
2. Install the ball sleeves and spacer discs.

6.3 Preparing the universal joint shaft

CMS-T-00005128-A.1

1. Have the length of the universal joint shaft adjusted by a specialist workshop.
2. Have the universal joint shaft installed by a specialist workshop.

6.4 Installing the universal joint shaft on the implement


CMS-T-00010034-A.1



IMPORTANT

Damage when the universal joint shaft is too long

- *To avoid damage to the implement, check the universal joint shaft length every time the tractor is changed.*
- *If the universal joint shaft is too long, have the universal joint shaft corrected by a qualified specialist workshop.*

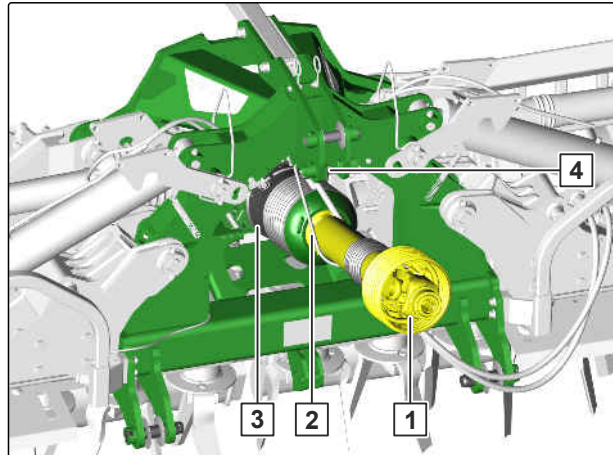

CMS-I-00006826

1. Clean and grease the drive shaft on the implement.
2. Make sure that the universal joint shaft guard is functional.

The tractor symbol on the guard tube identifies the tractor-side of the universal joint shaft. An existing overload clutch or freewheel clutch must be installed on the implement side.

3. Slide the universal joint shaft **1** onto the gearbox output shaft **3**.
4. *To secure the universal joint shaft on the gearbox,*
tighten the locking bolt on the universal joint shaft with the tightening torque prescribed by the universal joint shaft manufacturer.
5. Lift the bracket **2** out of the holder.
6. Swivel the bracket under the universal joint shaft.
7. Put the universal joint shaft in the bracket.
8. Secure the guard tube with the safety chain on the fastening point **4**.


6.5 Coupling the implement

CMS-T-00010030-A.1

6.5.1 Coupling the 3-point mounting frame

CMS-T-00001400-G.1

1. Set the tractor lower links **1** to the same height.
2. Couple the lower links **1** from the tractor seat.
3. Couple the top link **2**.
4. Check whether the top link catch hooks **3** and lower link catch hooks **4** are correctly locked.

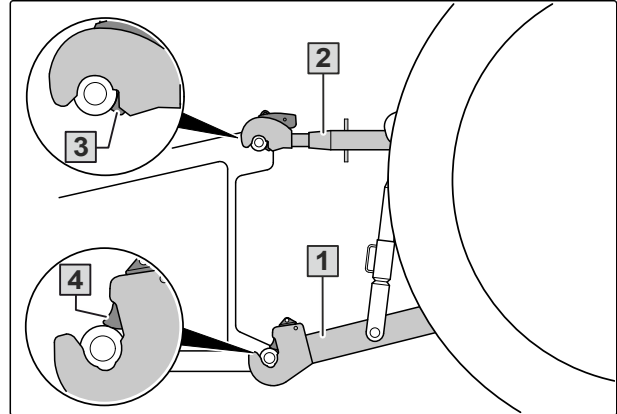


CMS-I-00001225

6.5.2 Coupling the hydraulic hose lines

CMS-T-00010085-A.1

All hydraulic hoses are equipped with handles. The handles have colour markings with a code number or a code letter. The markings are assigned to the respective hydraulic functions of the pressure line of a tractor control unit. Stickers are applied on the implement for the markings, which illustrate the respective hydraulic functions.

The tractor control unit is used with different types of actuation, depending on the hydraulic function:

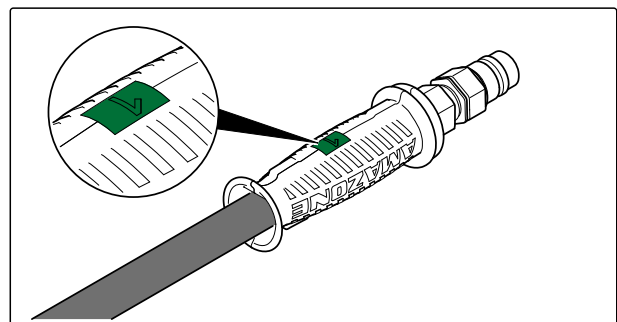

CMS-I-00000121

Type of actuation	Function	Symbol
Latching	Permanent oil circulation	
Momentary	Oil circulation until action is executed	
Floating	Free oil flow in the tractor control unit	

Designation		Function			Tractor control unit	
Green	1		Folding the implement	Unfold	Double-acting	
	2			Fold		



WARNING

Risk of injury or even death

If the hydraulic hose lines are incorrectly connected, the hydraulic functions may be faulty.

- ▶ When coupling the hydraulic hose lines, observe the coloured markings on the hydraulic plugs.




IMPORTANT

Implement damage due to insufficient hydraulic oil return flow

- ▶ Only use DN16 lines for the pressureless hydraulic oil return flow.
- ▶ Select short return paths.
- ▶ Connect the pressureless hydraulic return flow correctly.
- ▶ Install the supplied coupling sleeve on the pressureless hydraulic oil return.


1. Depressurise the hydraulic system between the tractor and the implement using the tractor control unit.
 2. Clean the hydraulic plugs.
 3. Couple the hydraulic hose lines **1** to the hydraulic sockets of the tractor according to the label **2**.
- ➔ The hydraulic plugs lock perceptibly.
4. Route the hydraulic hose lines with sufficient freedom of movement and without chafing points.

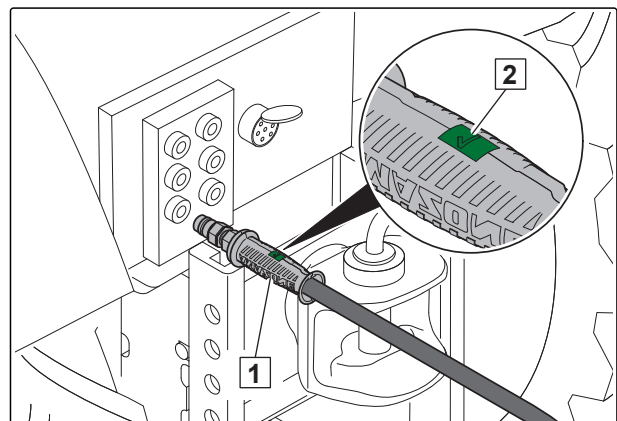

CMS-I-00001045

6.5.3 Coupling the power supply

1. Insert the plug **1** for the power supply.
2. Route the power supply cable with sufficient freedom of movement and without chafing or pinching points.
3. Check the lighting on the implement for proper function.

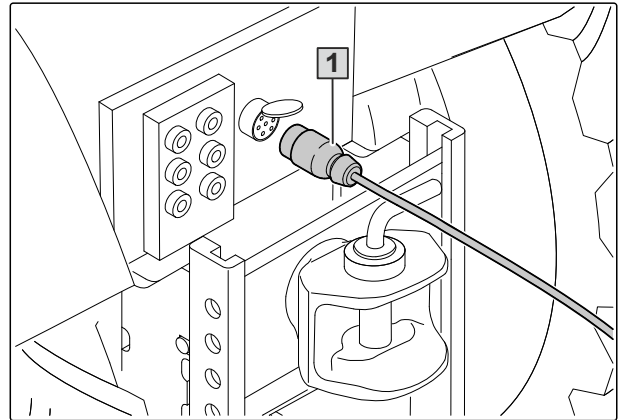


CMS-T-00001399-F.1

CMS-I-00001048

6.5.4 Coupling the universal joint shaft

1. Pull back the drawing sleeve on the tractor side.
 2. Push the universal joint shaft onto the tractor PTO shaft.
- ➔ The drawing sleeve engages.
3. Swivel the bracket **1** in the parking position.
 4. Secure the bracket.

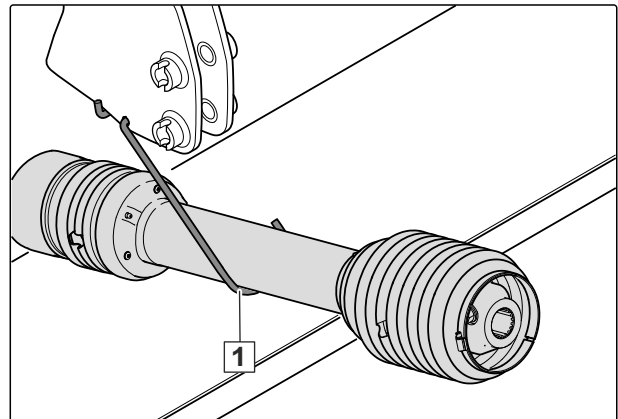

CMS-T-00004160-D.1

CMS-I-00003520



WARNING Risk of accident due to damaged protective equipment

- *If you are not sure if the protective equipment is properly installed and functional,*
have the protective equipment checked by a specialist workshop.

5. Check the protective equipment.

6.5.5 Calculating the permissible payload

CMS-T-00002254-D.1



WARNING

Risk of accident due to exceeded payload

If the payload is exceeded, the implement can be damaged or/and it can result in uncontrolled driving behaviour of the tractor.

- ▶ Carefully determine the payload of the implement.
- ▶ Never exceed the payload of the implement.

Maximum payload = Permissible technical implement weight - tare weight

1. Read the permissible technical implement weight from the rating plate.
2. *To determine the tare weight,* weigh the implement with empty hoppers.
3. Calculate the payload.


6.6 Preparing the implement for operation

CMS-T-00010032-A.1

6.6.1 Manual adjustment of the tine working depth

CMS-I-00010045-A.1

The soil tillage implement **2** is supported by the carrying arms of the trailing roller **1**. To adjust the working depth, the depth setting pin **3** is inserted in the desired hole.

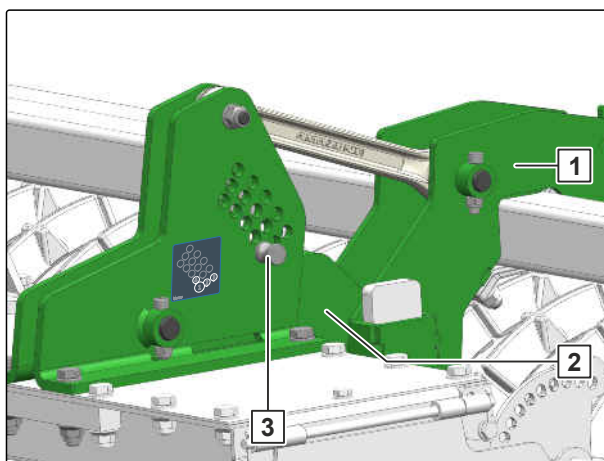

CMS-I-00003428


1. Raise the implement.
- ➔ The pins **2** are no longer resting on the carrying arms **1**.
2. Secure the tractor and implement.
3. Remove the linch pin **3**.

Pegging position	Working depth
Higher +	Deep tillage
Lower -	Shallow tillage


i NOTE

The adjustment of the working depth must be adapted to the respective operating conditions. The optimum adjustment can only be determined during field operation.

4. Put the pins in the desired position.
5. Secure the pin with the linch pin.
6. Remove the linch pin **1**.
7. Put the pins **3** on the adjusting rod **2** in the desired position.
8. Rest the adjusting rod in the support.
9. Secure the pin with the linch pin.
10. Make the same setting for the opposite side of the implement.

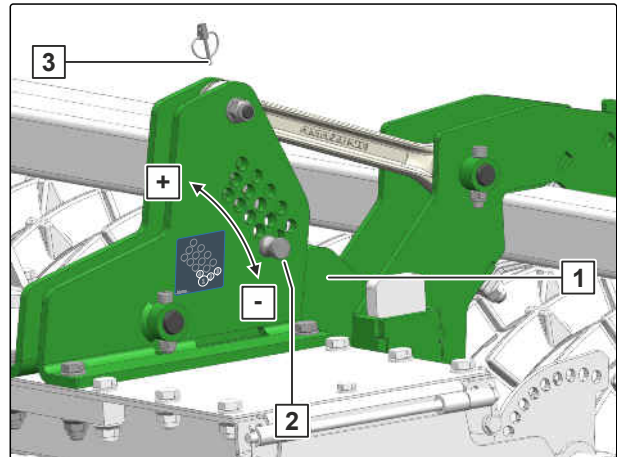

CMS-I-00003426

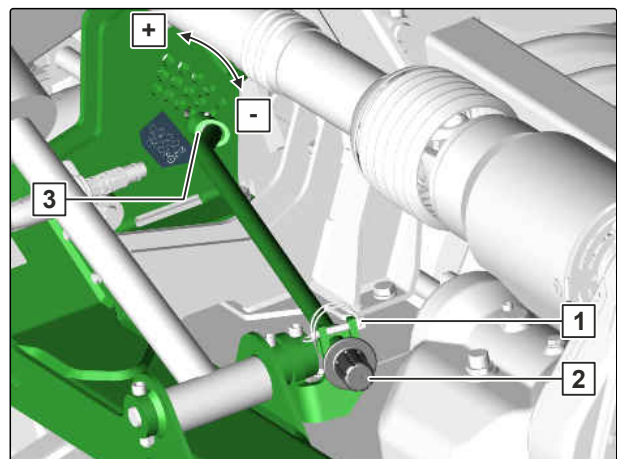


CMS-I-00006829

6.6.2 Adjusting the working height of the levelling board


CMS-T-00004620-C.1

The levelling board **1** levels the flow of soil between the tines and the roller. To crush large clods of soil more effectively, the soil clods are held between the tines by the levelling board. The levelling board can deflect upwards thanks to the integrated overload safety. The working height of the levelling board can be adjusted.

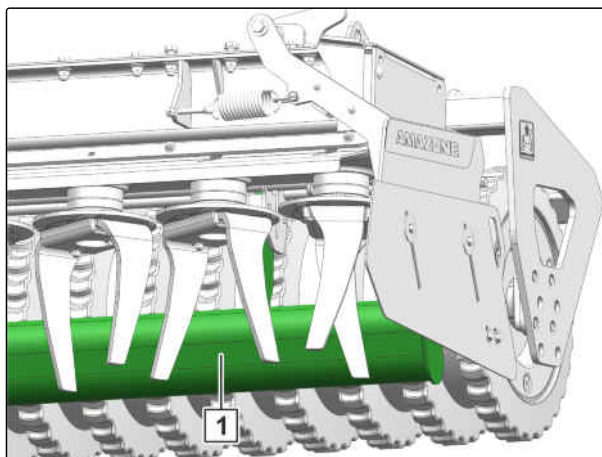

CMS-I-00002945

1. Insert the universal operating tool **1** in the adjustment device **2**.
2. *To relieve the locking mechanism **4**,* swivel the adjustment device slightly upwards.
3. Release the locking mechanism. Hold the universal operating tool in position.

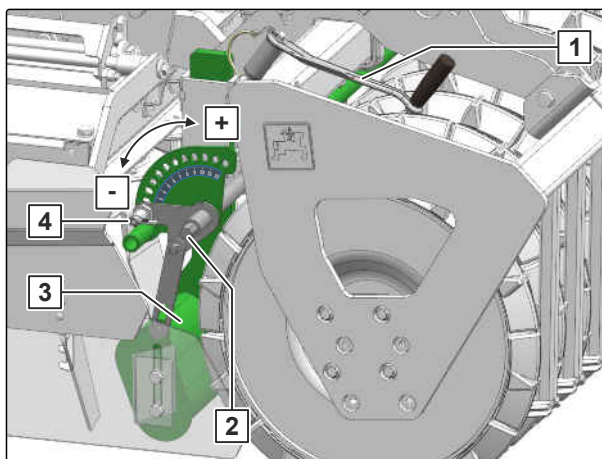

CMS-I-00003454

Work application	Working height
After the plough	Reduce - The levelling board is pushing up a small ridge of soil.
For mulch seeding	Increase + So that crop residues can pass under the levelling board.

4. Move the levelling board **3** to the desired position.

➔ The locking mechanism must engage.

5. Make the same setting for the opposite side of the implement.

6. *To check the setting,* drive for 30 m at working speed and then check the work pattern.

6.6.3 Adjusting the working depth of the side guide plates

CMS-T-00010046-A.1


The side guide plate ensures that the tilled soil is not thrown to the side. The working depth can be adjusted. The soil guiding angle bracket additionally prevents free-flowing soil from escaping.

1. Loosen the bolts **1**.

Work application	Working depth
After the plough	- The side guide plates glide through the soil at a depth of 1 to 2 cm
For mulch seeding with coarse organic residues	+ Install the side guide plates slightly higher at the front to allow crop residues to pass underneath.

i NOTE

The adjustment of the working depth must be adapted to the respective operating conditions. The optimum adjustment can only be determined during field operation.

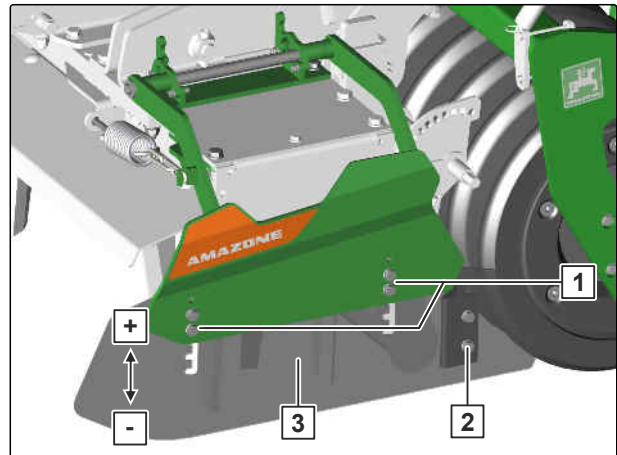

CMS-I-00003448

2. To release the side guide plate from the grid, push the side guide plate towards the front.
3. Move the side guide plate to the desired position.
4. Push the side guide plate into the grid.
5. Tighten the bolts.
6. Make the same setting for the opposite side of the implement.
7. To check the setting, seed for approx. 30 m at working speed and then check the work pattern.

The soil guiding angle brackets may not work too deep. The soil guiding angle brackets may only level the soil ridge between the side guide plate and the trailing roller.

8. Loosen the bolts.
9. Move the soil guiding angle bracket **2** to the desired position.
10. Tighten the bolts.

11. Make the same setting for the opposite side of the implement.
12. *To check the setting,*
seed for approx. 30 m at working speed and then check the work pattern.


6.6.4 Adjusting the spring tension of the side guide plates

CMS-T-00010047-A.1

The swivelling side panel deflects upwards on obstacles. The dead weight of the side panel and a tension spring bring the side panel back into working position. The pre-tensioning of the tension spring is adjustable.

The tension of the spring for the side guide plates **1** has been adjusted at the factory for light and medium soils.

Work application	Spring tension
After the plough, heavy soils	Increase +
After the plough, light soils	Reduce -
For mulch seeding with coarse organic residues	Reduce - To allow crop residues to pass underneath the side guide plates.

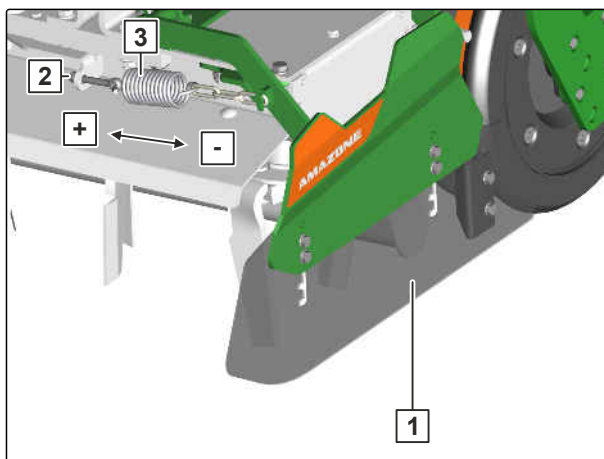

CMS-I-00003451

i NOTE


The adjustment of the working depth must be adapted to the respective operating conditions. The optimum adjustment can only be determined during field operation.

1. *To move the spring tension **3** to the desired position,*
adjust the preload with the nut **2**.
2. Make the same setting for the opposite side of the implement.
3. *To check the setting,*
seed for approx. 30 m at working speed and then check the work pattern.

6.6.5 Adjusting the speed of the tines


CMS-T-00010160-A.1

1. Depending on the desired tine speed **2**, determine the desired gear ratio **1**.

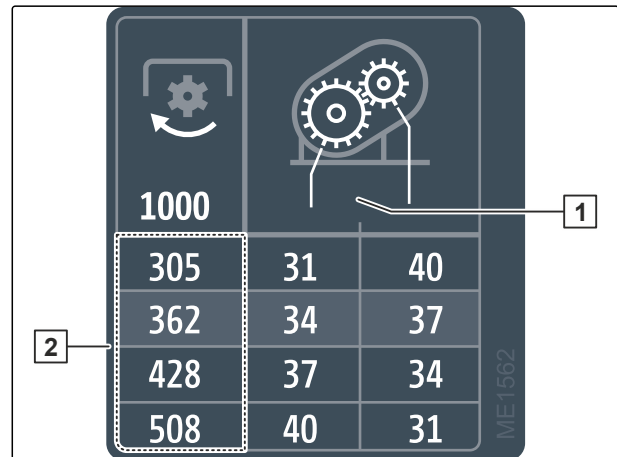

CMS-I-00003483

2. Park the soil tillage implement on a firm surface.
3. To prevent oil from emerging out of the interchangeable wheel gears, slightly fold the soil tillage implement. Support with suitable aids.
4. Remove the peripheral cover screws **1**.

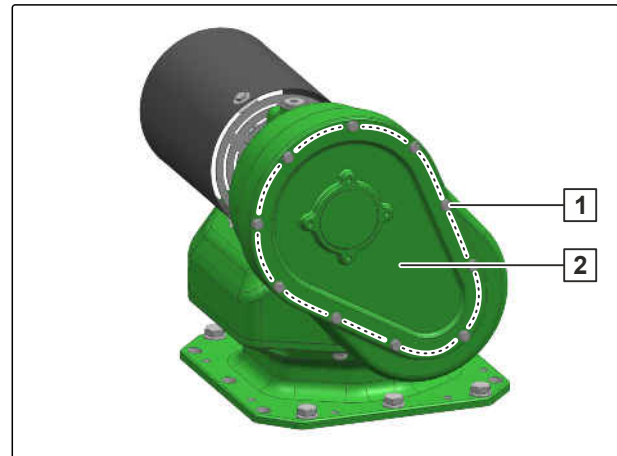


CMS-I-00003397

ENVIRONMENTAL INFORMATION Danger due to escaping oil

- Collect any escaping oil.
- Dispose of oil removal material in an environmentally friendly manner.

5. Remove the gearbox cover **2**.
6. Remove both locking rings **2**.
7. Remove the gear pair.
8. Depending on the desired tine speed, install the gear pair on the drive shaft **3** and the output shaft **1**.
9. Install the two locking rings.
10. Check the seating of the sealing ring on the gearbox cover.

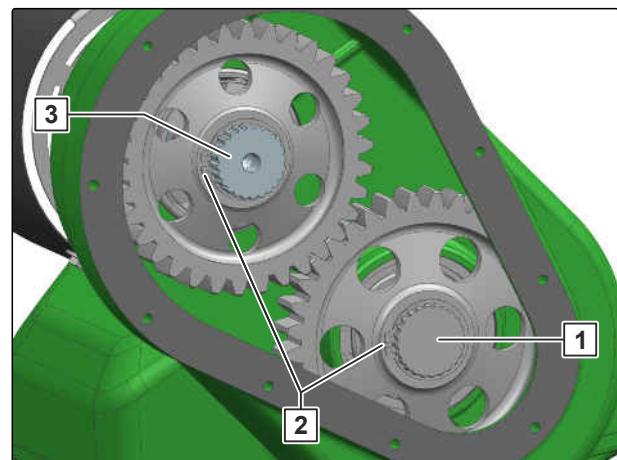


CMS-I-00003398

6 | Preparing the machine

Preparing the implement for operation


11. Install the gearbox cover **2** with the sealing ring.
12. Install and tighten the peripheral cover screws **1**.
13. Set the same gear ratio for the opposite side of the implement.
14. *After 15 minutes of operation,* check the gearbox for leaks.

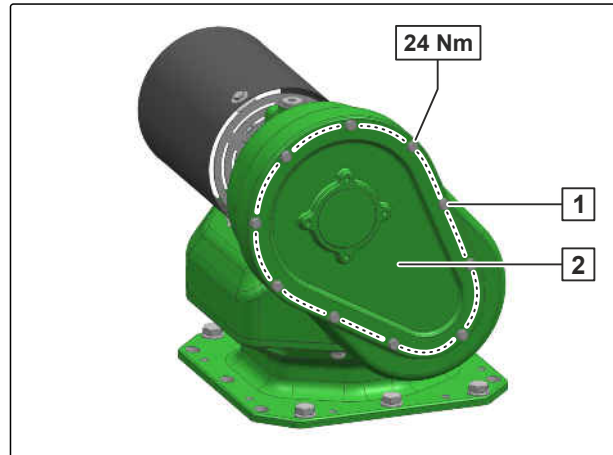

CMS-I-00003480

6.6.6 Using the centre line eradicator

The centre line eradicator **1** levels the tillage horizon between the implement sections. This prevents the formation of a centre soil ridge.

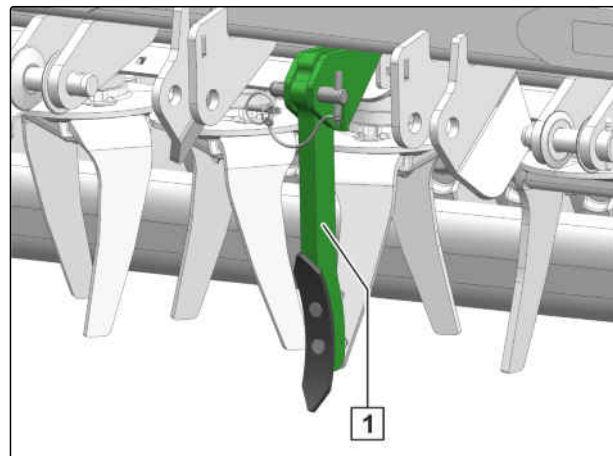


CMS-I-00002944



REQUIREMENTS

- ✓ The implement is not coupled

1. Align the centre line eradicator **4** in the bracket **1**.
2. Secure the centre line eradicator with the pin **2**.
3. Secure the pin with a linch pin **3**.

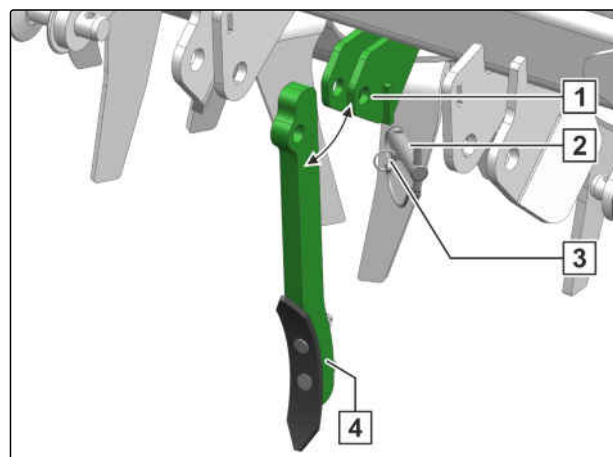


CMS-I-00002977

6.6.7 Adjusting the section end position

The end position of the sections is pre-set so that the implement sections are horizontal during operation. This setting can be adapted to the operating conditions.

1. Raise the implement.
 2. *To engage the transport lock, fold the implement sections.*
 3. Loosen the lock nut **3**.
 4. Move the setting screw **1** to the desired position.
 5. Unfold the implement sections.
- ➔ The setting screws must touch the contact surface **2** simultaneously.
6. Tighten the lock nuts.
 7. Make the same setting for the opposite side of the implement.

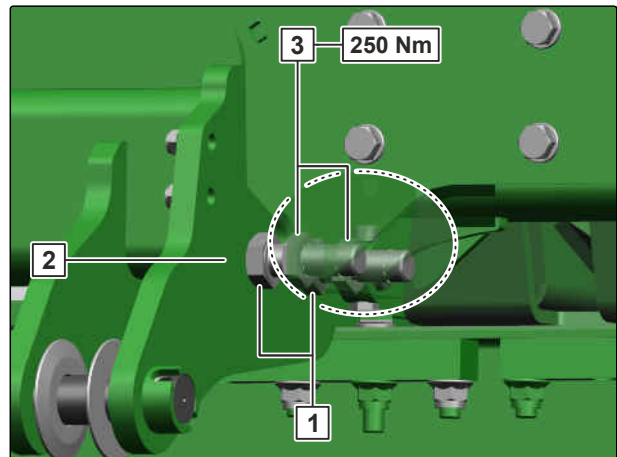

CMS-T-00010033-A.1


CMS-I-00006836

6.6.8 Adjusting the scraper to the roller

The scrapers on the roller are set at the factory. The scrapers can be adapted to the working conditions.

1. Loosen the bolt **1** under the scraper.
2. Move the scraper **2** in the elongated slot.

Roller	Distance between roller element and scraper
Wedge ring roller KW / KWM	10 mm to 15 mm
Tooth packer roller PW	0,5 mm to 4 mm
Trapeze ring roller TRW	0,5 mm to 4 mm

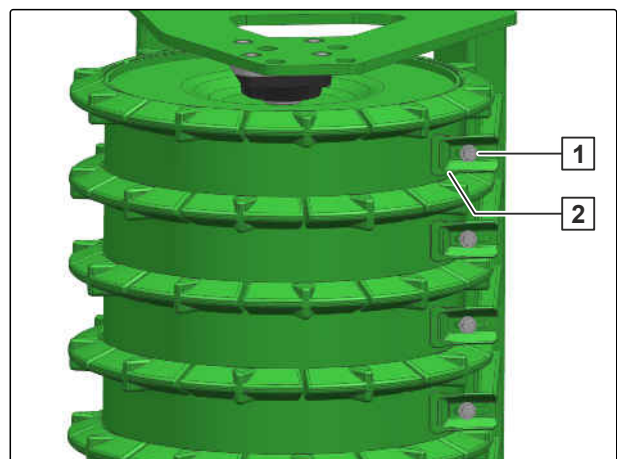

CMS-T-00001534-C.1

CMS-I-00000933

3. *To check the distance, rotate the roller **2**.*
4. Tighten the bolt.
5. Make the same setting for all scrapers.


6.7 Preparing the machine for road travel

CMS-T-00010028-A.1

6.7.1 Folding the implement

CMS-T-00010029-A.1

1. Raise the implement.
2. *Until the implement sections have reached the end position,*
actuate the "green 2" tractor control unit.
3. *When the frame transport lock [2] is engaged,*
release the pull rope [1] and put the tractor control unit to the neutral position.

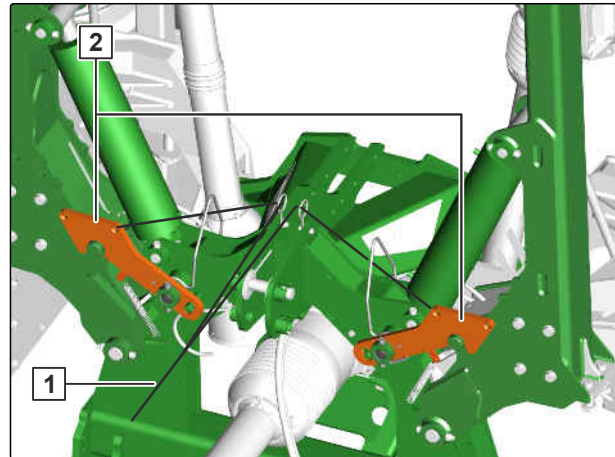


CMS-I-00006834

The roller transport lock [1] secures the carrying arms of the trailing roller [2] in a folded state.

4. Before driving off, check that the roller transport lock is engaged.

or

If the roller transport lock is not engaged,
move the roller outwards until the roller transport lock engages.

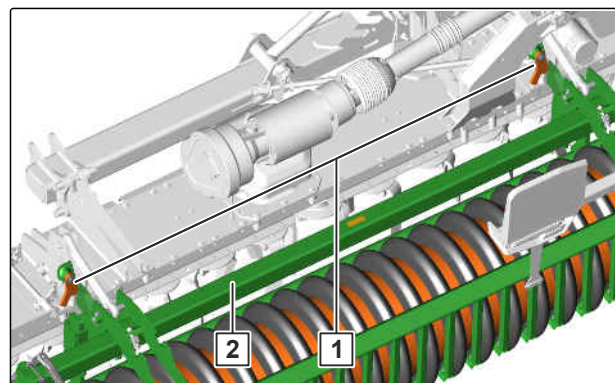

CMS-I-00006828

Using the machine


7

CMS-T-00010022-A.1

7.1 Unfolding the implement

CMS-T-00010023-A.1

1. Raise the implement.
 2. actuate the "green 2" tractor control unit.
- ➔ The transport lock is unloaded.
3. *Until the implement sections have reached the end position,*
Actuate the pull rope and actuate the "green 1" tractor control unit.
 4. *When the implement sections have reached the end position,*
Release the pull rope and put the tractor control unit into float position.

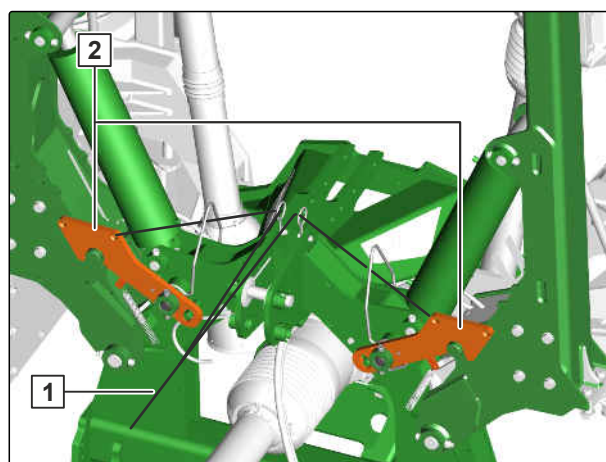

CMS-I-00006834

7.2 Using the implement

CMS-T-00009290-A.1

1. Lower the implement until it is just above the field.

When working with the implement switched on, it must be ensured that the tines touch the soil.

2. Switch on the tractor PTO shaft.
3. Lower the implement on the field.
4. Move the hydraulic system of the 3-point power lift into float position.

7.3 Checking the set working depth

CMS-T-00004568-A.1

If the set working depth is greater than the tine length, the tool carriers are constantly working in the soil horizon.



IMPORTANT

The tool carriers become worn when constantly working in the soil.

- ▶ Replace the tines before they reach the minimum length.

- ▶ *To prevent wear of the tool carriers, check the set working depth after driving a short distance.*

7.4 Turning on the headlands

CMS-T-001728-B.1

1. *To prevent lateral loads when driving in curves on the headlands, raise the soil tillage tools.*
2. *When the direction of the implement matches that of the direction of travel, lower the soil tillage tools.*

Eliminating faults

8

CMS-T-00010077-B.1

Errors	Cause	Solution
The trailing roller rotates stiffly during initial operation.	Production-related paint residues make it difficult for the roller to rotate.	► Pull the roller over firm ground.
Tines stopping during operation	If the tines encounter an obstacle, the tool carriers are blocked.	see page 60
	After the tines have encountered an obstacle, the obstacle is jammed between the tines. The cam-type clutch does not engage automatically.	see page 60
The cam-type clutch is often triggered	Maintenance is required on the cam-type clutch.	see page 60
	Excessive torques on the cam-type clutch.	see page 60
The lighting for road travel has a malfunction.	Lamp or lighting supply line is damaged.	► Replace the lamp. ► Replace the lighting supply line.

Tines stopping during operation

CMS-T-00004519-B.1

The tines encountered an obstacle, the tool carriers are blocked:

1. Raise the implement.
2. Reduce the PTO shaft speed to approx. 300 rpm.

➔ The cam-type clutch engages audibly.

3. Re-establish the original PTO shaft speed.
4. Resume working.

An obstacle is jammed between the tines:

1. Raise the implement.
2. Secure the tractor and implement.
3. Wait until the tool carriers come to a stop.
4. Remove the obstacle between the tines.

The cam-type clutch is often triggered

CMS-T-00004943-B.1

Maintenance is required on the cam-type clutch:

1. *If the cam-type clutch is often triggered,* perform maintenance according to the instructions from the universal joint shaft manufacturer

or

Contact AMAZONE Customer Service.

2. Install the universal joint shafts.

Excessive torques on the cam-type clutch:

Universal joint shaft speeds lower than 1000 rpm cause high torques on the cam-type clutch.

- *If the cam-type clutch is often triggered,* set the speed of the universal joint shaft to 1000 rpm.

Parking the machine


9

CMS-T-00010010-A.1

9.1 Unfolding the implement

CMS-T-00010023-A.1

1. Raise the implement.
2. actuate the "green 2" tractor control unit.
- ➔ The transport lock is unloaded.
3. *Until the implement sections have reached the end position,*
Actuate the pull rope and actuate the "green 1" tractor control unit.
4. *When the implement sections have reached the end position,*
Release the pull rope and put the tractor control unit into float position.

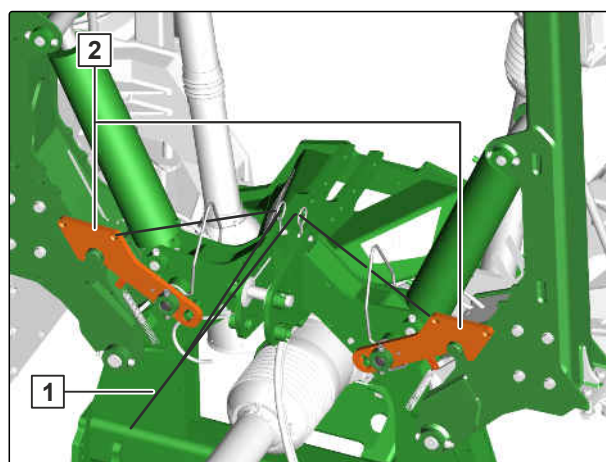

CMS-I-00006834

9.2 Lowering the implement

CMS-T-00004165-A.1



REQUIREMENTS

- ✓ The implement is unfolded



IMPORTANT


The centre line eradicator penetrates deeper into the soil than the tool tines

- ▶ *To prevent damage to the centre line eradicator,*
do not lower the centre line eradicator onto solid ground.
- ▶ The centre line eradicator must penetrate into loose soil.
- ▶ Park the implement sections on a level surface with solid ground.

9.3 Uncoupling the power supply


CMS-T-00001402-G.1

1. Pull out the plug **1** for the power supply.

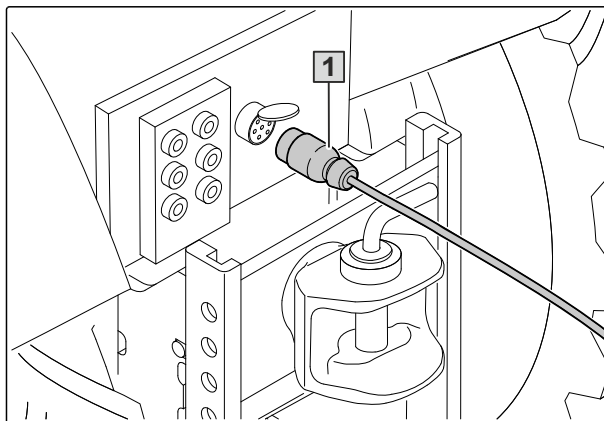

CMS-I-00001048

2. Hang the plugs **1** in the hose cabinet.

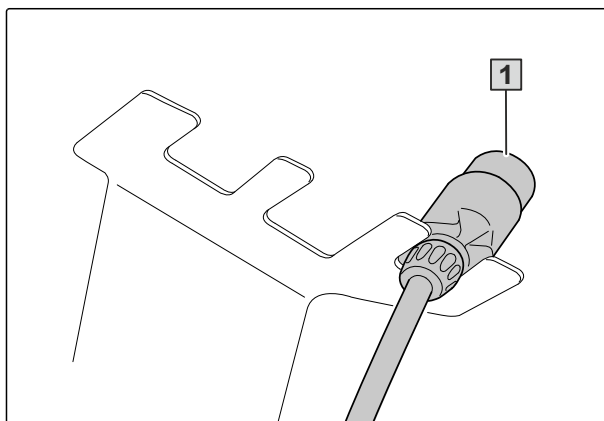


CMS-I-00001248

9.4 Disconnecting the hydraulic hose lines


CMS-T-00000277-E.1

1. Secure the tractor and implement.
2. Put the control lever on the tractor control unit in float position.
3. Disconnect the hydraulic hose lines **1**.
4. Put the dust caps on the hydraulic sockets.

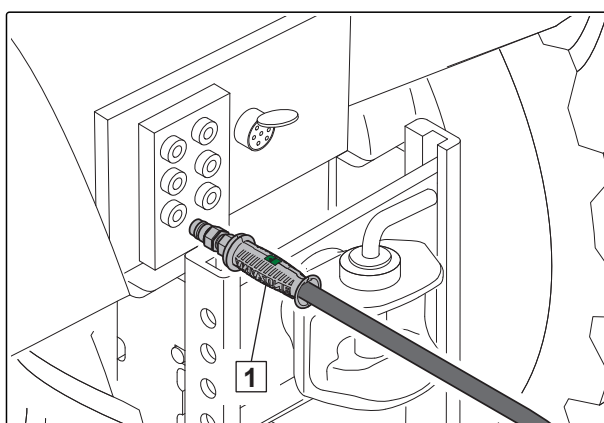

CMS-I-00001065

5. Hang the hydraulic hose lines **1** in the hose cabinet.

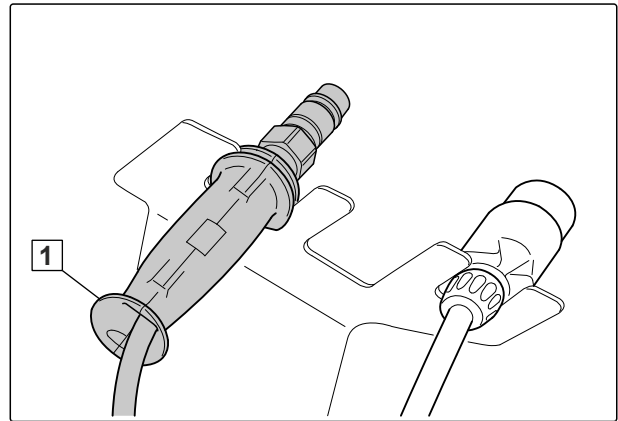


CMS-I-00001250

9.5 Uncoupling the universal joint shaft

CMS-T-00004159-A.1

1. Unlock the bracket.
2. Swivel the bracket **1** out of the parking position.
3. *To release the fastening chain from the tractor, see "Universal joint shaft operating manual".*
4. Release the universal joint shaft from the tractor PTO shaft.
5. Put the universal joint shaft in the bracket.

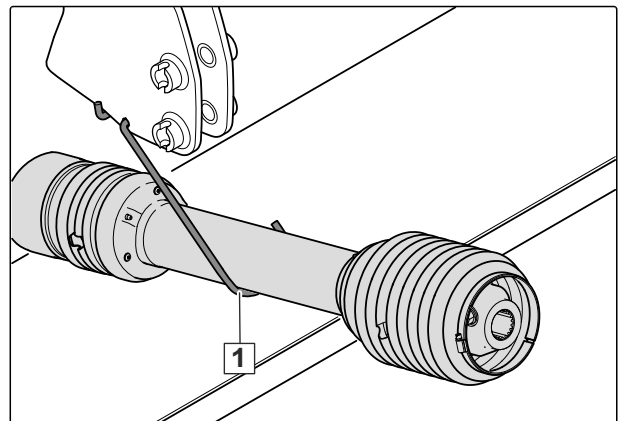


CMS-I-00003520

9.6 Uncoupling the 3-point mounting frame

CMS-T-00010011-A.1

1. Park the implement on a level surface with solid ground.
2. Release the top link **1**.
3. Uncouple the top link **1** from the implement.
4. Release the lower links **2**.
5. Uncouple the lower links **2** from the implement from the tractor seat.

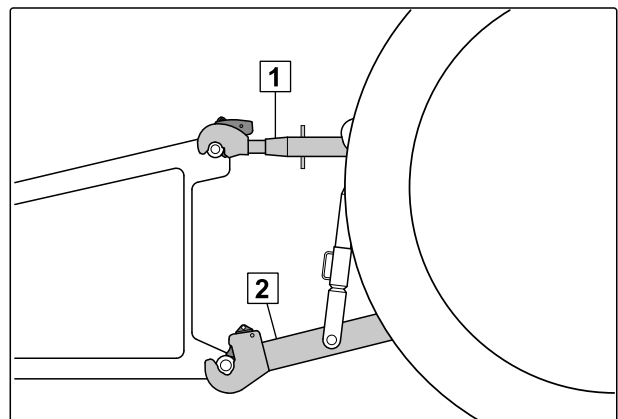

CMS-I-00001249

Repairing the machine

10

CMS-T-00010024-B.1

10.1 Maintaining the machine

CMS-T-00010083-A.1

10.1.1 Maintenance schedule

After initial operation	
Checking the hydraulic hose lines	see page 65
Checking the oil level in the interchangeable wheel gear	see page 68
Checking the oil level in the centre gearbox	see page 69
Checking the oil level in the spur gear trough	see page 70
After the first 50 operating hours	
Replacing the oil in the interchangeable wheel gear	see page 71
Replacing the oil in the centre gearbox	see page 71
as required	
Replacing the tines	see page 67
daily	
Checking the top link pin and lower link pin	see page 65
Every 6 months	
Ratchet clutch maintenance	see page 73
Every 50 operating hours	
Checking the tines	see page 66
Every 500 operating hours	
Replacing the oil in the interchangeable wheel gear	see page 71
Replacing the oil in the centre gearbox	see page 71

Every 50 operating hours / weekly	
Checking the hydraulic hose lines	see page 65
Checking the oil level in the interchangeable wheel gear	see page 68
Checking the oil level in the centre gearbox	see page 69
Checking the oil level in the spur gear trough	see page 70

Every 50 operating hours / as required	
Universal joint shaft maintenance	see page 73

10.1.2 Checking the top link pin and lower link pin

CMS-T-00002330-H.1



INTERVAL

- daily

1. Check the top link pins and lower link pins for cracks or broken areas.

Permissible wear	2 mm
------------------	------

2. Replace the pins if there is significant wear.

10.1.3 Checking the hydraulic hose lines

CMS-T-00002331-C.1




INTERVAL

- After initial operation
- Every 50 operating hours
or
weekly

1. Check the hydraulic hose lines for damage, such as chafing point, cuts, tears and deformation.
2. Check the hydraulic hose lines for leaks.

Hydraulic hose lines must not be more than 6 years old.

3. Check the manufacturing date **1**.

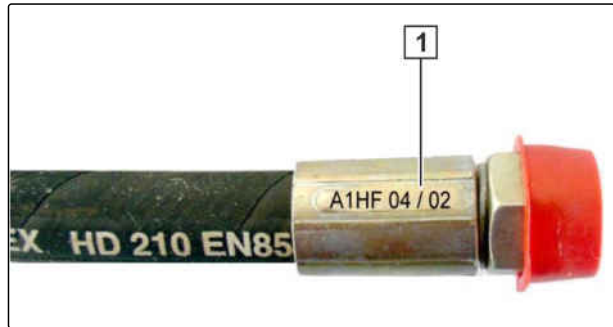

CMS-I-00000532

4. Have any worn, damaged or aged hydraulic hose lines immediately replaced at a specialist workshop.
5. Retighten loose bolted connections.


10.1.4 Checking the tines

CMS-T-00005050-A.1



INTERVAL

- Every 50 operating hours
1. Determine the length of the tines.
2. *If the minimum length of the tines is undercut, replace the tines.*

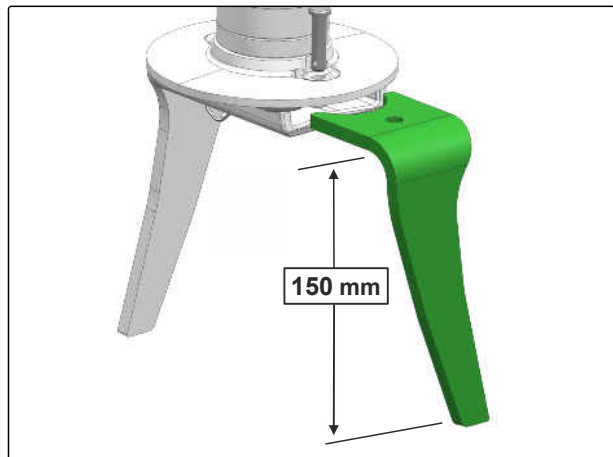

CMS-I-00003613

10.1.5 Replacing the tines


CMS-T-00004140-B.1



INTERVAL

- as required

1. Remove the linch pin **3**.
2. Remove the pin **1** from the tool carrier.
3. Remove the tine **2**.

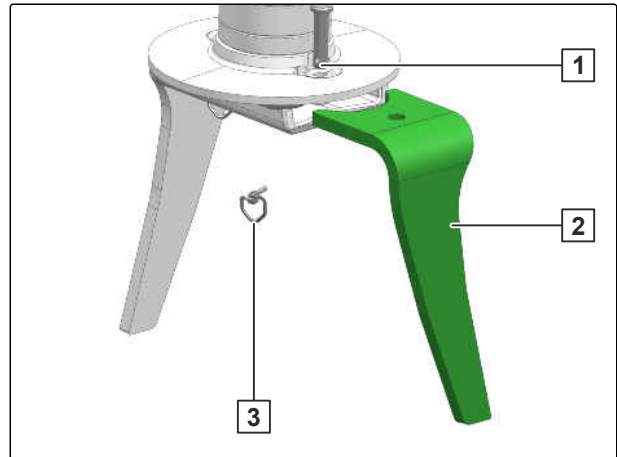


CMS-I-00003035



NOTE

The outer tool carriers **1** always rotate towards the centre of the implement.

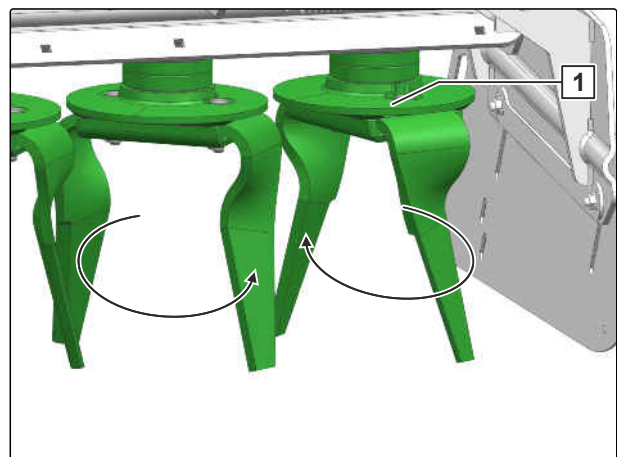

CMS-I-00003470

4. Pay attention to the alignment of the tine.
5. Install the new tine **2**.
6. Fasten the tine with the pin.
7. Secure the tine with the linch pin.

10.1.6 Checking the oil level in the interchangeable wheel gear

CMS-T-00004632-B.1



INTERVAL

- After initial operation
- Every 50 operating hours
or
weekly

1. Park the implement on a horizontal surface.
2. Remove the oil dipstick **1**.
3. Check the oil level.




NOTE

If oil types are mixed, warranty claims cannot be accepted.

- Do not mix oils.
- Fill with new and clean gear oil.

4. *If the oil level is not visible between the markings **2**,*
Refill the oil.
5. *When the oil level is visible between the markings,*
install the oil dipstick with a new sealing ring.

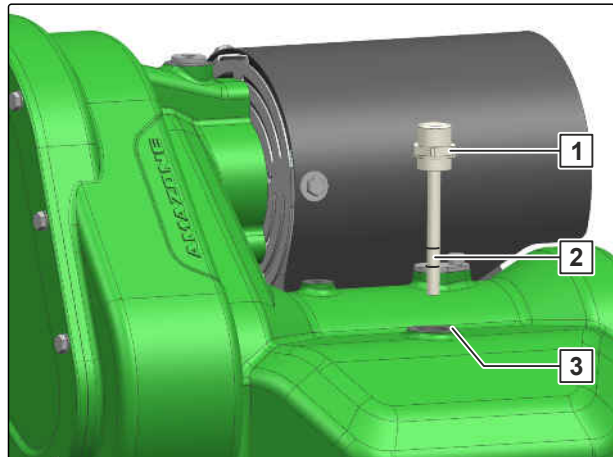

CMS-I-00003466

10.1.7 Checking the oil level in the centre gearbox

CMS-T-00010086-A.1



INTERVAL

- After initial operation
 - Every 50 operating hours
- or
- weekly




ENVIRONMENTAL INFORMATION

Danger due to escaping oil

- ▶ Collect any escaping oil.
- ▶ Dispose of cleaning agents for removing oil in an environmentally friendly manner.

1. Park the implement on a horizontal surface.
2. Remove the ventilation **1**.
3. Remove the bolt **2**.

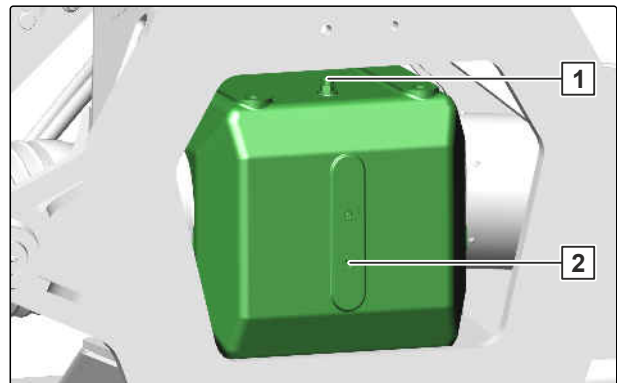

CMS-I-00006847



NOTE

If oil types are mixed, warranty claims cannot be accepted.

- Do not mix oils.
 - Fill with new and clean gear oil.
4. Refill oil through the ventilation opening.
- ➔ When oil emerges from the thread of the bolt, the correct oil level has been reached.
5. Install the bolt.
 6. Install the ventilation.

10.1.8 Checking the oil level in the spur gear trough

CMS-T-00004838-B.1



INTERVAL

- After initial operation
 - Every 50 operating hours
- or
- weekly




IMPORTANT

Damage due to impurities in the spur gear trough

- Clean the implement before performing maintenance.

1. Park the implement on a horizontal surface.
2. Loosen and remove the nut **2**.
3. Remove the cover bolt **1**.
4. Remove the cover with ventilation pipe **4**.

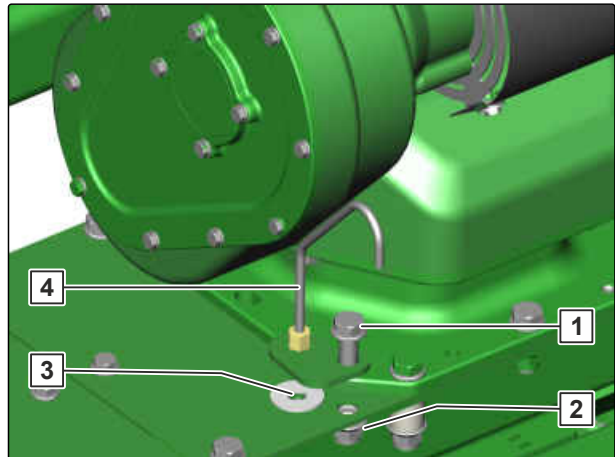

CMS-I-00003467



NOTE

If oil types are mixed, warranty claims cannot be accepted.

- Do not mix oils.
 - Fill with new and clean gear oil.
5. *If the spur gears are not halfway covered with gear oil in the spur gear trough, refill oil according to the technical data.*
 6. Check the fit of the gasket **3**.
 7. Install the cover with the ventilation pipe.
 8. Install the cover bolt.
 9. Install the nut and tighten it.



NOTE

There is no need to change the oil in the spur gear trough.

10.1.9 Replacing the oil in the interchangeable wheel gear

CMS-T-00004631-B.1



INTERVAL


- After the first 50 operating hours
- Every 500 operating hours

1. Place a suitable collection bucket under the oil drain opening.
2. Remove the oil dipstick **1**.
3. Remove the oil drain plug **2**.



ENVIRONMENTAL INFORMATION Danger due to escaping oil

- ▶ Collect any escaping oil.
- ▶ Dispose of cleaning agents for removing oil in an environmentally friendly manner.

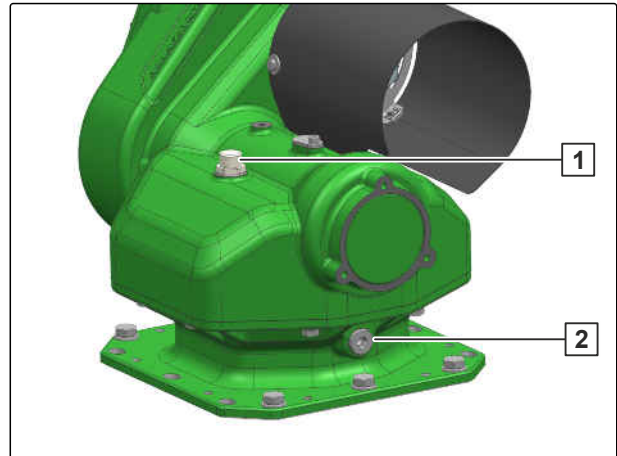

CMS-I-00003465

4. Install the oil drain plug with a new sealing ring.
5. Refill the oil.
6. install the oil dipstick with a new sealing ring.

10.1.10 Replacing the oil in the centre gearbox


CMS-T-00010087-A.1



INTERVAL


- After the first 50 operating hours
- Every 500 operating hours

1. Park the implement on a horizontal surface.
2. Remove the ventilation **1**.

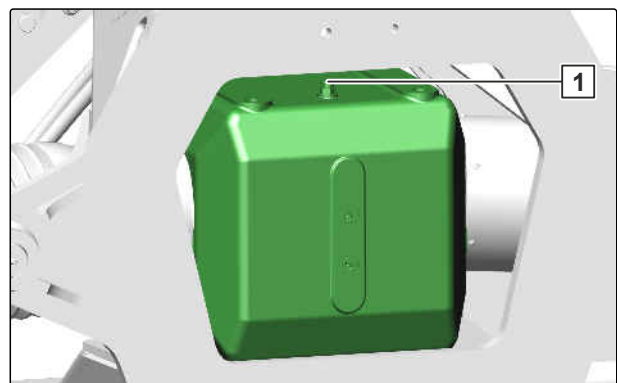

CMS-I-00006846

3. Place a suitable collection bucket under the oil drain opening.
4. Remove the oil drain plug **1**.
5. *When all of the oil has been drained,*
Install the oil drain plug with a new sealing ring.

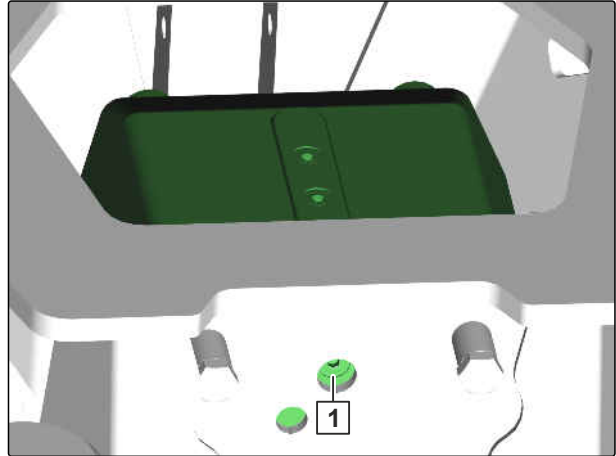

CMS-I-00006843




ENVIRONMENTAL INFORMATION

Danger due to escaping oil

- ▶ Collect any escaping oil.
- ▶ Dispose of cleaning agents for removing oil in an environmentally friendly manner.

6. Remove the bolt **2**.
 7. Refill oil through the ventilation opening.
- ➔ When oil emerges from the thread of the bolt, the correct oil level has been reached.
8. Install the bolt.
 9. Install the ventilation **1**.

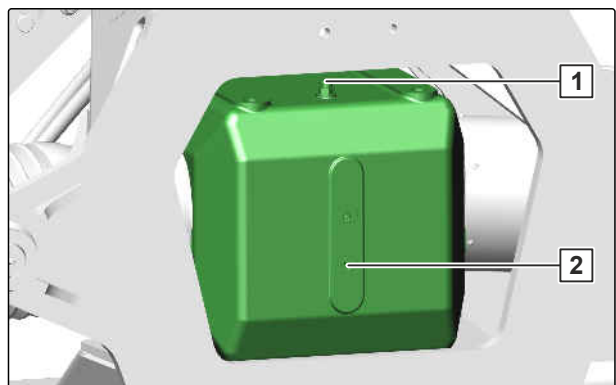

CMS-I-00006847


10.1.11 Ratchet clutch maintenance

CMS-T-00004584-A.1



INTERVAL

- Every 6 months
- Perform maintenance on the ratchet clutches **1** according to the instructions from the universal joint shaft manufacturer

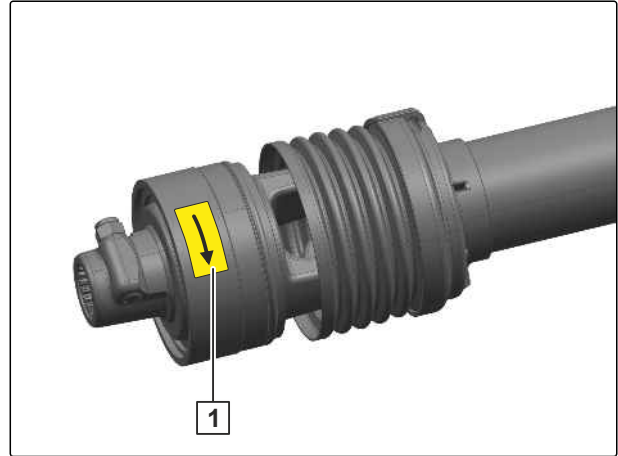

CMS-I-00003044

10.1.12 Universal joint shaft maintenance

CMS-T-00004585-A.1



INTERVAL

- Every 50 operating hours
or
as required
- Perform maintenance on the universal joint shaft according to the instructions from the universal joint shaft manufacturer

10.2 Lubricating the implement

CMS-T-00010025-B.1



IMPORTANT

Implement damage due to improper lubrication


- ▶ Grease the implement at the marked lubrication points according to the lubrication schedule.
- ▶ *To ensure that dirt is not pressed into the lubrication points,* thoroughly clean the grease nipples and the grease gun.
- ▶ Only grease the implement with the lubricants listed in the technical data.
- ▶ Press the dirty grease completely out of the bearings.



CMS-I-00002270


10.2.1 Overview of lubrication points

CMS-T-00010026-A.1

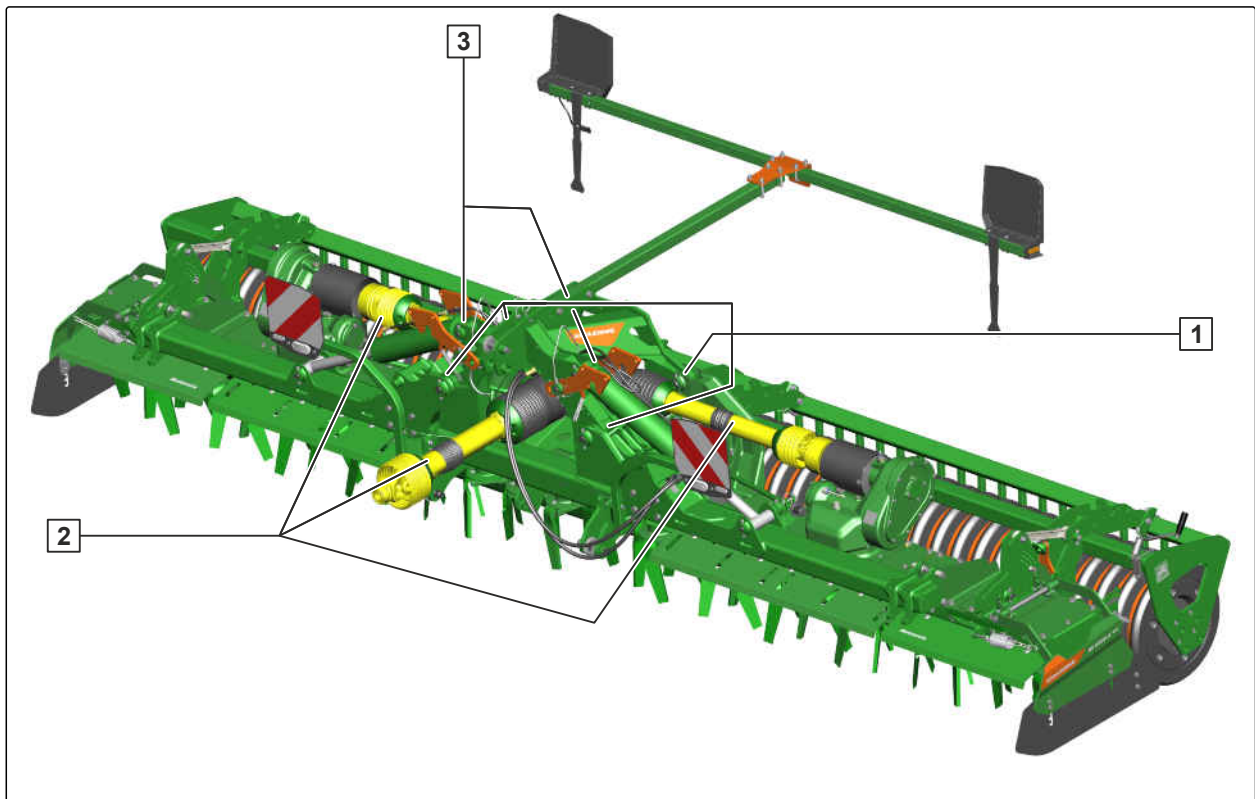


CMS-I-00006837


Every 50 operating hours / Every 6 months

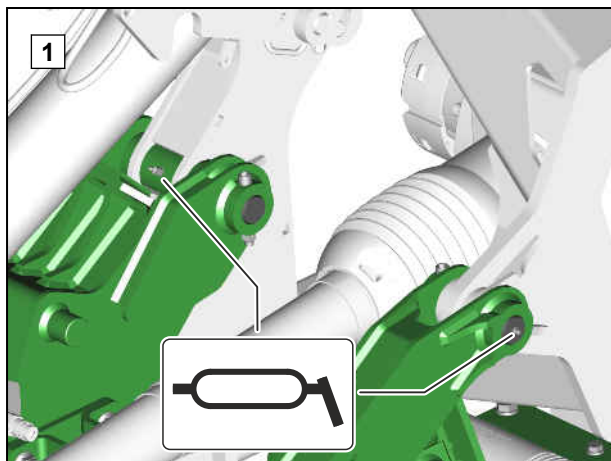

CMS-I-00006853

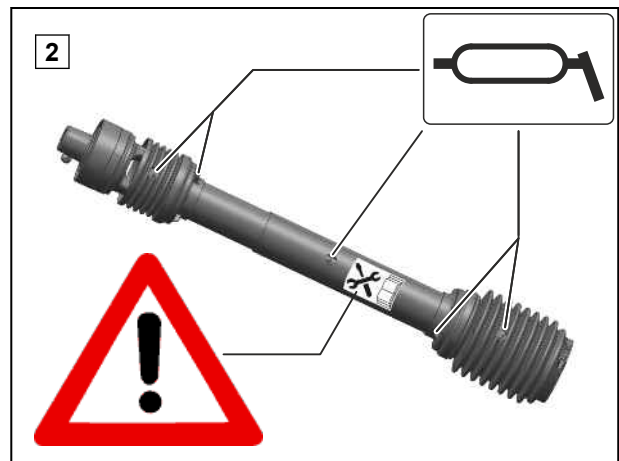

CMS-I-00003006

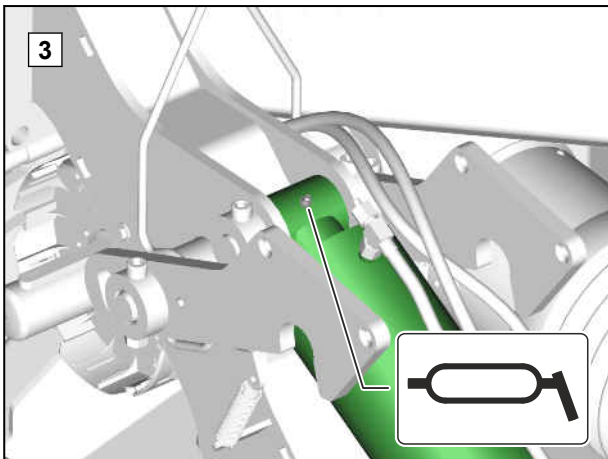

CMS-I-00006854

10.3 Cleaning the implement

CMS-T-00000593-F.1



IMPORTANT

Risk of machine damage due to cleaning jet of the high-pressure nozzle

- ▶ Never direct the cleaning jet of the high-pressure cleaner or hot water high-pressure cleaner onto the marked components.
- ▶ Never aim the cleaning jet of high-pressure cleaners or hot water high-pressure cleaners on electrical or electronic components.
- ▶ Never aim the cleaning jet of the high pressure cleaner directly on lubrication points, bearings, rating plates, warning signs, and stickers.
- ▶ Always maintain a minimum distance of 30 cm between the high-pressure nozzle and the implement.
- ▶ Do not exceed a water pressure of 120 bar.



CMS-I-00002692

- ▶ Clean the machine with a high-pressure cleaner or a hot water high-pressure cleaner.

Loading the machine

11

CMS-T-00010035-A.1

11.1 Lifting the implement

CMS-T-00010036-A.1

The implement has 3 lashing points for slings for lifting.




WARNING

Risk of accidents due to improperly attached slings for lifting

If the slings are not attached at the marked lashing points, the implement can be damaged during lifting and endanger safety.

- ▶ Only attach the slings for lifting at the marked lashing points.
- ▶ *To determine the required load-bearing capacity of the slings, observe the specifications in the following table.*

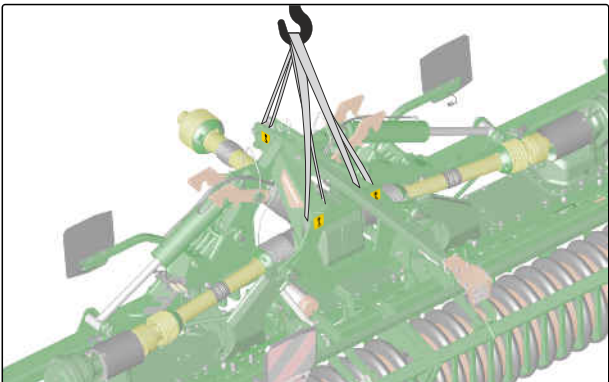

CMS-I-00006882

Required load-bearing capacity per sling	4000 kg
--	---------



REQUIREMENTS

- ✓ The implement is unfolded
1. Attach the slings for lifting on the intended lashing points.
 2. Slowly lift the implement.

11.2 Lashing the implement

CMS-T-00010037-A.1

The implement has 3 lashing points **1** for lashing straps.




WARNING

Risk of accidents due to improperly attached lashing straps

If the lashing straps are not attached at the marked lashing points, the implement can be damaged during lashing and endanger safety.

- Attach the lashing straps only at the marked lashing points.

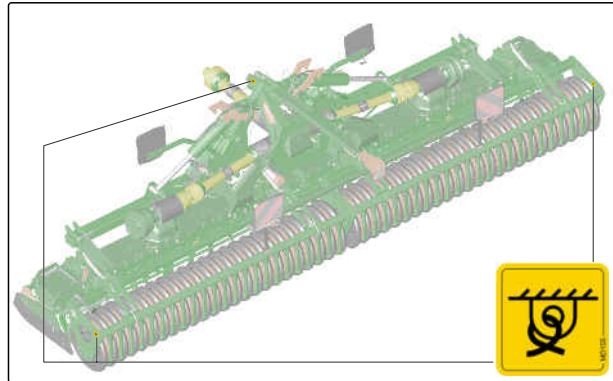

CMS-I-00006881



REQUIREMENTS

- ✓ The implement is unfolded

1. Put the implement on the transport vehicle.
2. Attach the lashing straps at the marked points.
3. Lash down the implement in compliance with the national regulations for load securing.


Appendix

12

CMS-T-00004152-C.1

12.1 Bolt tightening torques

CMS-T-00000373-E.1

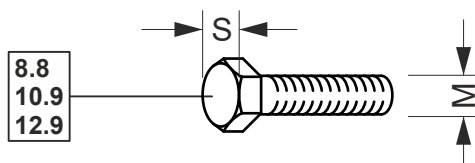

CMS-I-000260




NOTE

Unless specified otherwise, the bolt tightening torques listed in the table apply.

M	S	Strength classes		
		8.8	10.9	12.9
M8	13 mm	25 Nm	35 Nm	41 Nm
M8x1		27 Nm	38 Nm	41 Nm
M10	16(17) mm	49 Nm	69 Nm	83 Nm
M10x1		52 Nm	73 Nm	88 Nm
M12	18(19) mm	86 Nm	120 Nm	145 Nm
M12x1.5		90 Nm	125 Nm	150 Nm
M14	22 mm	135 Nm	190 Nm	230 Nm
M 14x1.5		150 Nm	210 Nm	250 Nm
M16	24 mm	210 Nm	300 Nm	355 Nm
M16x1.5		225 Nm	315 Nm	380 Nm
M18	27 mm	290 Nm	405 Nm	485 Nm
M18x1.5		325 Nm	460 Nm	550 Nm
M20	30 mm	410 Nm	580 Nm	690 Nm
M20x1.5		460 Nm	640 Nm	770 Nm

M	S	Strength classes		
		8.8	10.9	12.9
M22	32 mm	550 Nm	780 Nm	930 Nm
M22x1.5		610 Nm	860 Nm	1,050 Nm
M24	36 mm	710 Nm	1,000 Nm	1,200 Nm
M24x2		780 Nm	1,100 Nm	1,300 Nm
M27	41 mm	1,050 Nm	1,500 Nm	1,800 Nm
M27x2		1,150 Nm	1,600 Nm	1,950 Nm
M30	46 mm	1,450 Nm	2,000 Nm	2,400 Nm
M30x2		1,600 Nm	2,250 Nm	2,700 Nm

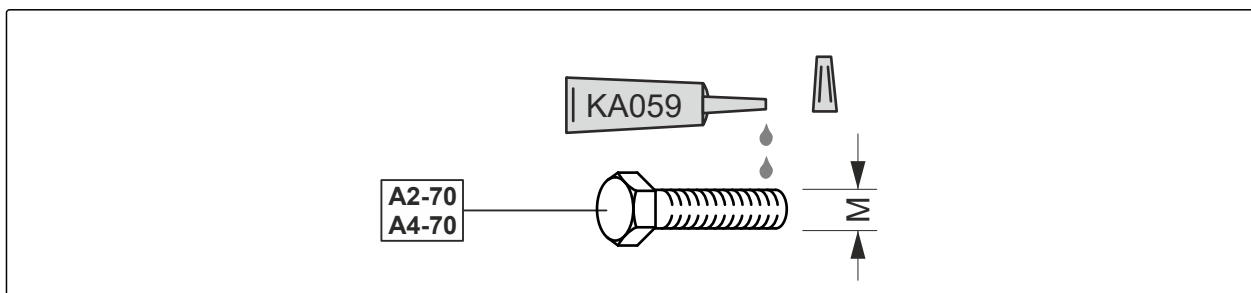

CMS-I-00000065

M	Tightening torque	M	Tightening torque
M4	2.4 Nm	M14	112 Nm
M5	4.9 Nm	M16	174 Nm
M6	8.4 Nm	M18	242 Nm
M8	20.4 Nm	M20	342 Nm
M10	40.7 Nm	M22	470 Nm
M12	70.5 Nm	M24	589 Nm

12.2 Other applicable documents

CMS-T-00004153-A.1

- Tractor operating manual
- Universal joint shaft operating manual

Directories

13

13.1 Glossary

CMS-T-00000513-B.1

M

Machine

Mounted implements are accessory parts of the tractor. However, mounted implements are always referred to as the implement in this operating manual.

O

Operating materials

Operating materials serve to ensure operational readiness. Operating materials include e.g. cleaning agents and lubricants such as lubricating oil, greases or cleaners.

T

Tractor

In this operating manual, the designation tractor is always used, even for other agricultural tractor units. Implements are mounted on the tractor or towed by the tractor.

13.2 Index

3		E	
3-point mounting frame	31	Eliminating faults	59
<i>coupling</i>	45		
<i>uncoupling</i>	63		
A		F	
Additional license plate	34	Folding	56
Address		Frame transport lock	23
<i>Technical editing</i>	4	Front axle load	
Adjusting the section end position	55	<i>calculation</i>	40
Adjusting the spring tension		Front ballasting	
<i>Side guide plates</i>	52	<i>calculation</i>	40
Adjusting the universal joint shaft	43	Front lighting	33
Adjusting the working height		Function of the implement	21
<i>Levelling board</i>	50		
Adjust the working depth			
<i>Side guide plates, extendable</i>	51		
<i>Tine, manual</i>	48		
Aids	31		
B		H	
Backstop profiles for lower links		Headlands	58
<i>attachment</i>	43	Hydraulic hose lines	
Bolt tightening torques	79	<i>checking</i>	65
C		<i>coupling</i>	45
Changing the oil		<i>uncoupling</i>	62
<i>Oils and filling capacities</i>	38	Hydraulic system	
Checking the oil level		<i>coupling</i>	45
<i>Spur gear trough</i>	70		
Checking the set working depth	58		
cleaning			
<i>Implement</i>	76		
Contact data			
<i>Technical editing</i>	4		
D		I	
Dimensions	36	Implement	
Documents	31	<i>folding</i>	56
		<i>lashing</i>	78
		<i>lifting</i>	77
		<i>unfolding</i>	57, 61
		Implement overview	20
		Intended use	19
		L	
		Levelling board	
		<i>Adjusting the working height</i>	50
		Lighting and identification for road travel	
		<i>Description</i>	33
		Lighting and identification	
		<i>front</i>	33
		Loads	
		<i>calculation</i>	40

Lowering the implement	61	Product description	
Lower link pin		<i>Additional license plate</i>	34
<i>checking</i>	65	<i>Function of the implement</i>	21
Lubricants	38	<i>Special equipment</i>	22
		<i>Universal joint shaft locking mechanism</i>	32
M		Protective equipment	
		<i>Universal joint shaft guard</i>	22
Maintenance		R	
<i>Checking the oil level in the spur gear trough</i>	70	Ratchet clutch	32
<i>Checking the tines</i>	66	Rating plate on the implement	
<i>Ratchet clutch maintenance</i>	73, 73	<i>Description</i>	31
<i>Replacing the tines</i>	67	Rear axle load	
Mounting category	36	<i>calculation</i>	40
		Repairing the machine	
N		<i>Eliminating faults</i>	59
Noise development data	37	Roller	
		<i>Adjusting the scraper</i>	55
O		Roller transport lock	24
Oil		S	
<i>Checking the oil level in the centre gearbox</i>	69	Scraper	
<i>Checking the oil level in the interchangeable</i>		<i>adjusting</i>	55
<i>wheel gear</i>	68	Special equipment	22
<i>replacement in the centre gearbox</i>	71	T	
<i>replacing in the interchangeable wheel gear</i>	71	Technical data	
Operating tool		<i>drivable slope inclination</i>	38
<i>Product description</i>	32	<i>Lubricants</i>	38
Operation	57	<i>Mounting category</i>	36
		<i>Noise development data</i>	37
P		<i>Oils and filling capacities</i>	38
Parking the machine		<i>Working depth</i>	37
<i>Lowering the implement</i>	61	Threaded cartridge	
<i>Uncoupling the universal joint shaft</i>	63	<i>Description</i>	31
Payload		Tine	
<i>calculation</i>	48	<i>checking</i>	66
Performance characteristics of the tractor	37	<i>replacing</i>	67
Permissible total weight	36	Tool protection	23
Power supply		Top link pin	
<i>coupling</i>	47	<i>checking</i>	65
<i>uncoupling</i>	62	Total weight	
Preparing the implement for operation		<i>calculation</i>	40
<i>Adjusting the speed of the tines</i>	53	Tractor	
<i>Adjusting the working height of the levelling</i>		<i>Calculating the required tractor characteristics</i>	40
<i>board</i>	50		
<i>Using the centre line eradicator</i>	54		
Preparing the machine			
<i>Preparing the universal joint shaft</i>	43		

Tyre load capacity <i>calculation</i>	40
--	----

U

Uncoupling the universal joint shaft	63
Unfolding	57, 61
Universal joint shaft guard	22
Universal joint shaft	
<i>coupling</i>	47
<i>installing</i>	44
<i>Ratchet clutch maintenance</i>	73
<i>Universal joint shaft maintenance</i>	73
Using the centre line eradicator	54
Using the machine	
<i>Checking the set working depth</i>	58

W

Warning symbols	24
<i>Description of the warning symbols</i>	25
<i>Layout</i>	25
<i>Positions of the warning symbols</i>	24
Working depth	37
Working speed	36



AMAZONE

AMAZONEN-WERKE

H. DREYER SE & Co. KG

Postfach 51

49202 Hasbergen-Gaste

Germany

+49 (0) 5405 501-0

amazone@amazone.de

www.amazone.de