



**SCHMOTZER**

# Original operating manual

Sliding frame

VR 2



<b>SCHMOTZER</b>  SCHMOTZER Hacktechnik GmbH & Co. KG D-91438 Bad Windsheim		<b>CE</b> <b>UK</b> <b>CA</b>	Baujahr / year of construction <input type="text"/> Maschinen-Nr. <input type="text"/> 
Produkt <input type="text"/>			
Modelljahr <input type="text"/>		zul. technisches Maschinengewicht kg <input type="text"/>	

Please enter the identification data of the implement. The identification data can be found on the rating plate.



# TABLE OF CONTENTS

<b>1</b>	<b>About this operating manual</b>	<b>1</b>	4.6.1	Information on the hydraulic oil filter	28
1.1	Copyright	1	4.7	Document holder	28
1.2	Diagrams	1			
1.2.1	Warnings and signal words	1	<b>5</b>	<b>Technical data</b>	<b>29</b>
1.2.2	Further instructions	2	5.1	Dimensions	29
1.2.3	Instructions	2	5.2	Permitted mounting categories	29
1.2.4	Lists	4	5.3	Performance characteristics of the tractor	29
1.2.5	Item numbers in figures	4	5.4	Noise development data	30
1.2.6	Direction information	4			
1.3	Other applicable documents	4	<b>6</b>	<b>Preparing the machine</b>	<b>31</b>
1.4	Digital operating manual	4	6.1	Calculating the required tractor characteristics	31
1.5	Your opinion is important	4	6.2	Coupling the implement	34
			6.2.1	Driving the tractor towards the implement	34
<b>2</b>	<b>Safety and responsibility</b>	<b>5</b>	6.2.2	Coupling the hydraulic hose lines	34
2.1	Basic safety instructions	5	6.2.3	Coupling the ISOBUS lines	36
2.1.1	Meaning of the operating manual	5	6.2.4	Coupling the 3-point mounting frame	38
2.1.2	Safe operating organisation	5	6.3	Removing the parking support	39
2.1.3	Knowing and preventing dangers	10	6.4	Coupling the hoeing machine	39
2.1.4	Safe operation and handling of the machine	13	6.5	Preparing the implement for operation	42
2.1.5	Safe maintenance and modification	15	6.5.1	Adjusting the support wheels	42
2.2	Safety routines	18	6.5.2	Adjusting the stabilisation disc	42
			6.5.3	Adjusting the working position sensors	43
<b>3</b>	<b>Intended use</b>	<b>20</b>	6.5.4	Shifting the camera bracket	44
			6.6	Preparing the machine for road travel	44
<b>4</b>	<b>Product description</b>	<b>21</b>			
4.1	Implement overview	21	<b>7</b>	<b>Using the machine</b>	<b>45</b>
4.2	Function of the implement	21	7.1	Using the implement	45
4.3	Special equipment	22	7.2	Turning on the headlands	45
4.4	Warning symbols	23			
4.4.1	Positions of the warning symbols	23	<b>8</b>	<b>Eliminating faults</b>	<b>47</b>
4.4.2	Layout of the warning symbols	23			
4.4.3	Description of the warning symbols	24			
4.5	Rating plate on the implement	27			
4.6	More information on the implement	28			

<b>9</b>	<b>Repairing the machine</b>	<b>49</b>
<b>9.1</b>	<b>Lubricating the implement</b>	<b>49</b>
9.1.1	Overview of lubrication points	50
<b>9.2</b>	<b>Maintaining the implement</b>	<b>51</b>
9.2.1	Maintenance schedule	51
9.2.2	Checking the hydraulic hose lines	51
9.2.3	Checking the lower link pins and top link pins	52
<b>9.3</b>	<b>Cleaning the implement</b>	<b>52</b>
<b>10</b>	<b>Parking the machine</b>	<b>53</b>
<b>10.1</b>	<b>Uncoupling the hoeing machine</b>	<b>53</b>
<b>10.2</b>	<b>Putting on the parking support</b>	<b>56</b>
<b>10.3</b>	<b>Uncoupling the implement</b>	<b>56</b>
10.3.1	Uncoupling the 3-point mounting frame	56
10.3.2	Driving the tractor away from the implement	56
10.3.3	Uncoupling the ISOBUS lines	57
10.3.4	Disconnecting the hydraulic hose lines	57
<b>11</b>	<b>Loading the implement</b>	<b>58</b>
<b>11.1</b>	<b>Loading the implement with a crane</b>	<b>58</b>
<b>12</b>	<b>Disposing of the implement</b>	<b>59</b>
<b>13</b>	<b>Directories</b>	<b>60</b>
<b>13.1</b>	<b>Glossary</b>	<b>60</b>
<b>13.2</b>	<b>Index</b>	<b>61</b>

# About this operating manual

1

CMS-T-00000081-I.1

## 1.1 Copyright

CMS-T-00012308-A.1

Reprinting, translation and reproduction in any form, including excerpts, require the written approval of AMAZONEN-WERKE.

## 1.2 Diagrams

CMS-T-005676-F.1

### 1.2.1 Warnings and signal words

CMS-T-00002415-A.1

Warnings are marked with a vertical bar with a triangular safety symbol and the signal word. The signal words *"DANGER"*, *"WARNING"* or *"CAUTION"* describe the severity of the potential danger and have the following meanings:



#### **DANGER**

- Indicates a direct threat with high risk for severe physical injury, such as loss of limbs or death.



#### **WARNING**

- Indicates a possible threat with moderate risk for severe physical injury or death.



#### **CAUTION**

- Indicates a threat with low risk for light or moderately severe physical injuries.

### 1.2.2 Further instructions

CMS-T-00002416-A.1



#### IMPORTANT

- Indicates a risk for damage to the implement.



#### ENVIRONMENTAL INFORMATION

- Indicates a risk for environmental damage.



#### NOTE

Indicates application tips and instructions for optimal use.

### 1.2.3 Instructions

CMS-T-00000473-D.1

#### 1.2.3.1 Numbered instructions

CMS-T-005217-B.1

Actions that have to be performed in a specific sequence are represented as numbered instructions. The specified sequence of the actions must be observed.

Example:

1. Instruction 1
2. Instruction 2

#### 1.2.3.2 Instructions and responses

CMS-T-005678-B.1

Reactions to instructions are marked with an arrow.

Example:

1. Instruction 1
- ➡ Reaction to instruction 1
2. Instruction 2

### 1.2.3.3 Alternative instructions

CMS-T-00000110-B.1

Alternative instructions are introduced with the word "or".

Example:

1. Instruction 1

or

Alternative instruction

2. Instruction 2

### 1.2.3.4 Instructions with only one action

CMS-T-005211-C.1

Instructions with only one action are not numbered, but rather shown with a arrow.

Example:

► Instruction

### 1.2.3.5 Instructions without sequence

CMS-T-005214-C.1

Instructions that do not require a specific sequence are shown as a list with arrows.

Example:

► Instruction

► Instruction

► Instruction

### 1.2.3.6 Workshop work

CMS-T-00013932-B.1



#### WORKSHOP WORK

- Identifies maintenance work that must be performed at a workshop that is adequately equipped in terms of agricultural technology, safety and environmental technology by specialist personnel with appropriate training.

## 1.2.4 Lists

CMS-T-000024-A.1

Lists without an essential order are shown as a list with bullets.

Example:

- Point 1
- Point 2

## 1.2.5 Item numbers in figures

CMS-T-000023-B.1

A framed number in the text, e.g. a 1, indicates an item number in an adjacent figure.

## 1.2.6 Direction information

CMS-T-00012309-A.1

Unless otherwise specified, all directions are always seen in the direction of travel.

## 1.3 Other applicable documents

CMS-T-00000616-B.1

A list of other applicable documents can be found in the Appendix.

## 1.4 Digital operating manual

CMS-T-00002024-B.1

The digital operating manual and e-learning can be downloaded from the Info Portal on the AMAZONE website.

## 1.5 Your opinion is important

CMS-T-000059-D.1

Dear reader, our documents are updated on a regular basis. Your suggestions for improvement help us to create ever more user-friendly documents. Please send us your suggestions by post, fax or email.

AMAZONEN-WERKE H. Dreyer SE & Co. KG  
Technische Redaktion  
Postfach 51  
D-49202 Hasbergen  
  
Fax: +49 (0) 5405 501-234  
E-Mail: [tr.feedback@amazone.de](mailto:tr.feedback@amazone.de)

CMS-I-00000638



# Safety and responsibility

# 2

CMS-T-00006596-G.1

## 2.1 Basic safety instructions

CMS-T-00006597-G.1

### 2.1.1 Meaning of the operating manual

CMS-T-00006180-A.1

#### Observe the operating manual

The operating manual is an important document and a part of the implement. It is intended for the user and contains safety-related information. Only the instructions provided in the operating manual are reliable. If the operating manual is not observed, it can result in serious injury or death.

- ▶ The safety section must be completely read and observed before initial operation of the implement.
- ▶ Before starting work, also read and observe each section of the operating manual.
- ▶ Keep the operating manual in a safe place.
- ▶ Keep the operating manual available.
- ▶ Hand over the operating manual to the subsequent user.

### 2.1.2 Safe operating organisation

CMS-T-00002302-D.1

#### 2.1.2.1 Personnel qualification

CMS-T-00002306-B.1

##### 2.1.2.1.1 Requirements for persons working with the implement

CMS-T-00002310-B.1

**If the implement is used improperly, people can be injured or killed: To prevent accidents due to improper use, every person who works with**

**the implement must meet the following minimum requirements:**

- The person is physically and mentally capable of checking the implement.
- The person can safely perform work with the machine within the scope of this operating manual.
- The person understands the functioning of the machine within the scope of their work and can recognise and prevent dangers arising during operation.
- The person had understood the operating manual and can implement the information that is conveyed in the operating manual.
- The person must be familiar with safe driving of vehicles.
- For road travel, the person knows the relevant road traffic regulations and has the prescribed driving permit.

#### 2.1.2.1.2 Qualification levels

CMS-T-00002311-A.1

**For working with the machine, the following qualification levels are provided:**

- Farmer
- Agricultural helper

As a matter of principle, the activities described in this operating manual can be performed by persons with the qualification level "Agricultural helper".

#### 2.1.2.1.3 Farmer

CMS-T-00002312-A.1

Farmers use agricultural implement to cultivate fields. They decide on the use of an implement for a specific purpose.

Farmers are basically familiar with working with agricultural implements and can instruct agricultural helpers in how to use the implements if necessary. They can perform odd tasks and simple maintenance and repair work on agricultural implements themselves.

**Farmers can be e.g.:**

- Farmers with higher education or training from a technical college
- Farmers by experience (e.g. inherited farm, comprehensive practical knowledge)
- Contractors who work by order of farmers

**Activity example:**

- Safety training for agricultural helpers

**2.1.2.1.4 Agricultural helpers**

CMS-T-00002313-A.1

Agricultural helpers use agricultural implements by order of the farmer. They are instructed on the use of the implement by the farmer, and work independently according to the work assignment from the farmer.

**Agricultural helpers can be e.g.:**

- Seasonal workers and labourers
- Prospective farmers in training
- Employees of the farmer (e.g. tractor driver)
- Family members of the farmer

**Activity examples:**

- Driving the machine
- Adjusting the working depth

**2.1.2.2 Workplaces and passengers**

CMS-T-00002307-B.1

**Passengers**

Passengers can fall, be run over and severely injured or killed due to machine movements. Ejected objects can hit and injure passengers.

- ▶ Do not let anybody ride on the machine.
- ▶ Do not let anybody climb onto the driving machine.

### **2.1.2.3 Danger for children**

CMS-T-00002308-A.1

#### **Danger for children**

Children cannot assess dangerous situations and can behave unpredictably. As a result, children are at a higher risk.

- ▶ Keep children away.
- ▶ *When you drive out or actuate machine movements,*  
make sure that there are no children in the danger area.

### **2.1.2.4 Operational safety**

CMS-T-00002309-D.1

#### **2.1.2.4.1 Perfect technical condition**

CMS-T-00002314-D.1

#### **Only use properly prepared machines**

Without correct preparation according to this operating manual, operational safety of the machine is not ensured. This can result in accidents and serious personal injury or even death.

- ▶ Prepare the machine according to this operating manual.

#### **Danger due to damage to the machine**

Damage to the machine can impede the operational safety of the machine and cause accidents. This can result in serious injury or death.

- ▶ *If you suspect or observe damage:*  
Secure the tractor and machine.
- ▶ Repair safety-relevant damage immediately.
- ▶ Fix the damage according to this operating manual.
- ▶ *If you are not able to fix the damage according to this operating manual yourself:*  
Have the damage repaired by a qualified specialist workshop.

#### **Observe the technical limit values**

Non-observance of the technical limits values of the machine can result in accidents and serious personal injury or even death. Moreover, the machine can be damaged. The technical limit values can be found in the Technical Data.

- ▶ Comply with the technical limit values.

#### 2.1.2.4.2 Personal protective equipment

CMS-T-00002316-B.1

##### Personal protective equipment

Wearing personal protective equipment is an important safety element. Missing or unsuitable personal protective equipment increases the risk of damage to health and personal injury. Personal protective equipment includes: work gloves, safety shoes, protective clothing, breathing protection, hearing protection, face protection, and eye protection

- ▶ Determine the personal protective equipment required for each job and have it ready.
- ▶ Use only protective equipment that is in proper condition and offers effective protection.
- ▶ Adjust the personal protective equipment to the person, e.g. the size.
- ▶ Observe the manufacturer's instructions regarding operating materials, seed, fertiliser, crop protection products, and cleaning agents.

##### Wear suitable clothing

Loosely worn clothing increases the risk of getting caught or entangled on rotating parts and getting stuck on protruding parts. This can result in serious injury or death.

- ▶ Wear close-fitting, snag-free clothes.
- ▶ Never wear rings, necklaces and other jewellery.
- ▶ *If you have long hair,*  
wear a hairnet.

#### 2.1.2.4.3 Warning symbols

CMS-T-00002317-B.1

##### Keep warning symbols legible

Warning symbols on the machine warn you of risks in danger areas and are an important element of the machine's safety equipment. Missing warning symbols increase the risk of serious and lethal personal injury.

- ▶ Clean dirty warning symbols.
- ▶ Immediately replace any damaged and illegible warning symbols.
- ▶ Put the intended warning symbols on spare parts.

### 2.1.3 Knowing and preventing dangers

CMS-T-00006598-C.1

#### 2.1.3.1 Safety hazards on the implement

CMS-T-00002318-F.1

##### Liquids under pressure

Escaping high pressure hydraulic fluid can penetrate into the body through the skin and cause serious personal injuries. A hole the size of a needle can already result in serious personal injuries.

- ▶ *Before you uncouple the hydraulic hose lines or check for damage,*  
depressurise the hydraulic system.
- ▶ *If you suspect damage on a pressure system,*  
have the pressure system checked by a qualified specialist workshop.
- ▶ Never look for leaks with your bare hands.
- ▶ Keep your body and face away from leaks.
- ▶ *If liquids penetrate the body,*  
consult a doctor immediately.

##### Risk of injury on the universal joint shaft

Persons can be caught, pulled in and severely injured by the universal joint shaft and driven components. If the universal joint shaft is overloaded, the implement can be damaged, parts can be ejected at high speed, and persons can be injured.

- ▶ Maintain sufficient coverage of the profile tube, universal joint shaft guard and PTO shaft protective cap.
- ▶ Maintain the direction of rotation and the permissible speed of the universal joint shaft.
- ▶ *If the universal joint shaft is angled down too strongly:*  
Switch off the universal joint shaft drive.
- ▶ *If you do not need the universal joint shaft:*  
Switch off the universal joint shaft drive.

### **Risk of injury on the PTO shaft**

Persons can be caught, pulled in and severely injured by the PTO shaft and driven components. If the PTO shaft is overloaded, the implement can be damaged, parts can be ejected at high speed, and persons can be injured.

- ▶ Maintain sufficient coverage of the profile tube, universal joint shaft guard and PTO shaft protective cap.
- ▶ Allow the locks on the PTO shaft to engage.
- ▶ *To secure the universal joint shaft guard against rotating:*  
Hook on the safety chains.
- ▶ *To secure the coupled hydraulic pump against rotating:*  
Put on the torque support.
- ▶ Maintain the direction of rotation and the permissible speed of the PTO shaft.
- ▶ *To prevent implement damage due to torque peaks:*  
Slowly couple the PTO shaft at low tractor engine speed.

### **Danger due to machine parts still running**

When the drives are switched off, machine parts can continue running and cause serious personal injury or death.

- ▶ Before approaching the machine, wait until any machine parts that are still running have come to a stop.
- ▶ Only touch machine parts that are standing still.

### 2.1.3.2 Danger areas

CMS-T-00006599-B.1

#### Dangers areas on the implement

The following basic dangers are encountered in the danger areas:

The implement and its work tools move during operation.


Hydraulically raised implement parts can descend unnoticed and slowly.

The tractor and implement can roll away unintentionally.

Materials or foreign objects can be ejected out of or away from the implement.

If the danger area is not observed, it can result in serious personal injury or death.

- ▶ Keep people out of the danger area of the implement.
- ▶ *If people enter the danger area, immediately switch off the engines and drives.*
- ▶ *Before you work in the danger area of the implement, secure the tractor and implement. This also applies for quick checking work.*

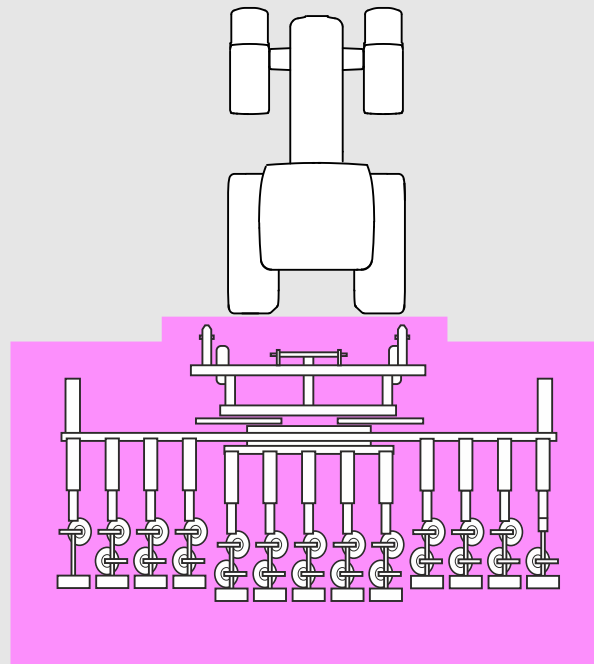

CMS-I-00004700

#### Risk of falling between the hoeing elements

- ▶ *When you are moving between the hoeing elements to adjust the implement, be very careful.*



## 2.1.4 Safe operation and handling of the machine

CMS-T-00002304-I.1

### 2.1.4.1 Coupling implements

CMS-T-00002320-D.1

#### Coupling the implement on the tractor

Incorrectly coupling of the implement to the tractor results in hazards that can cause serious accidents.

There are crushing and shear points in the area of the coupling points between the tractor and the implement.

- ▶ *If you couple or uncouple the implement to or from the tractor, be very careful.*
- ▶ Use only suitable tractors for coupling and transporting the implement.
- ▶ *When the implement is coupled onto the tractor, make sure that the tractor's connecting device meets the implement requirements.*
- ▶ Couple the implement properly to the tractor.

### 2.1.4.2 Driving safety

CMS-T-00002321-E.1

#### Risk when driving on roads and fields

Any mounted or towed implement as well as front or rear ballast weights on the tractor influence the driving behaviour and the steering and braking power of the tractor. The driving characteristics also depend on the operating condition, the fill level of the load, and on the ground. If the driver does not take account of changing driving characteristics, he can cause accidents.

- ▶ Always ensure that the tractor's steering and braking systems are operating correctly.
- ▶ *The tractor must provide the required brake lag for the tractor and mounted implement.*  
Check the function of the brakes before moving off.
- ▶ *The tractor front axle must always be loaded with at least 20 % of the empty tractor weight to ensure sufficient steering power.*  
Use front ballast weights if necessary.
- ▶ Always attach the front or rear ballast weights properly on the specified fixing points.
- ▶ Calculate and observe the permitted payload for the mounted or towed implement.
- ▶ Observe the permissible axle loads and drawbar loads of the tractor.
- ▶ Observe the permissible drawbar load of the hitch device and drawbar.
- ▶ Drive in such a way that you always have full control over the tractor with the mounted or towed implement. In so doing, take your personal abilities into account, as well as the road, traffic, visibility and weather conditions, the driving characteristics of the tractor, and the influence of the mounted implement.

**When driving on roads, risk of accident caused by uncontrolled lateral motions of the implement**

- ▶ Lock the tractor lower links for road travel.

**Preparing the machine for road travel**

If the machine is not properly prepared for road travel, it can result in serious traffic accidents.

- ▶ Check the lighting and identification for road travel for proper function.
- ▶ Remove coarse dirt from the implement.
- ▶ Follow the instructions in the section "Preparing the implement for road travel".

**Parking the implement**

The parked machine can tip over. People can be crushed and killed.

- ▶ Only park the machine on stable and even ground.
- ▶ *Before you perform setting or maintenance work,*  
make sure that the implement is in a stable position. In case of doubt, support the implement.
- ▶ Follow the instructions in the section "*Parking the implement*".

**Unsupervised parking**

Parked tractors with coupled implements that are insufficiently secured and unsupervised represent danger for people and playing children.

- ▶ *Before you leave the machine,*  
shutdown the tractor and the implement.
- ▶ Secure the tractor and machine.

## 2.1.5 Safe maintenance and modification

CMS-T-00006617-D.1

### 2.1.5.1 Changes on the implement

CMS-T-00006619-B.1

#### Only authorised design changes

Design changes and extensions can impede the functioning and operational safety of the implement. This can result in serious injury or death.

- ▶ Have any design changes and extensions performed only by a qualified specialist workshop.
- ▶ *To ensure that the operating permit remains valid in accordance with national and international regulations:*  
Ensure that the specialist workshop only uses conversion parts, spare parts and special equipment approved by SCHMOTZER.

### 2.1.5.2 Work on the machine

CMS-T-00002323-H.1

#### Only work on the machine when it is at a standstill

If the machine is not standing still, part can move unintentionally or the machine can be set in motion. This can result in serious injury or death.

- ▶ *If you have to work on or under raised loads:*  
Lower the loads or secure the loads with a hydraulic or mechanical locking device.
- ▶ Switch off all drives.
- ▶ Actuate the parking brake.
- ▶ Particularly on slopes, additionally secure the machine against rolling away with wheel chocks.
- ▶ Remove the ignition key and carry it with you.
- ▶ Wait until all parts that are still running come to a stop and that hot parts cool down.

### **Maintenance work**

Improper maintenance work, particularly on safety-related components, endangers operational safety. This can result in accidents and serious personal injury or even death. Safety-related components include, for example, hydraulic components, electronic components, frames, springs, trailer coupling, axles and axle suspensions, lines and tanks containing flammable substances.

- ▶ *Before you adjust, maintain or clean the machine,*  
secure the machine.
- ▶ Repair the machine according to this operating manual.
- ▶ Only perform the work that is described in this operating manual.
- ▶ Have maintenance work that is labelled as "*WORKSHOP WORK*" performed at a workshop that is adequately equipped in terms of agricultural technology, safety and environmental technology by specialist personnel with appropriate training.
- ▶ Never perform welding, drilling, sawing, grinding, and cutting work on the frame, running gear or coupling devices of the implement.
- ▶ Never modify safety-related components.
- ▶ Never drill out existing holes.
- ▶ Perform all maintenance work at the prescribed maintenance intervals.

### **Raised implement parts**

Raised implement parts can descend unintentionally and crush or kill people.

- ▶ Never linger under raised implement parts.
- ▶ *If you have to work on or under raised machine parts,*  
lower the implement parts or secure the raised implement parts with a mechanical support or hydraulic locking device.

### **Danger due to welding work**

Improper welding work, particularly on or close to safety-related components, endangers the operational safety of the implement. This can result in accidents and serious personal injury or even death. Safety-related components include, for example, hydraulic components and electronic components, frames, springs, coupling devices to the tractor such as the 3-point mounting frame, drawbar, trailer support, trailer coupling or tensioned crosspiece as well as axles and axle suspensions, lines and tanks containing flammable substances.

- ▶ Allow only qualified specialist workshops with suitably approved personnel to perform welding work on safety-related components.
- ▶ Only allow qualified personnel to perform welding work on all other components.
- ▶ *If you have doubts as to whether a component can be welded:*  
Ask a qualified specialist workshop.
- ▶ *Before welding on the implement:*  
Uncouple the implement from the tractor.
- ▶ Do not weld close to a crop protection sprayer that was previously used to spread liquid fertiliser.

### **2.1.5.3 Operating materials**

CMS-T-00006618-B.1

#### **Unsuitable operating materials**

Operating materials that do not meet SCHMOTZER requirements can cause implement damage and accidents.

- ▶ Only use operating material that meet the requirements in the Technical Data.

### **2.1.5.4 Special equipment and spare parts**

CMS-T-00006620-B.1

#### **Special equipment, accessories, and spare parts**

Special equipment, accessories, and spare parts that do not meet SCHMOTZER requirements can impede the operational safety of the implement and cause accidents.

- ▶ Only use original parts or parts that meet SCHMOTZER requirements.
- ▶ *If you have any questions regarding special equipment, accessories or spare parts:*  
Contact your dealer or SCHMOTZER.

## 2.2 Safety routines

CMS-T-00002300-C.1

### Securing the tractor and implement

If the tractor and implement are not secured against unintentional starting and rolling away, the tractor and implement can be set in motion in an uncontrolled manner, and can run over, crush and kill people.

- ▶ Lower the raised implement or raised implement parts.
- ▶ Relieve pressure in the hydraulic hose lines by actuating the operating devices.
- ▶ *If you have to stand under the raised implement or components,* secure the raised implement and components against lowering with a mechanical safety support or hydraulic locking device.
- ▶ Switch off the tractor.
- ▶ Apply the tractor's parking brake.
- ▶ Remove the ignition key.

### Securing the machine

After uncoupling, the implement has to be secured. If the implement and implement parts are not secured, there is a risk of personal injury due to crushing and cutting.

- ▶ Only park the implement on stable and level ground.
- ▶ *Before you depressurise the hydraulic hose lines and disconnect them from the tractor,* move the implement into working position.
- ▶ Protect people against direct contact with sharp-edged or protruding implement parts.

### Make sure that the protective equipment is functional

If protective equipment is missing, damaged or removed, implement parts can cause serious personal injury or even death.

- ▶ Check the implement at least once a day for damage, proper installation, and functioning of the protective equipment.
- ▶ *If you are not sure if the protective equipment is properly installed and functional,* have the protective equipment checked by a qualified specialist workshop.
- ▶ Make sure that the protective devices are properly installed and functional before any work on the implement.
- ▶ Replace damaged protective equipment.

### Climbing on and off

Negligent behaviour while climbing on and off can cause people to fall off the ladder. People who climb onto the machine without using the intended access steps can slip, fall, and suffer severe injury.

- ▶ Use only the intended access steps
- ▶ *Dirt as well operating materials can impede walking safety and stability.*  
Always keep steps and platforms clean and in proper condition, so that safe stepping and standing is ensured.
- ▶ Never climb onto the machine when it is in motion.
- ▶ Climb up and down facing the machine.
- ▶ When climbing up and down, maintain 3-point contact with the access steps and handrails: always keep two hands and one foot or two feet and one hand on the machine.
- ▶ When climbing up and down, never hold onto the control elements. Accidental actuation of control elements can unintentionally activate potentially dangerous functions.
- ▶ When climbing down, never jump off of the machine.

## Intended use

# 3

CMS-T-00006351-B.1

- The implement is intended solely for professional use for soil tillage on agricultural crop lands according to Good Agricultural Practices.
- The implement is an agricultural implement to be mounted on the 3-point power lift of a tractor that meets the technical requirements.
- Implements for mechanical weed control can be attached to the implement. The implement pushes the towed implement transverse to the direction of travel to guide the towed implement in the plant rows of the crop.
- For driving on public roads, the implement, depending on the provisions of the applicable road traffic regulations, can be mounted and transported at the rear of a tractor that meets the technical requirements.
- The implement may be used and maintained only by persons who meet the requirements. The personnel requirements are described in the section "*Personnel qualification*".
- The operating manual is part of the implement. The implement is solely intended for use in compliance with this operating manual. Uses of the implement that are not described in this operating manual can lead to serious personal injuries or even death and to implement and material damage.
- The applicable accident prevention regulations as well as generally accepted safety-related, occupational health and road traffic regulations must also be observed by the users and the owner.
- Further instructions for intended use in special cases can be requested from Schmotzer.
- Uses other than those specified under the intended use are considered as improper. The manufacturer is not liable for any damage resulting from improper use, solely the operator is responsible.




## Product description

# 4

CMS-T-00014791-A.1

### 4.1 Implement overview

CMS-T-00014797-A.1

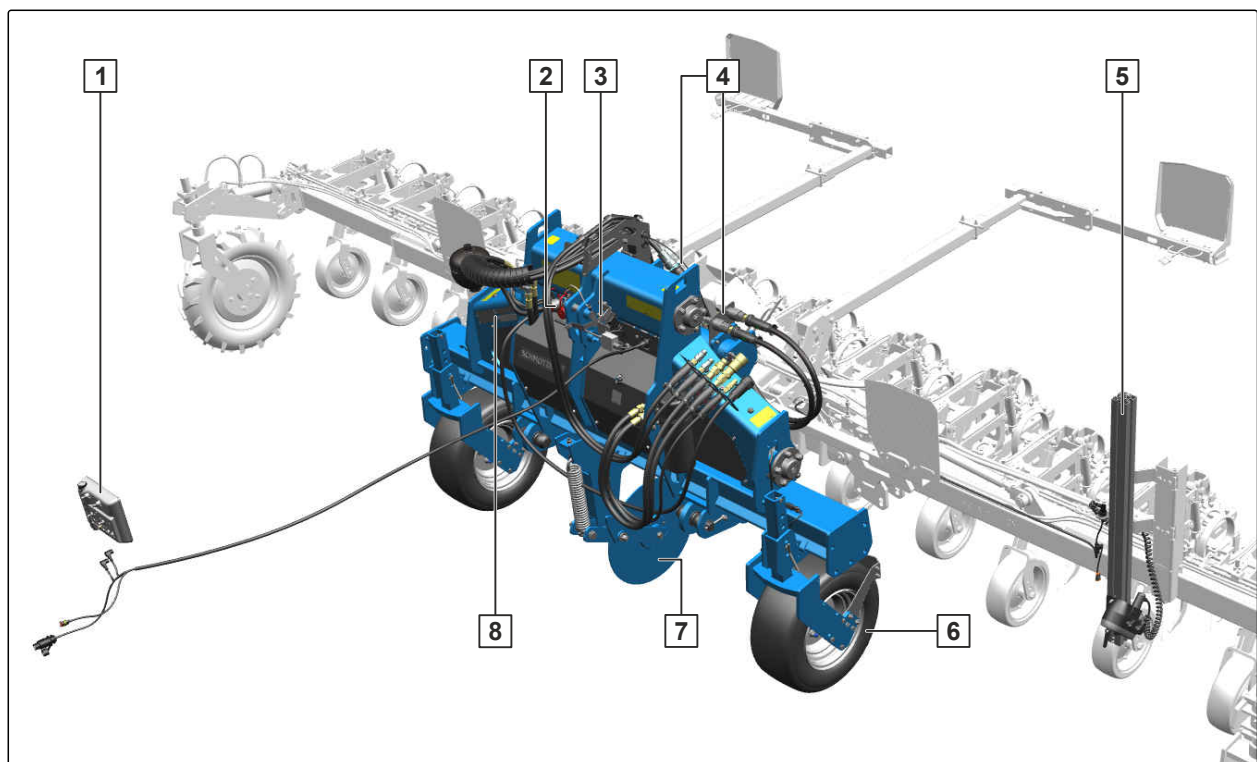

CMS-I-00009625

- |   |   |
|---|---|
| <b>1</b> Control terminal for the camera system | <b>2</b> Couplings for the hydraulic hose lines of the front tank |
| <b>3</b> Working position sensors               | <b>4</b> Couplings for the supply lines of the hoeing machine     |
| <b>5</b> Camera adjustment rail with camera     | <b>6</b> Support wheel  |
| <b>7</b> Stabilisation disc                     | <b>8</b> Rating plate on the implement                            |

### 4.2 Function of the implement

CMS-T-00014792-A.1

The implement pushes the towed hoeing machine transverse to the direction of travel, to guide the

towed hoeing machine between the plant rows of the crop.

The stabilisation disc prevents the transfer of forces onto the tractor and keeps the implement in the track.

The camera system controls the implement automatically.

### 4.3 Special equipment

CMS-T-00014793-A.1

Special equipment is equipment that is not fitted on the implement or is only available in certain markets. The sales documents provide information on the equipment of your implement, or consult your dealer for more detailed information.

**The following equipment is considered special equipment:**


- Preparation for Section Control
- Stabilisation disc
- Extension set for the support wheels
- Wheel scraper

## 4.4 Warning symbols

CMS-T-00014794-A.1

### 4.4.1 Positions of the warning symbols

CMS-T-00014795-A.1

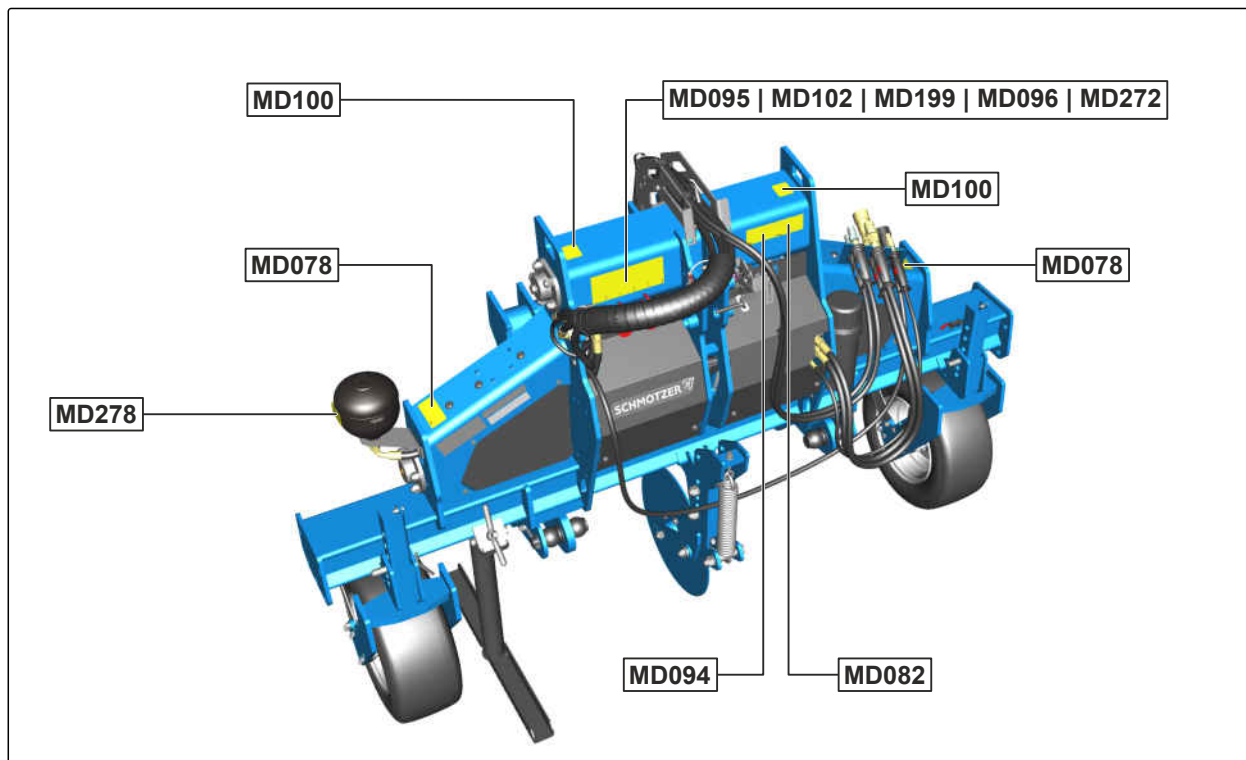

CMS-I-00009551


### 4.4.2 Layout of the warning symbols

CMS-T-000141-D.1

Warning symbols indicate danger areas on the machine and warn against residual dangers. In these danger areas, there are permanent or unexpected dangers.

A warning symbol consists of two fields:

- Field **1** shows the following:
  - A pictogram depicting the danger area, surrounded by triangular safety symbol
  - The order number
- Field **2** shows a pictogram depicting how to avoid the danger.

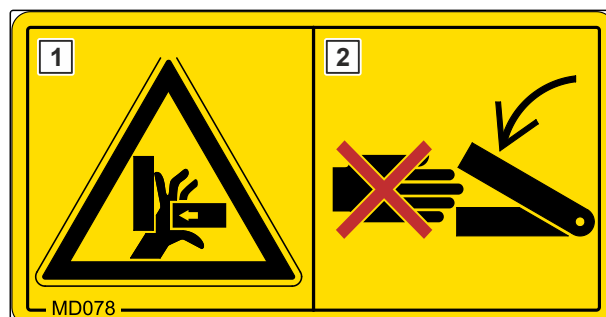

CMS-I-00000416


#### 4.4.3 Description of the warning symbols

CMS-T-00014796-A.1

##### MD 078

###### Risk of crushing fingers or hands

- ▶ *As long as the tractor engine or implement motor is running,*  
stay away from the danger area.
- ▶ *If you have to move marked parts with your hands,*  
pay attention to the crushing areas.
- ▶ Make sure that there is nobody standing in the danger area.

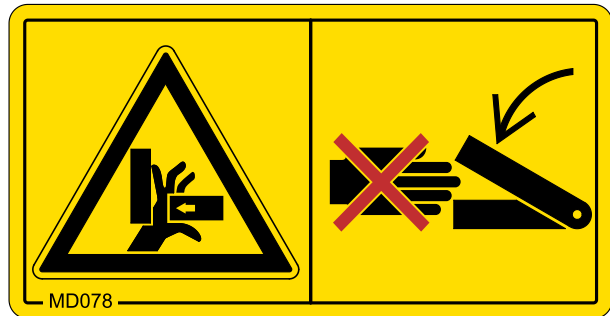


CMS-I-000074

##### MD 082

###### Risk of falling from tread surfaces and platforms

- ▶ Do not let anybody ride on the implement.
- ▶ Do not let anybody climb onto the driving implement.

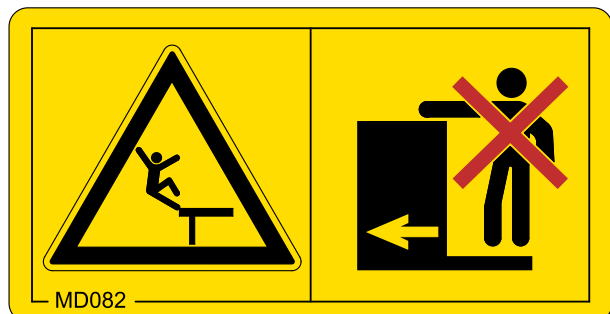


CMS-I-000081

##### MD094

###### Danger due to transmission lines

- ▶ Never touch transmission lines with the implement.
- ▶ Maintain an adequately safe distance from electrical transmission lines, especially when folding or unfolding implement parts.
- ▶ Please note that the voltage can flash over when the distance is too small.

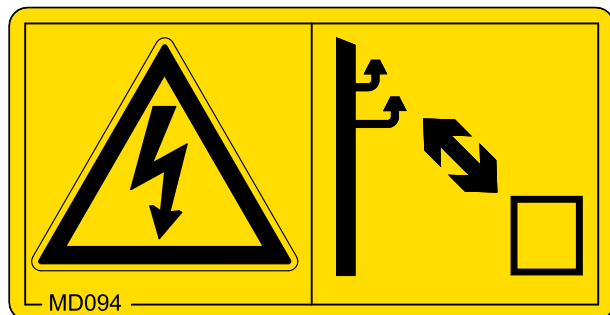

CMS-I-000692

#### MD095

##### **Risk of accident due to non-compliance with the instructions in this operating manual**

- ▶ Before your work on or with the implement, read and understand the operating manual.



CMS-I-000138

#### MD 096

##### **Risk of infection from escaping hydraulic fluid under high pressure**

- ▶ Never look for leaks in hydraulic hose lines using your hand or fingers.
- ▶ Never attempt to plug leaks in hydraulic hose lines using your hand or fingers.
- ▶ *If you are injured by hydraulic oil, consult a doctor immediately.*




CMS-I-000216

#### MD 100

##### **Risk of accidents due to improperly attached lifting gear**

- ▶ Only attach the lifting gear at the marked positions.

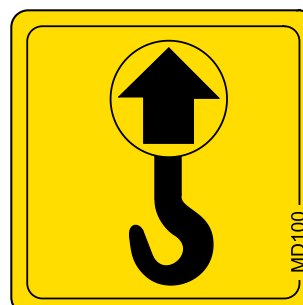


CMS-I-000089

### MD 102

#### Risk due to unintentional starting and rolling away of the machine

- Before performing any work, secure the implement against unintentional starting and rolling away.

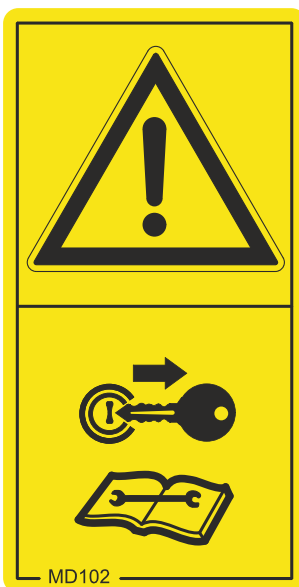


CMS-I-00002253

### MD 199

#### Risk of accident if the hydraulic system pressure is too high

- Only couple the implement to tractors with a maximum tractor hydraulic pressure of 210 bar.

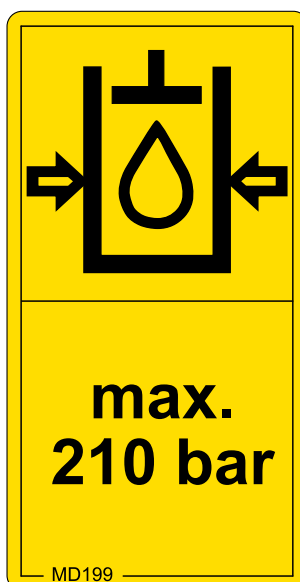

CMS-I-00000486

## MD272

### Risk of crushing between the tractor and the implement

- Before you actuate the tractor hydraulic system, instruct persons away from the area between the tractor and the implement.
- Actuate the tractor hydraulic system only from the designated work station.



CMS-I-00005276

## MD 278

### Severe injuries due to incorrect handling of the hydraulic accumulator when it is under pressure

- Have the pressurised hydraulic accumulator checked and repaired only by a qualified specialist workshop.



CMS-I-00007679

## 4.5 Rating plate on the implement

CMS-T-00006401-C.1

- 1 Year of manufacture
- 2 Implement number
- 3 Product
- 4 Model year
- 5 Permissible technical implement weight



CMS-I-00004554


## 4.6 More information on the implement

CMS-T-00012795-A.1

### 4.6.1 Information on the hydraulic oil filter

CMS-T-00012796-A.1

The figure shows the hydraulic oil filter.

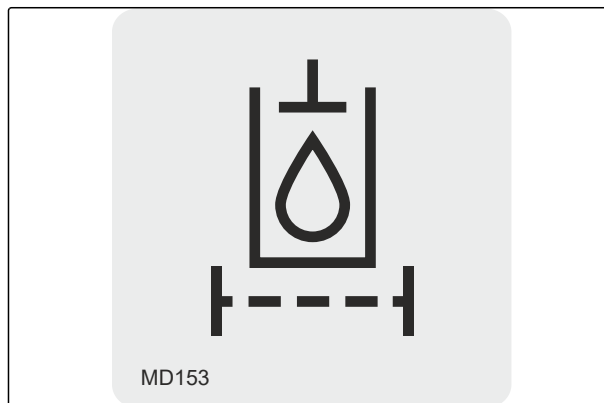


CMS-I-00003489

## 4.7 Document holder

CMS-T-00014822-A.1

The document holder contains the following items:

- Documents
- Aids

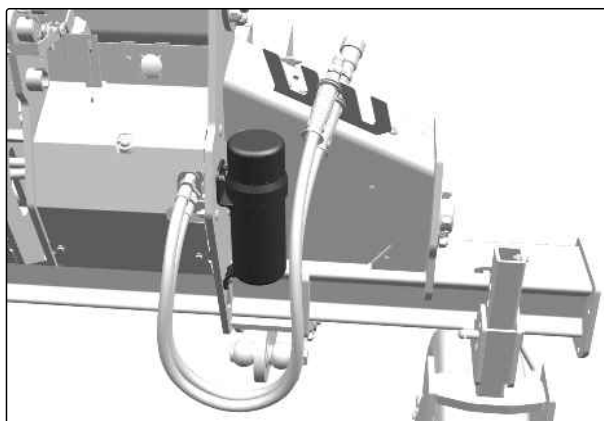

CMS-I-00009552



## Technical data

5

CMS-T-00014801-A.1

### 5.1 Dimensions

CMS-T-00014802-A.1

Width	2.42 m
Width with support wheel extension set	3.3 m
Length	70 cm
Height	1.64 m
Centre of gravity distance	15.5 cm

### 5.2 Permitted mounting categories

CMS-T-00005403-A.1

3-point mounting frame	Category 3 and Category 3N
------------------------	----------------------------

### 5.3 Performance characteristics of the tractor

CMS-T-00006403-B.1

Engine rating
59–118 kW/80–160 hp

Hydraulic system	
Maximum operating pressure	210 bar
Tractor pump output for camera system	at least 15 l/min at 150 bar
Tractor pump output for Section Control	at least 40 l/min at 150 bar
Tractor pump output for front tank FT-P	at least 30 l/min at 150 bar
Implement hydraulic oil	<p>HLP 68 DIN 51524-2</p> <p>The hydraulic fluid is suitable for the combined hydraulic fluid circuits of all standard tractor brands.</p>

## **5.4 Noise development data**

CMS-T-00006025-A.1

The workplace-related emission sound pressure level is lower than 70 dB(A), measured in operating condition at the ear of the tractor driver with the cab closed.

The emission sound pressure level mainly depends on the vehicle used.


# Preparing the machine

## 6

CMS-T-00014807-A.1

### 6.1 Calculating the required tractor characteristics

CMS-T-00000063-F.1

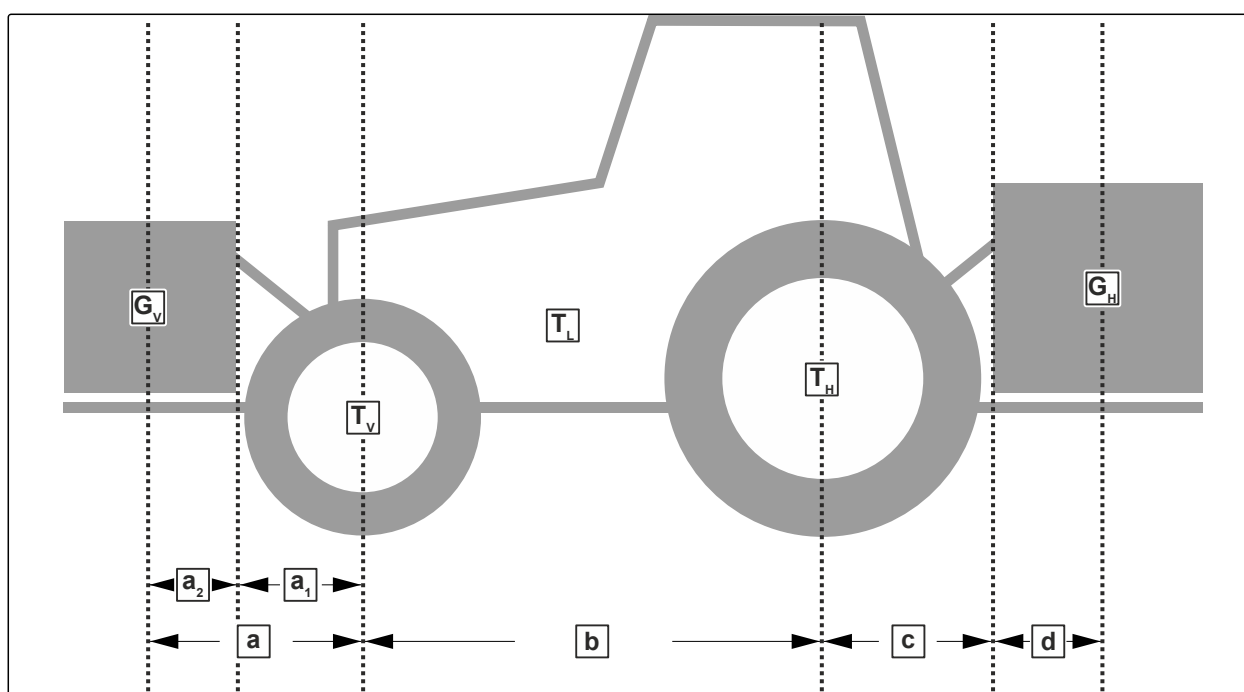

CMS-I-00000581

Designation	Unit	Description	Calculated values
$T_L$	kg	Tractor empty weight	
$T_V$	kg	Front axle load of the operational tractor without mounted implement or ballast weights	
$T_H$	kg	Rear axle load of the operational tractor without mounted implement or ballast weights	
$G_V$	kg	Total weight of front-mounted implement or front ballast	
$G_H$	kg	Permissible total weight of rear-mounted implement or rear ballast	
$a$	m	Distance between the centre of gravity of the front-mounted implement or the front ballast and the centre of the front axle	

## 6 | Preparing the machine

### Calculating the required tractor characteristics

Designation	Unit	Description	Calculated values
$a_1$	m	Distance between the centre of the front axle and the centre of the lower link connection	
$a_2$	m	Centre of gravity distance: Distance between the centre of gravity of the front-mounted implement or the front ballast and the centre of the lower link connection	
$b$	m	Wheelbase	
$c$	m	Distance between the centre of the rear axle and the centre of the lower link connection	
$d$	m	Centre of gravity distance: Distance between the centre of the lower link coupling point and centre of gravity of the rear-mounted implement or rear ballast.	

1. Calculate the minimum front ballasting.

$$G_{Vmin} = \frac{G_H \cdot (c + d) - T_V \cdot b + 0,2 \cdot T_L \cdot b}{a + b}$$

$$G_{Vmin} = \underline{\hspace{2cm}}$$

$$G_{Vmin} = \underline{\hspace{2cm}}$$

CMS-I-00000513

2. Calculate the actual front axle load.

$$T_{Vtat} = \frac{G_V \cdot (a + b) + T_V \cdot b - G_H \cdot (c + d)}{b}$$

$$T_{Vtat} = \underline{\hspace{2cm}}$$

$$T_{Vtat} = \underline{\hspace{2cm}}$$

CMS-I-00000516

3. Calculate the actual total weight of the tractor-implement combination.

$$G_{tat} = G_V + T_L + G_H$$

$$G_{tat} =$$

$$G_{tat} =$$

CMS-I-00000515

4. Calculate the actual rear axle load.

$$T_{Htat} = G_{tat} - T_{Vtat}$$

$$T_{Htat} =$$

$$T_{Htat} =$$

CMS-I-00000514

5. Determine the tyre load capacity for two tractor tyres in the manufacturer specifications.
6. Write down the determined values in the following table.



### IMPORTANT

**Danger of accident due to implement damage caused by excessive loads**

- Make sure that the calculated loads are smaller or equal to the permissible loads.

	Actual value according to calculation			Permitted value according to tractor operating manual			Tyre load capacity for two tractor tyres	
Minimum front ballasting		kg	≤		kg		-	-
Total weight		kg	≤		kg		-	-
Front axle load		kg	≤		kg	≤		kg
Rear axle load		kg	≤		kg	≤		kg

## 6.2 Coupling the implement


CMS-T-00014809-A.1

### 6.2.1 Driving the tractor towards the implement

CMS-T-00005794-D.1

Enough space must remain between the tractor and implement so that the supply lines can be coupled without obstructions.

- Drive the tractor towards the implement, leaving a sufficient distance.

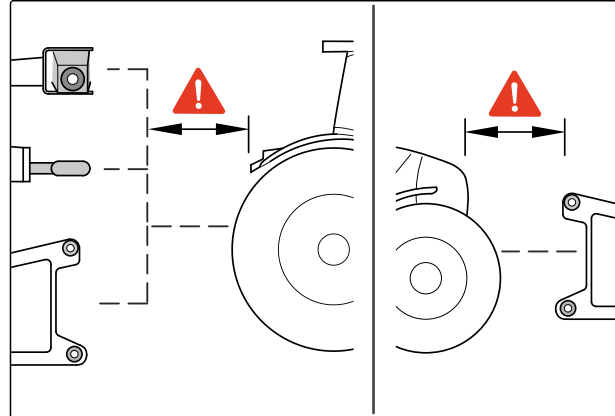


CMS-I-00004045

### 6.2.2 Coupling the hydraulic hose lines

CMS-T-00014810-A.1


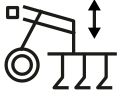




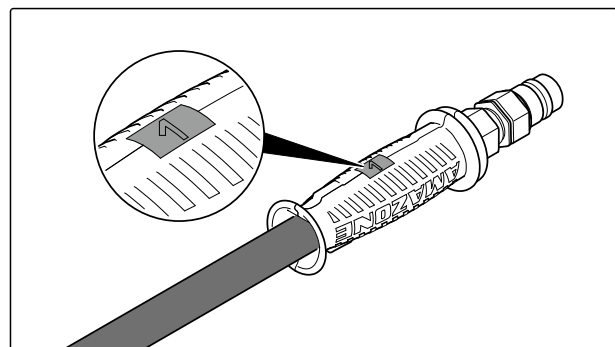






All hydraulic hoses are equipped with handles. The handles have colour labels with a code number or a code letter. The labels are assigned to the respective hydraulic functions of the pressure line of a tractor control unit. Stickers are applied on the implement for the labels, which illustrate the respective hydraulic functions.

The tractor control unit is used with different types of actuation, depending on the hydraulic function:



CMS-I-00000121

Type of actuation	Hydraulic function	Symbol
Latching	Permanent hydraulic oil circulation	
Momentary	Hydraulic oil flow until action is executed	
Floating	Free hydraulic oil flow in the tractor control unit	

Designation		Function			Tractor control unit	
Green			Parallelogram s of the hoeing machine	Lower  Lift	Double-acting	
						
Red		Drive for the front tank pump			Single-acting	
Red		Pressure-free return flow for the front tank pump				
Red		Permanent oil circulation			Single-acting	
Red		Load sensing pressure line			Single-acting	
Red		Pressure-free return flow				
Red		Load sensing control line				



## WARNING

### Risk of injury or even death

If the hydraulic hose lines are incorrectly connected, the hydraulic functions may be faulty.

- ▶ When coupling the hydraulic hose lines, observe the coloured markings on the hydraulic plugs.



## IMPORTANT


### Implement damage due to insufficient hydraulic oil return flow

- ▶ Only use lines of size DN16 or larger for the pressureless hydraulic oil return flow.
- ▶ Select short return paths.
- ▶ Connect the pressureless hydraulic return flow to the intended coupling.
- ▶ *Depending on the implement equipment:* couple the leakage oil line in the intended coupling.
- ▶ Install the supplied coupling sleeve on the pressureless hydraulic oil return.

## 6 | Preparing the machine

### Coupling the implement

1. Depressurise the hydraulic system between the tractor and the implement using the tractor control unit.
  2. Clean the hydraulic plugs.
  3. Couple the hydraulic hose lines **1** to the hydraulic sockets of the tractor according to the label **2**.
- ➔ The hydraulic plugs lock perceptibly.
4. Route the hydraulic hose lines with sufficient freedom of movement and without chafing points.

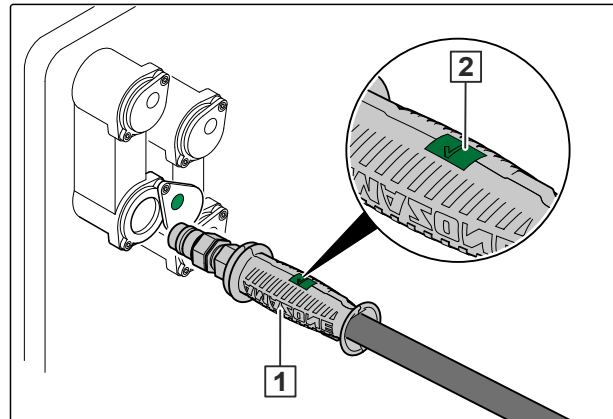

CMS-I-00001045

### 6.2.3 Coupling the ISOBUS lines


CMS-T-00008589-B.1

Coupling of the ISOBUS line or ISOBUS lines depends on two factors:

- Equipment of the hoeing machine to be coupled onto the sliding frame with mechanically or hydraulically lifting parallelograms
  - Equipment of the hoeing machine with band sprayer and front tank to be coupled to the sliding frame
1. *If the hoeing machine to be coupled onto the sliding frame is an implement with mechanically lifting parallelograms and without band sprayer and front tank:*  
Skip to the next section without further action; otherwise, continue with step 2.
  2. *If the hoeing machine to be coupled onto the sliding frame is an implement with hydraulically lifting parallelograms and without band sprayer and front tank:*  
perform steps 3 and 4, otherwise continue with step 5.




3. Insert the plug **1** for the ISOBUS line of the sliding frame into the tractor.
4. Route the ISOBUS line with sufficient freedom of movement and without chafing or pinching points.
5. *If the hoeing machine to be coupled onto the sliding frame is an implement with mechanically lifting parallelograms and with band sprayer and front tank:* perform steps 6 to 10, otherwise continue with step 11.

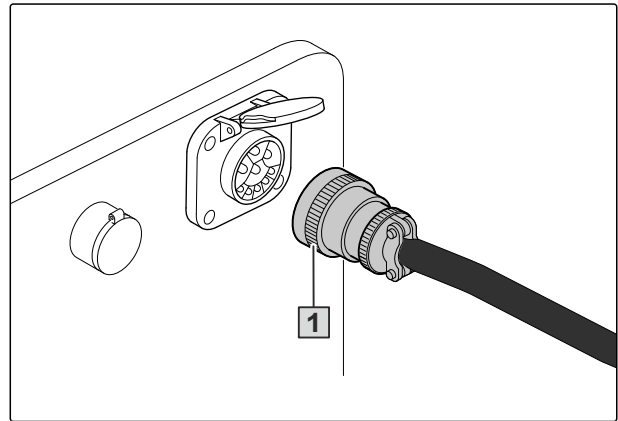

CMS-I-00004333

6. Attach the wiring harness magnetic holder **1** with the magnets onto the 3-point mounting frame of the implement.
7. Guide the ISOBUS line of the band sprayer from the uncoupled hoeing machine through the sliding frame to the magnetic holder.
8. Insert the plug **2** for the ISOBUS line of the band sprayer into the left upper socket **3** of the wiring harness magnetic holder.
9. Insert the plug **4** for the combined ISOBUS line **5** into the tractor.
10. Route the ISOBUS lines with sufficient freedom of movement and without chafing or pinching points.
11. *If the hoeing machine to be coupled onto the sliding frame is an implement with hydraulically lifting parallelograms and with band sprayer and front tank:* perform steps 12 to 16.

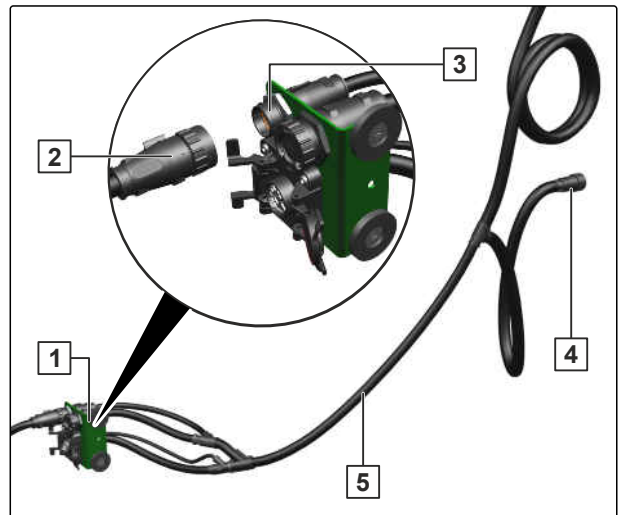


CMS-I-00005860

## 6 | Preparing the machine

### Coupling the implement


12. Attach the wiring harness magnetic holder **1** with the magnets onto the 3-point mounting frame of the implement.
13. Guide the ISOBUS line of the band sprayer from the uncoupled hoeing machine through the sliding frame to the magnetic holder.
14. Insert the plug **3** for the ISOBUS line of the band sprayer into the left upper socket **4** of the wiring harness magnetic holder.
15. Insert the plug **2** for the ISOBUS line of the sliding frame into the lower socket **5** of the wiring harness magnetic holder.
16. Insert the plug **6** for the combined ISOBUS line **7** into the tractor.
17. Route the ISOBUS lines with sufficient freedom of movement and without chafing or pinching points.

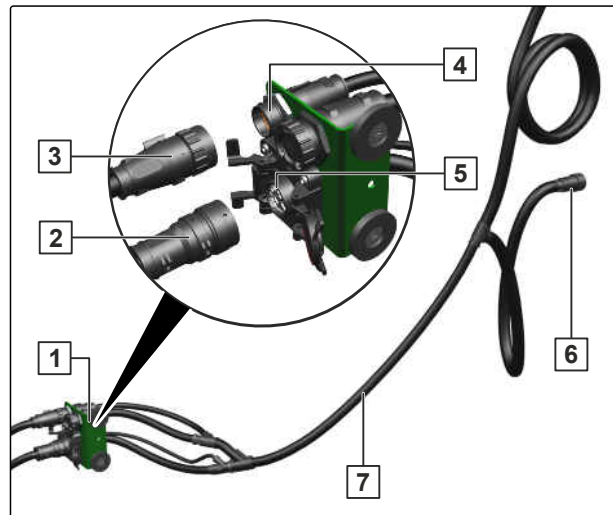

CMS-I-00005845

#### 6.2.4 Coupling the 3-point mounting frame

1. Set the tractor lower links **1** to the same height.
2. Couple the lower links **1** from the tractor seat.
3. Couple the top link **2**.
4. Check whether the top link catch hooks **3** and lower link catch hooks **4** are correctly locked.

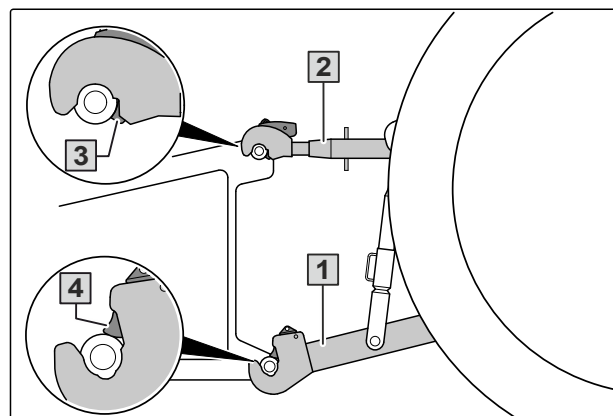


CMS-I-00001225

### 6.3 Removing the parking support

CMS-T-00014832-A.1

1. Lift the coupled implement with the 3-point power lift.
2. Loosen the clamping nut **2** and swivel the clamping plate **4** downwards on the eyebolt **3**.
3. Take the parking support **1** off of the support tube downwards and to the rear.
4. Lower the implement on the support wheels.

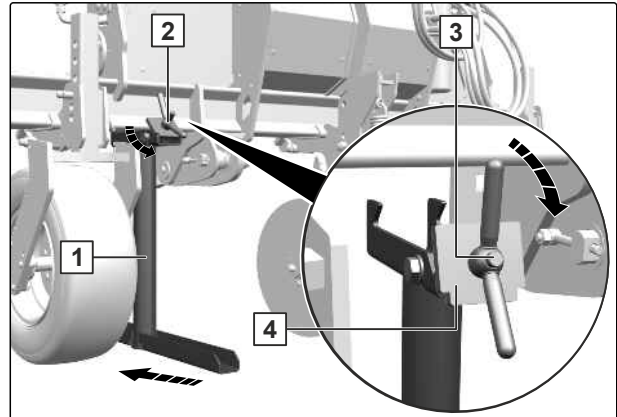


CMS-I-00009580

### 6.4 Coupling the hoeing machine

CMS-T-00014808-A.1


1. Open the locking mechanism **1** on the lower link catch hooks.

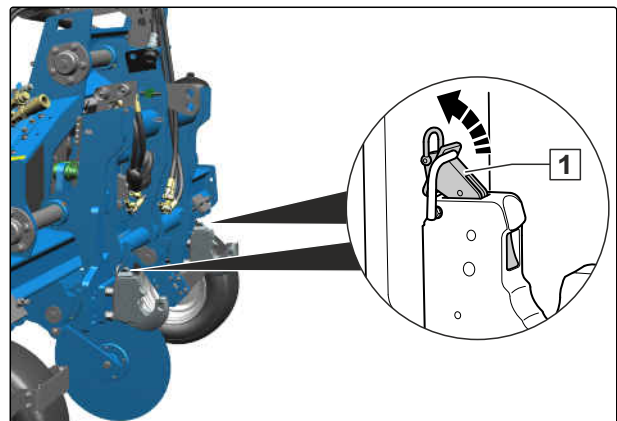

CMS-I-00009584

Enough space must remain between the implement and the hoeing machine so that the supply lines can be coupled without obstructions.

2. Drive the implement towards the hoeing machine, leaving a sufficient distance.

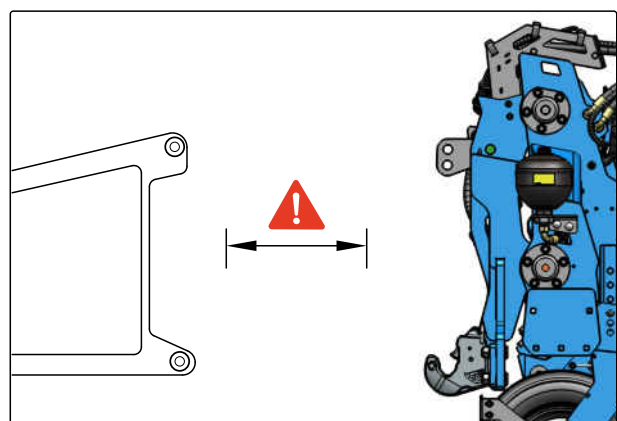


CMS-I-00009585


## 6 | Preparing the machine

### Coupling the hoeing machine

3. Route the hydraulic hose lines marked in blue **2** for unfolding and folding the sections of the Venterra or Select hoeing machine and for lowering and lifting the support wheels of the Venterra or Select hoeing machine through the hose grommet **1** over the sliding frame and fasten with the velcro straps.
4. *If the hoeing machine is a double folding Select hoeing machine:*  
In addition, guide the hydraulic hose lines marked in blue for unfolding and folding the section extensions of the hoeing machine through the hose routing over the sliding frame and fasten with the velcro straps.
5. Drive the implement towards the hoeing machine.
6. *To connect the lower link catch hooks to the lower link balls of the hoeing machine:*  
Lift the implement from the tractor seat.
7. Close the locking mechanisms for the lower link catch hooks.
8. Check whether the locking mechanisms of the lower link catch hooks are correctly locked.

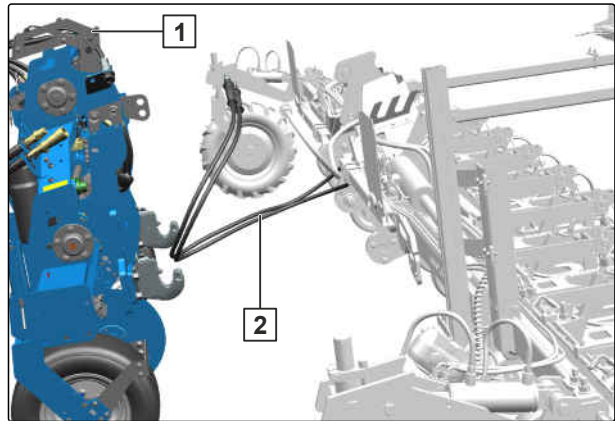

CMS-I-00009587

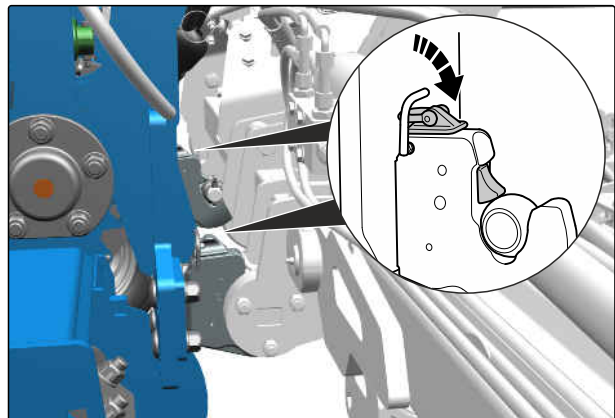


CMS-I-00009614

In the top link plate **1**, the top hole **2** is for coupling Venterra hoeing machines, and the bottom hole **3** is for coupling Select hoeing machines.

9. Move the machine up or down so that the suitable hole in the top link plate is aligned with the holes of the top link mount of the hoeing machine and the vertical braces of the sliding frame and the hoeing machine are aligned parallel to each other.

10. Couple the top link plate with the top link pin.

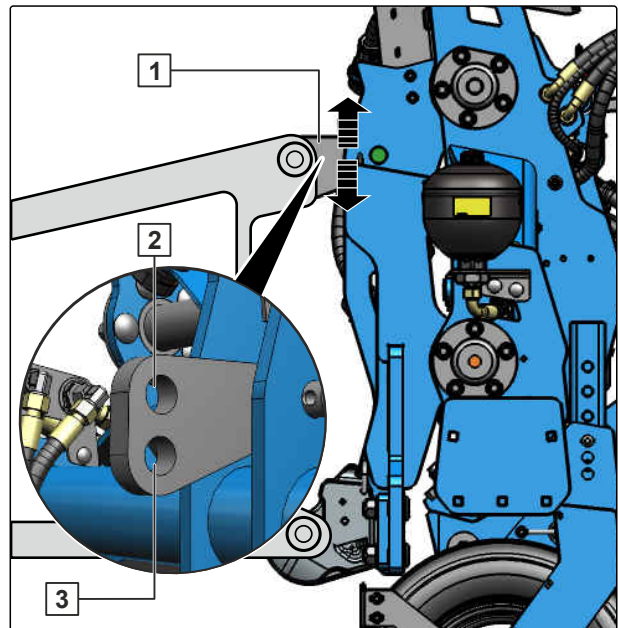


CMS-I-00009586

11. Couple the hydraulic hose lines of the hoeing machine marked in blue onto the tractor.

12. *If the hoeing machine is equipped with hydraulically lifting parallelograms and Section Control:*


Couple the wiring harness **1** for the Section Control electronics onto the ISOBUS plug and the hydraulic hose lines marked in green **2** for the parallelograms onto the couplings.

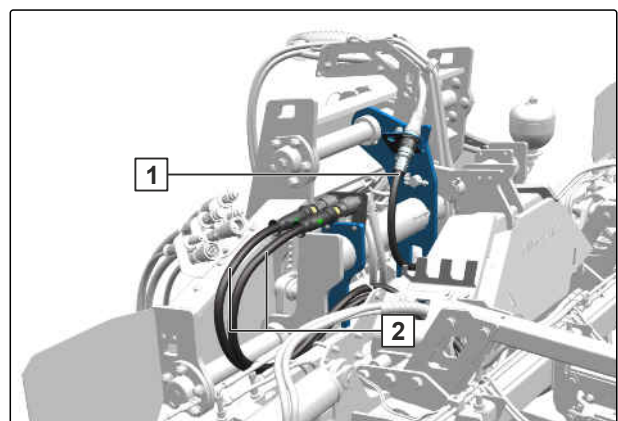

CMS-I-00009615

13. *If the hoeing machine is equipped with a front tank and band sprayer:*

Couple the hydraulic hose lines marked in red **1** for the pump of the front tank onto the couplings.

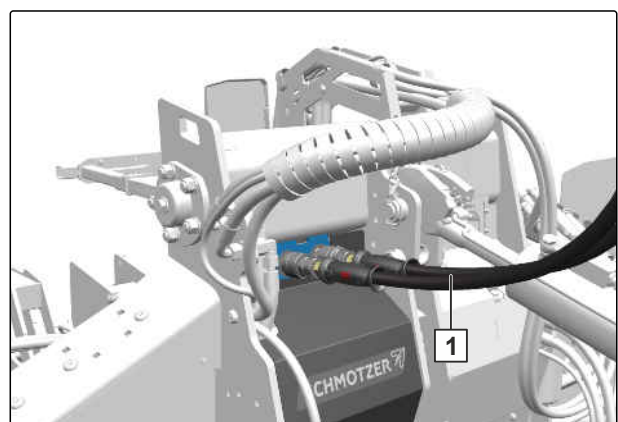

CMS-I-00009661

## 6.5 Preparing the implement for operation

CMS-T-00014811-A.1

### 6.5.1 Adjusting the support wheels


CMS-T-00006378-B.1



#### NOTE

The support wheels of the sliding frame run in the tractor track and therefore deeper than the support wheels of the hoeing machine. The support wheels of the sliding frame can only be correctly adjusted in the tractor track on the field.

Instructions for aligning the hoeing machine can be found in the hoeing machine operating manual.

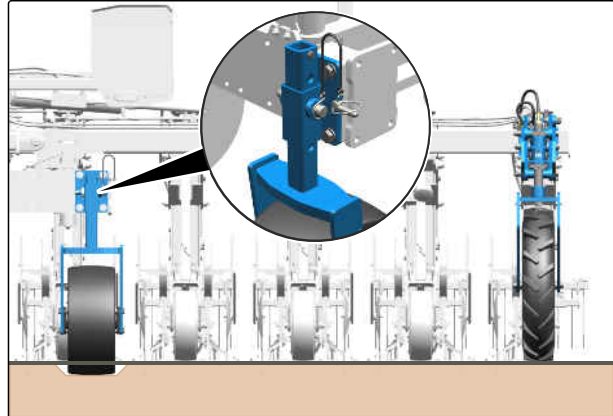

CMS-I-00004549

1. Align the coupled hoeing machine.
2. Using the respective hole pattern, lower the support wheels as far as possible onto the ground.
3. Lower the sliding frame using the tractor hydraulic system until the support wheels are standing on the ground.
4. Align the hoeing machine once more.

### 6.5.2 Adjusting the stabilisation disc

CMS-T-00014812-A.1

The stabilisation disc must penetrate into the soil as deep as possible. The tension of the spring can be adjusted using a screw so that the stabilisation disc has the correct penetration depth.

If the frame height changed to the point that the setting of the correct depth can no longer be achieved via the spring tension, the whole stabilisation disc together with the holder and spring must be moved up or down on the support tube bracket.





## IMPORTANT

### Risk of implement damage

- ▶ Do not allow the hubs of the stabilisation discs to sink into the soil.

1. *If the stabilisation disc does not penetrate enough into the soil:*  
Increase the spring tension by tightening the nut


**1**

or


*If the stabilisation disc penetrates too deep into the soil:*

Reduce the spring tension by loosening the nut.

2. *If the correct depth adjustment of the stabilisation disc can no longer be achieved with the spring tension:*  
Install the stabilisation discs along with the holder and spring **1** higher or lower on the support tube bracket **2**.

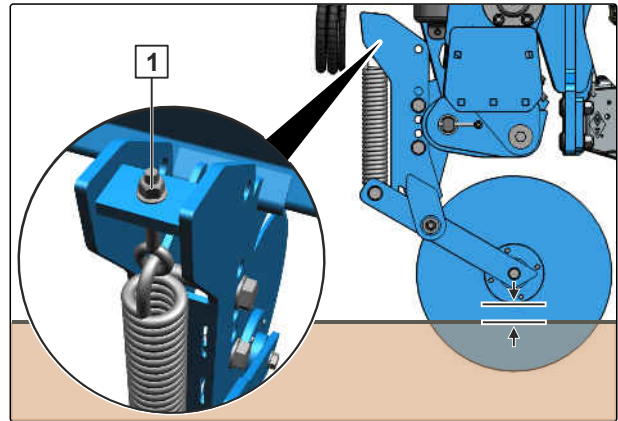

CMS-I-00009576

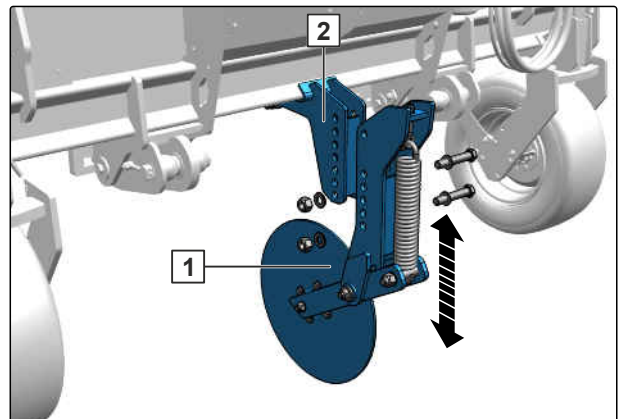

CMS-I-00009579

## 6.5.3 Adjusting the working position sensors

CMS-T-00014813-A.1

The working position sensor for the implement **2** is only included with certain equipment versions.


1. *If the top link pin needs to be shifted:*  
Reposition the working position sensors with the bolts **1** in the hole pattern **3**.

The settings for the working position sensors depend on the lifting height during field operation.

2. Lift the implement to the desired lifting height.

➔ The guide arm **6** is pressed down.

3. Slide the plastic sleeve **7** to a level area of the top link.

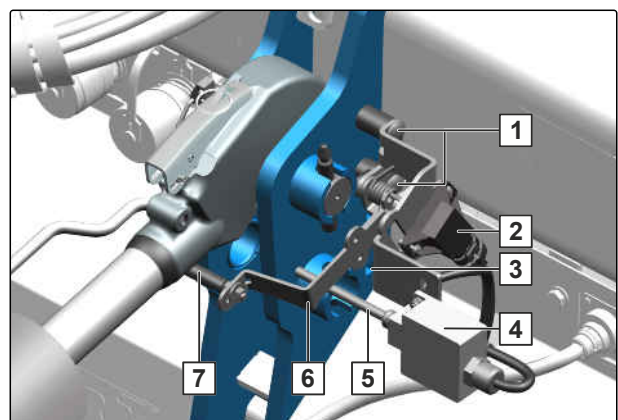

CMS-I-00009641

## 6 | Preparing the machine

### Preparing the machine for road travel

---

4. To press down the spring **5**:  
shift the working position sensor of the camera system **4**.
5. Check the function of the working position sensors via the control terminal.

#### 6.5.4 Shifting the camera bracket

CMS-T-00006608-C.1




#### NOTE

The camera bracket is installed on the hoeing machine.

Detailed instructions for setting the camera can be found in the camera system operating manual.

1. Loosen the nut **1**.
2. Shift the camera bracket **2**.
3. Tighten the nut.

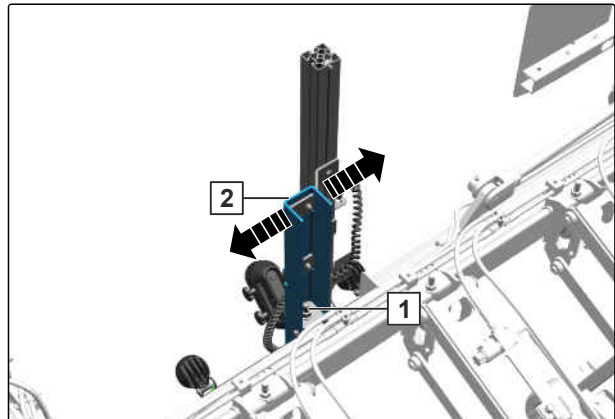

CMS-I-00004689

## 6.6 Preparing the machine for road travel

CMS-T-00014843-A.1

1. Align the hoeing machine centred behind the tractor using the camera terminal.
2. Lock the tractor control unit for the sliding hydraulic system.
3. Switch off the camera terminal.



# Using the machine

# 7

CMS-T-00014786-A.1

## 7.1 Using the implement

CMS-T-00014787-A.1



### REQUIREMENTS

- ☑ The camera system is configured and switched on; see camera system operating manual

1. Follow the section "Lowering the implement" in the instructions for the hoeing machine.
2. Align the implement horizontally to the ground.
3. Lower the implement on the support wheels.



### NOTE

For a reliable speed signal, the support wheels must have constant contact with the ground during operation.

4. Adjust the 3-point power lift such that the lower link pendulums of the implement are free in the middle swinging range.
5. Drive off with the tractor.

## 7.2 Turning on the headlands

CMS-T-00014788-A.1

1. Follow the section "Turning on the headlands" in the instructions for the hoeing machine.
  2. Lift the hoeing machine over the crops.
- ➔ The camera system automatically shifts the sliding frame in the centre position.
3. Turn around.

4. Drive into the row with the implement lifted.
  5. Manually align the hoeing machine on the rows using the camera terminal.
  6. Lower the implement.
  7. Drive.
- ➡ The camera system controls the sliding frame.
8. Check whether the camera system is working properly.

## Eliminating faults

# 8

CMS-T-00014805-A.1

Errors	Cause	Solution
The sliding frame is only shifted to one side.	The hydraulic hose lines for the sliding frame are inverted.	<ul style="list-style-type: none"> <li>▶ Exchange the connections for the hydraulic hose lines on the tractor.</li> <li>▶ Use the pressureless return flow.</li> </ul>
The sliding frame is shifted out of the track.	The tractor's lower link is not locked.	▶ Lock the tractor lower links laterally.
	The camera is not correctly positioned.	▶ Position the camera centred over the plant row.
	Information on the offset is incorrectly entered on the camera terminal.	<ul style="list-style-type: none"> <li>▶ Correct the information on the offset on the camera terminal.</li> <li>▶ <i>To prevent having offset:</i> shift the camera bracket on level ground, so that offset does not occur.</li> </ul>

Errors	Cause	Solution
The sliding frame is not shifted automatically.	The automatic function on the camera terminal is switched off.	► Switch on the automatic function on the camera terminal.
	The sliding frame is not standing on the ground.	► Lower the support wheels of the sliding frame onto the ground. ► Completely relieve the tractor's lower link.
	Working position is not detected.	► Check the working position on the camera terminal. ► Correctly install the working position sensor.
	Signal quality of the camera is insufficient.	► Properly adjust the tilt and height of the camera, see camera system operating manual. ► <i>If the weed population is too high or the crop too tall:</i> control the sliding frame manually. ► Clean the camera. ► <i>If it is too dark:</i> switch on the work lights for the camera. ► <i>If it is too bright:</i> Wait for better light conditions.
The tractor is strongly shifted on slopes.	The tractor is not balanced.	► Install front ballast weights.
	The tractor tyres are unsuitable.	► Use narrow tyres.
	A stabilisation disc is not installed.	► Install a stabilisation disc on the sliding frames.
	The stabilisation disc does not penetrate into the soil.	► Adjust the stabilisation disc, see page 42.

## Repairing the machine

9

CMS-T-00014798-A.1

### 9.1 Lubricating the implement

CMS-T-00014799-A.1



#### IMPORTANT

##### Implement damage due to improper lubrication


- ▶ Grease the implement at the marked lubrication points according to the lubrication schedule.
- ▶ *To ensure that dirt is not pressed into the lubrication points,* thoroughly clean the grease nipples and the grease gun.
- ▶ Only grease the implement with the lubricants listed in the technical data.
- ▶ Press the dirty grease completely out of the bearings.



CMS-I-00002270


### 9.1.1 Overview of lubrication points

CMS-T-00014800-A.1

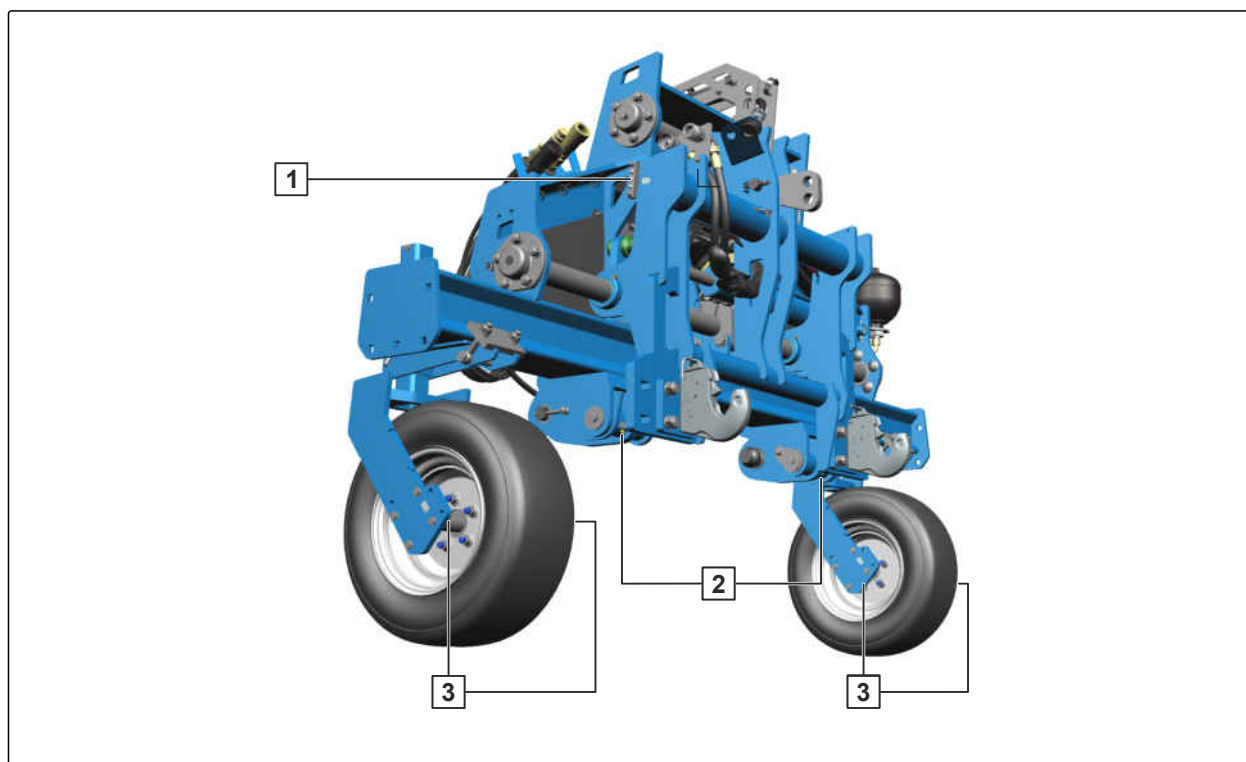


CMS-I-00009634


#### Every 20 operating hours

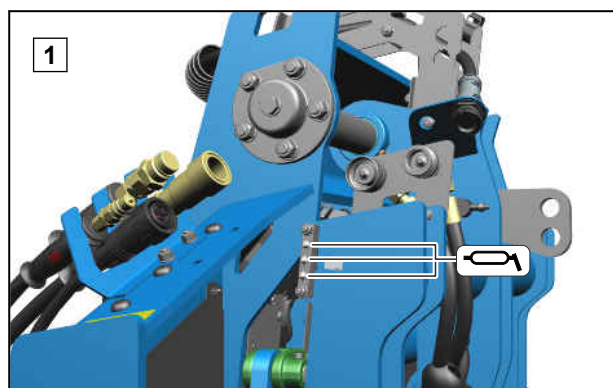


CMS-I-00009635

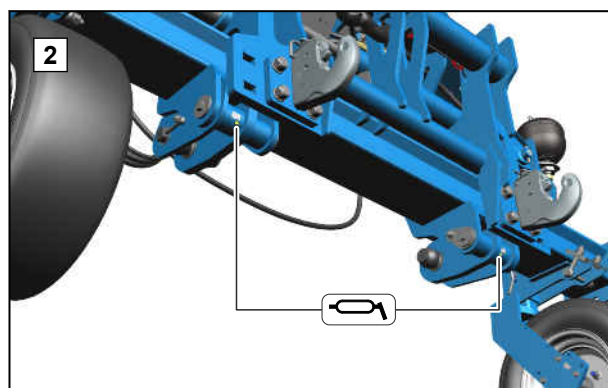

CMS-I-00009636

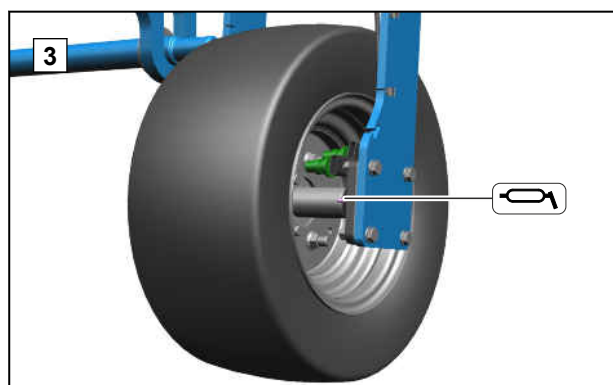

CMS-I-00004533

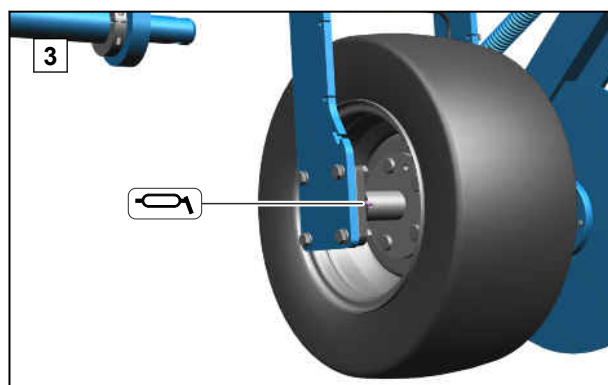

CMS-I-00005776

## 9.2 Maintaining the implement

CMS-T-00014874-A.1

### 9.2.1 Maintenance schedule

<b>After initial operation</b>	
Checking the hydraulic hose lines	see page 51
<b>Daily</b>	
Checking the lower link pins and top link pins	see page 52
<b>Every 50 operating hours / Weekly</b>	
Checking the hydraulic hose lines	see page 51

### 9.2.2 Checking the hydraulic hose lines

CMS-T-00002331-F.1




#### INTERVAL

- After initial operation
- Every 50 operating hours
- or
- Weekly

1. Check the hydraulic hose lines for damage, such as chafing point, cuts, tears and deformation.
2. Check the hydraulic hose lines for leaks.
3. Retighten loose bolted connections.

Hydraulic hose lines must not be more than 6 years old.

4. Check the manufacturing date **1**.

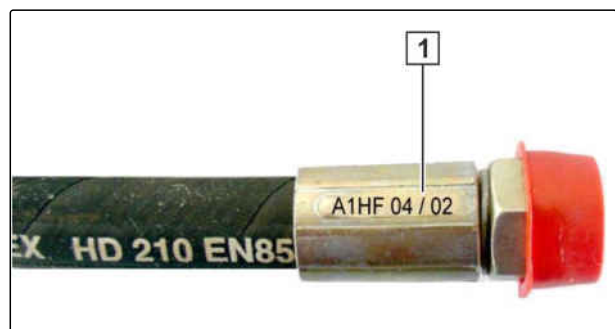

CMS-I-00000532



#### WORKSHOP WORK

5. Replace worn, damaged or aged hydraulic hose lines.

### 9.2.3 Checking the lower link pins and top link pins

CMS-T-00002330-J.1



#### INTERVAL

- Daily

#### Criteria for visual inspection of lower link pins and top link pins:

- Cracks
  - Fractures
  - Permanent deformations
  - Permissible wear: 2 mm
1. Check the lower link pins and top link pins for the listed criteria.
  2. Replace worn pins.

## 9.3 Cleaning the implement

CMS-T-00006591-B.1



### IMPORTANT

#### Risk of machine damage due to cleaning jet of the high-pressure nozzle

- ▶ Never direct the cleaning jet of the high-pressure cleaner or hot water high-pressure cleaner onto the marked components.
- ▶ Never aim the cleaning jet of high-pressure cleaners or hot water high-pressure cleaners on electrical or electronic components.
- ▶ Never aim the cleaning jet of the high pressure cleaner directly on lubrication points, bearings, rating plates, warning signs, and stickers.
- ▶ Always maintain a minimum distance of 30 cm between the high-pressure nozzle and the implement.
- ▶ Do not exceed a water pressure of 120 bar.



CMS-I-00002692

1. Only blow off the implement with compressed air.
2. Remove heavy soiling on the tools with a high-pressure cleaner or a hot water high-pressure cleaner.



## Parking the machine


# 10

CMS-T-00014803-A.1

### 10.1 Uncoupling the hoeing machine

CMS-T-00014804-A.1

1. Park the implement together with the coupled hoeing machine on a level surface with solid ground.
2. Uncouple the hydraulic hose lines of the hoeing machine marked in blue from the tractor.
3. *If the hoeing machine is equipped with a front tank and band sprayer:*  
Uncouple the hydraulic hose lines marked in red **1** for the pump of the front tank and hang them in the hose cabinet of the front tank.

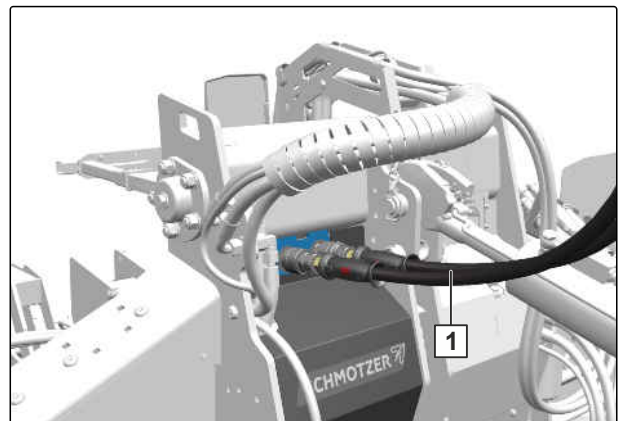


CMS-I-00009661

## 10 | Parking the machine


### Uncoupling the hoeing machine

4. Relieve the top link plate **1**.
5. Uncouple the top link plate from the hoeing machine.

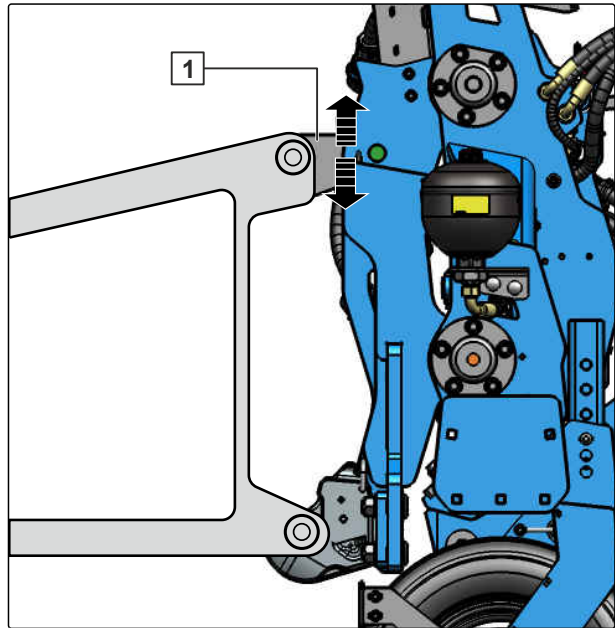

CMS-I-00009662


6. Relieve the tractor's lower link.
7. Open the locking mechanism **1** on the lower link catch hooks.
8. *To release the lower link catch hooks from the lower link balls of the hoeing machine:*  
Lower the implement from the tractor seat.

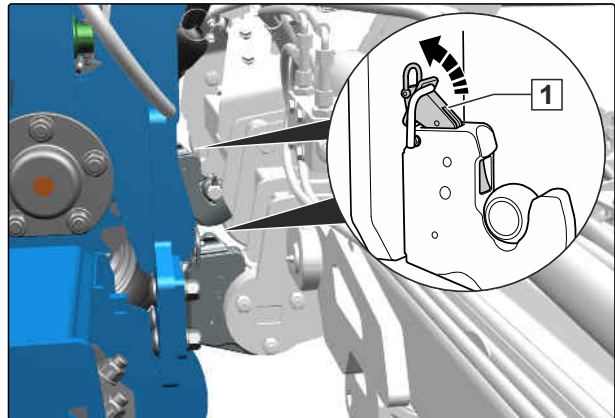

CMS-I-00009623

Enough space must remain between the implement and the hoeing machine so that the supply lines can be uncoupled without obstructions.


9. Drive the implement away from the hoeing machine, leaving a sufficient distance.

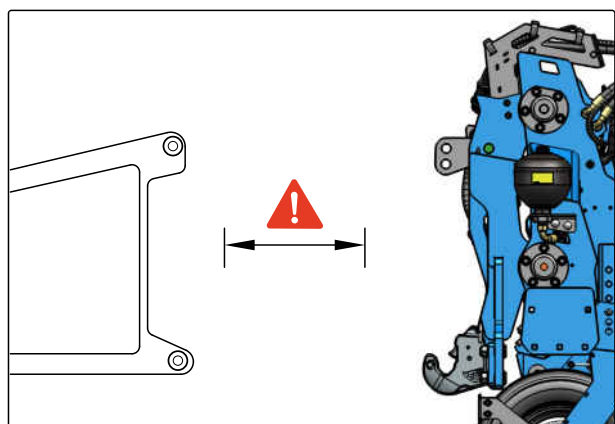

CMS-I-00009585


10. *If the hoeing machine is equipped with hydraulically lifting parallelograms and Section Control:*

Uncouple the wiring harness for the Section Control electronics **1** and the hydraulic hose lines marked in green for the parallelograms of the hoeing machine **2** and hang them in the hose cabinet of the hoeing machine.

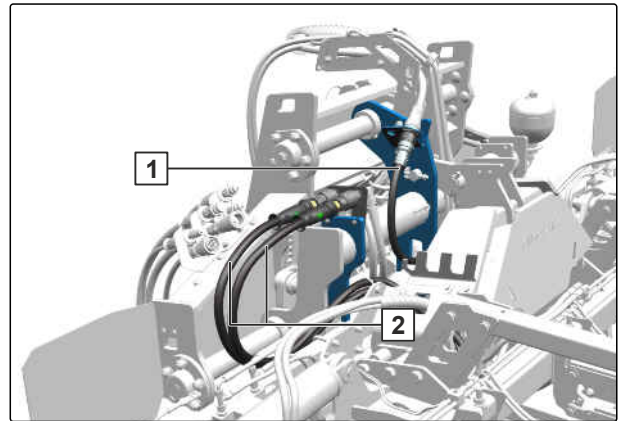

CMS-I-00009615

11. Remove the hydraulic hose lines marked in blue **2** for unfolding and folding the Ventera or Select hoeing machine and for lowering and lifting the support wheels of the Ventera or Select hoeing machine from the hose grommet **1** and hang them in the hose cabinet of the hoeing machine.

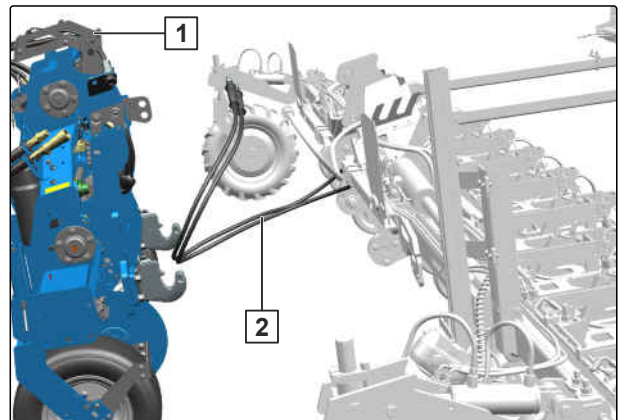


CMS-I-00009587

12. *If the hoeing machine is a double folding Select hoeing machine:*

Also remove the hydraulic hose lines marked in blue for unfolding and folding the section extensions of the hoeing machine from the hose grommet and hang them in the hose cabinet of the hoeing machine.

13. Close the locking mechanisms for the lower link catch hooks.

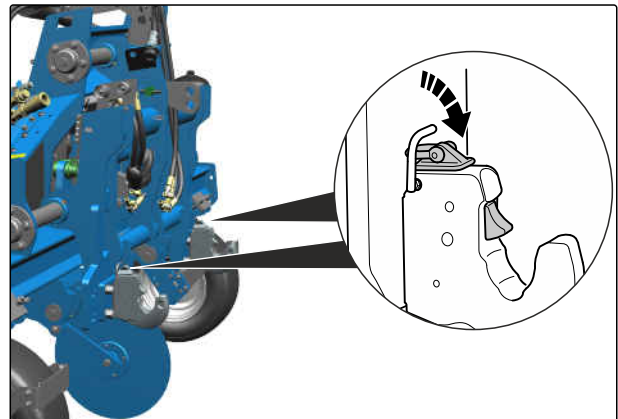


CMS-I-00009624

## 10.2 Putting on the parking support

CMS-T-00014851-A.1

1. Lift the coupled implement with the 3-point power lift.
2. Put the parking support **1** on the support tube from below and the rear.
3. Swivel the clamping plate **4** up on the eyebolt **2** and tighten the clamping nut **3**.
4. Lift or lower the support wheels using the hole patterns until the support wheels and the parking support are at the same level.

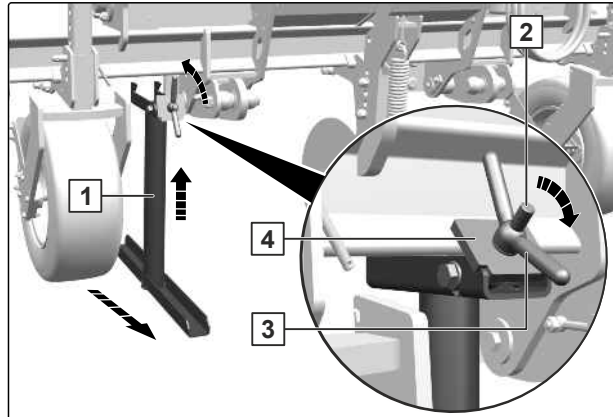

CMS-I-00009581


## 10.3 Uncoupling the implement

CMS-T-00006386-C.1

### 10.3.1 Uncoupling the 3-point mounting frame

CMS-T-00001401-C.1

1. Park the implement on a level surface with solid ground.
2. Release the top link **1**.
3. Uncouple the top link **1** from the implement.
4. Release the lower links **2**.
5. Uncouple the lower links **2** from the implement from the tractor seat.

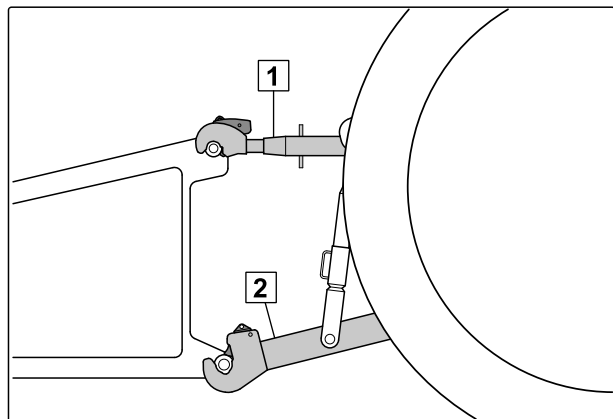


CMS-I-00001249

### 10.3.2 Driving the tractor away from the implement

CMS-T-00005795-D.1

There must be enough space between the tractor and implement so that the supply lines can be uncoupled without obstructions.

- Drive the tractor away from the implement, leaving a sufficient distance.

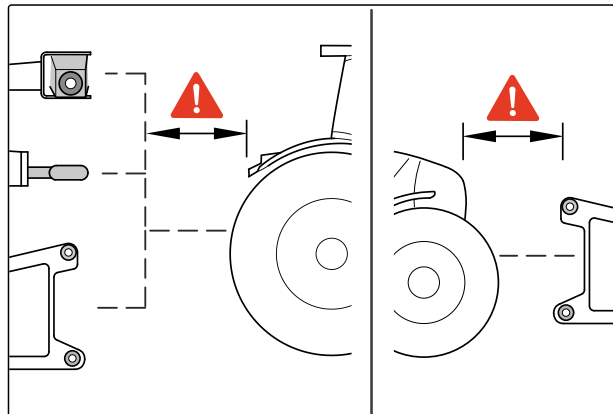

CMS-I-00004045

### 10.3.3 Uncoupling the ISOBUS lines


CMS-T-00008686-A.1

1. Disconnect all of the ISOBUS plugs that were connected when coupling the implement, see page 36, section "Coupling the ISOBUS lines".
2. Hang the plug for the ISOBUS line of the sliding frame in the hose cabinet on the implement.
3. Hang the plug for the ISOBUS line of the band sprayer in the hose cabinet on the hoeing machine.
4. Fasten the plug for the combined ISOBUS line on the tractor.
5. Remove the wiring harness magnetic holder of the combined ISOBUS line from the implement and hang it on the tractor.

### 10.3.4 Disconnecting the hydraulic hose lines


CMS-T-00000277-F.1

1. Secure the tractor and implement.
2. Put the control lever on the tractor control unit in float position.
3. Disconnect the hydraulic hose lines **1**.
4. Put the dust caps on the hydraulic sockets.

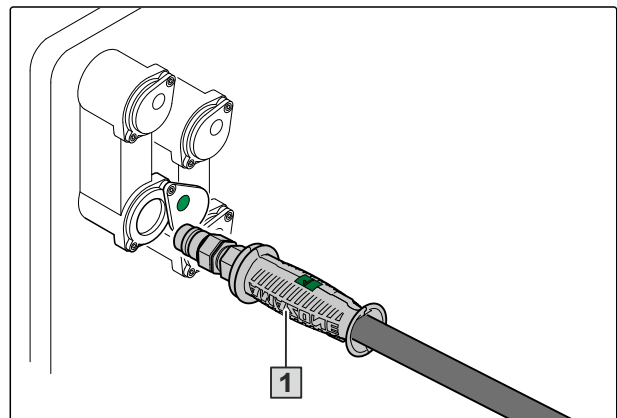

CMS-I-00001065

5. Hang the hydraulic hose lines **1** in the hose cabinet.

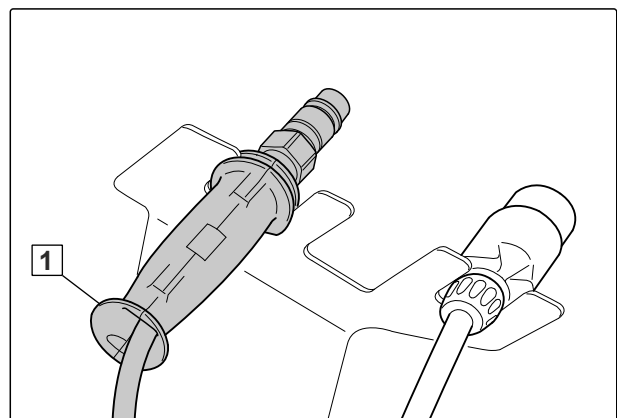

CMS-I-00001250

# Loading the implement

# 11

CMS-T-00014789-A.1

## 11.1 Loading the implement with a crane

CMS-T-00014790-A.1

The implement has 2 lashing points for slings for lifting.




### WARNING

#### Risk of accidents due to improperly attached slings for lifting

If the slings are not attached at the marked lashing points, the implement can be damaged during lifting and endanger safety.

- Only attach the slings for lifting at the marked lashing points.

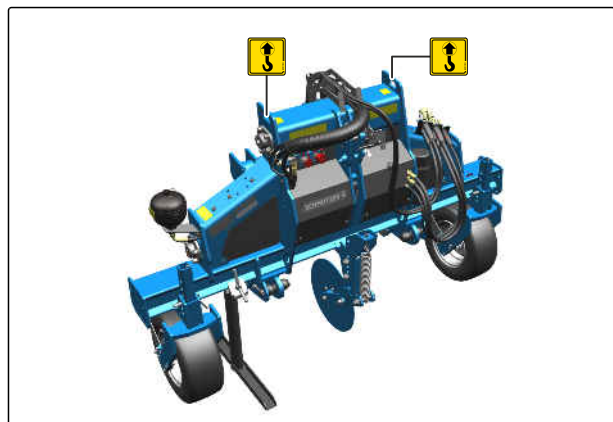

CMS-I-00009583

1. Attach the slings for lifting on the intended lashing points.
2. Slowly lift the implement.

## Disposing of the implement

12

CMS-T-00010906-B.1




### ENVIRONMENTAL INFORMATION

#### Environmental damage due to improper disposal

- ▶ Observe the regulations of the local authorities.
- ▶ Observe the symbols on the implement regarding disposal.
- ▶ Observe the following instructions.

1. Components with this symbol should not be disposed of with household waste.

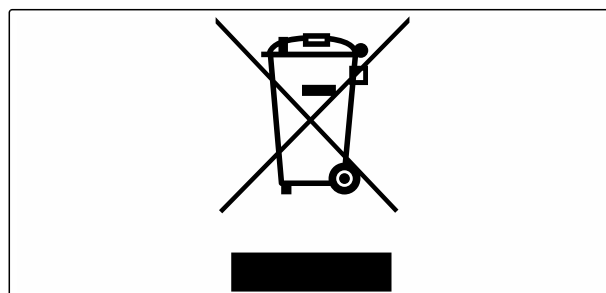

CMS-I-00007999

2. Return batteries to the distributor  
or  
Dispose of batteries at a collection point.
3. Put recyclable materials in the recycling.
4. Treat operating materials like hazardous waste.



### WORKSHOP WORK

5. Dispose of the coolant.

# Directories

# 13

## 13.1 Glossary

CMS-T-00000513-B.1

### M

#### Machine

*Mounted implements are accessory parts of the tractor. However, mounted implements are always referred to as the implement in this operating manual.*

### O

#### Operating materials

*Operating materials serve to ensure operational readiness. Operating materials include e.g. cleaning agents and lubricants such as lubricating oil, greases or cleaners.*

### T

#### Tractor

*In this operating manual, the designation tractor is always used, even for other agricultural tractor units. Implements are mounted on the tractor or towed by the tractor.*



## 13.2 Index

3		F	
3-point mounting frame		Front axle load	
<i>coupling</i>	38	<i>calculation</i>	31
<i>uncoupling</i>	56	Front ballasting	
		<i>calculation</i>	31
A		Function of the implement	
Address		<i>Description</i>	21
<i>Technical editing</i>	4		
Aids	28	H	
C		Headlands	45
Camera adjustment rail		Hoeing machine	
<i>Position</i>	21	<i>coupling</i>	39
Camera bracket		<i>uncoupling</i>	53
<i>panning</i>	44	Hydraulic hose lines	
checking		<i>checking</i>	51
<i>Hydraulic hose lines</i>	51	<i>coupling</i>	34
<i>Lower link pin</i>	52	<i>uncoupling</i>	57
<i>Top link pin</i>	52	I	
cleaning	52	Implement	
Contact data		<i>coupling</i>	34
<i>Technical editing</i>	4	<i>Description</i>	21
Control terminal for the camera system		<i>lowering</i>	45
<i>Position</i>	21	<i>overview</i>	21
Couplings for the hydraulic hose lines of the front tank		<i>parking</i>	53, 56
<i>Position</i>	21	<i>uncoupling</i>	56
Couplings for the supply lines of the hoeing machine		Intended use	20
<i>Position</i>	21	ISOBUS lines	
D		<i>coupling</i>	36
Digital operating manual	4	<i>uncoupling</i>	57
Dimensions	29	L	
Document holder		loading	58
<i>Description</i>	28	Loads	
Documents	28	<i>calculation</i>	31
E		Lower link pin	
Eliminating faults	47	<i>checking</i>	52
		lubricating	49
		M	
		Maintenance	51

Mounting categories	29	Top link pin <i>checking</i>	52
<b>N</b>		Total weight <i>calculation</i>	31
Noise development data	30	Tractor <i>Calculating the required tractor characteristics</i>	31
<b>O</b>		Turning on the headlands	45
Overview of lubrication points	49	Tyre load capacity <i>calculation</i>	31
<b>P</b>		<b>U</b>	
Parking support <i>attachment</i>	56	unloading	58
<i>removing</i>	39	<b>W</b>	
Performance characteristics of the tractor	29	Warning symbols	
Preparing for operation		<i>Description</i>	24
<i>Adjusting the stabilisation disc</i>	42	<i>Layout</i>	23
<i>Adjusting the support wheels</i>	42	<i>Positions</i>	23
<i>Adjusting the working position sensors</i>	43	Working position sensors	
<i>Shifting the camera bracket</i>	44	<i>adjustment</i>	43
<b>R</b>		<i>Position</i>	21
Rating plate on the implement		Workshop work	3
<i>Description</i>	27		
<i>Position</i>	21		
Rear axle load <i>calculation</i>	31		
Repairing the machine <i>Eliminating faults</i>	47		
Road travel <i>preparing</i>	44		
<b>S</b>			
Special equipment <i>Description</i>	22		
Stabilisation disc <i>adjustment</i>	42		
<i>Position</i>	21		
Support wheels <i>adjustment</i>	42		
<i>Position</i>	21		
<b>T</b>			
Technical data			
<i>Dimensions</i>	29		
<i>Noise development data</i>	30		
<i>Performance characteristics of the tractor</i>	29		
<i>Permitted mounting categories</i>	29		



SCHMOTZER Hacktechnik GmbH & Co. KG

Rothenburger Str. 45  
91438 Bad Windsheim  
Deutschland

t +49 (0) 9841 - 920  
m [info@schmotzer-ht.de](mailto:info@schmotzer-ht.de)  
w [www.schmotzer-ht.de](http://www.schmotzer-ht.de)

SCHMOTZER Hacktechnik ist ein  
Unternehmen der AMAZONE-Gruppe.



**AMAZONE**

AMAZONEN-WERKE H. Dreyer SE & Co. KG  
Postfach 51 · D-49202 Hasbergen-Gaste

[www.amazone.de](http://www.amazone.de)